


HIGH-SPEED MULTISERVICE TEST MODULE

FTBx-88000 Series

Power Blazer

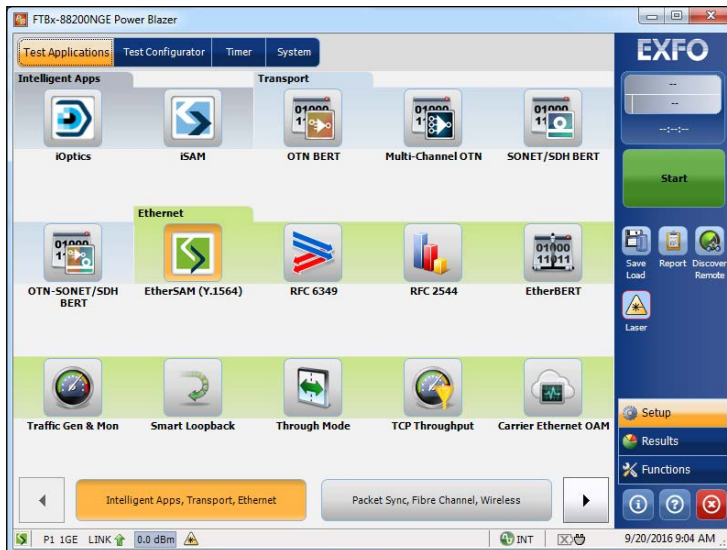

Copyright © 2014–2024 EXFO Inc. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form, be it electronically, mechanically, or by any other means such as photocopying, recording or otherwise, without the prior written permission of EXFO Inc. (EXFO).

Information provided by EXFO is believed to be accurate and reliable. However, no responsibility is assumed by EXFO for its use nor for any infringements of patents or other rights of third parties that may result from its use. No license is granted by implication or otherwise under any patent rights of EXFO.

EXFO's Commerce And Government Entities (CAGE) code under the North Atlantic Treaty Organization (NATO) is 0L8C3.

The information contained in this publication is subject to change without notice.

Trademarks

EXFO's trademarks have been identified as such. However, the presence or absence of such identification does not affect the legal status of any trademark.

Where applicable, the Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by EXFO Inc. is under license. Where applicable, the MTP[®] mark is a registered trademark of US Conec Ltd. Other third party trademarks and trade names are those of their respective owners.

Units of Measurement

Units of measurement in this publication conform to SI standards and practices.

Patents

The exhaustive list of patents is available at [EXFO.com/patent](https://www.exfo.com/patent).

April 25, 2024

Document version: 32.0.0.1

Contents

Regulatory Information	xiii
1 Introducing the High-Speed Multiservice Test Module	1
Test Applications	1
Technical Specifications	3
Conventions	4
2 Safety Information	5
Laser Safety Information	7
Installation Instruction Warnings	8
3 Getting Started	11
Inserting and Removing Test Modules	12
Inserting and Removing Transceiver System	13
Turning On the Unit	19
Starting the Module Application	19
4 Physical Interfaces and LEDs	21
FTBx-88200NGE	21
FTBx-88260 and Transceiver Systems	23
FTBx-88460 and Transceiver Systems	27
FTBx-88480, FTBx-88481, FTBx-88482, and Transceiver Systems	32
FTBx-8870/8880	36
FTBx-88800 and FTBx-88801	38
Transceivers	40
RJ45	40
BNC	41
SMB	41
LEDs	41

5 Graphical User Interface Overview	43
Main Application Window	43
Main Window	43
Navigation Buttons	44
Status Bar	44
Title Bar	48
Global Indicator	49
Test Control	51
Test Menu	51
Application Buttons	52
Zoomed-In/Zoomed-Out Views	57
Arrow Buttons	57
Keyboard Usage	58
File Structure	61
6 Test Setup - Test Applications	63
iOptics	65
iSAM	67
Multi-Channel OTN	68
FlexO BERT	69
OTN BERT	70
OTN-SONET/SDH BERT	73
SONET/SDH BERT	76
DCO BERT	79
DSn/PDH BERT	81
SONET/SDH - DSn/PDH BERT	83
NI/CSU Emulation	86
EtherSAM (Y.1564)	87
RFC 2544	89
RFC 6349	91
FlexE BERT	92
EtherBERT	93
Traffic Gen & Mon	95
Smart Loopback	97
Through Mode	99
TCP Throughput	100
Carrier Ethernet OAM	101
Cable Test	103
1588 PTP	104
SyncE	105
Time Error / Wander	106
FC BERT	107

CPRI/OBSAI BERT	108
eCPRI BERT	110
7 Selecting and Starting a Test	113
Intelligent Apps	113
Transport Test Applications	117
Ethernet Test Applications	119
Sync Test Applications	121
Fibre Channel Test Application	123
Wireless Test Application	125
8 Setup	127
Test Configurator	127
Test Configurator Overview	137
Modify Structure	144
Modify Structure - 1588 PTP	146
Modify Structure - Cable Test	148
Modify Structure - Carrier Ethernet OAM	149
Modify Structure - CPRI/OBSAI BERT	150
Modify Structure - DCO BERT	153
Modify Structure - DS _n /PDH BERT	155
Modify Structure - eCPRI BERT	157
Modify Structure - EtherBERT	159
Modify Structure - EtherSAM	170
Modify Structure - FC BERT	174
Modify Structure - FlexE BERT	176
Modify Structure - FlexO BERT	178
Modify Structure - Multi-Channel OTN	179
Modify Structure - NI/CSU Emulation	180
Modify Structure - OTN BERT	181
Modify Structure - OTN-SONET/SDH BERT	188
Modify Structure - RFC 2544	193
Modify Structure - RFC 6349	197
Modify Structure - Smart Loopback	199
Modify Structure - SONET/SDH BERT	203
Modify Structure - SONET/SDH - DS _n /PDH BERT	206
Modify Structure - SyncE	210
Modify Structure - TCP Throughput	211
Modify Structure - Through Mode	212
Modify Structure - Time Error / Wander	214
Modify Structure - Traffic Gen & Mon	216
Signal Auto-Detect	220

1588 PTP (Client)	221
1588 PTP (GM)	229
BERT and Unframed BERT	234
BERT and Unframed BERT - CPRI/OBSAI	240
BERT and Unframed BERT - eCPRI	244
BERT - Client - DCO BERT	247
BERT - FlexE BERT	249
Cable Test	251
CFP/OSFP/QSFP/SFP	253
Clock	255
Device Under Test - iOptics	263
eCPRI Flow - Profile	268
EtherBERT and Unframed BERT	272
EtherSAM - Burst	281
EtherSAM - Global	283
EtherSAM - L2CP	288
EtherSAM - Ramp	294
External Reference / Internal GNSS	295
FC BERT	297
Fibre Channel	300
FlexE Group	303
FlexO/OTN	305
FlexO/OTUCn	306
Frequency	307
Frequency - DCO BERT (Client)	310
FTFL/PT / PT	311
GFP-F/GFP-T	315
Interface	316
Interface - DCO BERT	329
Labels	333
Link OAM	335
Local Details - iSAM	337
MAC/IP/UDP	342
Network	355
Network / Network Details - iSAM	358
ODU Channels - Global	368
Path OAM	371
Profile - DCO BERT	374
Profile - FlexE BERT	376
Remote Details - iSAM	377
RFC 2544 - Global	381
RFC 2544 - Subtests	384

RFC 6349	391
S-OAM and MPLS-TP OAM	396
Services - Global	405
Services - L2CP	408
Services - Profile	409
Signal	415
Signal - Signal Configuration - DSn/PDH	422
Signal - Signal Configuration - OTN	426
Signal - Signal Configuration - SONET/SDH	429
Smart Loopback	433
Streams - Global	435
Streams - Profile	437
SyncE	444
System - General	446
System - GNSS	448
Transceiver System (TA/TA4)	455
TCP Throughput	457
Test Sequence - iOptics	459
Time Error / Wander	461
Timer	465
Traces - OTN	467
Traces - SONET/SDH	470
Traces/PT - FlexO	472
9 Test Results	477
Alarms/Errors Overview	486
Alarms/Errors	489
Analysis - MTIE/TDEV	494
Analysis - Time Error / Time Interval Error	496
FEC Statistics	498
FTFL/PT / PT	499
GFP-F/GFP-T	501
Graph - RFC 2544	504
Labels	505
Link OAM	506
Logger	510
Measurements - DCO BERT	513
Messages	516
MPLS	518
OTL-SDT	519
Performance Monitoring	521
PTP Stats	528

Quality Level - 1588 PTP	530
Quality Level - SyncE	533
S-OAM and MPLS-TP OAM	536
SDT - Multi-Channel OTN	541
Service Configuration - Burst	543
Service Configuration - L2CP	544
Service Configuration - Ramp	546
Service Performance	548
Streams - Frame Loss / Out-of-Sequence	550
Streams - Jitter	550
Streams - Latency	551
Streams - Throughput / Customer Frame Throughput	552
Summary - OTN/SONET/SDH/DSn/PDH	553
Summary - 1588 PTP (Client)	557
Summary - 1588 PTP (GM)	560
Summary - Cable Test	563
Summary - CPRI/OBSAI BERT	569
Summary - DCO BERT	574
Summary - eCPRI BERT	576
Summary - EtherBERT	581
Summary - EtherSAM	585
Summary - FC BERT	588
Summary - FlexE BERT	592
Summary - Client Summary - FlexE BERT	595
Summary - Path OAM - FlexE BERT	596
Summary - FlexO BERT	600
Summary - iOptics	602
Summary - iSAM	605
Summary - Link OAM	609
Summary - Multi-Channel OTN	611
Summary - NI/CSU Emulation	613
Summary - RFC 2544	614
Summary - RFC 6349	617
Summary - Smart Loopback	622
Summary - S-OAM and MPLS-TP OAM	623
Summary - SyncE	628
Summary - TCP Throughput	631
Summary - Through Mode	634
Summary - Traffic Gen & Mon	636
Summary - Stream - Traffic Gen & Mon	638
Summary - Time Error / Wander	640
TCP Throughput	646

Traces - OTN	647
Traces - SONET/SDH	650
Traces/PT - FlexO	652
Traffic - Ethernet	655
Traffic - Flow Control	658
Traffic - Graph	660
Traffic - Path OAM	661
Traffic - OAM, S-OAM, and MPLS-TP OAM	663
Window Sweep	665
WIS	666
10 Test Functions	667
<rate> Advanced - <transceiver> Control	673
<rate> Advanced - Lanes Mapping & Skew	676
<rate> Advanced - Pre-Emphasis/RX EQ	680
<rate> Advanced - PAM-4 Histogram	683
APS	684
BFD (Bidirectional Forwarding Detection)	687
Client Offset	689
FDL - Bit-Oriented Message	692
FDL - Performance Report Message	696
FEAC	699
Filters	703
FlexE Advanced	705
GMP	707
OH BERT	708
OH - FlexE	711
OH - GFP-F/GFP-T	716
OH - OTN	721
OH - SONET/SDH	727
Packet Capture	741
Path OAM APS	747
Ping & Trace Route	750
Pointer Adjustment	755
RTD	765
RTD/RTT (CPRI/OBSAI Framed L2)	768
S-OAM Link Trace	771
Signaling Bits	773
Spare Bits	775
Traffic Scan	777

11 Test Control	781
More/Less Button	781
Discover Remote	782
Inject Button	787
Laser Button	787
Lpbk Tool Button (Loopback Tool)	788
Report Button	795
Reset Button	800
Save/Load Button	801
Start/Stop TX Button	805
12 Power Failure Recovery	807
Enabling Power Failure Recovery	808
When Using the Test Timer	809
13 Maintenance	811
Cleaning LC/MPO-n Connectors	812
Battery Safety Information	812
Recalibrating the Unit	813
Recycling and Disposal	814
14 Troubleshooting	815
Solving Common Problems	815
Contacting the Technical Support Group	816
Transportation	816
15 Warranty	817
General Information	817
Gray Market and Gray Market Products	818
Liability	819
Exclusions	819
Certification	819
Service and Repairs	820
EXFO Service Centers Worldwide	821
A Specifications	823
General Specifications	824
Transceiver System	824

B Glossary	825
Acronym List	825
10G Ethernet Client	844
1588 PTP	847
CPRI	853
Ethernet Cables	858
G.709 Optical Transport Network (OTN)	860
Generic Framing Procedure (GFP)	877
MPLS Labels	889
OBSAI	890
SONET/DSn/SDH/PDH	895
SyncE	905
Unicast/Multicast Addresses for Ethernet OAM	907
C Alarms/Errors	909
Alarms	931
Errors	964
D Pop-Up	983
Add Channel (Multi-Channel OTN)	983
Bulk Read	983
Bulk Write	983
Config TCM	984
Configure Per Frame Size	984
Copy Service	985
Copy Stream	985
DS1 Loopback	986
EMIX	988
Export Capture	989
FEC Degraded SER Thresholds	990
Filter Configuration	991
FlexE Calendar	993
Grandmaster Information / Boundary Clock Information	995
IPv6 Address Configuration	997
L2CP	1000
Laser ON/OFF	1001
Link Degrade Signaling Thresholds	1002
LLDP Neighbor	1003
Manual Skew (PCS/Logical Lane)	1004
Manual Skew (PHY)	1005
Default/Random/Manual Mapping	1006
Modify DS0/E0	1007

Modify Frame Structure	1010
Modify Tributary Slots/Port	1014
Modify Trib Slots/Channels (Multi-Channel OTN)	1016
Modify TX Power - DCO BERT	1020
Modify Wavelength (SFP)	1022
Modify Wavelength - DCO BERT	1023
Profile (Stream)	1027
Profile (Services)	1028
QoS Metrics (eCPRI BERT)	1029
Remote Interface Discovery	1031
Shaping	1032
Thresholds (eCPRI QoS)	1033
Thresholds - FED/FDD	1034
Thresholds - RFC 2544	1035
Thresholds (S-OAM)	1036
TOS/DS Config	1037
Triggered Frame Details	1038
Truncation Calculator	1039
E Remote ToolBox	1041
Overview	1041
Remote ToolBox Installation	1043
Starting and Using the Remote ToolBox Application	1044
Applications for...	1046
Index	1047

Regulatory Information

USA Electromagnetic Interference Regulatory Statement

Electronic test and measurement equipment is exempt from FCC part 15, subpart B compliance in the United States of America. However, EXFO Inc. makes reasonable efforts to ensure compliance to the applicable standards.

The limits set by these standards are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the user documentation, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Canada Electromagnetic Interference Regulatory Statement

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference.

Caution: This equipment is not intended for use in residential environments and may not provide adequate protection to radio reception in such environments.

This is a class A, group 1 product.

Regulatory Information

- Class A equipment: Equipment that is, by virtue of its characteristics, highly unlikely to be used in a residential environment, including a home business shall be classified as class A and shall comply with the class A limits specified in the applicable ICES standard. Characteristics considered in this assessment include price, marketing and advertising methodology, the degree to which the functional design inhibits applications suitable to residential environments, or any combination of features that would effectively preclude the use of such equipment in a residential environment.
- Class B equipment: Equipment that cannot be classified as Class A shall comply with the Class B limits specified in the applicable ICES standard.
- Group 1 equipment: group 1 contains all equipment which is not classified as group 2 equipment, and includes equipment such as laboratory and scientific equipment, industrial process, measurement and control equipment.

Group 2 equipment: group 2 contains all ISM RF equipment in which radio-frequency energy in the frequency range 9 kHz to 400 GHz is intentionally generated and used or only used locally, in the form of electromagnetic radiation, inductive and/or capacitive coupling, for the treatment of material for inspection/analysis purposes, or for transfer of electromagnetic energy.

Supplier's Declaration of Conformity (SDoC)

The SDoC for your product is as follows:

CAN ICES-001 (A) / NMB-001 (A)

EU and UK Electromagnetic Compatibility Regulatory Statement

Warning: This is a class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures. Your product is suitable for use in industrial electromagnetic environments.

Simplified EU and UK Declaration of Conformity

The full text of the declaration of conformity is available at the following Internet address: *www.exfo.com/en/resources/legal-documentation*.

EU Economic Operator

EXFO Solutions SAS
2, rue Jacqueline Auriol,
Saint-Jacques-de-la-Lande,
35091 Rennes Cedex 9
FRANCE

1 ***Introducing the High-Speed Multiservice Test Module***

Turnkey field-test solution for deploying, validating, and troubleshooting networks up to 400G.

Test Applications

Intelligent Apps

Test Applications	Available on FTBx-...
iOptics	8870, 8880, 88200NGE, 88260, 88460, 88480, 88481, 88482
iSAM	8870, 8880, 88200NGE, 88260

Transport

Test Applications	Available on FTBx-...
DCO BERT	88460, 88480, 88481, 88482, 88800, 88801
DSn/PDH BERT	8870, 8880
FlexO BERT	88460
Multi-Channel OTN	88200NGE
NI/CSU Emulation	8870, 8880
OTN BERT	8870, 8880, 88200NGE, 88260, 88460, 88480, 88481, 88482
OTN-SONET/SDH BERT	8870, 8880, 88200NGE
SONET/SDH BERT	8870, 8880, 88200NGE, 88260
SONET/SDH - DSn/PDH BERT	8870, 8880, 88260

Introducing the High-Speed Multiservice Test Module

Test Applications

Ethernet

Test Applications	Available on FTBx-...
Cable Test	8870, 8880
Carrier Ethernet OAM	8870, 8880, 88260
EtherBERT	8870, 8880, 88200NGE, 88260, 88460, 88480, 88481, 88482, 88800, 88801
EtherSAM (Y.1564)	8870, 8880, 88200NGE, 88260, 88460, 88480, 88481, 88482
FlexE BERT	88260, 88460
RFC 2544	8870, 8880, 88200NGE, 88260, 88460, 88480, 88481, 88482
RFC 6349	8870, 8880, 88200NGE, 88260, 88480, 88481, 88482
Smart Loopback	8870, 8880, 88200NGE, 88260, 88460, 88480, 88481, 88482
TCP Throughput	8870, 8880
Through Mode	8870, 8880, 88200NGE, 88260, 88480, 88481, 88482
Traffic Gen & Mon	8870, 8880, 88200NGE, 88260, 88460, 88480, 88481, 88482

Sync

Test Applications	Available on FTBx-...
1588 PTP	8870, 8880, 88200NGE, 88260
SyncE	8870, 8880, 88200NGE, 88260
Time Error / Wander	8880, 88260

Fibre Channel

Test Applications	Available on FTBx-...
FC BERT	8870, 8880, 88200NGE, 88260, 88480, 88482

Wireless

Test Applications	Available on FTBx-...
CPRI/OBSAI BERT	8870, 8880, 88200NGE, 88260
eCPRI BERT	8870, 8880, 88200NGE, 88260

Technical Specifications

To obtain this product's technical specifications, visit the EXFO Web site at *www.exfo.com*.

Conventions

Before using the product described in this guide, you should understand the following conventions:



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in *death or serious injury*. Do not proceed unless you understand and meet the required conditions.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in *minor or moderate injury*. Do not proceed unless you understand and meet the required conditions.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in *component damage*. Do not proceed unless you understand and meet the required conditions.



IMPORTANT

Refers to information about this product you should not overlook.

2 ***Safety Information***



WARNING

Do not install or terminate fibers while a light source is active. Never look directly into a live fiber and ensure that your eyes are protected at all times.



WARNING

The use of controls, adjustments and procedures, namely for operation and maintenance, other than those specified herein may result in hazardous radiation exposure or impair the protection provided by this unit.



WARNING

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.



WARNING

Use only accessories designed for your unit and approved by EXFO. For a complete list of accessories available for your unit, refer to its technical specifications or contact EXFO.



IMPORTANT

Refer to the documentation provided by the manufacturers of any accessories used with your EXFO product. It may contain environmental and/or operating conditions limiting their use.



IMPORTANT

When you see the following symbol on your unit , make sure that you refer to the instructions provided in your user documentation. Ensure that you understand and meet the required conditions before using your product.



IMPORTANT

When you see the following symbol on your unit , it indicates that the unit is equipped with a laser source, or that it can be used with instruments equipped with a laser source. These instruments include, but are not limited to, modules and external optical units.



IMPORTANT

Other safety instructions relevant for your product are located throughout this documentation, depending on the action to perform. Make sure to read them carefully when they apply to your situation.

Laser Safety Information

Your instrument is in compliance with standards IEC 60825-1: 2014 and 21 CFR 1040.10, as per Laser Notice No. 42, dated December 18, 1989.

Laser radiation may be encountered at the optical output port.

The following label indicates that a product contains a Class 1 source:



WARNING

When the LASER LED is on or flashing, the module is transmitting an optical signal on the transceiver ports.

Note: *Refer to the platform user guide for additional test equipment safety information and ratings.*

Installation Instruction Warnings



CAUTION

When you use the unit outdoors, ensure that it is protected from liquids, dust, direct sunlight, precipitation, and full wind pressure.



CAUTION

Except for the dual Bantam connector and the RJ-48C port, all telecom (electrical) interfaces are SELV (Safety Extra Low Voltage) circuitry intended for intra-building use only.



CAUTION

For the dual Bantam connector and the RJ-48C ports, use only No. 26 AWG or larger telecommunication line cord to reduce the risk of fire.



CAUTION

No user serviceable parts are contained inside. Contact the manufacturer regarding service of this equipment.



IMPORTANT

All wiring and installation must be in accordance with local building and electrical codes acceptable to the authorities in the countries where the equipment is installed and used.



WARNING

Use only accessories designed for your unit and approved by EXFO.



CAUTION

Electrostatic Discharge (ESD) Sensitive Equipment:

Plug-in modules can be damaged by static electrical discharge. To minimize the risk of damage, dissipate static electricity by touching a grounded unpainted metal object

- before removing, inserting, or handling the module.
- before connecting or disconnecting cables to/from the **module**.
- before inserting or removing a transceiver to/from the **module**.

3 **Getting Started**

If the module has been purchased at the same time as the platform, the module is pre-installed with the appropriate software version.

Number of Dedicated Modules per Platform

The following table lists the maximum number of dedicated modules that can run simultaneously on each platform.

Platform	88200NGE	88260	88460	88480/88481	88482	8880x	8870/8880
FTB-2	NA	NA	NA	NA	N/A	N/A	2
FTB-2 Pro	2	2	NA	1	N/A	N/A	2
FTB-4 Pro	4	4	1 ^a	2 ^b	1	2 ^b	4
LTB-2	2	2	NA	NA	N/A	N/A	2
LTB-8	8	8	2	4	2	2	8

- a. The platform needs to be connected to an electrical outlet to provide sufficient power.
- b. When the 2 modules are running, the platform needs to be connected to an electrical outlet to provide sufficient power.

Inserting and Removing Test Modules



CAUTION

There is no need to turn off your unit before inserting or removing FTBx- modules. However, inserting/removing modules without following the instructions provided in the platform user documentation could result in the following consequences, depending on the operation underway when the modules are inserted/removed:

- unexpected behavior of the test applications,
- instability of the system,
- or cause irreparable damage to your modules.

Note: *Refer to the platform user guide for more information on how to insert/remove a module into/from the platform.*

Inserting and Removing Transceiver System



CAUTION

There is no need to turn off your unit before inserting or removing transceiver systems. However, inserting/removing transceiver systems without following the instructions provided in this user documentation could result in the following consequences, depending on the operation underway when the transceiver systems are inserted/removed:


- unexpected behavior of the test applications,
- instability of the system,
- or cause irreparable damage to your transceiver systems.

FTBx-88260/88480/88481/88482

The following procedures describe insertion and removal of transceiver system for FTBx-88260/88480/88481/88482 modules. The FTBx-88260 pictures are used as example in the following procedures.

To insert a transceiver system into the FTBx module:

1. Position the FTBx module so that its faceplate is facing you.
2. Remove the FILLER (protective cover) from the FTBx module.
 - Turn the retaining screw counterclockwise until it is loose.
 - Hold the FILLER by the handle and/or the retaining screw and pull it out.

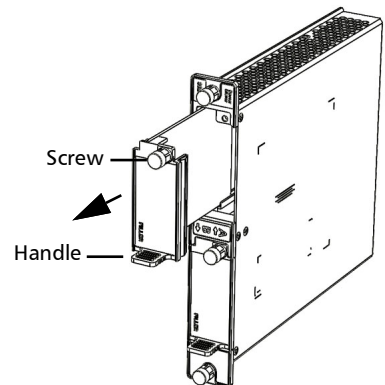

Getting Started



Inserting and Removing Transceiver System

- 3.** Remove the transceiver system from its packaging:

3a. Pull the battery insulator tab to activate the battery.

3b. Turn the retaining screw counterclockwise until it is loose.

3c. Hold the transceiver system by the handle and/or the retaining screw (NOT by the connectors) and pull it out. Don't throw away the transceiver system packaging, it is recommended to insert the transceiver system into its packaging when carrying it outside the FTBx module.

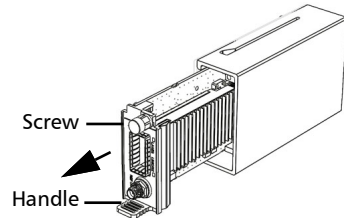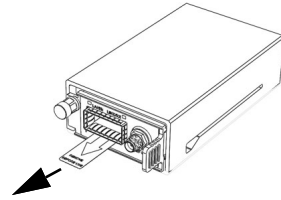


- 4.** Insert the transceiver system into the FTBx module:

4a. Take the transceiver system and place it so that the connector pins are at the back as shown below.

The identification sticker and the protruding edges are on the left side.


4b. Insert the protruding edges of the transceiver system into the grooves of the receptacle's module port.

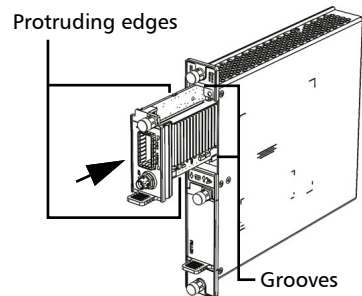

4c. Push the transceiver system all the way to the back of the receptacle by pressing firmly on the left edge of the transceiver system until it is fully inserted.


4d. Turn the retaining screw clockwise until it is tightened.

This will secure the transceiver system into its “seated” position.

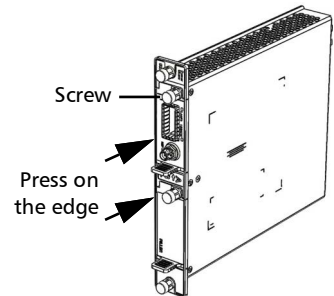

To remove a transceiver system from the FTBx module:

- 1.** Position the FTBx module so that its faceplate is facing you.
- 2.** Turn the retaining screw counterclockwise until it is loose.
- 3.** Hold the transceiver system by the handle and/or the retaining screw (NOT by the connectors) and pull it out.

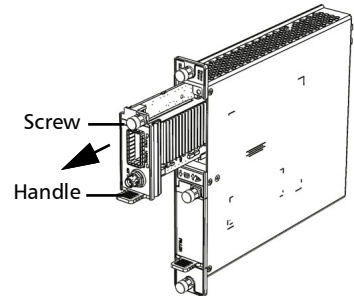

CAUTION

Pulling out a transceiver system by its connectors could seriously damage both the transceiver system and connectors. Always pull out a transceiver system by its retaining screw, and/or the handle.

- 4.** Cover the empty FTBx module’s receptacle with the supplied FILLER.



CAUTION

Failure to reinstall the FILLER over an empty receptacle will result in ventilation problems.

Getting Started



Inserting and Removing Transceiver System

FTBx-88460

The following procedures describe the insertion and removal of a transceiver system for FTBx-88460 modules.

To insert a transceiver system into the FTBx-88460 module:

- 1.** Position the FTBx-88460 module so that its faceplate is facing you.
When the FTBx-88460 module is already inserted into an FTB-4 Pro platform, position the FTB-4 Pro so that its display is facing down and the module is oriented as shown in the following picture.
- 2.** Remove the FILLER (protective cover) from the FTBx-88460.
 - Turn the two retaining screws counterclockwise until they are loose.
 - Hold the FILLER by the retaining screws and pull it out.
- 3.** Remove the transceiver system from its packaging:
 - 3a.** Turn the two retaining screws counterclockwise until they are loose.
 - 3b.** Hold the transceiver system by the handle (NOT by the connectors) and pull it out. Do not throw away the transceiver system packaging. It is recommended to insert the transceiver system into its packaging when removing it from the FTBx-88460 module.

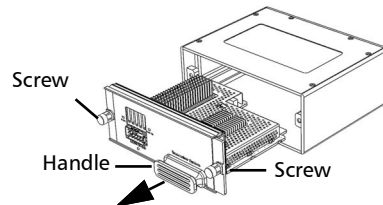
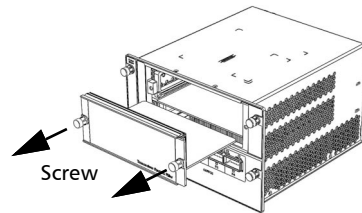


4. Insert the transceiver system into the FTBx-88460 module:

4a. Take the transceiver system and place it so that the handle is on the right side as shown.

4b. Insert the protruding edges of the transceiver system into the grooves of the receptacle's module port.

4c. Push the transceiver system all the way to the back of the receptacle by pressing firmly only on the handle of the transceiver system until it is fully inserted.

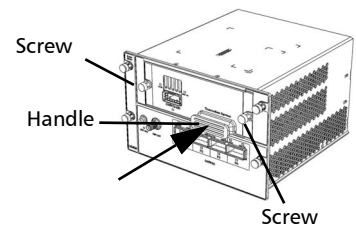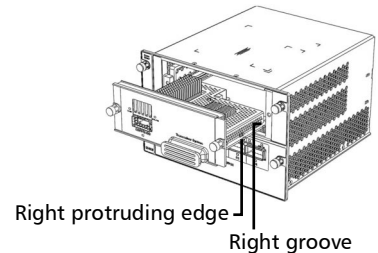

Note: *It is very important to push on the handle only to properly align the transceiver system within the FTBx-88460 module ensuring good electrical contact.*


4d. Turn the two retaining screws clockwise until they are tightened. This will secure the transceiver system into its “seated” position.

Getting Started

Inserting and Removing Transceiver System

To remove a transceiver system from the FTBx-88460 module:

1. Position the FTBx-88460 module so that its faceplate is facing you.
2. Turn the two retaining screws counterclockwise until they are loose.
3. Hold the transceiver system by the handle (NOT by the connectors) and pull it out.

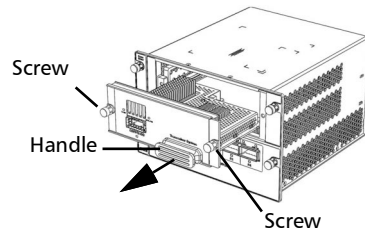

CAUTION

Pulling out a transceiver system by its connectors could seriously damage both the transceiver system and connectors. Always pull out a transceiver system by its handle.

4. Cover the empty FTBx-88460's receptacle with the supplied FILLER.



CAUTION

Failure to reinstall the FILLER over an empty receptacle will result in ventilation problems.

Turning On the Unit

Turn on the platform. Refer to the platform user guide for more information.

Starting the Module Application

The module can be configured and controlled by starting the application(s) as described in the following table:

Module	Application	Comment
88200NGE 88460 88480, 88481, 88482, 88800, 88801	Power Blazer	Only one application available.
88260	Power Blazer iORF ^a OpticalRF ^a BBU-Emulation ^a	Only one application can run at once per module. Furthermore, only one instance of the iORF or OpticalRF application can run on the associated platform.
8880 8870	Power Blazer iORF ^a OpticalRF ^a BBU-Emulation ^a	Only one application can run at once per module. Furthermore, only one instance of the iORF, OpticalRF, or BBU-Emulation application can run on the associated platform.

a. Not supported on FTB-2, LTB-2, and LTB-8.

To start the application:

From **ToolBox X** tap the desired application button.

Note: *Refer to the respective user guides for more information on iORF, OpticalRF, and BBU-Emulation applications.*

4 *Physical Interfaces and LEDs*


This section describes all connectors (ports) and LEDs available on the FTBx-88000 Series.



CAUTION

To prevent exceeding the maximum input/output power level, please refer to this product's technical specifications at www.exfo.com.

FTBx-88200NGE

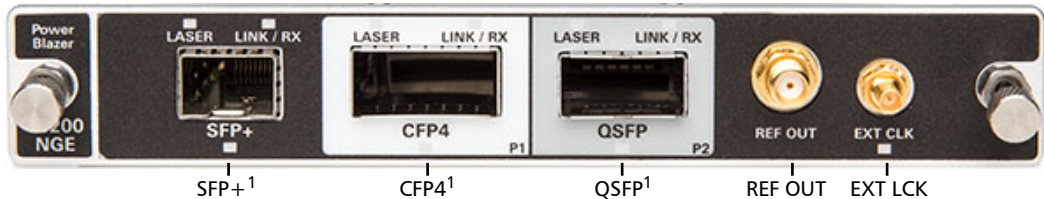

1. Laser radiation is emitted from this port when LASER LED is on.

The following table shows the list of available ports as well as a description and the signals supported on the module.

Port Labelled	Description	Supported Signal(s)
SFP+	Optical IN/OUT port SFP/SFP+ transceiver	Ethernet 100/1000 Mbit/s, 10 Gbit/s optical Ethernet 10/100/1000 Mbit/s electrical (using active copper SFP) Fibre Channel 1X, 2X, 4X, 8X, 10X, 16X eCPRI 10 Gbit/s CPRI 1.2, 2.4, 3.1, 4.9, 6.1, 9.8, 10.1 Gbit/s OBSAI 1.5, 3.1, 6.1 Gbit/s OC-1/STM-0, OC-3/STM-1, OC-12/STM-4, OC-48/STM-16, OC-192/STM-64 OTU1, OTU2, OTU1e, OTU2e, OTU1f, OTU2f.
CFP4	Optical IN/OUT port CFP4 transceiver ^a	Ethernet 100 Gbit/s OTU4

Physical Interfaces and LEDs


FTBx-88200NGE

Port Labelled	Description	Supported Signal(s)
QSFP	Optical IN/OUT port QSFP+ transceiver ^b	Ethernet 40 Gbit/s OTU3e2, OTU3e1, OTU3
	Optical IN/OUT port QSFP28 transceiver ^a	Ethernet 100 Gbit/s OTU4
	Optical IN/OUT port QSFP56 transceiver ^c	Ethernet 100 Gbit/s
REF OUT	Electrical port SMA for eye diagram clock signal generation	
EXT CLK	Electrical port SMB for external clock synchronization	DS1/1.5M, E1/2M, 2MHz, 1PPS ^d

- a. Only OTU4 (4 Lanes) and 100GE (4 Lanes) are supported.
- b. Only parallel interfaces are supported.
- c. Only 100GE (4 Lanes) is supported.
- d. Available for **Dual Test Set - One-Way Latency** measurement mode.


FTBx-88260 and Transceiver Systems

Note: The FTBx-88260 module with TA-SFP28 transceiver systems are shown below as examples for connector location purposes.

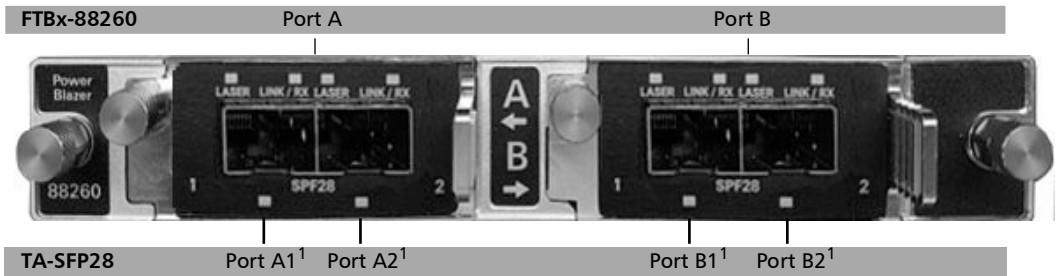


1. Laser radiation is emitted from this port when LASER LED is on.

➤ TA-SFP28

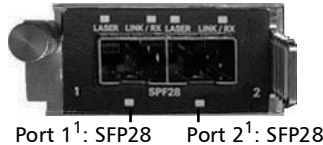

1. Laser radiation is emitted from this port when LASER LED is on.

➤ TA-QSFP28

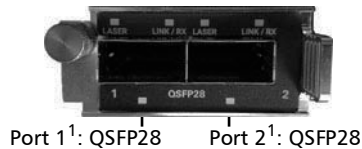


1. Laser radiation is emitted from this port when LASER LED is on.

Physical Interfaces and LEDs


FTBx-88260 and Transceiver Systems

➤ TA-CFP4

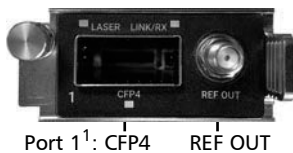


1. Laser radiation is emitted from this port when LASER LED is on.


➤ TA-SYNC

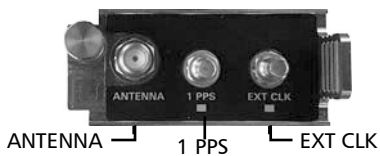

➤ TA-SYNC PREMIUM

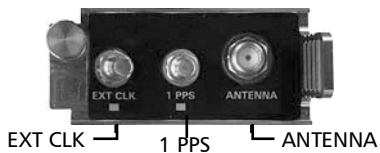

➤ TA-SYNC PREMIUM v2

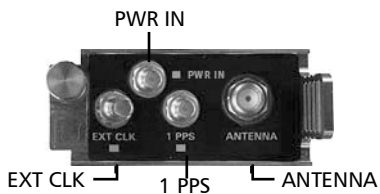

The following table shows the list of transceiver system supported on each port of the FTBx-88260 module.

Port Labelled	Description	Supported Transceiver System
A	Transceiver system left port	TA-SFP28, TA-QSFP28, TA-CFP4, TA-Sync
B	Transceiver system right port	TA-SFP28, TA-QSFP28, TA-CFP4, TA-Sync

The following table shows the list of port and the supported signals for each transceiver system.

Transceiver System	Port Labelled ^a	Description	Supported Signal(s)
TA-SFP28 (two ports)	1	Optical IN/OUT port SFP/SFP+/SFP28 transceiver	Ethernet 100/1000 Mbit/s, 10 Gbit/s, 25 Gbit/s optical
	2		Ethernet 10/100/1000 Mbit/s and 2.5/5/10 Gbit/s electrical (using active copper SFP) Fibre Channel 1X, 2X, 4X, 8X, 10X, 16X, 32X eCPRI 10 Gbit/s, 25 Gbit/s CPRI 1.2, 2.4, 3.1, 4.9, 6.1, 9.8, 10.1, 24.3 Gbit/s OBSAI 1.5, 3.1, 6.1 Gbit/s OC-1/STM-0, OC-3/STM-1, OC-12/STM-4, OC-48/STM-16, OC-192/STM-64 OTU1, OTU2, OTU1e, OTU2e, OTU1f, OTU2f
TA-QSFP28 (two ports)	1	Optical IN/OUT port QSFP+ transceiver	Ethernet 40 Gbit/s OTU3e2, OTU3e1, OTU3
	2	Optical IN/OUT port QSFP28 transceiver	Ethernet 50/100 Gbit/s CPRI 9.8, 10.1, 24.3 Gbit/s eCPRI 10/25/100 Gbit/s OTU4
		Optical IN/OUT port QSFP56 transceiver	Ethernet 100 Gbit/s
TA-CFP4	1	CFP4	Ethernet 100 Gbit/s OTU4
	REF OUT	REF OUT (SMA)	Electrical port for eye diagram clock signal generation


Physical Interfaces and LEDs

FTBx-88260 and Transceiver Systems

Transceiver System	Port Labelled ^a	Description	Supported Signal(s)
TA-SYNC ^b	EXT CLK	EXT CLK (SMB)	IN: 2 MHz, 10 MHz, 1PPS OUT: 2 MHz
TA-SYNC-PREMIUM ^{b, c}	1 PPS	1PPS (SMB)	IN: 1PPS ^e
TA-SYNC-PREMIUM v2 ^{b, d}	ANTENNA	ANTENNA (SMA) GNSS	IN: Antenna for GNSS receiver ^e
	PWR IN ^f	5 VDC (SMB)	IN: 5 VDC


- The ports are listed/referred as follows in the GUI: **Port**, FTBx-88260's port (**A** or **B**), transceiver system port (1 or 2), and connector type; for example **Port A1 - SFP28**.
- Only one TA-SYNC / TA-SYNC PREMIUM transceiver system is supported per module. In case two TA-SYNC are inserted, only one will be active, tap Setup, System, and the TA-Sync tab to see which one is active.
- Provides the same functionalities as a TA-SYNC but with enhanced accuracy and Holdover capability.
- Provides the same functionalities as a TA-SYNC PREMIUM but with enhanced Holdover accuracy.
- Used for **One-Way Latency** measurement mode and Time Error / Wander test application.
- Only available on the TA-SYNC PREMIUM v2 and used to preserve the warm-up operation. Use the supplied cable to connect it to the platform USB 3.0 port () which is next to the Ethernet (RJ45) port. The green power LED lit once a 5 VDC source is present.

FTBx-88460 and Transceiver Systems

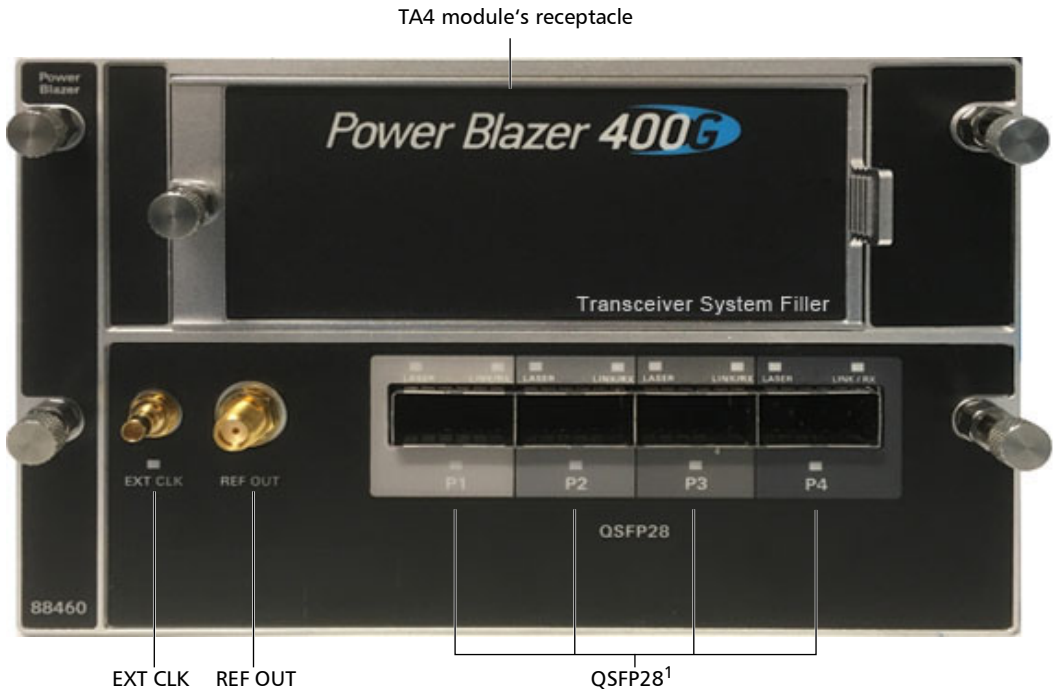

1. Laser radiation is emitted from this port when LASER LED is on.

► TA4-CFP2

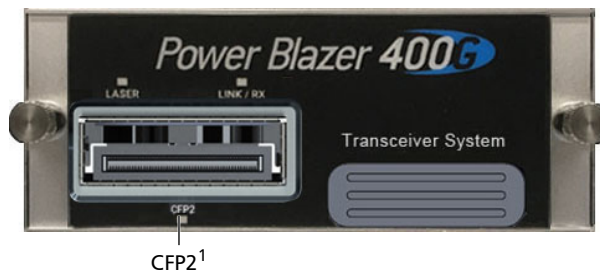

1. Laser radiation is emitted from this port when LASER LED is on.

Physical Interfaces and LEDs

FTBx-88460 and Transceiver Systems

➤ TA4-CFP8



1. Laser radiation is emitted from this port when LASER LED is on.

➤ TA4-OSFP



1. Laser radiation is emitted from this port when LASER LED is on.

➤ TA4-QSFP-DD



1. Laser radiation is emitted from this port when LASER LED is on.

The following table shows the list of available ports and the supported signals on the module excluding the TA4 transceiver system ports.

Port Labelled	Description	Supported Signal(s)
QSFP28 (P1, P2, P3, P4)	Optical IN/OUT port QSFP28 transceiver	Ethernet 1000 Mbit/s (optical) ^a , 10 Gbit/s ^a , 25 Gbit/s ^a , 40 Gbit/s, 50 Gbit/s, 100 Gbit/s 100G FlexO-1-RS OTU4, OTU3e2, OTU3e1, OTU3, OTU2f ^a , OTU1f ^a , OTU2e ^a , OTU1e ^a , OTU2 ^a , OTU1 ^a
	Optical IN/OUT port QSFP56 transceiver	Ethernet 100 Gbit/s 100G FlexO-1-RS
REF OUT	Electrical port SMA for eye diagram clock signal generation	
EXT CLK	Electrical port SMB for external clock synchronization	1PPS ^b

- a. Requires a QSFP28 to SFP28 transceiver adapter.
- b. Available for **One-Way Latency** measurement mode.

Physical Interfaces and LEDs

FTBx-88460 and Transceiver Systems

The following table shows the list of available transceiver systems and the supported signals.


Transceiver System	Description	Supported Signal(s)
TA4-CFP2v2 ^a	Optical IN/OUT port CFP2-DCO transceiver	400ZR (CFEC, 16QAM, DWDM Amplified) 400ZR+ (OFEC, 16QAM) 100ZR+ (OFEC, QPSK) FOIC4 (OFEC, 16QAM)
TA4-CFP8	Optical IN/OUT port CFP8 transceiver	400 Gbit/s Ethernet
TA4-OSFP	Optical IN/OUT port OSFP transceiver	400 Gbit/s Ethernet 8 x 50 Gbit/s Ethernet 4 x 100 Gbit/s Ethernet 2 x 200 Gbit/s Ethernet
TA4-OSFPv2 ^a	Optical IN/OUT port OSFP transceiver	400 Gbit/s Ethernet 400ZR (CFEC, 16QAM, DWDM Amplified) 400ZR (CFEC, 16QAM, Unamplified) 400ZR+ (OFEC, 16QAM) 100ZR+ (OFEC, QPSK) 8 x 50 Gbit/s Ethernet 4 x 100 Gbit/s Ethernet 2 x 200 Gbit/s Ethernet
TA4-QSFP-DD	Optical IN/OUT port QSFP-DD transceiver	400 Gbit/s Ethernet 8 x 50 Gbit/s Ethernet 4 x 100 Gbit/s Ethernet 2 x 200 Gbit/s Ethernet 2 x 100 Gbit/s Ethernet
	Optical IN/OUT port QSFP56 transceiver	200 Gbit/s Ethernet 100 Gbit/s Ethernet
	Optical IN/OUT port QSFP28 transceiver	100 Gbit/s Ethernet

Transceiver System	Description	Supported Signal(s)
TA4-QSFP-DDv2 ^a	Optical IN/OUT port QSFP-DD transceiver	400 Gbit/s Ethernet 400ZR (CFEC, 16QAM, DWDM Amplified) 400ZR (CFEC, 16QAM, Unamplified) 400ZR+ (OFEC, 16QAM) 100ZR+ (OFEC, QPSK) 8 x 50 Gbit/s Ethernet 4 x 100 Gbit/s Ethernet 2 x 200 Gbit/s Ethernet 2 x 100 Gbit/s Ethernet
	Optical IN/OUT port QSFP56 transceiver	200 Gbit/s Ethernet 100 Gbit/s Ethernet
	Optical IN/OUT port QSFP28 transceiver	100 Gbit/s Ethernet

a. Requires revision B of the FTBx-88460 module.


FTBx-88480, FTBx-88481, FTBx-88482, and Transceiver Systems

FTBx-88480

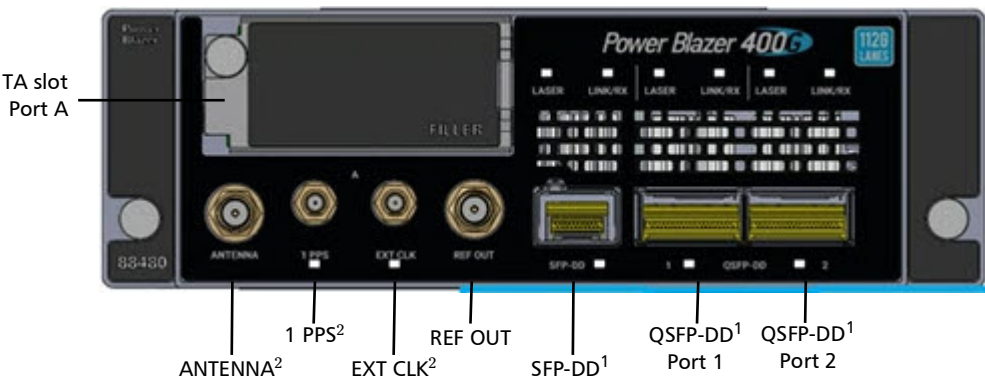

- 1. Laser radiation is emitted from this port when LASER LED is on.
- 2. Future use.

FTBx-88481

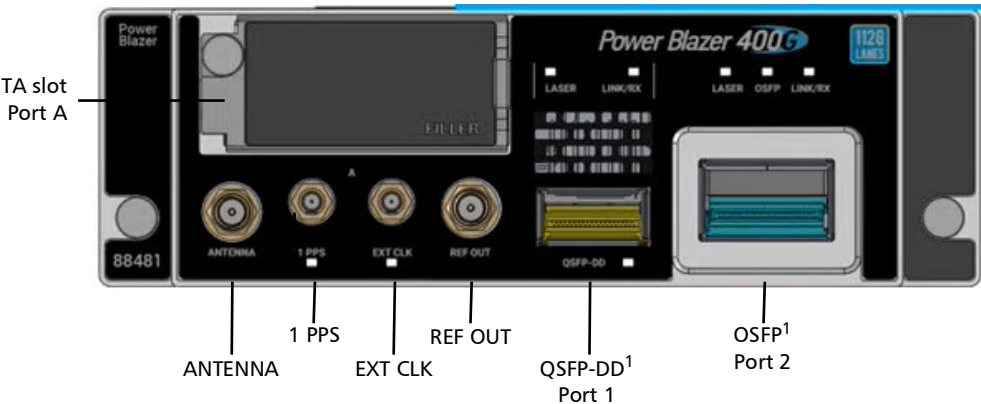

- 1. Laser radiation is emitted from this port when LASER LED is on.

Physical Interfaces and LEDs

FTBx-88480, FTBx-88481, FTBx-88482, and Transceiver Systems

FTBx-88482

Note: The FTBx-88482 is divided into two parts labelled **A** and **B** respectively. Part **A** has the same ports as an FTBx-88481 while part **B** has the same ports as an FTBx-88480.



► TA-SFP28



Port 1¹: SFP28 Port 2¹: SFP28

1. Laser radiation is emitted from this port when LASER LED is on.

Physical Interfaces and LEDs

FTBx-88480, FTBx-88481, FTBx-88482, and Transceiver Systems

➤ TA-QSFP28



Port 1¹: QSFP28 Port 2¹: QSFP28

1. Laser radiation is emitted from this port when LASER LED is on.

The following table shows the list of available ports and the supported signals on each module excluding the TA transceiver system ports.

Port Labelled	Description	Supported Signal(s)	Module
QSFP-DD 1 QSFP-DD 2	Optical IN/OUT port QSFP-DD transceiver	400 Gbit/s Ethernet 400ZR (CFEC, 16QAM, DWDM Amplified) 400ZR (CFEC, 16QAM, Unamplified) 400ZR+ (OFEC, 16QAM) 4 x 100 Gbit/s Ethernet 2 x 200 Gbit/s Ethernet 100ZR+ (OFEC, QPSK)	88480 88481 88482
	Optical IN/OUT port QSFP112 transceiver	400 Gbit/s Ethernet	
	Optical IN/OUT port QSFP56 transceiver	200 Gbit/s Ethernet	
OSFP	Optical IN/OUT port OSFP transceiver	400 Gbit/s Ethernet 4 x 100 Gbit/s Ethernet 2 x 200 Gbit/s Ethernet 100ZR+ (OFEC, QPSK)	88481 88482
SFP-DD	Optical IN/OUT port SFP56 transceiver	Fibre Channel 16X, 32X, 64X	88480 88482
REF OUT	Electrical port SMA for eye diagram clock signal generation		88480 88481 88482
Port A	Transceiver system	This port can accept one of the transceiver systems described below. Two transceiver systems are possible on 88482.	88480 88481 88482

Physical Interfaces and LEDs

FTBx-88480, FTBx-88481, FTBx-88482, and Transceiver Systems


The following table shows the list of available transceiver systems and the supported signals.

Transceiver System	Port Labelled ^a	Description	Supported Signal(s)
TA-SFP28 (two ports)	1	Optical IN/OUT port	Ethernet 25Gbit/s, 10 Gbit/s, 1 Gbits/s
	2	SFP/SFP+/SFP28 transceiver	Fibre Channel 1X, 2X, 4X, 8X, 10X, 16X, 32X OTU1, OTU2, OTU1e, OTU2e, OTU1f, OTU2f
TA-QSFP28 (two ports)	1	Optical IN/OUT port	Ethernet 40 Gbit/s
	2	QSFP+ transceiver	OTU3e2, OTU3e1, OTU3
		Optical IN/OUT port	Ethernet 100 Gbit/s
		QSFP28 transceiver	OTU4

- a. The ports are listed/referred as follows in the GUI: **Port, A**, transceiver system port (1 or 2), and connector type; for example **Port A1 - QSFP28**.

Physical Interfaces and LEDs

FTBx-8870/8880

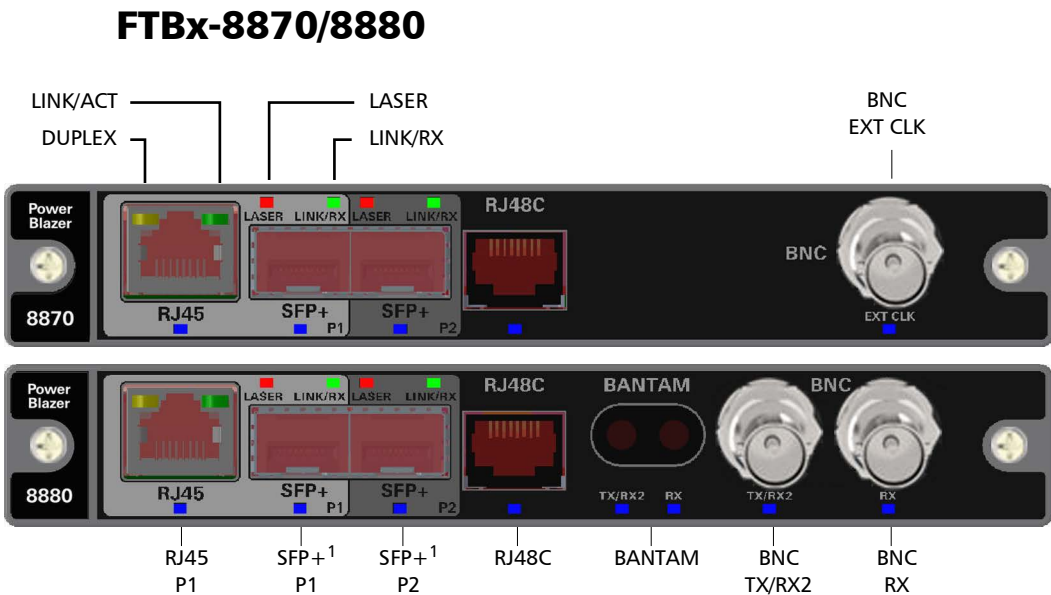

1. Laser radiation is emitted from this port when LASER LED is on.

The following table shows the list of available ports as well as a description and the signals supported for each module.

Connector	Labelled	Description and supported signal(s)	Module	
			8870	8880
Bantam	BANTAM TX/RX2 RX	TX and RX: DS1/1.5M, E1/2M	-	X
		RX2: DS1/1.5M		
		Clock IN/OUT: DS1/1.5M, E1/2M, 2 MHz		

Connector	Labelled	Description and supported signal(s)	Module	
			8870	8880
BNC	BNC TX/RX2	TX: E1/2M, E3/34M, DS3/45M, STS-1e/STM-0e/52M, E4/140M, STS-3e/STM-1e/155M RX2: DS3, 2 MHz, 10 MHz	-	X
		Clock OUT: DS1/1.5M, E1/2M, 2 MHz		
	BNC RX	E1/2M, E3/34M, DS3/45M, STS-1e/STM-0e/52M, E4/140M, STS-3e/STM-1e/155Mk, 1PPS	-	X
		Clock IN: DS1/1.5M, E1/2M, 2 MHz, 10 MHz, 1 PPS		
	BNC EXT CLK	Clock IN: DS1/1.5M, E1/2M, 2 MHz, 1 PPS	X	-
RJ45	RJ45 P1	Ethernet 10/100/1000 Mbit/s electrical	X	X
RJ48C	RJ48C	DS1/1.5M, E1/2M	X	X
		1PPS, 2 MHz, 10 MHz	-	X
		Clock IN: DS1/1.5M, E1/2M, 2 MHz	-	X
		Clock OUT: DS1/1.5M, E1/2M, 2 MHz	-	X
SFP/SFP+	SFP+ P1 or SFP+ P2	Ethernet 100 Mbit/s, 1000 Mbit/s, 10 Gbit/s LAN/WAN optical OC-1/STM-0, OC-3/STM-1, OC-12/STM-4, OC-48/STM-16, OC-192/STM-64 ^a OTU1, OTU2, OTU1e, OTU2e, OTU1f, OTU2f eCPRI 10 Gbit/s CPRI 1.2, 2.4, 3.1, 4.9, 6.1, 9.8, 10.1 Gbit/s OBSAI 1.5, 3.1, 6.1 Gbit/s Fibre Channel 1X, 2X, 4X, 8X, 10X	X	X
	SFP+ P2	Ethernet 10/100/1000 Mbit/s and 2.5/5/10 Gbit/s electrical (using active copper SFP)	X	X


a. Port **SFP+ P2** is used with OC-192/STM-64 in **Decoupled (TX≠RX)** mode.

Physical Interfaces and LEDs

FTBx-88800 and FTBx-88801


FTBx-88800 and FTBx-88801

FTBx-88800

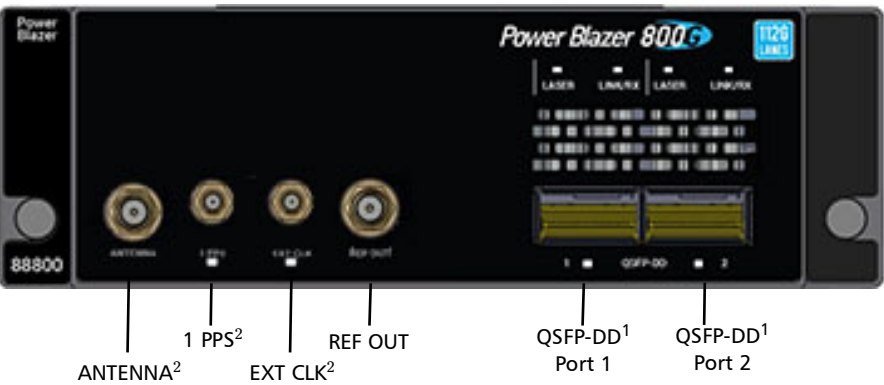

- 1. Laser radiation is emitted from this port when LASER LED is on.
- 2. Reserved, not used.

FTBx-88801

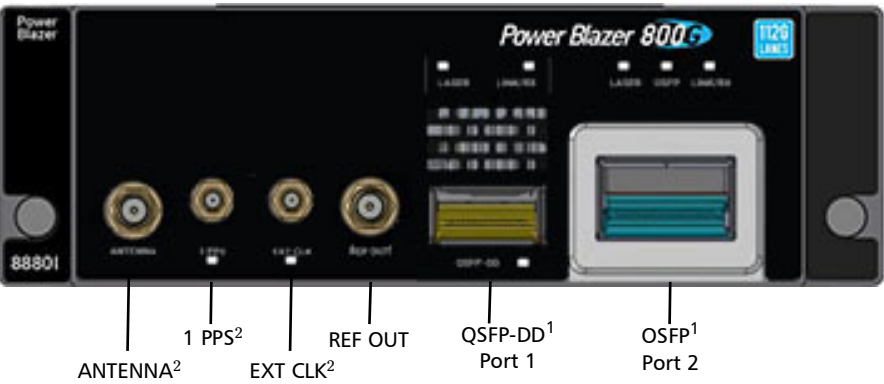

- 1. Laser radiation is emitted from this port when LASER LED is on.
- 2. Reserved, not used.

The following table shows the list of available ports and the supported signals on the module.

Port Labelled	Description	Supported Signal(s)	Module
QSFP-DD 1 QSFP-DD 2 ^a	Optical IN/OUT port QSFP-DD800 transceiver	800 Gbit/s Ethernet 2 x 400 Gbit/s Ethernet 8 x 100 Gbit/s Ethernet	88800 88801
	QSFP-DD transceiver	400 Gbit/s Ethernet 4 x 100 Gbit/s Ethernet 2 x 200 Gbit/s Ethernet 400ZR (CFEC, 16QAM, DWDM Amplified) 400ZR (CFEC, 16QAM, Unamplified) 400ZR+ (OFEC, 16QAM) 100ZR+ (OFEC, QPSK)	
	Optical IN/OUT port QSFP112 transceiver	400 Gbit/s Ethernet	
	Optical IN/OUT port QSFP56 transceiver	200GE (4 Lanes) [212.5 Gbit/s]	
OSFP	Optical IN/OUT port OSFP800 transceiver	800 Gbit/s Ethernet 2 x 400 Gbit/s Ethernet 8 x 100 Gbit/s Ethernet	88801
	Optical IN/OUT port OSFP transceiver	400 Gbit/s Ethernet 4 x 100 Gbit/s Ethernet 2 x 200 Gbit/s Ethernet 400ZR (CFEC, 16QAM, DWDM Amplified) 400ZR (CFEC, 16QAM, Unamplified) 400ZR+ (OFEC, 16QAM) 100ZR+ (OFEC, QPSK)	
REF OUT	Electrical port SMA for eye diagram clock signal generation		88800 88801

a. Only available on 88800.

Transceivers

Carefully connect optical fibre cables to the transceiver IN and OUT ports. To ensure good signal quality, make sure that the optical fibre connector is fully inserted into the optical connector port.



CAUTION

To prevent exceeding the maximum input power level please use an attenuator when a loopback configuration is used.



CAUTION

Before inserting an optical module into the interface receptacle, inspect the receptacle to make sure nothing is inside.



WARNING

Use only EXFO supported transceivers. Refer to www.exfo.com for the list of supported transceivers. Using non-supported transceivers can affect the performance and accuracy of the test.

Note: *Do not replace the transceiver while the test is running to avoid distorting results. First stop the test, replace the transceiver, select the connector type (refer to Modify Structure on page 144), and then restart the test.*

RJ45

The electrical port is RJ45 for category 5 unshielded twisted pair (UTP). Refer to *Ethernet Cables* on page 858 for cable specifications.

BNC

Connector type is BNC for coaxial 75-ohm cable connection. An adapter cable (BNC to Bantam) is required for Bantam external clock connection (not supplied).

SMB

The connector type is SMB for coaxial 75-ohm cable connection. An adapter cable (SMB to Bantam) is required for Bantam connection (not supplied).

LEDs


- **LASER** red LED is on when the **module** is emitting an optical laser signal.
- **LINK/RX** green LED is on when the link is up, off when the link is down, and flashing when frames are transmitted/received. For multiple link interface, the LED is on when all Links have their link up, off when at least one Link has its link down, and flashing when all Links have their link up and Ethernet traffic is received on at least one enabled Link.
- **DUPLEX** green LED is on for Full Duplex mode, off for Half Duplex mode, and flashing when collisions are detected.
- Port blue LED is on when this port is selected for the test, and flashing when this port is selected for clock input.

5 Graphical User Interface Overview

This chapter describes the Power Blazer Series graphical user interface.

Main Application Window

The following main application window is displayed when the Power Blazer application is started.

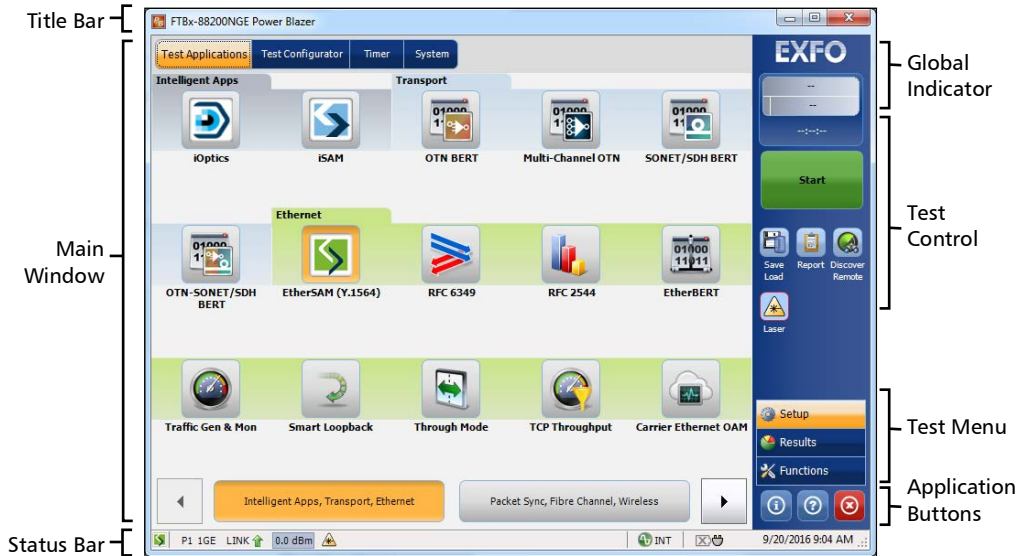

Main Window

The main window is used to setup a test and to view the test status and results.

Navigation Buttons

Navigation buttons appear when there is not enough room on one page to display all available test applications. The left and right arrow buttons allow respectively accessing the previous or next window. The buttons in between the left and right arrow buttons allow directly selecting the window for the type of test application listed.

Status Bar

The status bar displays the following information.

Icon and/or text	Description	Test Application
Test icon	Icon representing the active test application.	All
P1, P2, P3, P4	Port identification number: Port x	All
A1, A2, B1, B2	Port identification number composed of the port of the FTBx-88260 module (A or B) and the transceiver system port (1 or 2)	All
[Lx]	On 88260, indicates the Lane number when using a QSFP28 multilane transceiver for a serial interface rate.	CPRI/OBSAI eCPRI
TX/RX, TX, RX	Indicates the direction of the signal per port.	Transport, Time Error / Wander (DS1/E1)
Interface/ Signal	The interface or signal rate per port: 1GE Optical, 40G, OTU1, OTU2, OTU3, etc.	All
(BTS) or (RRH)	BTS: Emulation mode is Base Station RRH: Emulation mode is Remote Radio Head	CPRI/OBSAI BERT

Icon and/or text	Description	Test Application
LINK	For single or dual port, the status per port: Green arrow: Link up. Red arrow: Link down. Gray arrow: Awaiting incoming data to provide a status.	All CPRI/OBSAI BERT
	For multiple link interface, the status of all enabled links: Green arrow: Link up on all links. Red arrow: Link down on at least one link. Gray arrow: Awaiting incoming data to provide a status.	EtherBERT (Multiple link interface)
	For multiple Ethernet clients, the status of all enabled clients: Green arrow: Link up on all clients. Red arrow: Link down on at least one client. Gray arrow: Awaiting incoming data to provide a status.	DCO (Multiple Ethernet clients)
FlexO status and size	Indicates the FlexO group status and its size: Green arrow: FlexO Group Up. Red arrow: FlexO Group Down.	FlexO BERT
PTP	For G.8265.1 and G.8275.2: Green arrow: Signaling requests granted. Red arrow: Request denied, session canceled, or no reply. Gray arrow: Pending, inactive, or link down.	1588 PTP, Time Error / Wander
	For G.8275.1: Green arrow: Announce, Sync, and Follow-up are received according with their respective interval. Red arrow: Announce, Sync, or Follow-up are not received. Gray arrow: Pending.	
	Refer to <i>Negotiation Status</i> on page 223 for more information.	
ESMC	Green arrow: ESMC valid information frame received. Red arrow: No ESMC valid information frames received. Gray arrow: Pending state. Refer to <i>ESMC Monitoring</i> on page 444 for more information.	SyncE, Time Error / Wander

Graphical User Interface Overview

Status Bar

Icon and/or text	Description	Test Application
Power level	The received optical signal status: Green with "Power": Power level in range^a. Yellow: Power level out-of-range^b. Red with "LOS": Loss of signal^b. Red with "Power": Power level is close to damage. Gray: The power range information is either not available or not supplied by the transceiver.	All except Cable Test
	For multiple link interface, the power level status of all enabled link using the following priority order: 1- Red with "Power": Power level is close to damage on at least one lane of any link. 2- Red with "LOS": Loss of signal on at least one lane of any link. 3- Yellow: Power level out-of-range on at least one lane of any link. 4- Gray: The power range information is either not available or not supplied by the transceiver for at least one lane of any link. 5- Green: Power level in range for all lanes on all link.	EtherBERT (Multiple link interface)
	Laser ON^b. The laser icon is not displayed when the laser is off^a. The laser icon is only displayed for optical interfaces. The laser is ON by default when the test is created. The laser control is not affected when turning off the laser by generating a LOS for example. Refer to <i>Laser Button</i> on page 787.	All
	For multiple link interface, the laser status of all enabled link: Laser ON for at least one lane of any link. The laser icon is not displayed when the laser is off for all lanes on all links. The laser is ON by default when the test is created. The laser control is not affected when turning off the laser by generating a LOS for example. Refer to <i>Laser Button</i> on page 787.	EtherBERT (Multiple link interface)

Icon and/or text	Description	Test Application
	For single or dual port, the status of the received signal pattern per port: Green: Pattern is synchronized. Red: Loss of pattern. Gray: Test is not running (EtherBERT test or EoOTN client) or the No Pattern Analysis (Live) check box is selected.	Transport EtherBERT Fibre Channel Wireless
	For multiple link interface, the pattern status of all enabled links: Green: Pattern is synchronized on all links having the No Pattern Analysis (Live) check box cleared. Red: Loss of pattern on at least one link. Gray: Test is not running or at least one link is in alarm.	EtherBERT (Multiple link interface)
	For multiple Ethernet clients, the pattern status of all enabled clients: Green: Pattern is synchronized on all clients having the No Pattern Analysis (Live) check box cleared. Red: Loss of pattern on at least one client. Gray: Test is not running or at least one client is in alarm.	DCO (Multiple Ethernet clients)
	Connection established between two testing units in Dual Test Set (DTS) or in Loop Up mode.	Ethernet
	Connection not established between two testing units in Dual Test Set (DTS) or in Loop Up mode.	Ethernet
	Loopback Tool enabled on the port unused by the main test application.	Ethernet
	Clock synchronization signal. The icon is followed by the clock mode: INT for Internal, EXT for External, RCV for Recovered, GNSS/HOLDOVER for Internal GNSS, BKP for Backplane. AUTO is displayed for dual port test when a different clock is used on each port. Green: Clock Synchronized. Yellow: Outside the Holdover performance specifications Red: Loss of clock.	Transport Ethernet Fibre Channel Sync Wireless
	Reference signal. The icon is followed by the reference mode: EXT for External Reference, GNSS for Internal GNSS. Green: Presence of reference Red: Loss of reference.	Time Error / Wander
	Indicates a manual change in the OH bytes transmitted. Not displayed when using the default OH values.	Transport FlexE
	Remote PC connection established with the Power Blazer.	N/A

Graphical User Interface Overview

Title Bar

Icon and/or text	Description	Test Application
	The test is in loopback mode. Not displayed when not in loopback mode.	NI-CSU Emulation
	Alarm/error is currently injected. Not displayed when there is no alarm/error injection.	Transport EtherBERT Carrier Ethernet OAM Fibre Channel Wireless

- a. For all lanes for parallel interface.
- b. For at least one lane for parallel interface.

The following status are also displayed:


- Battery/AC icons, available on FTB platforms, indicate the battery level and if the platform is connected to an AC power source. Refer to the platform user guide for more information.
- Date and Time indicate the current date and time.

Title Bar

The Title Bar displays the module’s slot number in brackets, the software application name and the minimize, maximize, and close buttons.

Global Indicator

The global indicator area displays the global pass/fail verdict, global alarm, and the test duration.

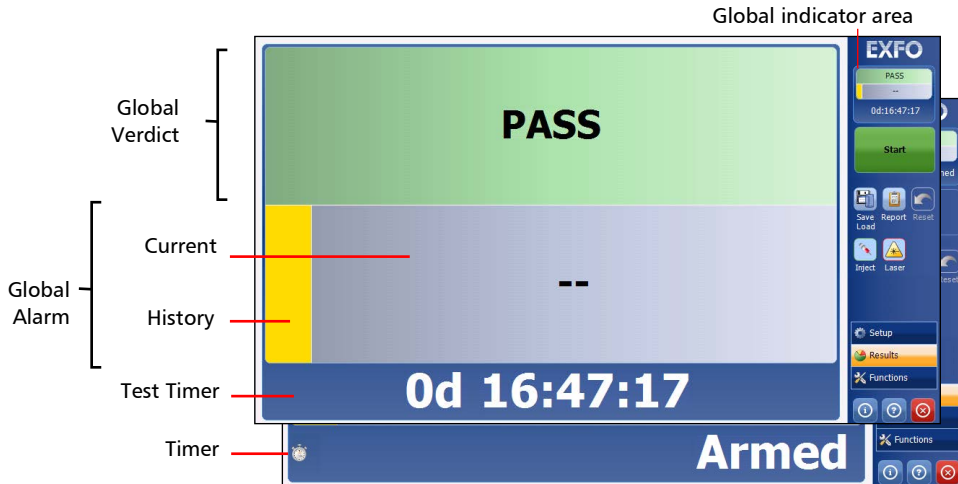

The global indicator area can be maximized for distant viewing. Tap anywhere within the global indicator area to display a maximized view. Tap again to exit the maximized view.

Global Verdict

Reports the global test verdict status when supported by the test application and enabled (when applicable).

Verdict	Description
PASS	PASS is displayed with a green background when all result values meet the configured threshold criteria.
FAIL	FAIL is displayed with a red background when any result value does not meet the configured threshold criteria or when a specific alarm is detected (refer to each test application for additional information).
"--"	"--" is displayed with a gray background when at least one of the following conditions is met: - Pass/Fail verdict is not enabled - there is no defined criterion - the test has not run yet.

Global Alarm

Indicates the current and history alarm/error status of the test.

Background color	Alarm/Error	Text displayed	Description
Gray	Current	--	No test result available.
	History		
Green	Current	No Alarm	No alarm/error has occurred in the last second.
	History		No alarm/error has occurred during the test.
Red	Current	Alarms or the name of the alarm.	An alarm/error occurred in the last second.
	History		
Amber	History		No current alarm/error but at least one alarm/error has occurred during the test.

Test Timer

The test timer without the timer icon indicates the time elapsed since the beginning of the test. No timer action is active. The test timer format is “day hour:minute:second”.

Timer

The timer icon with **Armed** indicates that a start time is active.

The timer icon with the Test Timer indicates that a duration and/or a stop time is active.

Test Control

Note: Refer to Test Control on page 781 for more information.

Test Menu

The test menu displays the following buttons:

- **Setup** allows configuring the selected test. Refer to *Setup* on page 127 for more information.
- **Results** allows viewing test results. Refer to *Test Results* on page 477 for more information.
- **Functions** allows configuring additional test functions (refer to *Test Functions* on page 667).

Application Buttons

- **Help (?)** displays the help information related to the content of the active main window. It is also possible to navigate through the remainder of the help information.
- **Exit (x)** closes the application.
- **About (i)** mainly displays the product version details and technical support information.
- **Send diagnostics** collects diagnostic information from the current FTBx-88000 Series application/module in order to help EXFO technical support investigating any issue encountered with this unit.

Use the **Describe details** field to provide additional information about the problem.

Enter a contact E-mail address in the **Your e-mail** field.

Select the **Display report after saving** check box to automatically open the .zip file once generated.

Click **Save Report** to generate, save, and send the report to EXFO technical support. Once the report is generated and saved a pop-up is displayed showing its file name and location on disk, click **OK**. If the **Display report after saving** check box is selected, the .zip file is open in File Explorer.

- **Module Details** button displays the unit details such as its ID, Serial Number, Software Product Version, etc.
- **View License Agreement** button displays the details of the product license agreement.
- **What's new** link allows displaying the details of the new features introduced with this software release as well as the platform inventory.

➤ **Software Options** button displays the list of software options.

Note: For information on how to install and activate software options, refer to the platform User Guide. The Power Blazer application must be restarted once a new software option is installed in order to activate it.

Software Option	Description
10electrical	Ethernet 10BASE-T electrical interface
10G_LAN	Ethernet 10G LAN optical and 10GBASE-T electrical interfaces
10G_WAN	Ethernet 10G WAN optical interface
100electrical	Ethernet 100BASE-TX electrical interface
100GE	Ethernet 100G (includes Ethernet 10G and 1G optical on 8848x)
100optical	Ethernet 100BASE-FX optical interface
155M	155 Mbit/s (SONET/SDH)
1588PTP	1588 Precision Time Protocol Test Application
1588PTPGM	1588 Precision Time Protocol Grandmaster Emulation
2.5-5GE	Ethernet 2.5GBASE-T and 5GBASE-T electrical interfaces
200GE	Ethernet 200G
2488M	2.488 Gbit/s (SONET/SDH)
25GE	Ethernet 25G
2X100GE	2 x 100GE (4x25G)
2X200GE	2 x 200GE (4x50G)
2X400GE	2 x 400GE (4x100G)
40GE	Ethernet 40G
400GE	Ethernet 400G
4X100GE	4 x 100GE
50GE	Ethernet 50G
52M	52 Mbit/s (SONET/SDH)
622M	622 Mbit/s (SONET/SDH)
800GE	Ethernet 800G
8X100GE	8 x 100GE
8X50GE	8 x 50GE

Graphical User Interface Overview

Application Buttons

Software Option	Description
9953M	9.953 Gbit/s (SONET/SDH)
CABLE_TEST	Cable Test Application
CPRI	CPRI 2.4576 Gbit/s and 3.072 Gbit/s
CPRI-1.2G	CPRI 1.2288 Gbit/s
CPRI-4.9G	CPRI 4.9152 Gbit/s
CPRI-6.1G	CPRI 6.144 Gbit/s
CPRI-9.8G	CPRI 9.8304 Gbit/s
CPRI-10.1G	CPRI 10.1376 Gbit/s
CPRI-24.3G	CPRI 24.33024 Gbit/s
DCO-400ZR	400ZR
DCO-OpenROADM	OpenROADM
DCO-OpenZRplus	OpenZR+
DP_200-400GE	Dual Port Test at 200GE to 400GE
DS1-FDL	DS1/1.5M Facility Data Link
eCPRI-10G	eCPRI over 10GE
eCPRI-25G	eCPRI over 25GE
eCPRI-100G	eCPRI over 100GE
EoE	Ethernet over Ethernet Encapsulation (10GE)
EoE_40-100GE	Ethernet over Ethernet Encapsulation (40/100GE)
EoOTN	Ethernet over Optical Transport Network
ETH-OAM	Carrier Ethernet OAM test application
ETH-THRU_200-400GE	Through Mode Test Application (200/400GE)
FC-1X	Fibre Channel 1X
FC-2X	Fibre Channel 2X
FC-4X	Fibre Channel 4X
FC-8X	Fibre Channel 8X
FC-10X	Fibre Channel 10X
FC-16X	Fibre Channel 16X
FC-32X	Fibre Channel 32X
FC-64X	Fibre Channel 64X
FlexE-100G	100G FlexE Group

Software Option	Description
FlexE-200G	200G FlexE Group
FlexE-200G-PHY	FlexE 200G Interface Type
FlexE-300G	300G FlexE Group
FlexE-400G	400G FlexE Group
FlexE-400G-PHY	FlexE 400G Interface Type
FlexE-50G	50G FlexE Group
FlexE-50G-PHY	FlexE 50G Interface Type
FlexE-HiRateClient	FlexE Clients at 150G and above
FlexE-LoRateClient	FlexE Clients at 100G and below
FlexE-MIX	FlexE Clients at mixed rates
FlexO-100G	100G FlexO Group
FlexO-200G	200G FlexO Group
FlexO-300G	300G FlexO Group
FlexO-400G	400G FlexO Group
G.mtnPathOAM	G.mtn Path OAM
GCC-BERT	OTN Overhead BERT and Synchronization validation
GigE_Electrical	Ethernet 1000BASE-T electrical interface
GigE_Optical	Ethernet 1000BASE-X optical interface
iOptics	Intelligent Pluggable Optic Test Application
iOptics-DCO	iOptic for DCO transceivers
iORF	Intelligent OpticalRF and OpticalRF Applications
iSAM	Intelligent Service Activation Methodology
L2-Transparency	L2CP Handling Test in EtherSAM
LINK-OAM	Link OAM
LLDP	LLDP Neighbor Discovery
MPLS	MPLS Encapsulation (up to 10GE)
MPLS_40-100GE	MPLS Encapsulation (40/100GE)
MULTI-CH-OTN	Multi-Channel OTN Test Application
NI-CSU	NI/CSU Emulation
OBSAI	OBSAI 3.072 Gbit/s
OBSAI-1.5G	OBSAI 1.536 Gbit/s

Graphical User Interface Overview

Application Buttons

Software Option	Description
OBSAI-6.1G	OBSAI 6.144 Gbit/s
ODU0	OTN ODU0
ODUflex	OTN ODUflex
ODUflex-HiRate	ODUflex client at 146.7G and above
ODUflex-LoRate	ODUflex client at 146.7G and below
ODUMUX	ODU Multiplexing Payload Type 20 and 21
OTN-INTR-THRU	OTN Intrusive Through Mode
OTN-MIX-MAPPING	Mix-Mapping capability for Multi-Channel OTN
OTU1	Optical Transport Unit-1 (2.7 Gbit/s)
OTU2	Optical Transport Unit-2 (10.7 Gbit/s)
OTU2-1e-2e	Optical Transport Unit-2 Overclocked (11.049/11.096 Gbit/s)
OTU2-1f-2f	Optical Transport Unit-2 Overclocked (11.270/11.317 Gbit/s)
OTU3	Optical Transport Unit-3 (43.018 Gbit/s)
OTU3-e1-e2	Optical Transport Unit-3 Overclocked (44.571/44.583 Gbit/s)
OTU4	Optical Transport Unit-4 (111.81 Gbit/s)
Packet-TE	Packet Time Error
PBBTE	Provider Backbone Bridge Encapsulation (10GE)
PBBTE_40-100GE	Provider Backbone Bridge Encapsulation (40/100GE)
PDH	Plesiochronous Digital Hierarchy
RFC6349	RFC 6349 test application (up to 25GE)
RFC6349_40-100GE	RFC 6349 test application (40/100GE)
SDH	Synchronous Digital Hierarchy
SONET	Synchronous Optical Network
SONETSDH-INTR-THRU	SONET/SDH Intrusive Through Mode
SyncE	Synchronous Ethernet Test Application
TCM	Tandem Connection Monitoring STS/AU and VT/TU (SONET/SDH)
TCP-THPUT	TCP Throughput Test Application
TST-OAM	Test Over Service OAM
Wander	Time Error / Wander Test Application

Zoomed-In/Zoomed-Out Views

Some configuration and result blocks give access to zoomed views allowing more detailed configurations/results.

The block title contains the magnifier (+) icon when a zoomed view is available.

To zoom-in, tap the magnifier (+) icon or anywhere on the block.

To zoom-out, tap on the magnifier (-) icon or anywhere on the block title.

Arrow Buttons

	Moves to the top of the list.
	Moves one page up.
	Moves one line up.
	Moves one line down.
	Moves one page down.
	Moves to the end of the list.

Keyboard Usage


The GUI pops up different keyboards to modify data. Following are the usual keyboard keys:

- Left arrow moves the cursor one position to the left.
- Right arrow moves the cursor one position to the right.
- Up arrow increases the value by one.
- Down arrow decreases the value by one.
- **Del** deletes the value at the cursor position.
- **Back** deletes the value preceding the cursor position.
- **OK** completes data entry.
- **Cancel** closes the keyboard and discards the keyboard entry.
- **Previous...** allows the selection of previously configured values. This button is only available for certain fields like IP Address, MAC Address, etc.

Note: *For certain text fields, the GUI pops up or uses the unit's on-screen keyboard. Refer to the platform user guide for more information on how to use it.*

For full keyboard, the **Back**, **Del**, **Shift**, and **Space** bar keys have the same functionality as a regular PC keyboard.

For multiplexing keyboard, tap on all mapped signals that have to be added/removed to/from the test path. A mapped signal with an orange background color is part of the test path. A mapped signal with a gray background color is not part of the test path.

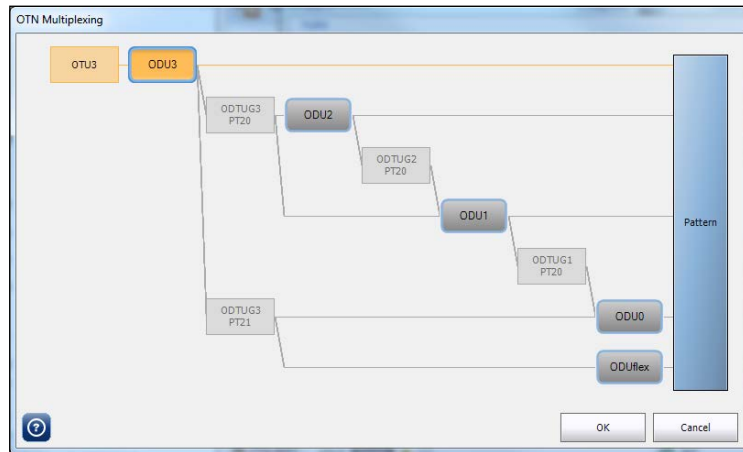

Graphical User Interface Overview

Keyboard Usage

The Trace message keyboard allows entering alphanumerical characters (ITU T.50) required for J0/J1/J2/TTI Trace fields. Tap the **Control Characters** button to access these characters.

ITU T.50 Characters					
b7 to b1	Character	Description	b7 to b1	Character	Description
000 0000	NUL	Null	001 0000	DLE	Data Link Escape
000 0001	SOH	Start Of Heading	001 0001	DC1	Device Control 1
000 0010	STX	Start of Text	001 0010	DC2	Device Control 2
000 0011	ETX	End of Text	001 0011	DC3	Device Control 3
000 0100	EOT	End Of Transmission	001 0100	DC4	Device Control 4
000 0101	ENQ	Enquiry	001 0101	NAK	Negative Acknowledge
000 0110	ACK	Acknowledge	001 0110	SYN	Synchronous idle
000 0111	BEL	Bell	001 0111	ETB	End of Transmission Block
000 1000	BS	Backspace	001 1000	CAN	Cancel
000 1001	HT	Horizontal Tabulation	001 1001	EM	End of Medium
000 1010	LF	Line Feed	001 1010	SUB	Substitute character
000 1011	VT	Vertical Tabulation	001 1011	ESC	Escape
000 1100	FF	Form Feed	001 1100	IS4	Information Separator 4
000 1101	CR	Carriage Return	001 1101	IS3	Information Separator 3
000 1110	SO	Shift-Out	001 1110	IS2	Information Separator 2
000 1111	SI	Shift-In	001 1111	IS1	Information Separator 1

File Structure

The configuration and result files are saved using the following file location structure: Users\<User>\Documents\<product>\

Where <product> is the family module name as follows:

Product/Module	<product>
8870, 8880, 88260	8880-PowerBlazer
88480, 88481, 88482, 88800, 88801	884xx-PowerBlazer
88200NGE	88200-PowerBlazer
88460	88460-PowerBlazer

6 ***Test Setup - Test Applications***

The Power Blazer offers the following test applications.

Intelligent Apps

Test Applications	Page
iOptics	65
iSAM	67

Transport

Test Applications	Page
DCO BERT	79
DSn/PDH BERT	81
FlexO BERT	69
Multi-Channel OTN	68
NI/CSU Emulation	86
OTN BERT	70
OTN-SONET/SDH BERT	73
SONET/SDH BERT	76
SONET/SDH - DSn/PDH BERT	83

Ethernet

Test Applications	Page
Cable Test	103
Carrier Ethernet OAM	101
EtherBERT	93
EtherSAM (Y.1564)	87
FlexE BERT	92

Test Setup - Test Applications

Test Applications	Page
RFC 2544	89
RFC 6349	91
Smart Loopback	97
TCP Throughput	100
Through Mode	99
Traffic Gen & Mon	95

Sync

Test Applications	Page
1588 PTP	104
SyncE	105
Time Error / Wander	106

Fibre Channel

Test Applications	Page
FC BERT	107

Wireless


Test Applications	Page
CPRI/OBSAI BERT	108
eCPRI BERT	110

iOptics


iOptics test application provides a quick assessment of the proper operation of an optical transceiver before using it in a network or test environment. The validation is done by running sub-tests in addition to monitoring transceiver power consumption and temperature. Result and verdict are reported for each sub-test and monitoring task. Transceiver’s manufacturing information is also automatically collected.

➤ Typical iOptics test applications:


For standard transceivers:

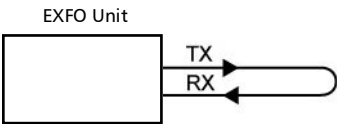

For bidirectional transceivers:

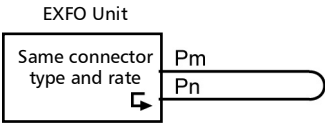


For an Active Optical Cable (AOC):

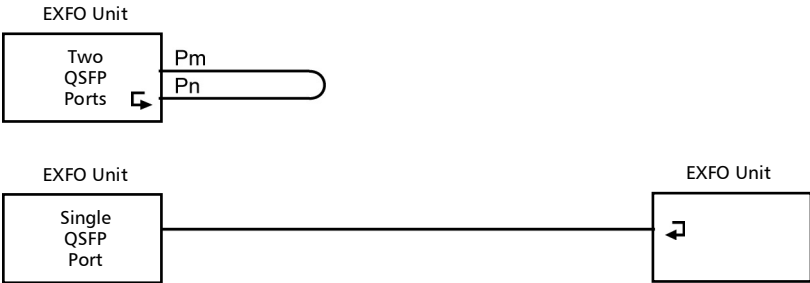


Test Setup - Test Applications

iOptics

For a Direct Attached Copper (QSFP-DD DAC):

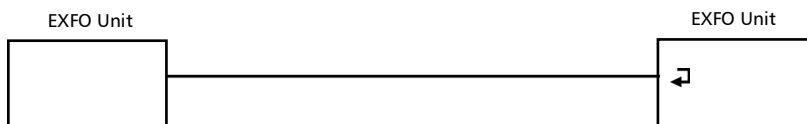

For QSFP56 Host/Media Loopback:

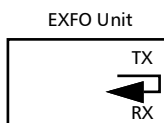


iSAM

iSAM is a simplified version of EtherSAM that is centered around addressing turn-up of E-Line circuits (EVC). The objective of the test is to validate Carrier Ethernet-based services key performance indicators defined in MEF: Frame Delay (FD), Inter-Frame Delay Variation (IFDV), and Frame Loss Ratio (FLR). In addition the RFC 6349 subtest can be enabled to validate that the Ethernet service is able to properly carry TCP traffic.

The **iSAM** test has to be executed in conjunction with a remote unit. The remote unit can be either in loopback configuration for unidirectional testing or in EtherSAM **Dual Test Set** mode for bidirectional testing.

The **Dual Test Set** test allows bi-directional testing between two compatible units providing independent results for each test direction. The results from local-to-remote and remote-to-local are available on the local testing unit.


► Typical iSAM test applications:

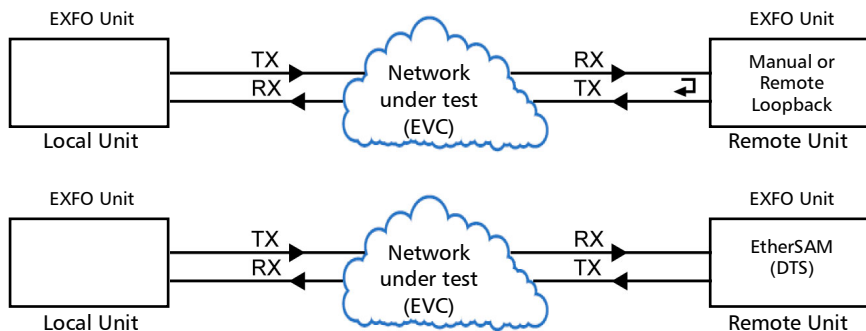

Multi-Channel OTN


The Multi-Channel OTN test application validates individual channel connectivity with a device under test by allowing concurrent generation and monitoring of all channels of a single or mixed ODUmux test structure.

- Typical Multi-Channel OTN test applications:

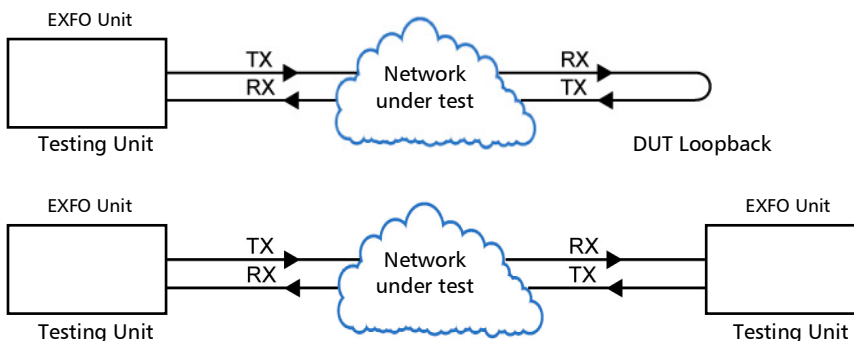

- Path/Mapping


The **Multi-Channel OTN** test application offers the following path/mapping structures depending on the inserted CFP4/QSFP transceivers and enabled options. Mixed mapping is available with the OTN-MIX-MAPPING software option.

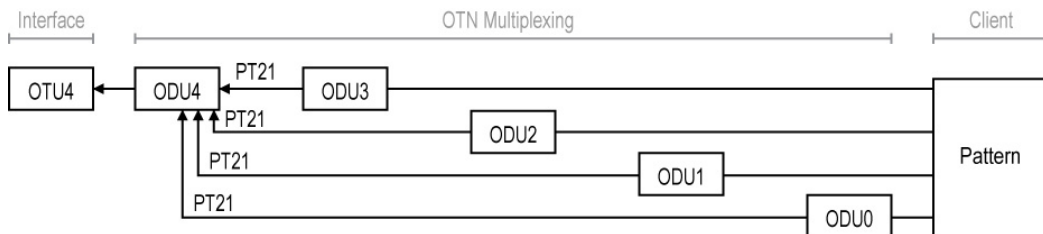

FlexO BERT

FlexO is an adaptation layer which provides a flexible, modular mechanism to support different line rates with beyond 100G signals. A set of n 100Gbit/s Instances are bonded together to carry an OTUCn, with each FlexO Instance carrying an OTUC slice. The current implementation of FlexO is fixed to 4 x 100G PHYs.

➤ Typical FlexO BERT test applications:

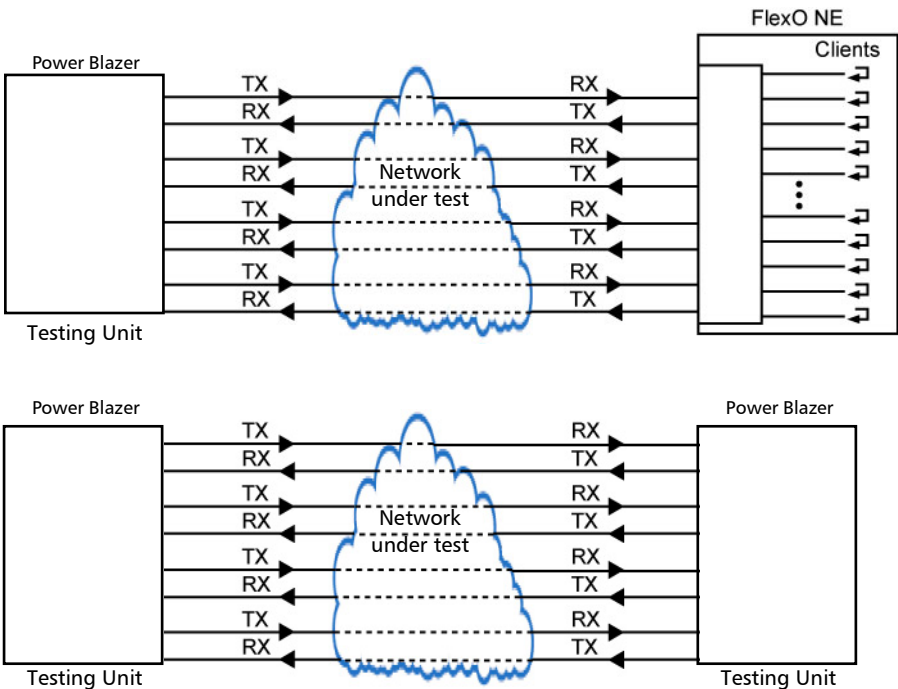


➤ Supported Interfaces/Rates: 100G.

OTN BERT

Allows OTN (framed and unframed), OTN multiplexing, and EoOTN traffic generation with specific test pattern for Bit Error Rate analysis.



- Typical OTN BERT test applications:

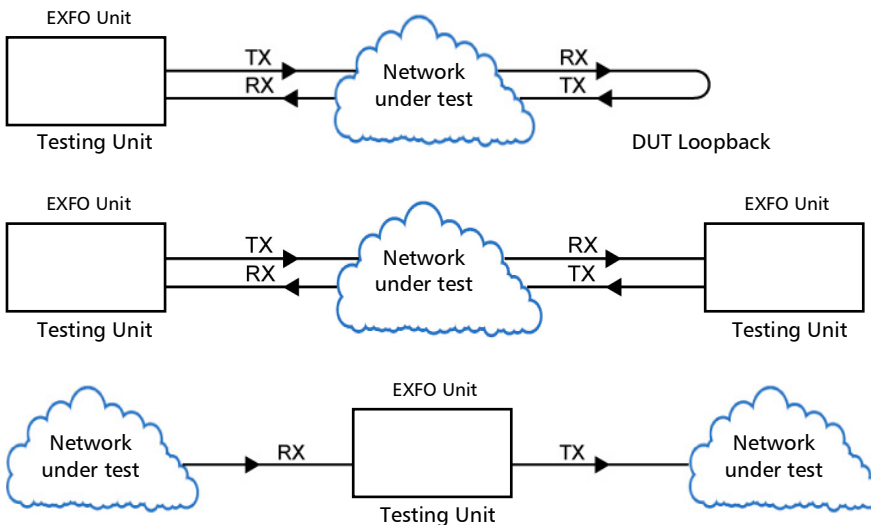

- Path/Mapping

The **OTN BERT** test application offers the following path/mapping structures depending on the inserted transceiver and enabled options.


Up to OTU4 for 88480/88481/88482/88200NGE/88260 and up to OTU2f for 8870/8880.

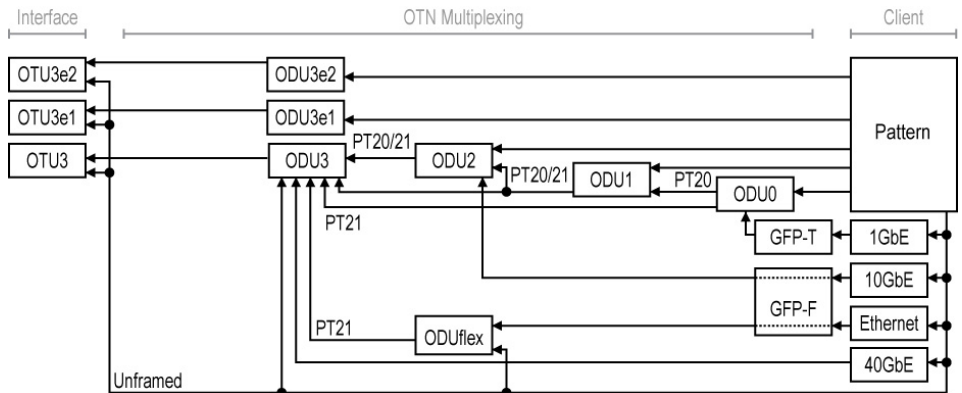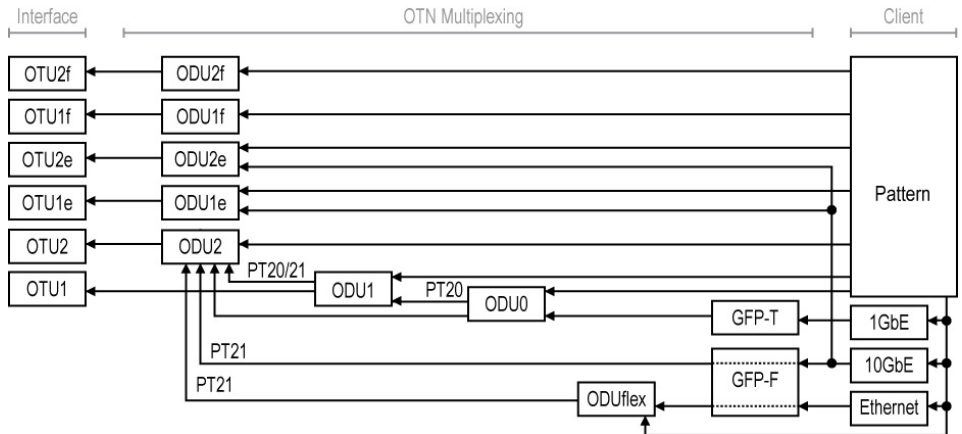


Test Setup - Test Applications

OTN BERT

➤ OTU4 for 88480/88481/88482/88460/88200NGE

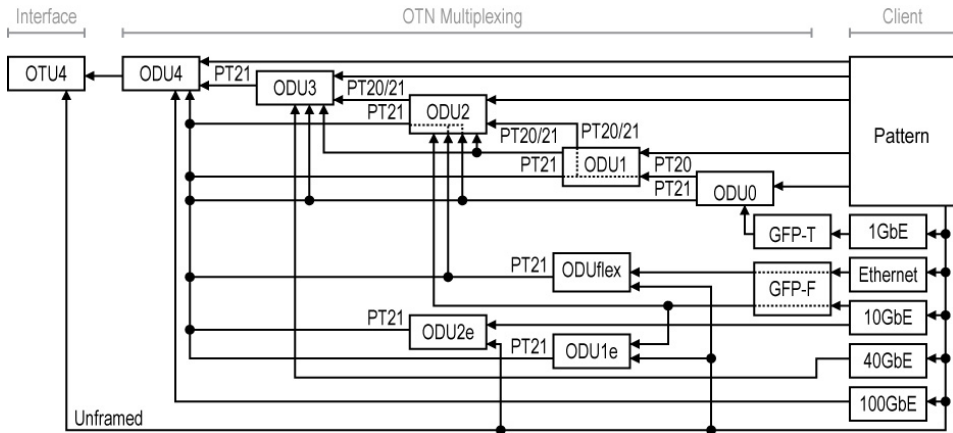


➤ OTU4 for 88260

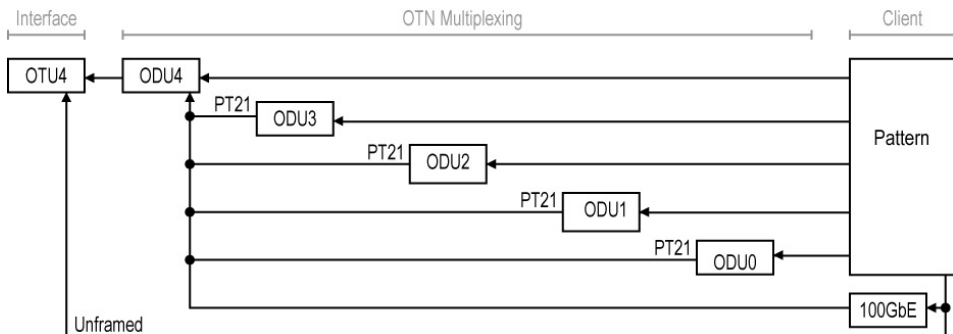

OTN-SONET/SDH BERT

Allows the validation of the SONET/SDH embedded in OTN transport protocol by performing a BERT test to check the traffic or payload stability over a network facility.

➤ Typical OTN-SONET/SDH BERT test applications:

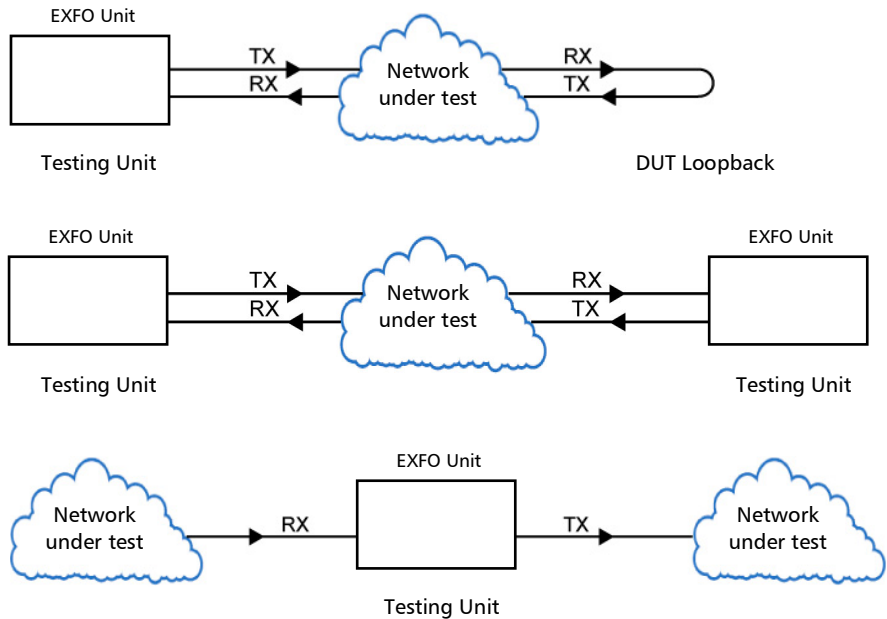


Test Setup - Test Applications

OTN-SONET/SDH BERT


➤ Path/Mapping

The **OTN-SONET/SDH BERT** test application offers the following path/mapping structures depending on the module, inserted transceiver, and enabled options.

For OTN-SONET BERT: up to OTU4 for 88200NGE, up to OTU3 for 88260, and up to OTU2 for 8870/8880.

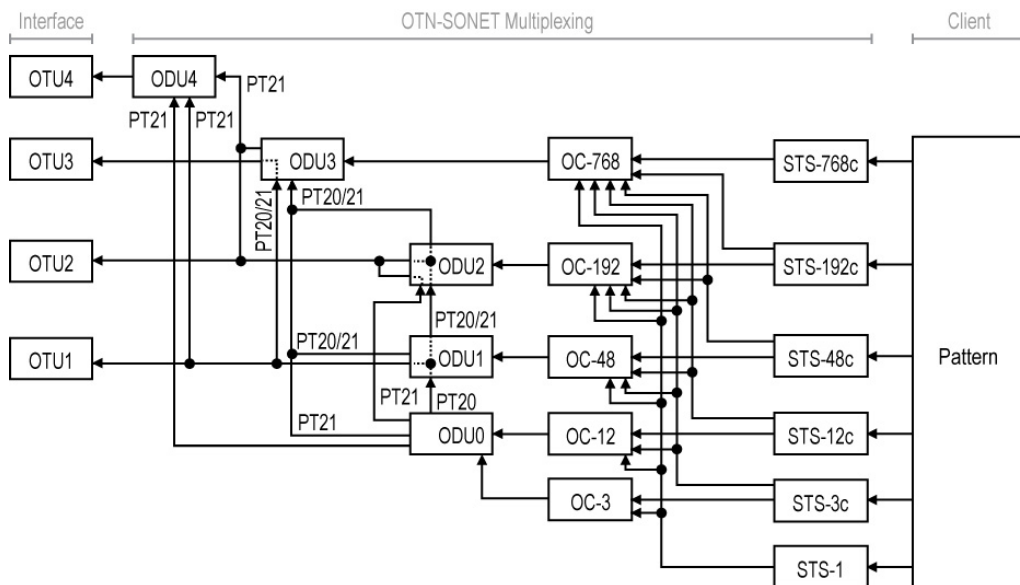


For OTN-SDH BERT: up to OTU4 for 88200NGE, up to OTU3 for 88260, and up to OTU2 for 8870/8880.

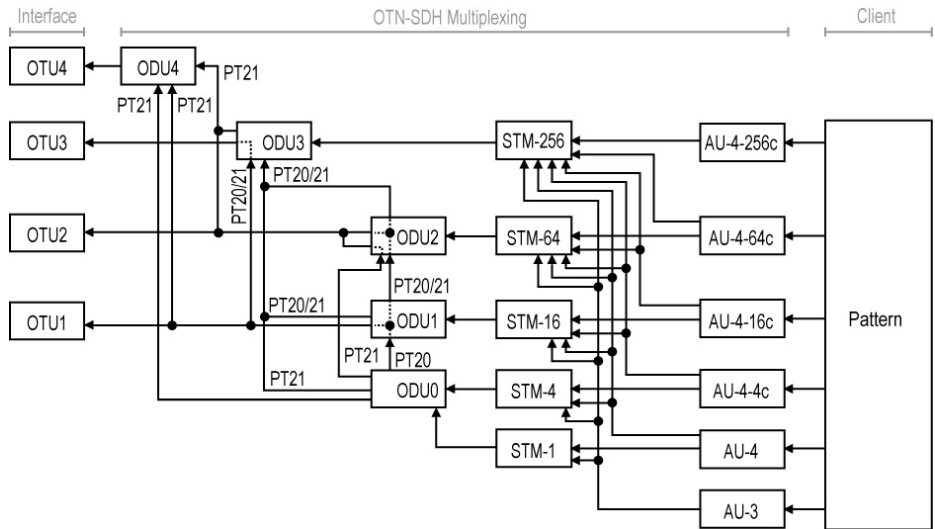

SONET/SDH BERT

Allows the validation of the SONET or SDH transport protocol by performing a BERT test to check the traffic or payload stability over a network facility.


- Typical SONET/SDH BERT test applications:

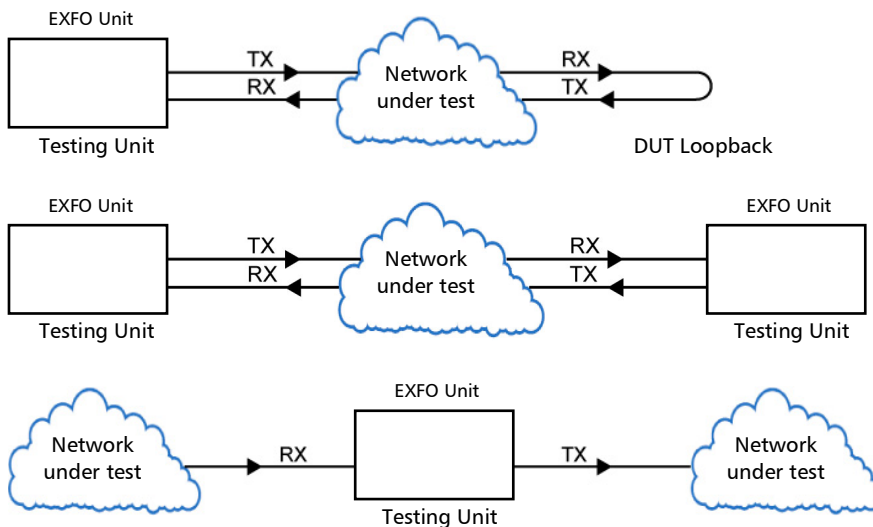

➤ Path/Mapping

The **SONET/SDH BERT** test application offers the following path/mapping structures depending on the inserted transceiver, and enabled options.


For SONET BERT

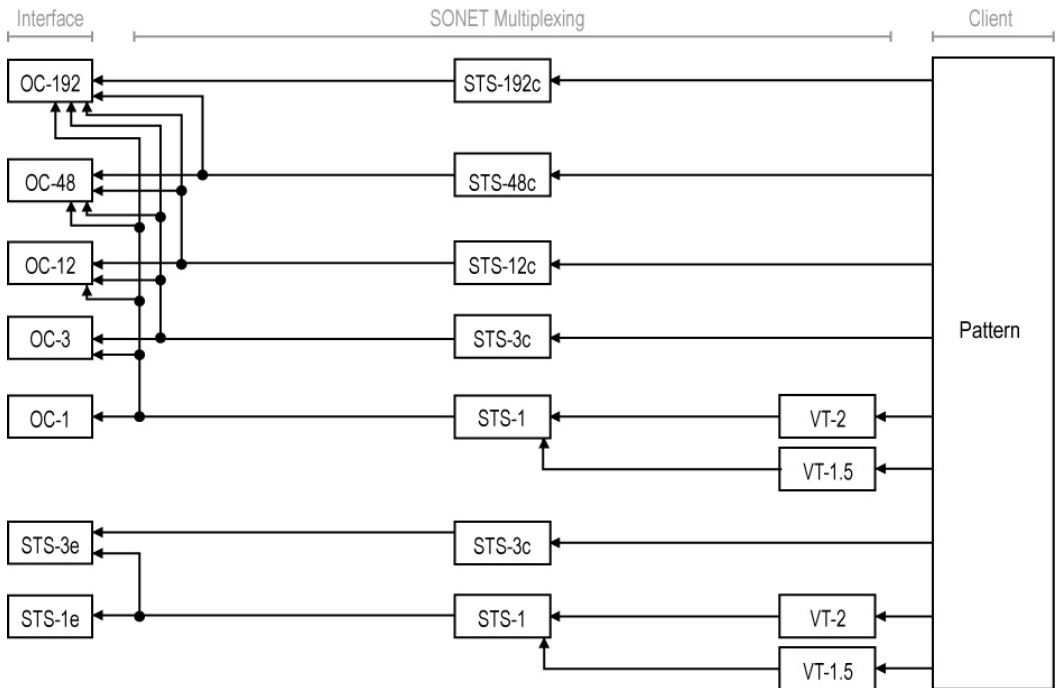

Test Setup - Test Applications

SONET/SDH BERT

For SDH BERT

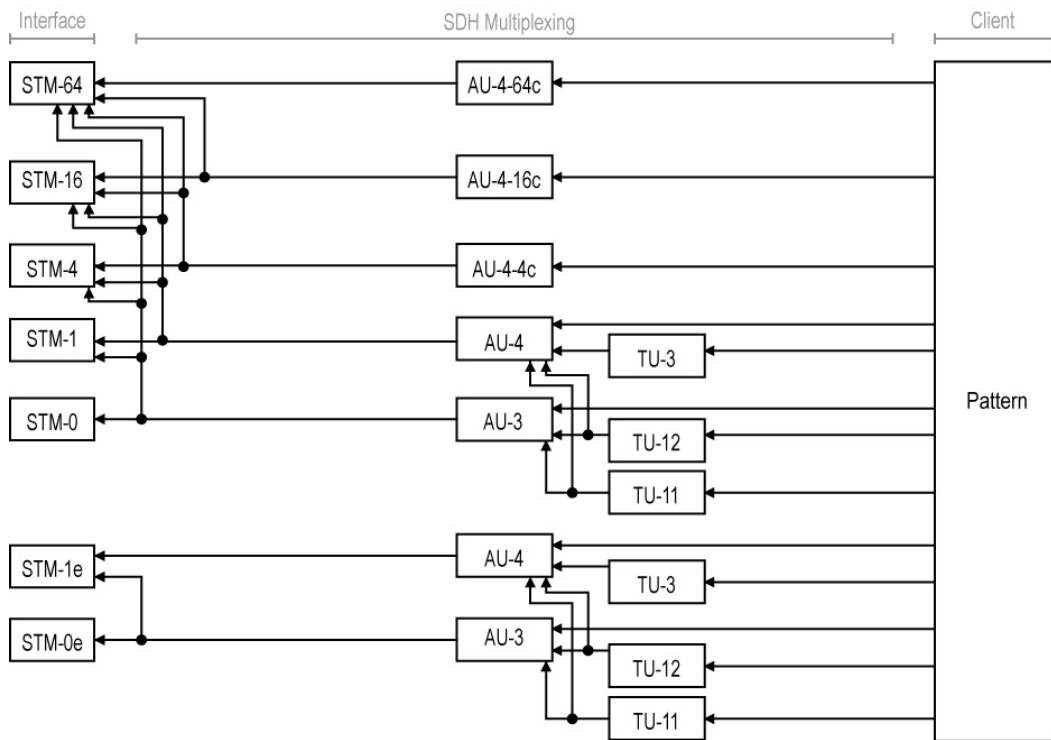


DCO BERT

DCO BERT test allows to generate and analyze simulated client traffic, perform BERT test, and monitor key optical metrics as well as alarms/errors provided by the DCO Transceiver.


Two EXFO product can be placed at both ends of the DCO link to validate each direction of the link independently or one EXFO product can be used at one end of the DCO link and another product at the other end (client side) can be used to loopback client frames (ex: Smart Loopback application).

► Typical DCO BERT test applications:

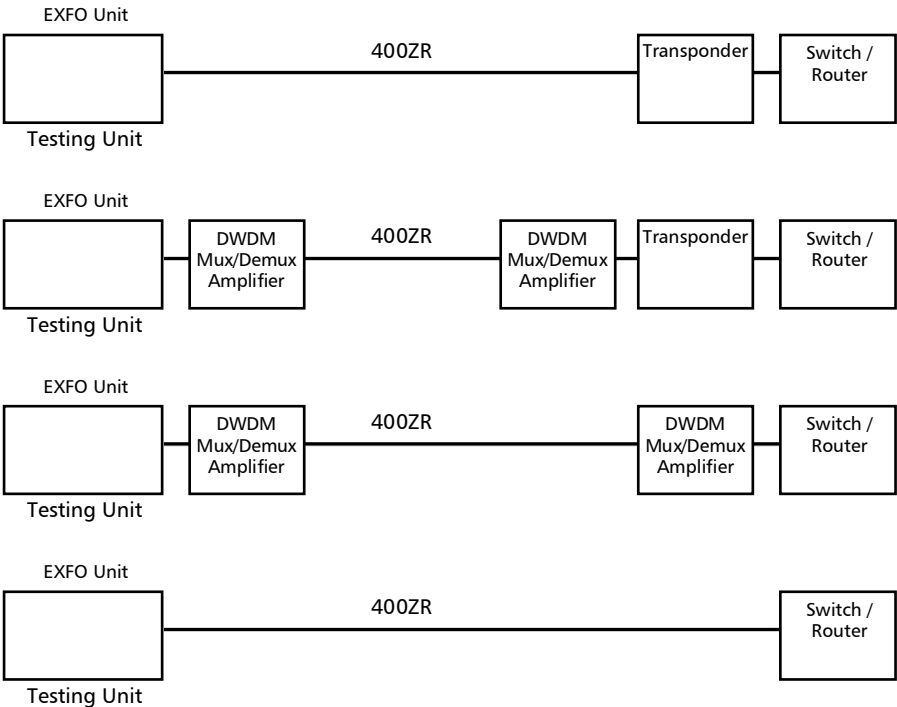

Test Setup - Test Applications


DCO BERT

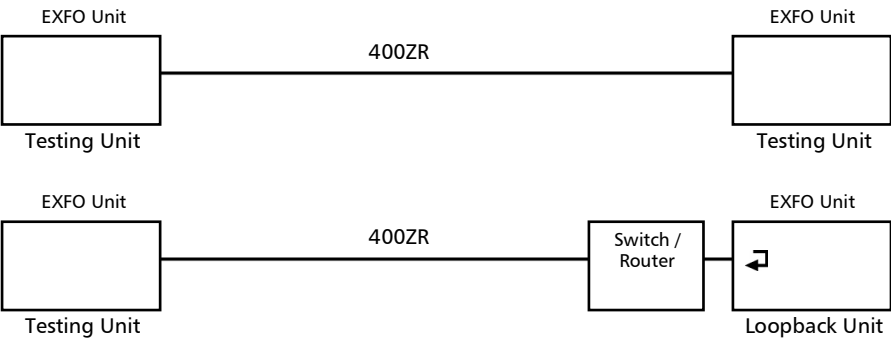

DSn/PDH BERT

Allows validation of the DSn or PDH transport protocol by performing a BERT test to check the traffic or payload stability over a network facility.

➤ Typical DSn/PDH BERT test applications:

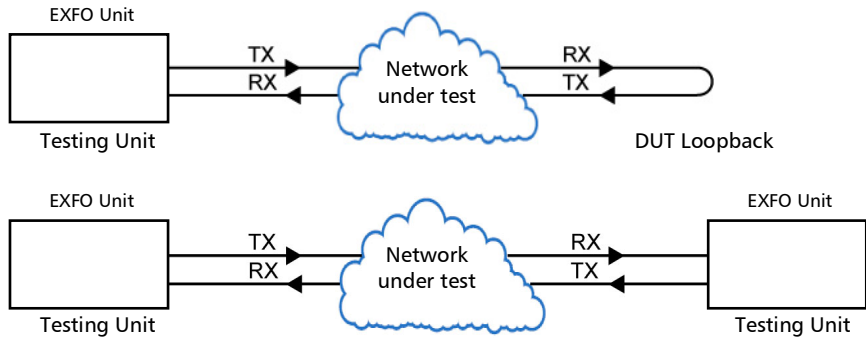


Test Setup - Test Applications

DSn/PDH BERT

➤ Path/Mapping


The **DSn/PDH BERT** test application offers the following path/mapping structures depending on model and enabled options.

For DSn:

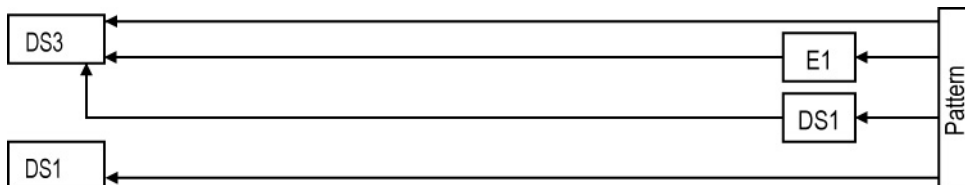

Note: It is possible to enable DS0/E0 from Signal - Signal Configuration - DSn/PDH on page 422.

For PDH:

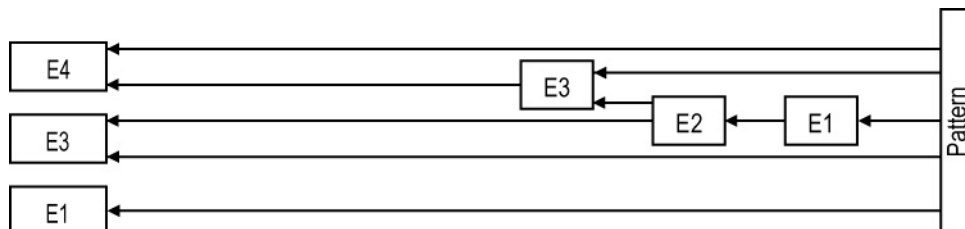


Note: It is possible to enable E0 from Signal - Signal Configuration - DSn/PDH on page 422.

SONET/SDH - DSn/PDH BERT

Allows validation of the DSn or PDH embedded in SONET or SDH transport protocol by performing a BERT test to check the traffic or payload stability over a network facility.

- Typical SONET/SDH - DSn/PDH BERT test applications:

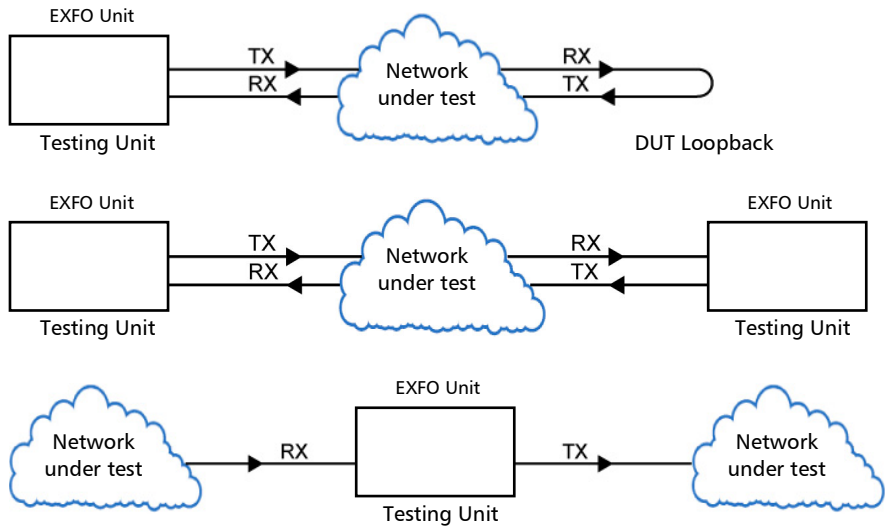


Test Setup - Test Applications

SONET/SDH - DSn/PDH BERT


➤ Path/Mapping

The **SONET/SDH - DSn/PDH BERT** test application offers the following path/mapping structures depending on the model and enabled options.

For SONET:

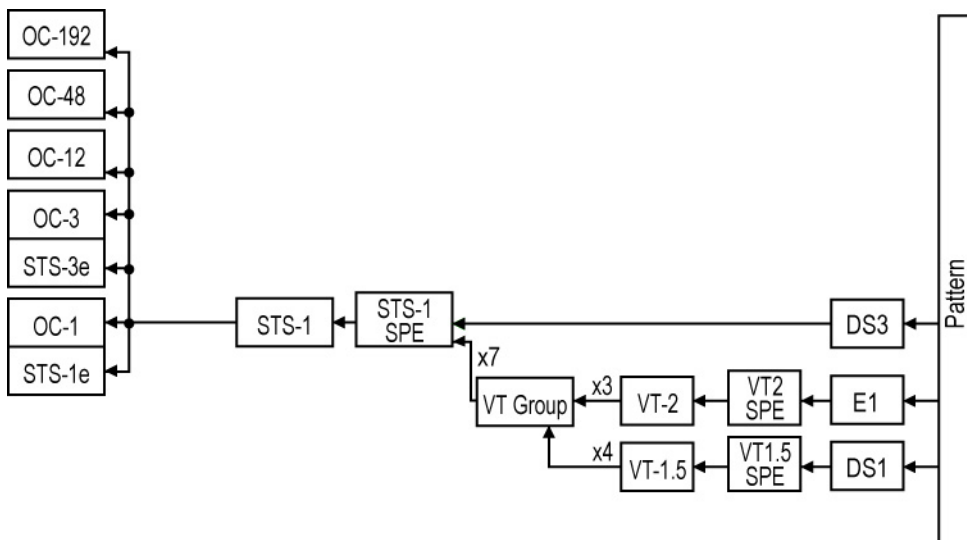

For SDH:

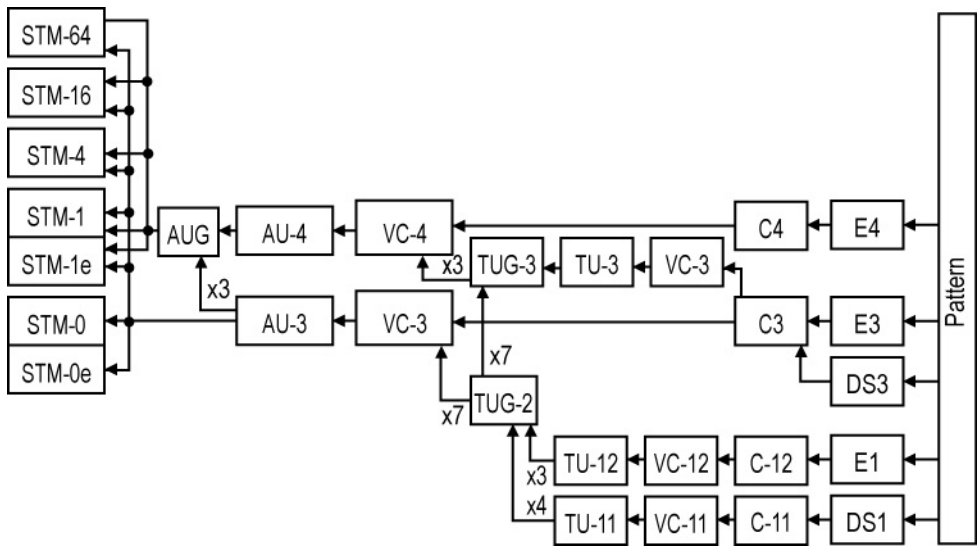


Test Setup - Test Applications

NI/CSU Emulation

NI/CSU Emulation

Allows DS1 testing in NI/CSU (Network Interface/Customer Service Unit) emulation mode.

Typical NI/CSU Emulation test applications:

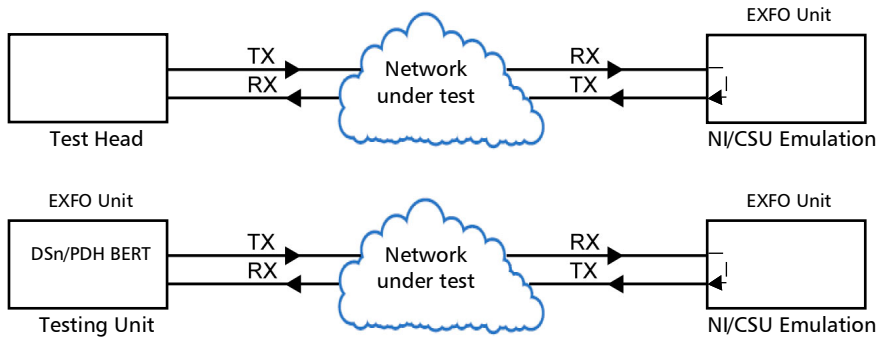

EtherSAM (Y.1564)

EtherSAM can simulate all types of services that will run on the network and simultaneously qualify all key SLA parameters for each of these services. Moreover, it validates the QoS mechanisms provisioned in the network to prioritize the different service types, resulting in more accurate validation and much faster deployment and troubleshooting.

The **EtherSAM (Y.1564)** test, in single port configuration, has to be executed in conjunction with a remote unit. The remote unit can be either in loopback configuration for unidirectional testing or in EtherSAM **Dual Test Set** mode for bidirectional testing.


The **Dual Test Set** test allows bi-directional testing between two compatible units providing independent results for each test direction. The results from local-to-remote and remote-to-local are available on the local testing unit.

The **Dual Port** topology allows simultaneous and bidirectional traffic generation and analysis at 100 percent wire-speed at any packet size.

Test Setup - Test Applications

EtherSAM (Y.1564)

► Typical EtherSAM (Y.1564) test applications:

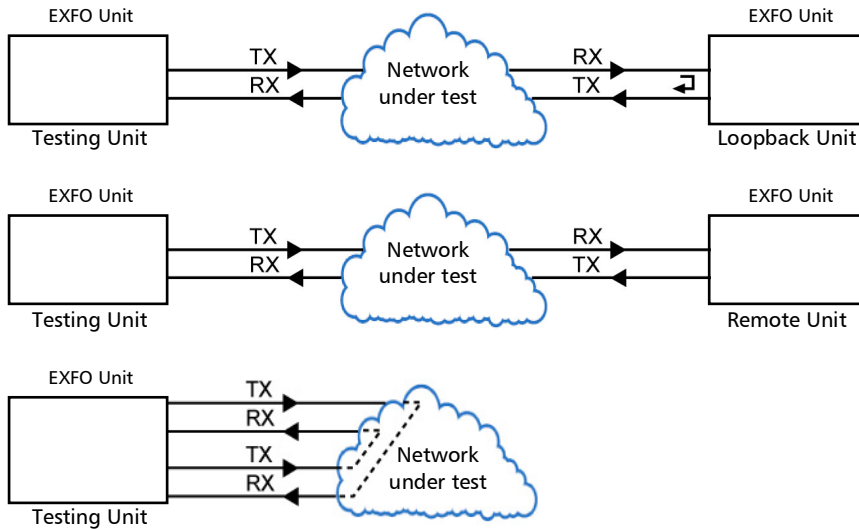

RFC 2544

RFC 2544 allows Ethernet Throughput, Back-to-Back, Frame Loss, and Latency performance testing in accordance with RFC 2544 specifications.

The **RFC 2544** test, in single port configuration, has to be executed in conjunction with a remote unit. The remote unit can be either in loopback configuration for unidirectional testing or in RFC 2544 **Dual Test Set** mode for bidirectional testing.


The **Dual Test Set** test allows bi-directional testing between two compatible units providing independent results for each test direction. The results from local-to-remote and remote-to-local are available on the local testing unit.

The **Dual Port** topology allows simultaneous and bidirectional traffic generation and analysis at 100 percent wire-speed at any packet size.

Test Setup - Test Applications

RFC 2544

➤ Typical RFC 2544 test applications:

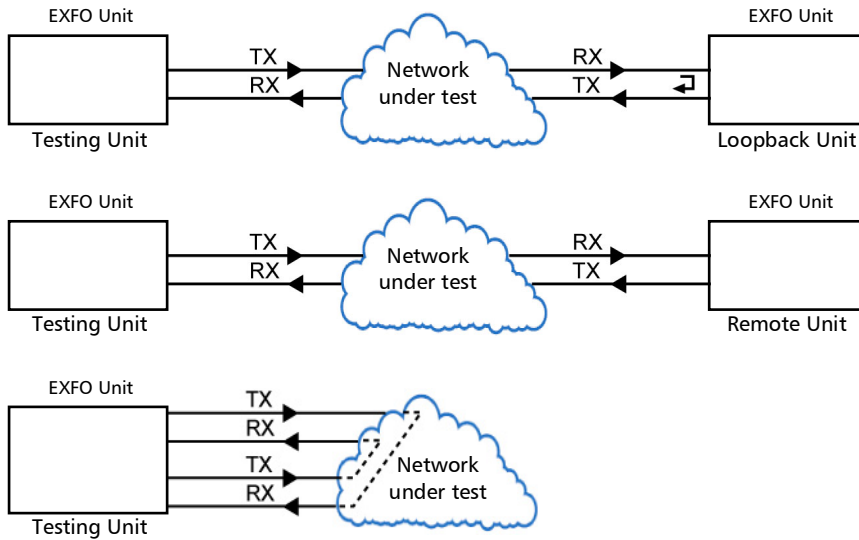


RFC 6349

RFC 6349 is used to confirm that the Ethernet service is able to properly carry TCP traffic.

The **RFC 6349** test has to be executed in conjunction with a remote compatible unit in **RFC 6349 DTS** or **TCP Throughput DTS** operation mode allowing bidirectional testing. For iPerf Compatible Server operation mode (iPerf v2), a remote iPerf Compatible Client is required at the other end for unidirectional testing. The test provides independent results for each test direction. The results from local-to-remote and remote-to-local are available on the local testing unit.


➤ Typical RFC 6349 test application:

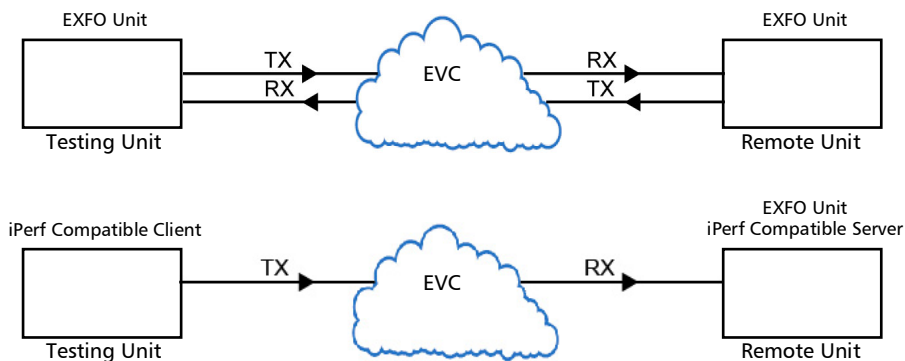

FlexE BERT

The Flex Ethernet (FlexE) supports up to two (88260) / four (88460) 100GBASE-R PHYs supporting multiple Ethernet MAC operating at a rate of: 5, 10, 25, 40, 50, 100, 150, 200, 250, 300, 350, 400 Gbit/s.


- Typical FlexE BERT test applications:

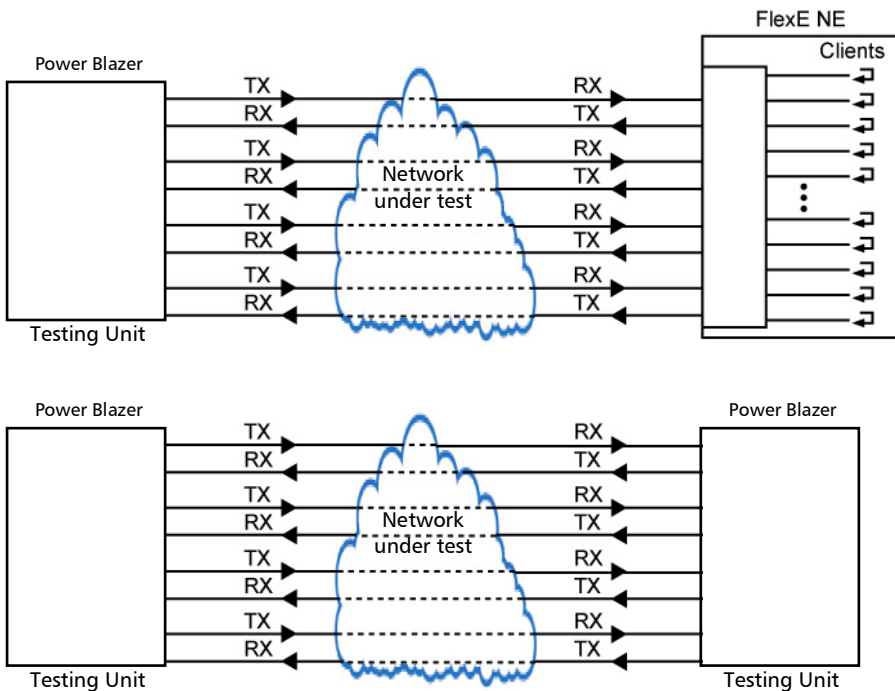

EtherBERT


Allows Ethernet Layer 1 up to Layer 4 and Unframed Layer 1 traffic generation with specific test pattern for Bit Error Rate analysis.

➤ Typical EtherBERT test applications:

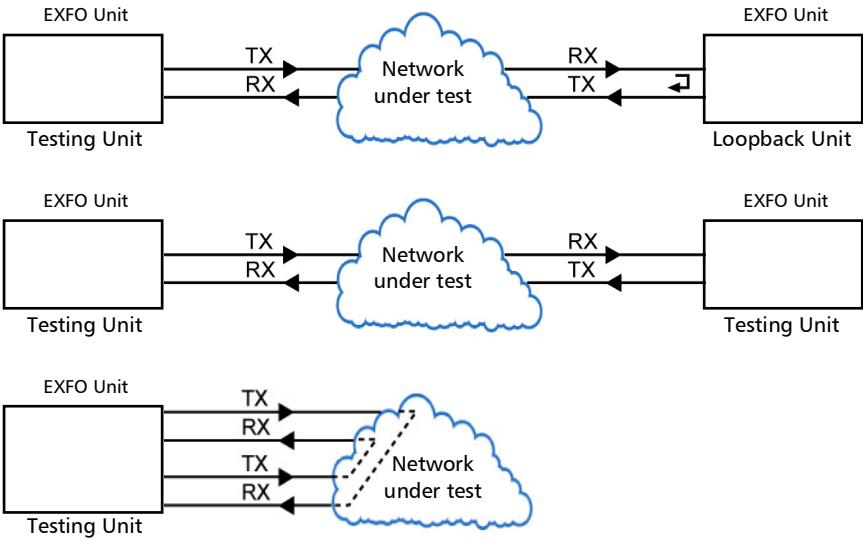

Test Setup - Test Applications


EtherBERT

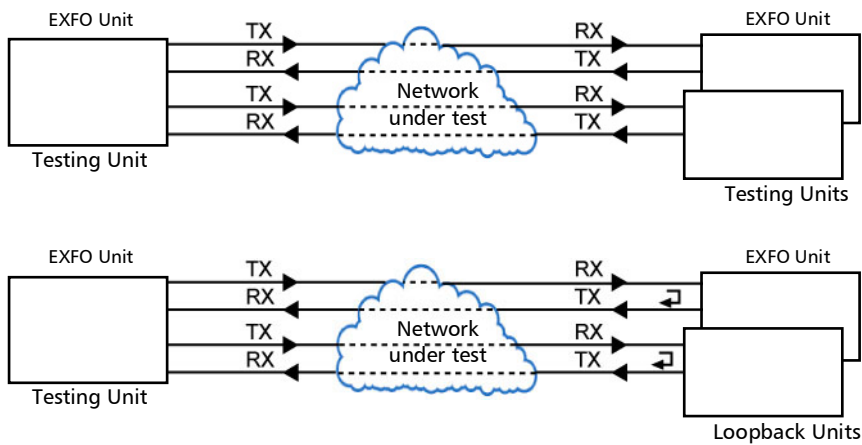

Traffic Gen & Mon


Allows Ethernet traffic generation and analysis of up to 16 streams.

► Typical Traffic Gen & Mon test applications:

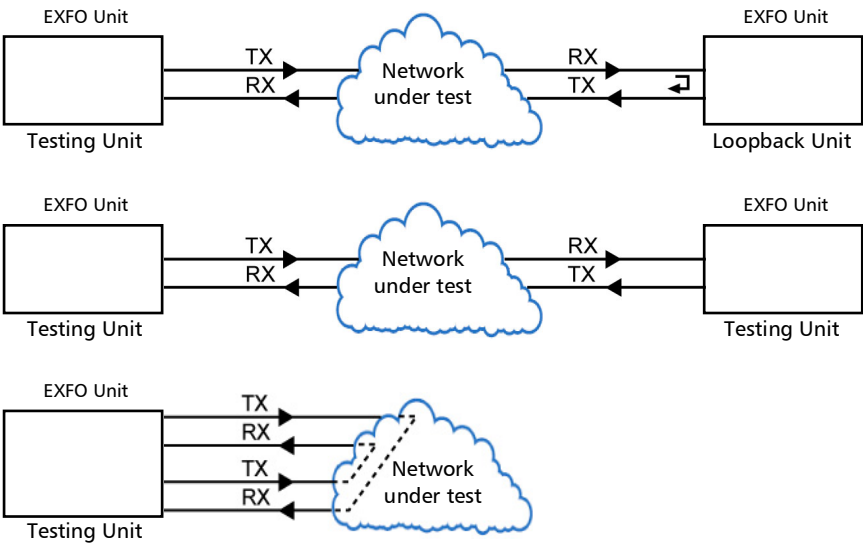

Test Setup - Test Applications

Traffic Gen & Mon

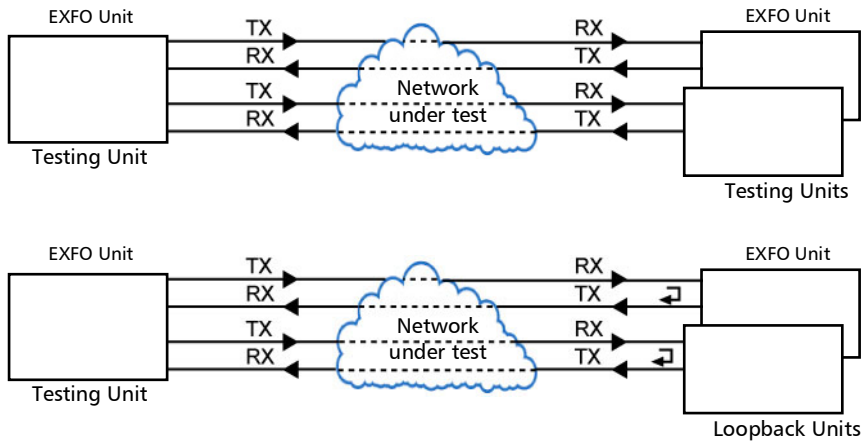


Smart Loopback

Allows transmitting back the received Ethernet stream of data while interchanging the source and destination MAC addresses, IP addresses, and/or UDP/TCP ports. However in **Transparent (Pseudo-Physical)** mode the Smart Loopback operates as a physical loopback by transmitting all received frames unaltered and without discrimination.

The Smart Loopback test can be created locally (refer to *Ethernet Test Applications* on page 119) or remotely using either an EXFO unit (refer to *Discover Remote* on page 782) or a Third-Party device (see *Third-Party Remote Loopback* on page 98).

➤ Typical Smart Loopback test application:

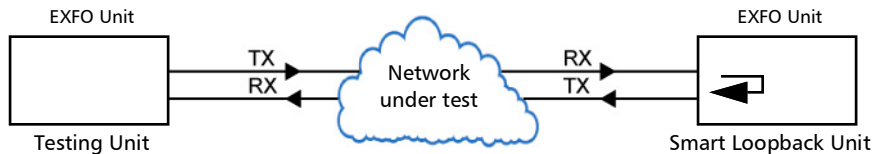

Third-Party Remote Loopback

The Third-party Remote Loopback feature provides the capability to be discovered and react to loop-up and loop-down commands from a third party device. This feature is used for unidirectional testing, where the test stream is transmitted from the third party device to a remote EXFO device. The looped back test stream is received and analyzed by the third-party device.

The third-party loopback supports three levels of messages:

- Layer 2: Only MAC addresses are swapped.
- Layer 3: MAC and IP addresses are swapped.
- Layer 4: MAC and IP addresses are swapped along with the UDP port.

To emulate a third-party remote device, the loopback mode is set in the function of the layer of loop messages received. The loop messages are:

- Layer 2: Ethernet
- Layer 3: IP
- Layer 4: UDP/TCP


On receipt of the third-party loop-up command as per requested layer, the loopback mode is set and initiated on the unit.

Supported Interfaces/Rates: 10M to 100G.

Through Mode

The Through Mode test application allows traffic to pass through the unit using two electrical or optical ports for in-service troubleshooting of live traffic between the carrier/service provider network and the customer's network.

- Typical Through Mode test application:

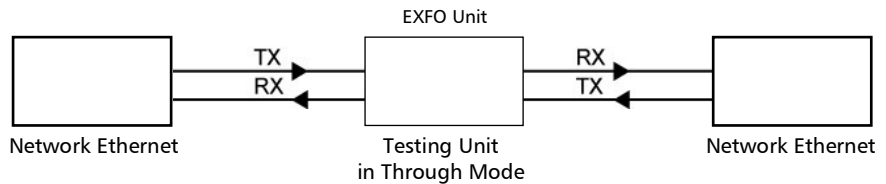


TCP Throughput

The objective of this test is to find the TCP throughput based on the successfully transported bytes over the test time. Two units running a TCP Throughput test are required. One unit will act as the source (Local) and the other one as the destination (Remote).

The local unit starts sending TCP segments using the Initial Window Size defined. The window size is adjusted following the TCP algorithm. The window size is incremented until the Maximum Window Size or congestion is reached. However, the window size will be reduced when congestion occurs, then incremented again as described above when the congestion is cleared. TCP Throughput and windows size statistics will be gathered throughout the test.

➤ Typical TCP Throughput test application:

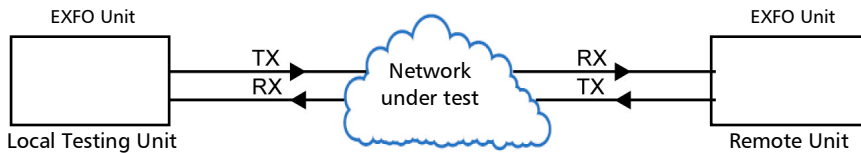

Carrier Ethernet OAM

The Carrier Ethernet OAM test application supports the following tests:
Ethernet OAM (S-OAM), MPLS-TP OAM, and Link OAM.


Ethernet OAM and MPLS TP OAM

The Ethernet Service OAM tests are divided into two main categories:

Performance Monitoring measures parameters such as frame delay, frame loss, and synthetic loss (Y.1731/MEF).

Connectivity Fault Management provides the capability for detecting, verifying, and isolating connectivity failure (Y.1731/802.1ag/MEF).

- Typical Ethernet OAM and MPLS TP OAM test applications:

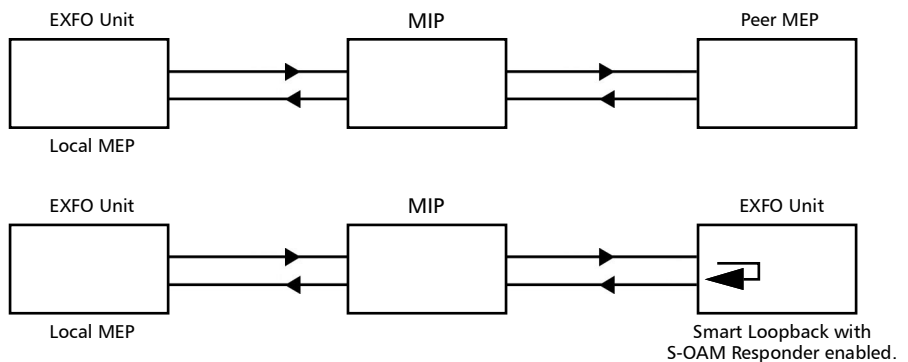

- Supported Interfaces/Rates: 10M to 10G LAN/WAN.


Test Setup - Test Applications

Carrier Ethernet OAM

Link OAM

The Link OAM test validates the Link OAM protocol capabilities and the Ethernet link connection of a remote equipment.

- Typical Link OAM test application:

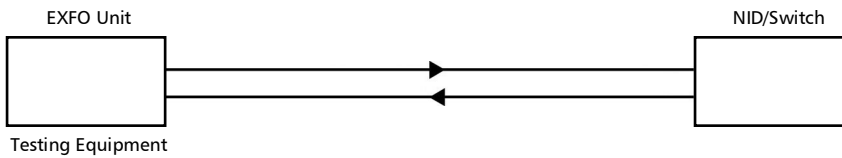

Cable Test

The cable test application is used to diagnose un-shielded twisted pairs (UTP) cables (up to Category 6e/Class E).


Cable test can be performed everywhere in the network where an electrical 10/100/1000 Mbit/s Ethernet interface is available for testing. Only the pairs used by the Ethernet signal will be tested. For 10BASE-T, and 100BASE-TX, pair 2 and 3 will be tested; for 1000BASE-T, all pairs will be tested. However, if the Ethernet signal is unknown, all four pairs will be tested.

Even if a link up is not required when testing with a far end equipment, it is preferable to have the far end equipment powered up to maximize the cable test results.

Supported Ethernet cable categories are: Category 3/Class C, Category 4, Category 5, Category 5e/Class D, and Category 6e/Class E.

Note: *Cable test result is reliable for cable length of 10 meters to 120 meters (32.81 feet to 393.7 feet).*


➤ Typical Cable Test applications:

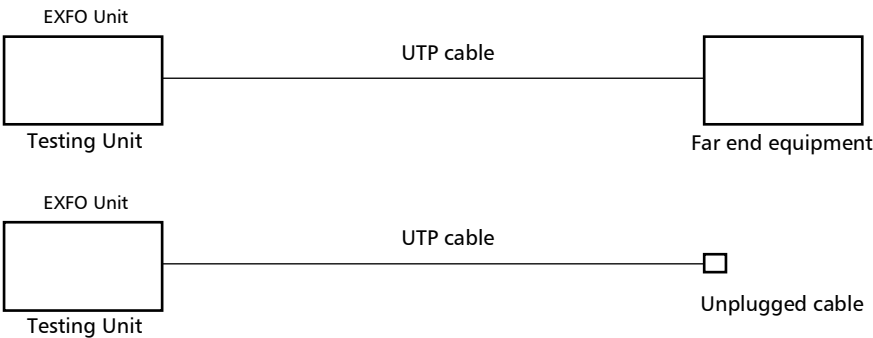

1588 PTP

The 1588 PTP (Precision Time Protocol) test application handles the 1588 PTP communication with the Grandmaster (GM) clock and/or Boundary clock (BC), collects statistics related to packets, and monitors the clock Quality Level.


➤ Typical 1588 PTP test application:

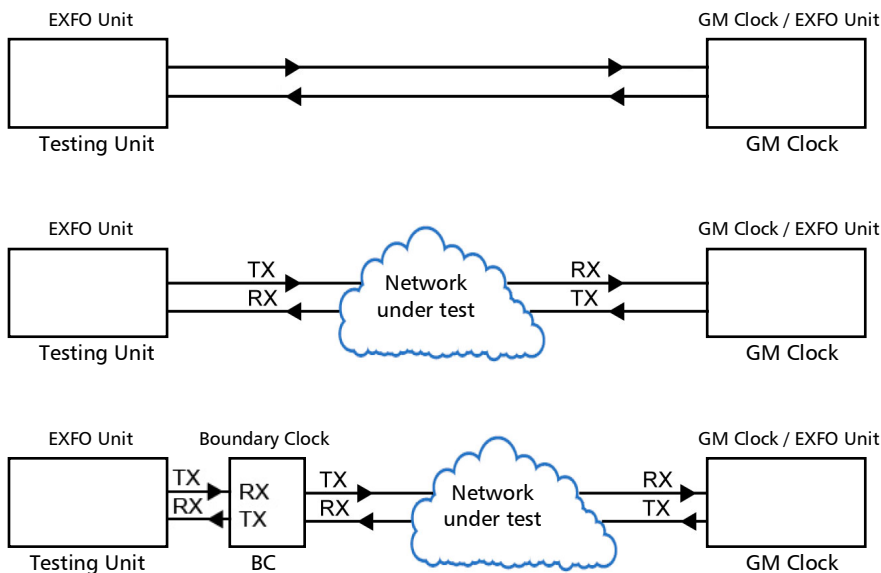

SyncE

The Synchronous Ethernet (SyncE) test application provides elementary test primitives to interactively validate the clock management functions of a SyncE capable network equipment.

➤ Typical SyncE test applications:

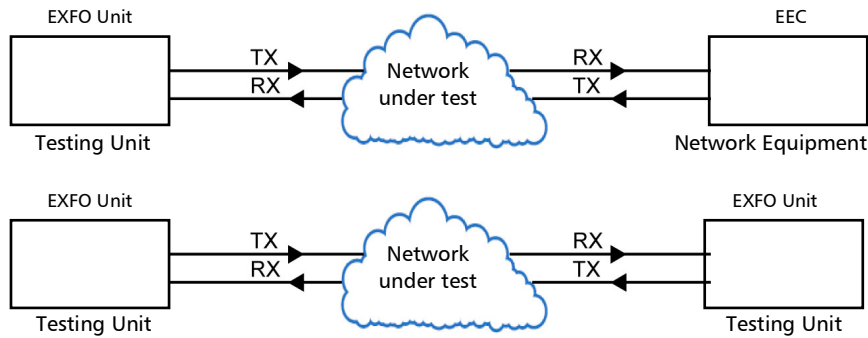


Time Error / Wander

The **Time Error / Wander** application provides data acquisition and processing capabilities to quantify and validate the Time Error / Time Interval Error (Wander) of a synchronization equipment.

Time Error is defined as the difference between the time reported by a clock signal under test and the time reported by a reference clock.

➤ Typical Time Error / Wander test applications:

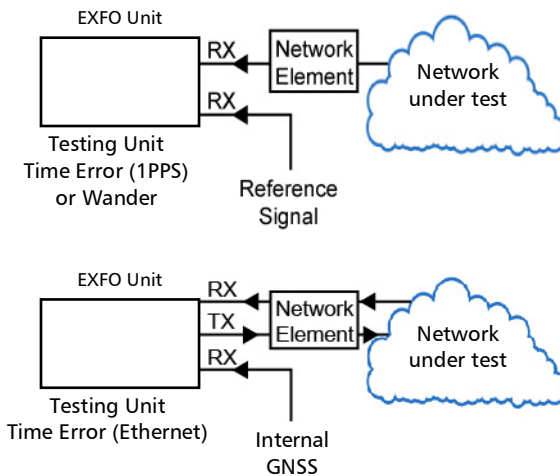


Note: Only one instance of the Time Error / Wander application is allowed on a platform due to high processing activity related to MTIE calculation.

Note: The Time Error / Wander test automatically stops when one of the following alarms occur: LOS, Link Down, OOF (DS1), LOF (E1), AIS (DS1/E1), Loss Sync (PTP), Loss Announce (PTP), or REF-FAULT.

FC BERT

The FC BERT (Fibre Channel BERT) application provides full wire-speed traffic generation at the FC-2 layer allowing BER testing for link integrity measurements, latency, buffer-to-buffer credit measurements for optimization as well as login capabilities.

- Typical Fibre Channel BERT test applications:

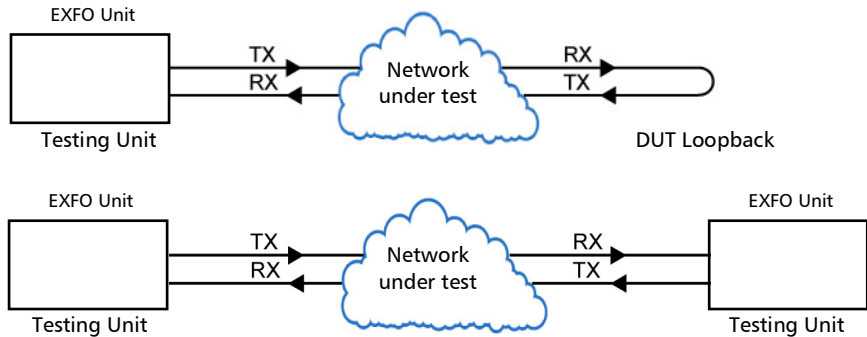


CPRI/OBSAI BERT

The CPRI/OBSAI BERT test application offers the capability to test the fronthaul and dark fiber for Unframed rates and Framed L2 protocol, round trip delay, and Service Disruption Time measurements.

The Common Public Radio Interface (CPRI) is an industry cooperation aimed at defining a publicly available specification for the key internal interface of radio base stations between the Radio Equipment Control (REC) and the Radio Equipment (RE). In the industry the CPRI REC and RE are mainly known as Base Station (BTS) and Remote Radio Head (RRH) respectively.


The Open Base Station Architecture Initiative (OBSAI) separates a traditional radio base station configuration into a Base Transceiver Station (BTS) and a Remote Radio Head (RRH). The BTS processes the digital baseband radio information and performs the control of the RRH. The RRH converts the digital radio information into radio frequency signals transported over the air interface (antenna).

➤ Typical CPRI/OBSAI BERT test applications:

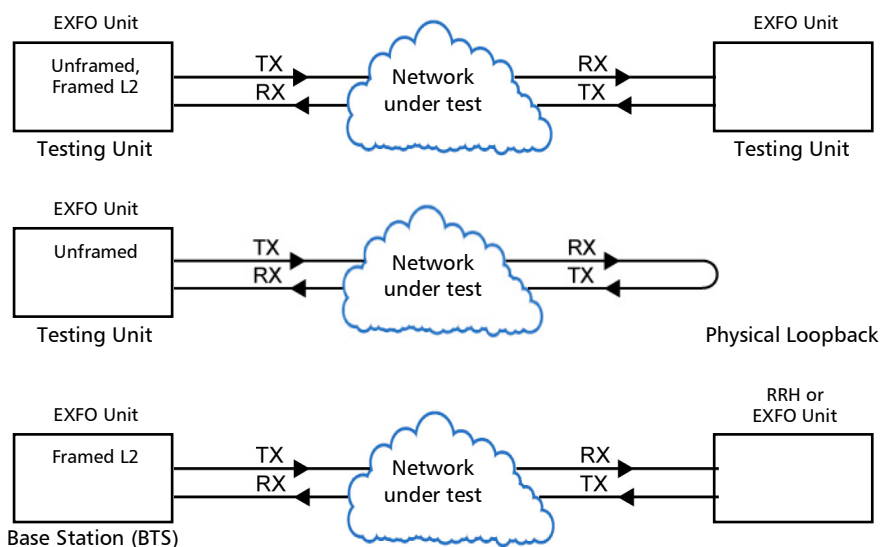

Note: A RRH is typically not capable to perform a loopback of the traffic so BERT test monitoring is not applicable. The BERT test is more common when testing between two test units.


Additional CPRI BERT test application:

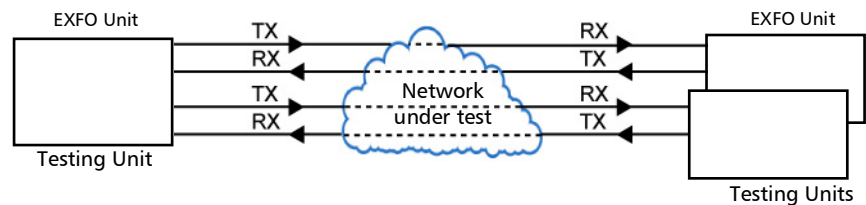


eCPRI BERT

The eCPRI BERT test application allows the generation and analysis of Framed eCPRI flow using eCPRI messages carried over Ethernet (L2) or Ethernet/IP/UDP (L3/L4) allowing measurements of bit errors/pattern loss based on a PRBS test pattern as well as quality of service metrics such as One-Way or Round-Trip Latency, Jitter, Frame Loss, Out-of-Sequence, and Throughput. It also supports a configurable test pattern when an unframed signal is used to determine the presence of Bit Error or Pattern Loss on a fiber link used to carry eCPRI signals.

- Typical eCPRI BERT test applications:

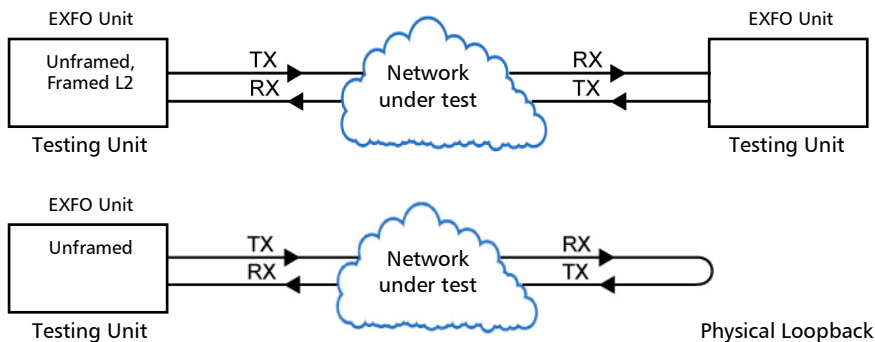

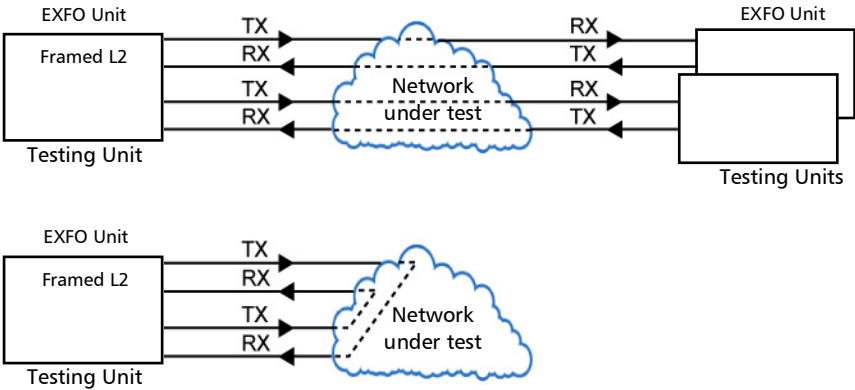

7 **Selecting and Starting a Test**

A test can be created either by selecting the test from the Test Applications tab or by loading a previously saved configuration (refer to *Save/Load Button* on page 801 for more information).

Test Applications		Page
Intelligent Apps	<i>iOptics</i>	113
	<i>iSAM</i>	115
Transport	<i>Transport Test Applications</i>	117
Ethernet	<i>Ethernet Test Applications</i>	119
Sync	<i>Sync Test Applications</i>	121
Fibre Channel	<i>Fibre Channel Test Application</i>	123
Wireless	<i>Wireless Test Application</i>	125

Intelligent Apps


iOptics

To select, configure, and start iOptics:

1. From the test menu, tap **Setup**.
2. From the **Test Applications** tab, under **Intelligent Apps**, tap the **iOptics** icon.
3. From the **Test Configurator** tab, select the interface/port and its rate.

Selecting and Starting a Test

Intelligent Apps

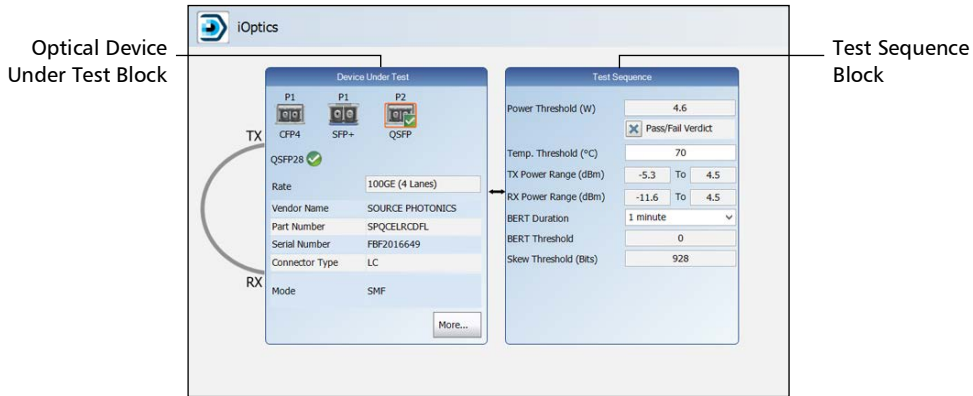

- 3a.** From the **Optical Device Under Test** block, tap the desired port icon.
- 3b.** Once the transceiver is correctly detected , select its rate.
- 3c.** From the **Test Sequence** block, select the test parameters and thresholds (refer to *Test Sequence - iOptics* on page 459).


Note: The iOptics test application uses **Internal** timing for clock synchronization.

- 4.** Ensure the laser is ON and tap the **Start** button from the right navigation bar to start the test (refer to *Start/Stop | TX Button* on page 805). The **Summary** result page will be automatically displayed when the test is started. For additional results, refer to *Test Results* on page 477. The test automatically stops when the transceiver is invalid or missing.
- 5.** When the test ends automatically or is manually stopped, the generate report pop-up is displayed by default. If required, tap **Yes** to generate a report of the test results and statistics (refer to *Report Button* on page 795 for more information).

iSAM

To select, configure, and start iSAM:

1. From the test menu, tap **Setup**.
2. From the **Test Applications** tab, under **Intelligent Apps**, tap the **iSAM** icon.
3. From the **Test Configurator** tab configure the interface structure and its parameters.

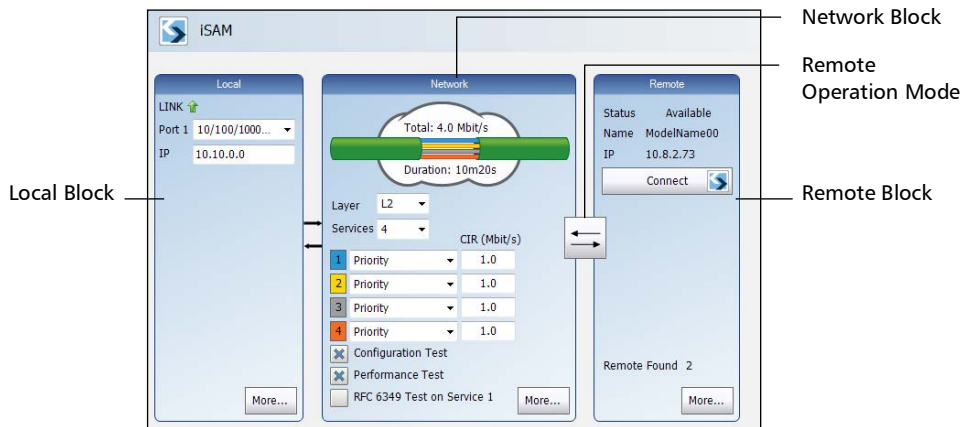

- 3a. From the **Local** block, either select the basic port parameters or click on **More** for all settings (refer to *Local Details - iSAM* on page 337). Ensure that the link is up and the power level for optical interface (when supported) is adequate in the status bar before proceeding to the next step (refer to *Status Bar* on page 44).

For CFP/QSFP interface rates, check for the optical validation check mark  indicating that the transceiver matches the configured interface/rate (refer to *Physical Interface Port - Test Configurator Overview* on page 137).

Selecting and Starting a Test

- 3b. From the **Network** block, either select the basic test parameters or click on **More** for all settings (refer to *Network / Network Details - iSAM* on page 358). The total bandwidth and the estimated test duration are displayed.
- 3c. Select the remote operation mode; DTS is automatically selected when the **RFC 6349 Test** is enabled:

	DTS (Dual Test Set) The remote device is automatically set in EtherSAM when the connection/overtake is successfully established.
	Remote Loopback The remote device is automatically set in Smart Loopback when the connection/overtake is successfully established.
	Manual Loopback The remote device is a physical loopback or has to be manually set in loopback.

- 3d. From the **Remote** block, either select the basic remote parameters or click on **More** for all settings (refer to *Remote Details - iSAM* on page 377).


Note: The iSAM test application uses **Internal** timing for clock synchronization.

- 4. Tap the **Start** button from the right navigation bar to start the test (refer to *Start/Stop | TX Button* on page 805). If the connection with the remote module is not established with either **DTS** or **Remote Loopback** mode, the automatic remote connection process is performed before starting the test. The **Summary** result page will be automatically displayed when the test is started from any **Setup** configuration page. For additional results refer to *Test Results* on page 477.
- 5. When the test ends automatically or is manually stopped, the generate report pop-up is displayed by default. If required, tap **Yes** to generate a report of the test results and statistics (refer to *Report Button* on page 795 for more information).

Transport Test Applications

To select, configure, and start a Transport test:

1. From the test menu, tap **Setup**.
2. From the **Test Applications** tab, under **Transport**, tap a test icon.
3. From the **Test Configurator** tab configure the signal structure and its parameters.

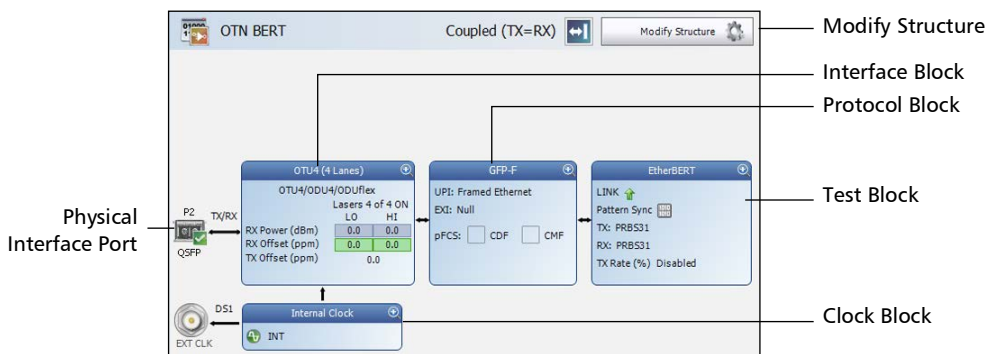

- 3a.** Tap the **Modify Structure** button to set the basic structure of the test such as the interface/rate, connector, etc. Refer respectively to:

Modify Structure - DCO BERT on page 153

Modify Structure - DS_n/PDH BERT on page 155

Modify Structure - FlexO BERT on page 178

Modify Structure - Multi-Channel OTN on page 179

Modify Structure - NI/CSU Emulation on page 180

Modify Structure - OTN BERT on page 181

Modify Structure - OTN-SONET/SDH BERT on page 188

Modify Structure - SONET/SDH BERT on page 203

Modify Structure - SONET/SDH - DS_n/PDH BERT on page 206

Selecting and Starting a Test


Transport Test Applications

- 3b.** For CFP/QSFP interface, check for the optical validation check mark  indicating that the transceiver matches the configured interface/rate (refer to *Physical Interface Port - Test Configurator Overview* on page 137).
- 3c.** Tap the interface block to configure the signal parameters (refer to page 127).
- 3d.** For an embedded signal, tap the protocol block to configure the signal (refer to page 127).
- 3e.** Tap the test block to configure the specific test settings (refer to page 127). Not available with **NI/CSU Emulation** test application.
- 3f.** Tap the clock block to configure the clock synchronization (refer to *Clock* on page 255).
- 4.** Tap the **Timer** tab to automatically start and/or stop the test at a given time or for a specific duration (refer to *Timer* on page 465).
- 5.** For additional test configurations refer to *Test Functions* on page 667.
- 6.** Tap the **Start** button from the right navigation bar to start the test. (refer to *Start/Stop | TX Button* on page 805). The **Summary** result page will be automatically displayed when the test is started from any **Setup** configuration page. For additional results, refer to *Test Results* on page 477.
- 7.** Tap the **Stop** button to stop the test. By default the generate report pop-up is displayed. If required, tap **Yes** to generate a report of the test results and statistics (refer to *Report Button* on page 795).

Ethernet Test Applications

To select, configure, and start an Ethernet test:

1. From the test menu, tap **Setup**.
2. From the **Test Applications** tab, under **Ethernet**, tap a test icon.
3. From the **Test Configurator** tab configure the interface structure and its parameters.

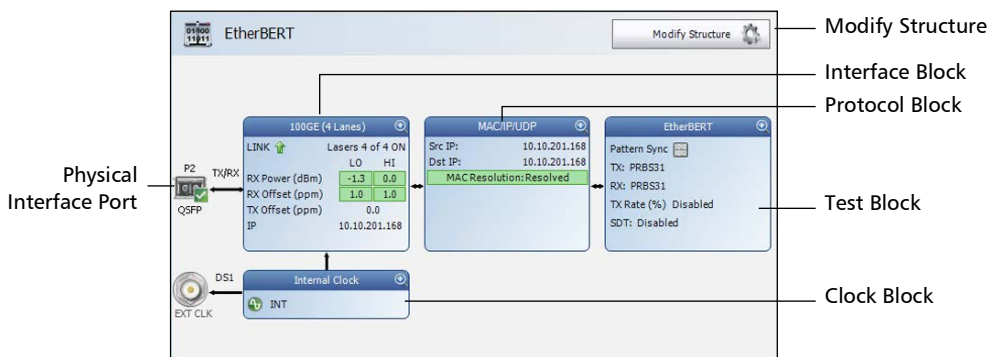

3a. Tap the **Modify Structure** button to set the basic structure of the test such as the interface/rate, connector, etc. Refer respectively to:

Modify Structure - Cable Test on page 148

Modify Structure - Carrier Ethernet OAM on page 149

Modify Structure - EtherBERT on page 159

Modify Structure - EtherSAM on page 170

Modify Structure - FlexE BERT on page 176

Modify Structure - RFC 2544 on page 193

Modify Structure - RFC 6349 on page 197

Modify Structure - Smart Loopback on page 199

Modify Structure - TCP Throughput on page 211

Modify Structure - Through Mode on page 212

Modify Structure - Traffic Gen & Mon on page 216

Selecting and Starting a Test

- 3b.** For CFP/QSFP interface, check for the optical validation check mark  indicating that the transceiver matches the configured interface/rate (refer to *Physical Interface Port - Test Configurator Overview* on page 137).
- 3c.** Tap the interface block to configure the interface parameters (refer to page 127). For **Dual Port** topology, there is an interface block for each port. Ensure that the link is up and the power level (when supported) is present in the status bar before proceeding to the next step (refer to *Status Bar* on page 44).
- 3d.** Tap the protocol block¹ to configure the frame structure and its parameters. For RFC 2544, EtherBERT, and Traffic Gen & Mon in Dual Port topology, there is a protocol block for each port.
- 3e.** Tap the test block² to configure the specific test settings.
- 3f.** Tap the clock block³ to configure the clock synchronization (refer to *Clock* on page 255).
- 4.** Tap the **Timer** tab to automatically start and/or stop the test at a given time or for a specific duration (refer to *Timer* on page 465).
- 5.** For additional test configurations refer to *Test Functions* on page 667.
- 6.** Tap the **Start** button to start the test (refer to *Start/Stop | TX Button* on page 805). The **Summary** result page is automatically displayed when the test is started from any **Setup** configuration page. For additional results refer to *Test Results* on page 477.
- 7.** Depending on the test, when the test ends automatically or is manually stopped, the generate report pop-up is displayed by default. If required, tap **Yes** to generate a report of the test results and statistics (refer to *Report Button* on page 795 for more information).

1. Not available with Smart Loopback, Through Mode, TCP Throughput, Carrier Ethernet OAM, and Cable Test.


2. Not available with Traffic Gen & Mon and Through Mode.

3. Not available with **Dual Port** topology. Not available with 25GE rate. Not available on 88460. Not available when using an active copper SFP. However the clock is either set to **Internal** or **Auto** (1GE electrical).

Sync Test Applications

To select, configure, and start a Sync test:

1. From the test menu, tap **Setup**.
2. From the **Test Applications** tab, under **Sync**, tap a test icon.
3. From the **Test Configurator** tab configure the interface structure and its parameters.

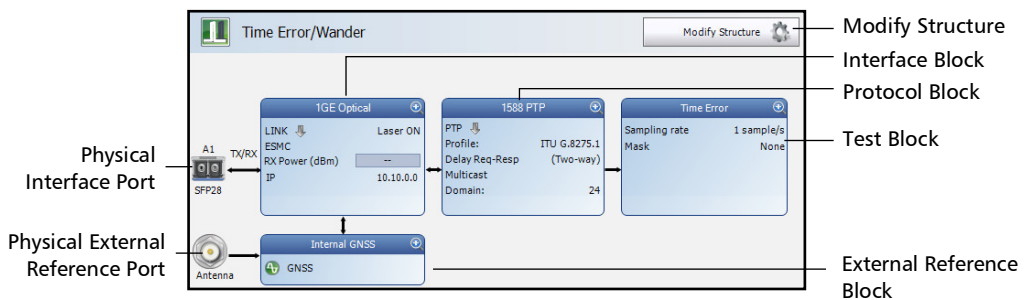

- 3a.** Tap the **Modify Structure** button to set the basic structure of the test such as the interface/rate, connector, etc. Refer respectively to

Modify Structure - 1588 PTP on page 146

Modify Structure - SyncE on page 210

Modify Structure - Time Error / Wander on page 214

- 3b.** Tap the interface block to configure the interface parameters (refer to page 127; no configuration is available with Time Error / Wander 10 MHz, 2 MHz, and 1PPS rates but interface parameters are displayed for an interface/rate from a TA-Sync). Ensure that the link is up and the power level (when supported) is present in the status bar before proceeding to the next step (refer to *Status Bar* on page 44).

Selecting and Starting a Test


Sync Test Applications

- 3c.** For Time Error measurement with an Ethernet interface, tap the protocol block to configure the PTP parameters (refer to *1588 PTP (Client)* on page 221).
- 3d.** Tap the test block to configure the specific test settings. Refer respectively to:
1588 PTP (Client) on page 221
SyncE on page 444
Time Error / Wander on page 461
- 3e.** For Time Error / Wander test application, tap the external reference block to configure the external reference signal (refer to *External Reference / Internal GNSS* on page 295).
- 4.** Tap the **Timer** tab to automatically start and/or stop the test at a given time or for a specific duration (refer to *Timer* on page 465). Not supported with Time Error / Wander test application, however a duration can be configured (refer to *Time Error / Wander* on page 461).
- 5.** For additional test configurations refer to *Test Functions* on page 667.
- 6.** Tap the **Start** button from the right navigation bar to start the test (refer to *Start/Stop | TX Button* on page 805). The **Summary** result page will be automatically displayed when the test is started from any **Setup** configuration page. For additional results refer to *Test Results* on page 477.
- 7.** Depending on the test, when the test ends automatically or manually stopped, the generate report pop-up is displayed by default. If required, tap **Yes** to generate a report of the test results and statistics (refer to *Report Button* on page 795 for more information).

Fibre Channel Test Application

To select, configure, and start a Fibre Channel test:

1. From the test menu, tap **Setup**.
2. From the **Test Applications** tab, under **Fibre Channel**, tap the **FC BERT** test icon.
3. From the **Test Configurator** tab configure the interface structure and its parameters.

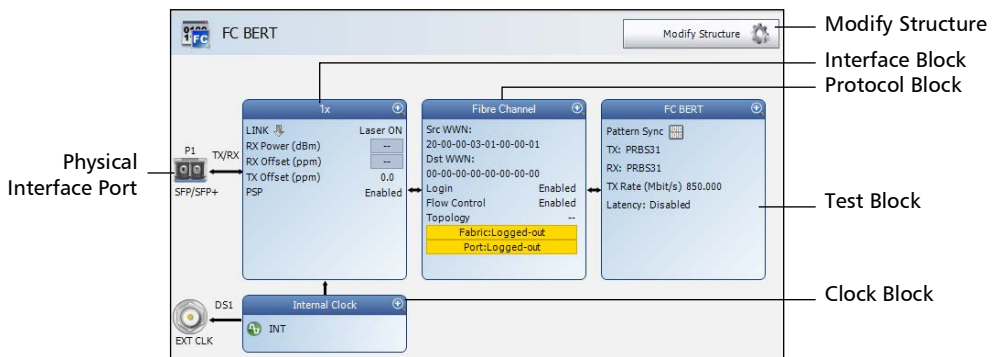

- 3a. Tap the **Modify Structure** button to set the basic structure of the test such as the interface/rate and connector. (refer to *Modify Structure - FC BERT* on page 174).
- 3b. Tap the interface block to configure the interface parameters (refer to page 316). Ensure that the link is up and the power level (when supported) is present in the status bar before proceeding to the next step (refer to *Status Bar* on page 44).
- 3c. Tap the protocol block to configure the frame structure and its parameters (refer to page 300).

Selecting and Starting a Test


Fibre Channel Test Application

- 3d.** Tap the test block to configure the specific test settings (refer to page 272).
- 3e.** Tap the clock block to configure the clock synchronization (refer to *Clock* on page 255).
- 4.** Tap the **Timer** tab to automatically start and/or stop the test at a given time or for a specific duration (refer to *Timer* on page 465).
- 5.** Tap the **Start** button from the right navigation bar to start the test (refer to *Start/Stop | TX Button* on page 805). The **Summary** result page will be automatically displayed when the test is started from any **Setup** configuration page. For additional results refer to *Test Results* on page 477.
- 6.** When the test ends automatically or is manually stopped, the generate report pop-up is displayed by default. If required, tap **Yes** to generate a report of the test results and statistics (refer to *Report Button* on page 795 for more information).

Wireless Test Application

To select, configure, and start a Wireless test:

1. From the test menu, tap **Setup**.
2. From the **Test Applications** tab, under **Wireless**, tap a test icon.
3. From the **Test Configurator** tab configure the interface structure and its parameters.

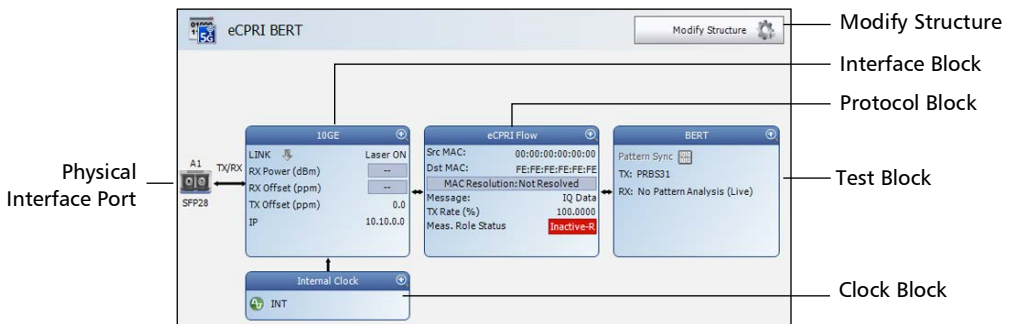

- 3a. Tap the **Modify Structure** button to set the basic structure of the test such as the interface/rate, connector, etc. Refer respectively to:

Modify Structure - CPRI/OBSAI BERT on page 150

Modify Structure - eCPRI BERT on page 157

- 3b. For QSFP interface connector, check for the optical validation check mark ☒ indicating that the transceiver matches the configured interface/rate (refer to *Physical Interface Port - Test Configurator Overview* on page 137).

- 3c. Tap the interface block to configure the interface parameters (refer to page 316). For **Dual Port** topology, there is an interface block for each port. Ensure that the power level is present in the status bar before proceeding to the next step (refer to *Status Bar* on page 44).

Selecting and Starting a Test

Wireless Test Application

- 3d.** For eCPRI BERT framed test, tap the protocol block to configure the frame structure and its parameters (refer to page 268). For **Dual Port** topology, there is a protocol block for each port.
- 3e.** Tap the test block to configure the specific test settings (refer to page 272). For **Dual Port** topology, there is a test block for each port.
- 3f.** For CPRI/OBSAI BERT - **Framed L2 in Base Station** emulation mode, tap the clock block¹ to configure the clock synchronization (refer to *Clock* on page 255). The clock is automatically set to **Recovered** for **Remote Radio Head** emulation mode.

Note: For *Unframed* test the clock is set to **Internal**. For **eCPRI BERT** framed test the clock is set to **Internal** or is selectable for *One-Way measurement mode*: **External - 1PPS** or **Internal GNSS** (88260).

- 4.** Refer to *Test Functions* on page 667 for additional test configurations.
- 5.** Tap the **Timer** tab to automatically start and/or stop the test at a given time or for a specific duration (refer to *Timer* on page 465).
- 6.** Tap the **Start** button from the right navigation bar to start the test (refer to *Start/Stop | TX Button* on page 805). The **Summary** result page will be automatically displayed when the test is started from any **Setup** configuration page. For additional results refer to *Test Results* on page 477.
- 7.** When the test ends automatically or is manually stopped, the generate report pop-up is displayed by default. If required, tap **Yes** to generate a report of the test results and statistics (refer to *Report Button* on page 795 for more information).

1. Not available in **Dual Port** topology. However the clock is automatically set to **Internal** for the **Base Station** and **Recovered** for the **Remote Radio Head**.

8 Setup

The **Setup** menu offers the following structure:

- **Test Applications**, see page 63.
- **Test Configurator**, see page 127.
- **Timer**, see page 465.
- **System - General**, see page 446.
- **System - GNSS**, see page 448.
- **System - TA-SYNC**, see page 455.

Test Configurator

The following table shows the setup structure for each test application.

Intelligent Apps

Test Applications	Block	Subtab or Pop Up	Page
iOptics	Device Under Test	Device Under Test Details	263
	Test Sequence	-	459
iSAM	Local	Local Details	337
		TA-...	455
		CFP/QSFP/SFP	253
	Network	Network Details	358
	Remote	Remote Details	377

Transport

Test Application	Section	Page or Pop Up	Page
DCO BERT	Button	Modify Structure	153
	Interface	Interface	329
		CFP2/OSFP/QSFP	253
		TA4-...	455
	Test (Client)	BERT	247
		FlexO/OTUCn	306
		Frequency	310
		MAC/IP/UDP	342
		Profile	374
DSn/PDH BERT	Button	Modify Structure	155
		Signal Auto-Detect	220
	Interface	Signal	415
	Test	BERT	234
	Clock	Clock	255
FlexO BERT	Button	Modify Structure	178
	Interface	QSFP	253
		Frequency	307
		Interface	316
	Protocol	FlexO/OTN	305
		Traces/PT	472
	Test	BERT	234

Test Application	Section	Page or Pop Up	Page
Multi-Channel OTN	Button	Modify Structure	179
	Interface	CFP/QSFP	253
		Frequency	307
		FTFL/PT / PT	311
		Signal	415
		Traces - OTN	467
	Test	Global	368
		Traces	311
		PT	467
	Clock	Clock	255
NI/CSU Emulation	Button	Modify Structure	180
		Signal Auto-Detect	220
	Interface	Signal	415
	Clock	Clock	255
OTN BERT	Button	Modify Structure	181
	Interface	CFP/QSFP/SFP	253
		Frequency	307
		FTFL/PT	311
		Signal	415
		TA-... / TA4-...	455
		Traces (OTN)	467
	Protocol	GFP-F/GFP-T	315
	Test	BERT	234
		EtherBERT (available with EoOTN client)	272
		Unframed BERT	234
	Clock	Clock	255
		TA-Sync	455

Setup

Test Configurator

Test Application	Section	Page or Pop Up	Page
OTN-SONET/SDH BERT	Button	Modify Structure	188
	Interface	CFP/QSFP/SFP	253
		Frequency	307
		FTFL/PT	311
		Signal	415
		Traces (OTN)	467
	Protocol	Labels	333
		Signal	429
		Traces	470
	Test	BERT	234
SONET/SDH BERT	Clock	Clock	255
	Button	Modify Structure	203
	Interface	SFP	253
		Labels	333
		Signal	415
		Traces (SONET/SDH)	470
	Test	BERT	234
SONET/SDH - DS _n /PDH BERT	Clock	Clock	255
	Button	Modify Structure	206
	Interface	SFP	253
		Labels	333
		Signal	415
		Traces (SONET/SDH)	470
	Protocol	Signal (DS _n /PDH)	422
	Test	BERT	234
	Clock	Clock	255

Ethernet

Test Application	Section	Page or Pop Up	Page
Cable Test	Button	Modify Structure	148
	Interface	Interface	316
		Network	355
	Test	Cable Test	251
Carrier Ethernet OAM	Button	Modify Structure	149
	Interface	SFP	253
		Interface	316
		Network	355
		TA-... / TA4-...	455
	Test	Link OAM	335
		S-OAM / MPLS-TP OAM	396
	Clock	Clock	255
		TA-Sync	455
EtherBERT	Button	Modify Structure	159
	Interface	CFP/OSFP/QSFP/SFP	253
		Frequency	307
		Interface	316
		Network	355
		TA-... / TA4-...	455
	Protocol	MAC/IP/UDP	342
	Test	EtherBERT	272
		Unframed BERT	272
	Clock	Clock	255
		TA-Sync	455

Setup

Test Configurator

Test Application	Section	Page or Pop Up	Page
EtherSAM (Y.1564)	Button	Modify Structure	170
	Interface	CFP/OSFP/QSFP/SFP	253
		Frequency	307
		Interface	316
		Network	355
		TA-... / TA4-...	455
	Protocol	MAC/IP/UDP	342
		Global (Services)	405
		L2CP	408
		Profile (Services)	409
	Test	Burst (EtherSAM)	281
		Global (EtherSAM)	283
		L2CP (EtherSAM)	288
		Ramp (EtherSAM)	294
	Clock	Clock	255
		TA-Sync	455
FlexE BERT	Button	Modify Structure	176
	Interface	CFP/OSFP/QSFP	253
		Frequency	307
		Interface	316
		TA-... / TA4-...	455
	Protocol	FlexE Group	303
	Test	BERT (Clients)	249
		MAC (Clients)	342
		Path OAM (Clients)	371
		Profile (Clients)	376

Test Application	Section	Page or Pop Up	Page
RFC 2544	Button	Modify Structure	193
	Interface	CFP/OSFP/QSFP/SFP	253
		Frequency	307
		Interface	316
		Network	355
		TA-... / TA4-...	455
	Protocol	MAC/IP/UDP	342
	Test	Global	381
		Subtests	384
	Clock	Clock	255
		TA-Sync	455
RFC 6349	Button	Modify Structure	197
	Interface	CFP/QSFP/SFP	253
		Interface	316
		Network	355
		TA-... / TA4-...	455
	Test	RFC 6349	391
Smart Loopback	Button	Modify Structure	199
	Interface	CFP/OSFP/QSFP/SFP	253
		Frequency	307
		Interface	316
		Network	355
		TA-... / TA4-...	455
	Test	Smart Loopback	433
	Clock	Clock	255
		TA-Sync	455

Setup

Test Configurator

Test Application	Section	Page or Pop Up	Page
TCP Throughput	Button	Modify Structure	211
	Interface	SFP	253
		Interface	316
		Network	355
	Test	TCP Throughput	457
	Clock	Clock	255
		TA-Sync	455
Through Mode	Button	Modify Structure	212
	Interface	CFP/QSFP/SFP	253
		Frequency	307
		Interface	316
		Network	355
		TA-... / TA4-...	455
Traffic Gen & Mon	Button	Modify Structure	216
	Interface	CFP/OSFP/QSFP/SFP	253
		Frequency	307
		Interface	316
		Network	355
		TA-... / TA4-...	455
	Protocol	Global (Streams)	435
		MAC/IP/UDP	342
		Profile (Streams)	437
	Clock	Clock	255
		TA-Sync	455

Sync

Test Application	Section	Page or Pop Up	Page
1588 PTP	Button	Modify Structure	146
	Interface	Interface	316
		Network	355
		SFP	253
		TA-...	455
	Test	1588 PTP (Client) 1588 PTP (GM)	221 229
SyncE	Button	Modify Structure	210
	Interface	Interface	316
		Network	355
		SFP	253
		TA-...	455
	Test	SyncE	444
Time Error / Wander	Button	Modify Structure	214
	Interface	Interface ^a	316
		Frequency	307
		Network ^b	355
		QSFP/SFP	253
		TA-...	455
	Protocol	1588 PTP ^b	221
	Test	Time Error Wander	461 461
		External Reference	295
	External Reference	TA-Sync	455

- a. No configuration available.
b. Available for Time Error measurement with an Ethernet interface (Packet-Based Time Error).

Fibre Channel

Test Application	Section	Page or Pop Up	Page
FC BERT	Button	Modify Structure	174
	Interface	Interface	316
		SFP	253
	Protocol	Fibre Channel	300
	Test	FC BERT	297

Wireless

Test Application	Section	Page or Pop Up	Page
CPRI/OBSAI BERT	Button	Modify Structure	150
	Interface	Interface	316
		SFP	253
	Test	BERT	240
		Unframed BERT	240
eCPRI BERT	Button	Modify Structure	157
	Interface	Interface	316
		Network	355
		SFP	253
		TA-...	455
	Test	BERT	244
		Unframed BERT	244
	Clock	Clock	255
		TA-Sync	455


Test Configurator Overview

The **Test Configurator** tab displays the interconnected blocks composing the test structure. Each block of the test structure gives an overview of its configuration/status. Availability of each block depends on the selected test application and its structure. Arrows are used to indicate the interconnection between blocks as well as the direction of the clock and data flow. Tap on a block or the **More** button for **Intelligent Apps**, to change the configuration parameters of this block.

From the **Test** menu, tap **Setup**, and the **Test Configurator** tab.

- Intelligent Apps:

iOptics:

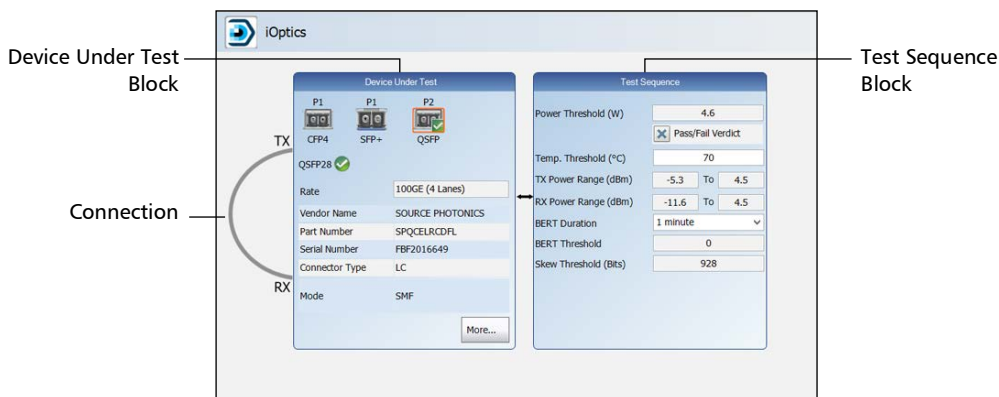


- **Device Under Test** block displays and allows changing the basic interface/port settings. Tap on the **More** button to access more information and settings.
- **Test Sequence** block allows changing the basic test settings.

Setup

Test Configurator Overview


iSAM:

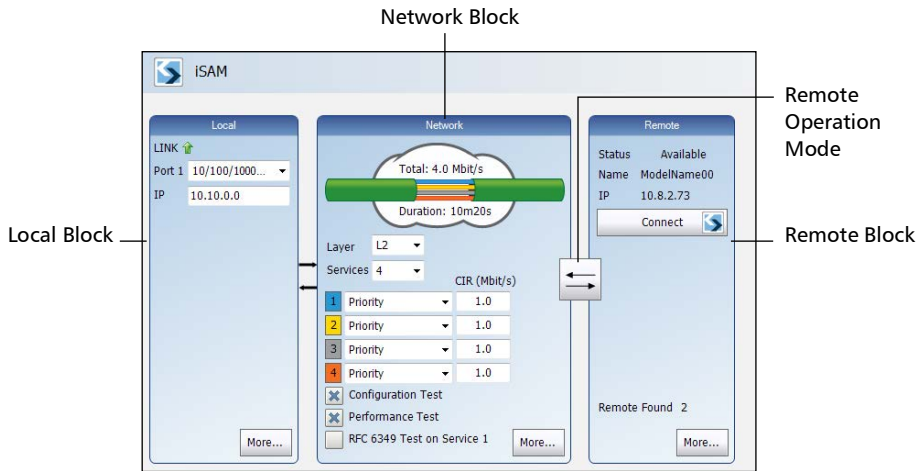


The block arrangement represents the network under test. From any block, either select the basic parameters or click on **More** for all settings.

- **Local** block displays and allows changing the basic interface settings. Tap on the **More** button to access all settings.
- **Network** block displays and allows changing the basic test settings. Tap on the **More** button to access all settings.
- Remote operation mode allows selecting the remote operation mode. Tap on the button to change the remote operation mode.
- **Remote** block displays and allows changing the basic remote settings. Tap on the **More** button to access all settings.

➤ Transport Test Applications:

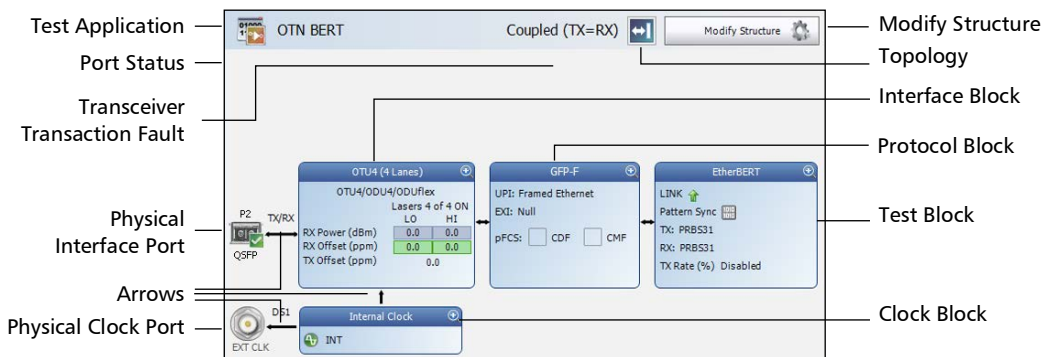


➤ Ethernet Test Applications:

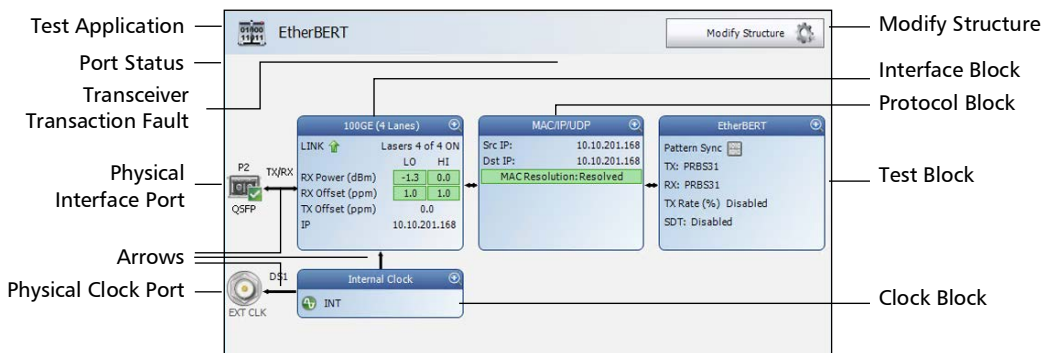


Setup

Test Configurator Overview


➤ Sync Test Applications:

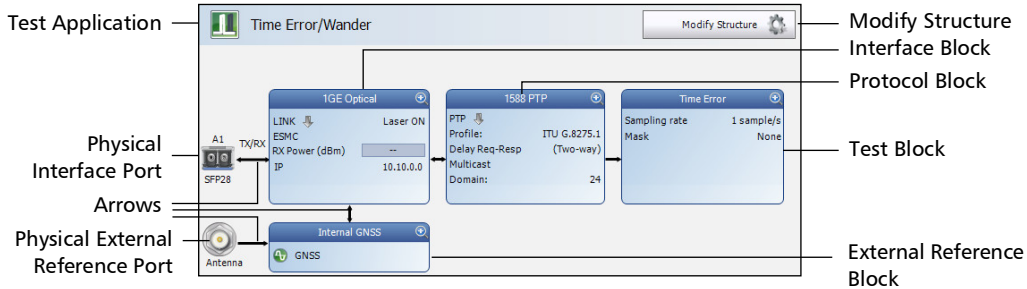

➤ Fibre Channel Test Application:

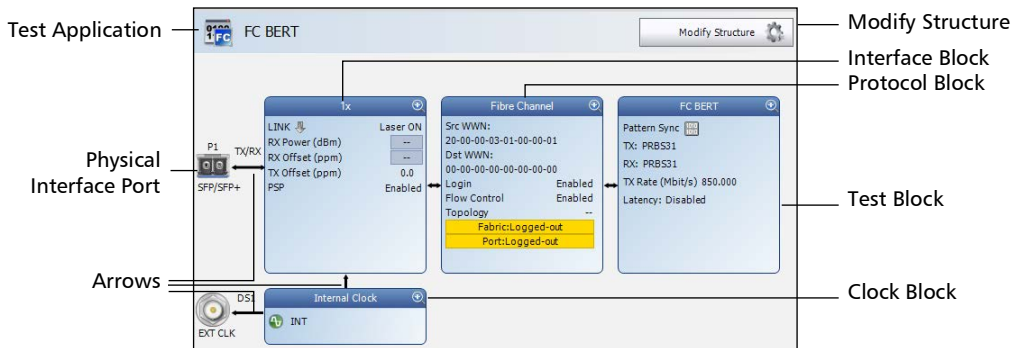

➤ Wireless Test Application:

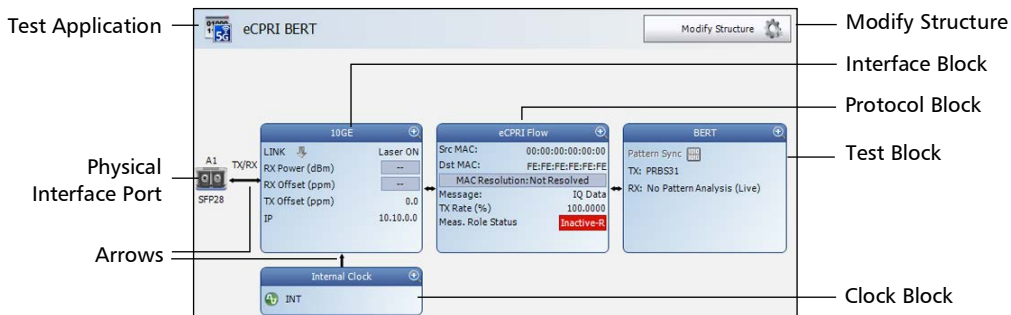

- Test Application indicates the selected test application.
 - Topology, for Transport Test Applications, indicates the selected test topology.
 - Modify Structure button, allows the configuration of the physical port and the signal interface structure.
 - Port Status indicates either the following:
 - Port status icon and its description for a CFP4/CFP8/OSFP/QSFP interface is only displayed when validating or if there is a problem as described in the following table.

	Validating transceiver.
	Missing transceiver, Loopback capability not supported (QSFP56), Transceiver initializing (not ready to carry traffic) (DCO transceivers), or Unable to validate transceiver.
	Invalid transceiver (or mismatch with the selected signal/interface).
	Valid transceiver matching the selected interface/rate. This icon is not displayed here, it is only displayed for the Physical Interface Port. Using a non-EXFO supported transceiver may report that the transceiver is valid but the device may not operate as intended.

Transceiver System status for a transceiver system is only displayed when there is a warning or a problem as described in the following table.

Icon	Displayed Message	Description
	Port A/B / Port 1 - The battery for the insertion counter is low, please contact EXFO Support	The battery is low and must be replaced by an EXFO authorized service center.
	Port A/B / Port 1 - The battery for the insertion counter is depleted, please contact EXFO Support	The battery is dead and must be replaced by an EXFO authorized service center.
	A1/A2/B1/B2 / Port 1 - Missing TA/TA4 Transceiver System	No transceiver system detected

Setup

Test Configurator Overview

Icon	Displayed Message	Description
	A1/A2/B1/B2 / Port 1 - Validating TA/TA4 Transceiver System	Validation process is on-going
	A1/A2/B1/B2 / Port 1 - Invalid TA/TA4 Transceiver System	Validating process completed and detected transceiver system type not expected
	Port 1 - Invalid TA4 Transceiver System Version	Validating process completed and detected transceiver system version not compatible

- Transceiver Transaction Fault indicates that the module is unable to discover the transceiver device or experiences abnormal communication conditions; refer to page 446 for more information.
- Physical Interface Port indicates the physical interface port. For **Dual Port** topology, there is a physical interface for each port.

The status icon for a physical CFP4/CFP8/OSFP/QSFP interface is displayed as described in Port Status above.
- Connection, available with iOptics, graphically represents the connection used for the test. For AOC, the cable length is also displayed.
- Arrows are used to indicate the interconnection between blocks as well as the direction of the clock and data flow.

A line with an arrow on both ends indicates a bidirectional communication (TX/RX).

A line with a single arrow indicates a unidirectional communication, either **TX** when going out of a block or **RX** (or **RX2**) when going into a block. **RX2** indicates the physical **BNC TX/RX2** port.

A line going out of a block returning back to the same block, indicates a loopback communication.

- Physical Clock Port indicates the direction, TX or RX, of the selected clock; not displayed when **Ext Clock Out** is set to **None**. The arrow next to the physical clock image indicates if a clock is generated (TX, arrow pointing to the left) or received (RX, arrow pointing to the right) at/from the physical EXT CLK port.
- Physical External Reference Port indicates the port, signal, and direction (RX) of the selected external reference signal.
- Interface Block displays an overview of the interface settings and status. Tap on the interface block to change the settings and to see detailed status. For **Dual Port** topology, there is an interface block for each port.
- Protocol Block displays an overview of either the frame structure and its parameters for Ethernet test applications or the embedded signal for Transport test applications. This block is not present for all tests. Tap on the protocol block to change the settings and to see detailed status. For RFC 2544, EtherBERT, and Traffic Gen & Mon in **Dual Port** topology, there is a protocol block for each port.
- Test Block displays an overview of the test settings and status. Tap on the test block to change the settings and to see detailed status.
- Clock Block displays an overview of the clock settings and status. Tap on the clock area to change the settings and to see detailed status. For **Dual Port** topology, the clock block is not present but the clock is set to **Internal**.
- External Reference Block displays an overview of the external reference signal settings and status. Tap on the external reference area to change the settings and to see detailed status.

Modify Structure

From the test menu, tap **Setup, Test Configurator**, and the **Modify Structure** button.

Transport

Modify Structure - DCO BERT

Modify Structure - DS_n/PDH BERT

Modify Structure - FlexO BERT

Modify Structure - Multi-Channel OTN

Modify Structure - NI/CSU Emulation

Modify Structure - OTN BERT

Modify Structure - OTN-SONET/SDH BERT

Modify Structure - SONET/SDH BERT

Modify Structure - SONET/SDH - DS_n/PDH BERT

Ethernet

Modify Structure - Cable Test

Modify Structure - Carrier Ethernet OAM

Modify Structure - EtherBERT

Modify Structure - EtherSAM

Modify Structure - FlexE BERT

Modify Structure - RFC 2544

Modify Structure - RFC 6349

Modify Structure - Smart Loopback

Modify Structure - TCP Throughput

Modify Structure - Through Mode

Modify Structure - Traffic Gen & Mon

Sync

Modify Structure - 1588 PTP

Modify Structure - SyncE

Modify Structure - Time Error / Wander

Fibre Channel

Modify Structure - FC BERT

Wireless

Modify Structure - CPRI/OBSAI BERT

Modify Structure - eCPRI BERT

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

- **Emulation Mode** allows the selection of the 1588 PTP testing operation mode: **Client** (default) or **GM** (Grandmaster). **GM** is only available for 100GE/25GE/10GE LAN/1GE interface/rate when the 1588PTPGM software option is enabled on an FTBx-88260.

Time Source check box when selected (default), available with **GM** Emulation Mode with a TA-SYNC-PREMIUM, sets the clock to **Internal GNSS**. When the **Time Source** check box is cleared, the internal clock mode is used.

- **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870 8880	10GE LAN 1GE Optical 100M Optical	Port 1 - SFP+ Port 2 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - RJ45 Port 2 - SFP+ (RJ45) ^a
88200NGE	10GE LAN 1GE Optical 100M Optical	Port 1 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - SFP+ (RJ45) ^a
88260	100GE (4 Lanes) [103.125 Gbit/s] ^b	Port A1/A2/B1/B2 - QSFP28
	25GE ^b 10GE LAN 1GE Optical 100M Optical	Port A1/A2/B1/B2 - SFP28
	BASE-T Electrical (10/100/1000 Mbit/s)	Port A1/A2/B1/B2 - SFP28 (RJ45) ^a

- a. BASE-T Electrical is supported when using an active copper SFP.
- b. Only available with GM emulation mode.

- **PHY Type** allows selecting the transceiver PHY type:
For 100GE (4 Lanes): **LR4/ER4** (default), **SR4**, **CWDM4**, or **CLR4**. The PHY type when set to any except **LR4/ER4**, provides access to RS-FEC configuration (see page 317).
- **Connector** allows the selection of the physical port (see the **Interface/Rate** table above).

Setup

Modify Structure - Cable Test

Modify Structure - Cable Test

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

- **Interface/Rate** is set to **BASE-T Electrical**.

Unit	Interface/Rate	Connector
8870 8880	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - RJ45

- **Connector** is set to **Port 1 - RJ45** (see **Interface/Rate** table above).

Modify Structure - Carrier Ethernet OAM

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

- **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870 8880	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port 1 - SFP+ Port 2 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - RJ45 Port 2 - SFP+ (RJ45) ^a
88200NGE	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port 1 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - SFP+ (RJ45) ^a
88260	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port B1/B2 - SFP28
	BASE-T Electrical (10/100/1000 Mbit/s)	Port B1/B2 - SFP28 (RJ45) ^a

a. BASE-T Electrical is supported when using an active copper SFP.

- **Connector** allows the selection of the physical port (see the **Interface/Rate** table above).
- **OAM Type** selects the type of Carrier OAM network: **Ethernet OAM** (S-OAM; default), **MPLS-TP OAM**, or **Link OAM**.

Setup

Modify Structure - CPRI/OBSAI BERT

Modify Structure - CPRI/OBSAI BERT

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

Note: For *Dual Port* topology each port is configurable individually. Both ports must be part of the same group of rates, either rates up to 10.1G or both at 24.3G).

➤ **Interface** allows the selection of the interface rate.

CPRI:

Unit	Interface/Rate	Connector
8870 8880	CPRI - 1.2G [Option 2] CPRI - 2.4G [Option 3] CPRI - 3.1G [Option 4] CPRI - 4.9G [Option 5] CPRI - 6.1G [Option 6] CPRI - 9.8G [Option 7] CPRI - 10.1G [Option 8]	Port 1 - SFP+ Port 2 - SFP+
88200NGE	CPRI - 1.2G [Option 2] CPRI - 2.4G [Option 3] CPRI - 3.1G [Option 4] CPRI - 4.9G [Option 5] CPRI - 6.1G [Option 6] CPRI - 9.8G [Option 7] CPRI - 10.1G [Option 8]	Port 1 - SFP+
88260	CPRI - 1.2G [Option 2] CPRI - 2.4G [Option 3] CPRI - 3.1G [Option 4] CPRI - 4.9G [Option 5] CPRI - 6.1G [Option 6]	Port A1/A2/B1/B2 - SFP28
	CPRI - 9.8G [Option 7] CPRI - 10.1G [Option 8] CPRI - 24.3G [Option 10]	Port A1/A2/B1/B2 - SFP28 Port A1/A2/B1/B2 - QSFP28

OBSAI:

Unit	Interface/Rate	Connector
8870 8880	OBSAI - 1.5G OBSAI - 3.1G OBSAI - 6.1G	Port 1 - SFP+ Port 2 - SFP+
88200NGE	OBSAI - 1.5G OBSAI - 3.1G OBSAI - 6.1G	Port 1 - SFP+
88260	OBSAI - 1.5G OBSAI - 3.1G OBSAI - 6.1G	Port A1/A2/B1/B2 - SFP28

- **Connector** allows the selection of the physical port (see **Interface** table above).

Lane, available with 10/25G, allows selecting the Lane number when using a QSFP28 multilane transceiver. Only available on 88260.

- **Framing**
 - **Framed L2** (default) is mainly used to validate connectivity with the base station (REC) or remote radio head (RE) over the fiber interface.
 - **Unframed** is mainly used to validate the continuity of the dark fiber at CPRI (up to 9.8G; not supported with QSFP28) or OBSAI (3.1 Gbit/s) rate.
- **Vendor** defines the interoperability with equipment using vendor specific overhead to generate and analyze the signal over a CPRI link: **Generic** (default, as per CPRI standard), **Ericsson**, or **Samsung**.

Setup

Modify Structure - CPRI/OBSAI BERT

- **Emulation Mode** (available with **Framed L2**)
 - **Base Station** (default) is used to validate the connectivity with the RRH.

For CPRI, it initiates the start-up sequence and provides synchronization with the RRH.

For OBSAI, it initiates the State Machine events and provides synchronization with the RRH.
 - **Remote Radio Head** is used to validate the communication with a base station.

For CPRI, it begins its start-up sequence when it detects a valid signal from the base station.

For OBSAI, the State Machine events depend on the Base Station signal transmission.
- **Topology**, available on 88260 with **Framed L2**, allows the selection of the network test topology: **Single Port** (default) or **Dual Port** (CPRI only). For **Dual Port** both ports must be part of the same group of rates, either rates up to 10.1G or both at 24.3G).

Modify Structure - DCO BERT

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

- **Interface** allows the selection of the interface rate.

Unit	Interface	Connector
88460	400ZR (CFEC, 16QAM, DWDM Amplified) [478.75 Gbit/s]	Port 1 - QSFP56-DD
	400ZR (CFEC, 16QAM, Unamplified) [478.75 Gbit/s] ^a	Port 1 - OSFP
	400ZR+ (OFEC, 16QAM) [481.108374 Gbit/s]	Port 1 - CFP2
	200ZR+ (OFEC, QPSK) [240.554187 Gbit/s]	
	100ZR+ (OFEC, QPSK) [120.277094 Gbit/s]	
	FOIC4 (OFEC, 16QAM) [505.115743 Gbit/s]	Port 1 - CFP2
88480 88481 88482	400ZR (CFEC, 16QAM, DWDM Amplified) [478.75 Gbit/s]	Port 1/2 - QSFP-DD
	400ZR (CFEC, 16QAM, Unamplified) [478.75 Gbit/s]	Port 2 - OSFP ^b
	400ZR+ (OFEC, 16QAM) [481.108374 Gbit/s]	
	100ZR+ (OFEC, QPSK) [120.277094 Gbit/s]	
88800 88801	800ZR (OFEC, 16QAM) [945.626805 Gbit/s]	Port 1/2 ^b - QSFP-DD
	400ZR (CFEC, 16QAM, DWDM Amplified) [478.75 Gbit/s]	Port 2 - OSFP ^b
	400ZR (CFEC, 16QAM, Unamplified) [478.75 Gbit/s]	
	400ZR+ (OFEC, 16QAM) [481.108374 Gbit/s]	
	100ZR+ (OFEC, QPSK) [120.277094 Gbit/s]	

- a. Not supported with CFP2.
- b. When this port is available on the module.

- **Connector** allows the selection of the physical port (see **Interface** table above).

Setup

Modify Structure - DCO BERT

- **Transceiver App Code**, available when the **Override** check box is selected, allows selecting the transceiver application code: **Auto** (default), **1** to **15**. When **Auto** is selected, the transceiver application code is automatically set matching the interface/client; if not matching, the pluggable module keeps its default application code.
- **Override** check box when selected (cleared by default) allows overriding the transceiver application code.
- **Client** allows the selection of the Ethernet client:

Interface	Client
400ZR (CFEC, 16QAM, DWDM Amplified) [478.75 Gbit/s]	400G Ethernet (400GAUI-8)
400ZR (CFEC, 16QAM, Unamplified) [478.75 Gbit/s]	
400ZR+ (OFEC, 16QAM) [481.108374 Gbit/s]	400G Ethernet (400GAUI-8) 4 x 100G Ethernet (4 x 100GAUI-2) ^a
100ZR+ (OFEC, QPSK) [120.277094 Gbit/s]	100G Ethernet (100GAUI-2) ^a 100G Ethernet (CAUI-4 w/o FEC)
FOIC4 (OFEC, 16QAM) [505.115743 Gbit/s]	OTUC4 (FOIC4.8-RS)

a. Not available with CFP2.

Modify Structure - DS_n/PDH BERT

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

Note: For *Dual RX* topology both *RX* and *RX2* configurations are coupled.

- **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870 8880	DS1 [1.544 Mbit/s]	Bantam RJ48C
	E1 [2.048 Mbit/s]	Bantam BNC RJ48C
	DS3 [44.736 Mbit/s] E3 [34.368 Mbit/s] E4 [139.264 Mbit/s]	BNC

- **Connector** allows the selection of the physical port (see the **Interface/Rate** table above).
- **DS_n Multiplexing / PDH Multiplexing** allows the selection of the DS_n/PDH multiplexing.


Interface/Rate	DS _n /PDH Multiplexing
DS3	None (default), DS1, E1
DS1	None
E4	None (default), E3, E3/E2/E1
E3	None (default), E2/E1
E1	None

- **Client** is set to **Pattern**.


Setup

Modify Structure - DSn/PDH BERT

 
- **Topology** allows the selection of the network test topology.
- **Coupled (TX=RX)** uses the same settings for both the TX and RX signals.



 
- **Decoupled (TX≠RX)** uses independent settings for TX and RX signals. However, the pattern and some other parameters are always coupled.



- **Through** loops the RX signal to the TX port without TX overwrite capabilities.

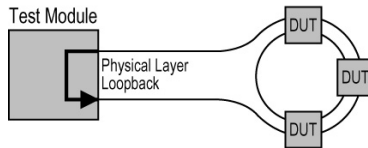

- **Dual RX** uses two DS1 or DS3 signals at the same time. Both RX ports are coupled at the exception of the termination mode. Only available with DS1 and DS3 signal rates.

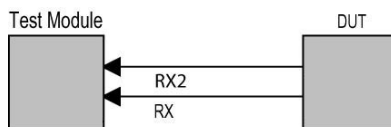

Modify Structure - eCPRI BERT

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

Note: For *Dual Port* topology each port is configurable individually. Port rates are coupled.

- **Interface** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870 8880	10GE	Port 1 - SFP+ Port 2 - SFP+
88200NGE	10GE	Port 1 - SFP+
88260	10GE 25GE	Port A1/A2/B1/B2 - SFP28 Port A1/A2/B1/B2 - QSFP28
	100GE (4 Lanes)	Port A1/A2/B1/B2 - QSFP28 Port A1/B1 - CFP4
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28

- **PHY Type** allows selecting the transceiver PHY type:
For 100GE (4 Lanes): **LR4/ER4** (default), **SR4**, **CWDM4**, **CLR4**, or **Other**. The PHY type when set to any except **LR4/ER4**, provides access to RS-FEC configuration (see page 317).
For 100GE (1 Lane): **DR1/FR1/LR1** (default and dimmed); ensure the other end of the circuit has the FEC enabled.
For 100GE (2 Lanes): **SRBD** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

Connector allows the selection of the physical port (see **Interface** table above).

Lane, available with 10/25G, allows selecting the Lane number when using a QSFP28 multilane transceiver. Only available on 88260.

Setup

Modify Structure - eCPRI BERT

➤ Framing

- **Framed Layer 2** (default) is mainly used to validate the transport of eCPRI messages over a plain Ethernet transport network. .

IFG (12 bytes)	Preamble (7 bytes)	SFD (1 byte)	Destination MAC (6 bytes)	Source MAC (6 bytes)	VLAN (4 bytes/level)	EtherType (2 bytes)	eCPRI Message (46-1500+)	CRC (4 bytes)

- **Framed Layer 3/4** is mainly used to validate the transport of eCPRI messages over an Ethernet/IP/UDP transport network.

IFG (12 bytes)	Preamble (7 bytes)	SFD (1 byte)	Destination MAC (6 bytes)	Source MAC (6 bytes)	VLAN (4 bytes/level)	EtherType (2 bytes)	IPv4 Header (20 bytes)	UDP Header (8 bytes)	eCPRI Message (46-1500+)	CRC (4 bytes)

- **Unframed**, available for single port, is mainly used to validate the presence of Bit Error or Pattern Loss on the fiber link carrying the eCPRI signal. Not supported with QSFP28 and CFP4.

IFG (Min. 12 bytes)	Preamble (7 bytes)	SFD (1 byte)	Test Pattern (Length: infinite)

- **Topology**, available on 88260 with Framed Layer 2/3/4, allows the selection of the network test topology: **Single Port** (default) or **Dual Port**. Port rates are coupled.

Modify Structure - EtherBERT

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

Note: For *Dual Port* topology each port is configurable individually.

Interface allows the selection of the interface rate. For Dual Port, both ports must be either 10GE and less, 25GE, 50GE, or 40/100GE.

Unit	Interface/Rate	Connector
8870 8880	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port 1 - SFP+ Port 2 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s and 2.5/5/10 Gbit/s)	Port 1 - RJ45 Port 2 - SFP+ (RJ45) ^a
88200NGE	100GE (4 Lanes) [103.125 Gbit/s]	Port 1 - CFP4 Port 2 - QSFP (QSFP28)
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port 2 - QSFP (QSFP28)
	40GE (4 Lanes) [41.25 Gbit/s]	Port 2 - QSFP (QSFP+)
	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port 1 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - SFP+ (RJ45) ^a

Setup

Modify Structure - EtherBERT

Unit	Interface/Rate	Connector
88260	100GE (4 Lanes) [103.125 Gbit/s]	Port A1/A2/B1/B2 - QSFP28 Port A1/B1 - CFP4
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	50GE [53.125G]	Port A1/A2/B1/B2 - QSFP28
	40GE (4 Lanes) [41.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	25GE	Port A1/A2/B1/B2 - SFP28
	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port A1/A2/B1/B2 - SFP28
	BASE-T Electrical (10/100/1000 Mbit/s and 2.5/5/10 Gbit/s)	Port A1/A2/B1/B2 - SFP28 (RJ45) ^a

Unit	Interface/Rate	Connector
88460	400GE (8 Lanes) [425 Gbit/s]	Port 1 - CFP8 Port 1 - QSFP56-DD Port 1 - OSFP
	400GE (4 Lanes) [425 Gbit/s] 8 x 50GE [53.125 Gbit/s] 4 x 100GE [106.25 Gbit/s] 2 x 200GE (4 Lanes) [212.5 Gbit/s]	Port 1 - QSFP56-DD Port 1 - OSFP
	200GE (4 Lanes) [212.5 Gbit/s]	Port 1 - QSFP56-DD
	2 x 100GE (4 Lanes) [103.125 Gbit/s]	Port 1 - QSFP56-DD
	100GE (4 Lanes) [103.125 Gbit/s] 100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port 1 - QSFP56-DD Port 1/2/3/4 - QSFP28
	50GE [53.125G] 40GE (4 Lanes) [41.25 Gbit/s]	Port 1/2/3/4 - QSFP28
	25GE 10GE LAN 10GE WAN 1GE Optical	Port 1/2/3/4 - QSFP28 (with adapter)
88480 88481 88482	400GE (8 Lanes) [425 Gbit/s] 400GE (4 Lanes) [425 Gbit/s] 4 x 100GE [106.25 Gbit/s] 2 x 200GE (4 Lanes) [212.5 Gbit/s]	Port 1/2 - QSFP-DD Port 2 - OSFP ^b
	200GE (4 Lanes) [212.5 Gbit/s]	Port 1/2 - QSFP-DD
	100GE (4 Lanes) [103.125 Gbit/s] 100GE (2 Lanes) [106.25 Gbit/s] ^c 100GE (1 Lane) [106.25 Gbit/s]	Port 1/2 - QSFP-DD Port A1/A2 - QSFP28
	40GE (4 Lanes) [41.25 Gbit/s]	Port A1/A2 - QSFP28
	25GE 10GE LAN 10GE WAN 1GE Optical	Port A1/A2 - SFP28

Setup

Modify Structure - EtherBERT

Unit	Interface/Rate	Connector
88800	800GE (8 Lanes) [850 Gbit/s] 2 x 400GE (4 Lanes) [425 Gbit/s] 8 x 100GE [106.25 Gbit/s] 400GE (8 Lanes) [425 Gbit/s] 400GE (4 Lanes) [425 Gbit/s] 4 x 100GE [106.25 Gbit/s] 2 x 200GE (4 Lanes) [212.5 Gbit/s] 200GE (4 Lanes) [212.5 Gbit/s]	Port 1/2 - QSFP-DD
88801	800GE (8 Lanes) [850 Gbit/s] 2 x 400GE (4 Lanes) [425 Gbit/s] 8 x 100GE [106.25 Gbit/s] 400GE (8 Lanes) [425 Gbit/s] 400GE (4 Lanes) [425 Gbit/s] 4 x 100GE [106.25 Gbit/s] 2 x 200GE (4 Lanes) [212.5 Gbit/s]	Port 1 - QSFP-DD Port 2 - OSFP
	200GE (4 Lanes) [212.5 Gbit/s]	Port 1 - QSFP-DD

- a. BASE-T Electrical is supported when using an active copper SFP.
- b. When this port is available on the module.
- c. Not available on QSFP-DD port.

➤ **PHY Type** allows selecting the transceiver PHY type:

For 100GE (4 Lanes): **LR4/ER4** (default), **SR4**, **CWDM4**, **CLR4**, **AOC**, or **Other**. The PHY type when set to any except **LR4/ER4**, provides access to RS-FEC configuration (see page 317). **AOC** is not supported with multiple link interface.

For 100GE (2 Lanes): **SRBD** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 100GE (1 Lane): **DR/FR1/LR1** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 8 x 100GE: **DR/FR1/LR1** (default) and **DAC**.

For 200GE (4 Lanes) and 2 x 200GE (4 Lanes): Optical (default), and AOC.

For 400GE (4 / 8 Lanes): **Optical** (default), **AOC**, and **DAC** (8 Lanes only). Not available with 400GE (4 Lanes) on 88460.

For 800GE (8 Lanes): **Optical** (default), **AOC**, and **DAC**.

For 2 x 400GE (4 Lanes): **Optical** (default), and **DAC**.

- **Connector** allows the selection of the physical port (see **Interface** table above). Connectors availability depend on the selected **PHY Type**; CFP8 and OSFP connectors are OSFP connector is only available when the **PHY Type** is set to **Optical**.
- **Host Interface**, available with 400GE (4 Lanes) on 8848x/888xx, allows the selection of the host interface: **400GAUI-8** (default; dimmed with OSFP) or **400GAUI-4**. With AOC and DAC, the host interface is set to **400GAUI-4** and dimmed.
- **Host/Media Loopback** allows the selection of the transceiver loopback mode: **None** (default), **Host Side Input**, **Media Side Output**. Only available on 88460/88480/88481/88482/888xx; for 88460 with 100GE (4 Lanes) / 200GE (4 Lanes) single port test using QSFP56 transceiver on QSFP56-DD connector; for 88480/88481/88482 with 200GE (4 Lanes). Not available with multiple link interface.
- **Framing** allows the selection of the test framing type; otherwise the framing is set to **Framed Layer 2**. See *Network* on page 355 for more information on frame format. The framing is not configurable and set to **Framed Layer 2** for: 40GE/100GE dual port topology; 8 x 50GE multiple link interface.
- **Framed Layer 1**: Frame of x bytes that allows connection to any interface that complies with 802.3 Ethernet PHY or DWDM fibre. Available with rate up to 10G WAN.

IFG (Min. 12 bytes)	Preamble (7 bytes)	SFD (1 byte)	Test Pattern (Length: 48 to 10/16 Kbytes)

Setup

Modify Structure - EtherBERT

- **Framed Layer 2:** Frames of x bytes without network layer (**None**) that complies with IEEE 802a Ethernet II standard. To set the frame length, see Frame Size on page 376.

SOF	Destination Address	Source Address	Type	Test Pattern (Configurable length)	FCS	IFG

- **Framed Layer 3/4** (default): Frames of x bytes with UDP (default) or TCP network layer that complies with IEEE 802a Ethernet II standard. To set the frame length, see Frame Size on page 376.

SOF	Destination Address	Source Address	Type	IP Header	UDP Header	BERT Tag	Test Pattern (Configurable length)	FCS	IFG	
SOF	Destination Address	Source Address	Type	IP Header	TCP Header	BERT Tag	Test Pattern (Configurable length)	TCP Checksum Cancellor	FCS	IFG

- **Unframed (Interop)** is only available with optical interface up to 25GE:

For **Seed A** and **Seed B**, available with 10G LAN and 25G, the pattern is generated by the PCS scrambler from a specific seed. The pattern is not encoded.

For **PRBS31 Unscrambled**, available with 10G LAN and 25G, the pattern is generated at the PCS layer. The pattern is not encoded and not scrambled.

For **PRBS** and **User Pattern**: Pattern generated by the PCS scrambler. The pattern is encoded.

IFG (Min. 12 bytes)	Preamble (7 bytes)	SFD (1 byte)	Test Pattern (Length: infinite)


- **Unframed** is only available with optical interface up to 10G LAN. Encoded pattern generated by the PCS scrambler.

IFG (Min. 12 bytes)	Preamble (7 bytes)	SFD (1 byte)	Test Pattern (Length: infinite)


- **Unframed with Sync** is only available with optical interface up to 10G LAN: Pattern of a length corresponding to the number of bytes transmitted in 1 second.

IFG (Min. 12 bytes)	Preamble (7 bytes)	SFD (1 byte)	Test Pattern (Length: about 1 second)

 
- **2 Unframed 50GAUI-2:** Independent infinite length test pattern in each 50GAUI-2 lane (no blocks). Available with 50GE.



- **4 Unframed XLAUI:** Independent infinite length test pattern in each XLAUI lane (no blocks). Available with 40GE (4 Lanes).

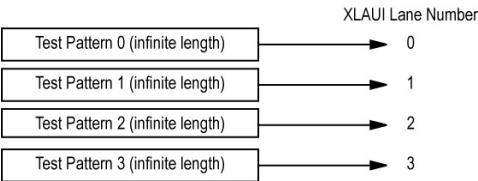


- **4 Unframed CAUI-4:** Independent infinite length test pattern in each CAUI-4 lane (no blocks). Available with 100GE (4 Lanes) on 88200NGE/88260/88460.

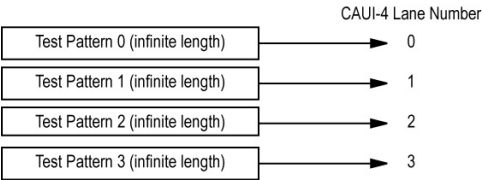

Setup


Modify Structure - EtherBERT

- **20 Unframed PCS:** Independent infinite length test pattern in each PCS lane (no blocks and no lane markers). Available with 100GE (4 Lanes) on 88200NGE/88260/88460.

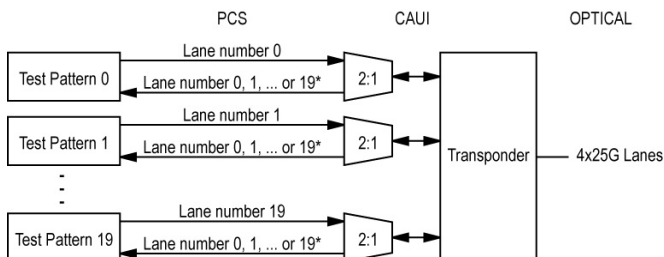


* It is not possible to predict on which Lane a generated pattern will be detected on the receive side.

- **4 Unframed 200GAUI-4:** Independent infinite length test pattern in each 200GAUI-4 lane. Available with 200GE (4 Lanes) on 88460 (QSFP56-DD port).

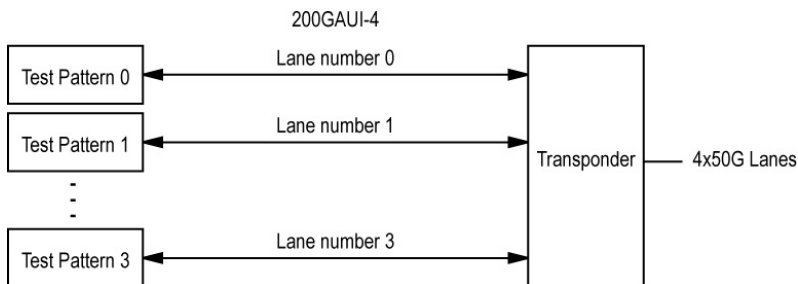


- **8 Unframed 200GAUI-4:** Independent infinite length test pattern in each lane driving the Gearbox (no blocks). Available with 200GE (4 Lanes) on 88460 (QSFP56-DD port).

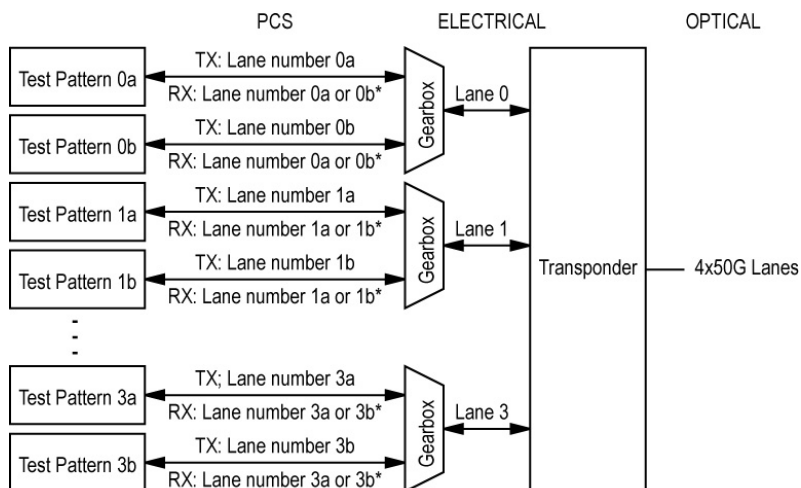

* It is not possible to predict on which Lane a generated pattern will be detected on the receive side.


- **8 Unframed 400GAUI-8:** Independent infinite length test pattern in each 400GAUI-8 lane. Available with 400GE (4/8 Lanes) on 88460 (QSFP56-DD/OSFP port).

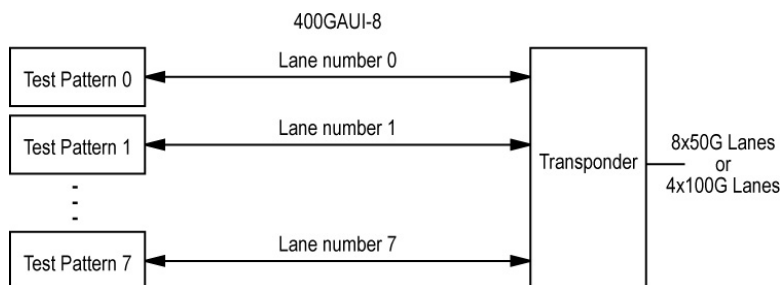


Setup

Modify Structure - EtherBERT

- **8 Unframed 800GAUI-8:** Independent infinite length test pattern in each 800GAUI-8 lane. Available with 800GE (8 Lanes) on 888xx.

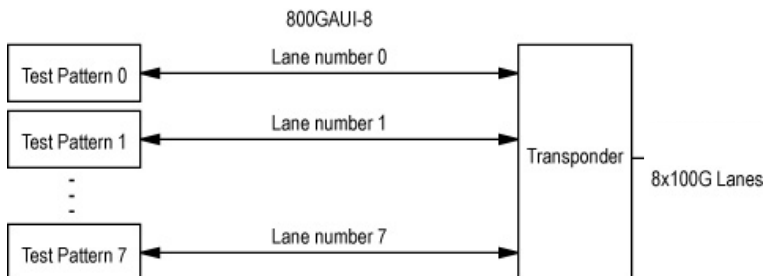


- **16 Unframed 400GAUI-8:** Independent infinite length test pattern in each lane driving the Gearbox (no blocks). Available with 400GE (4/8 Lanes) on 88460 (QSFP56-DD/OSFP port)

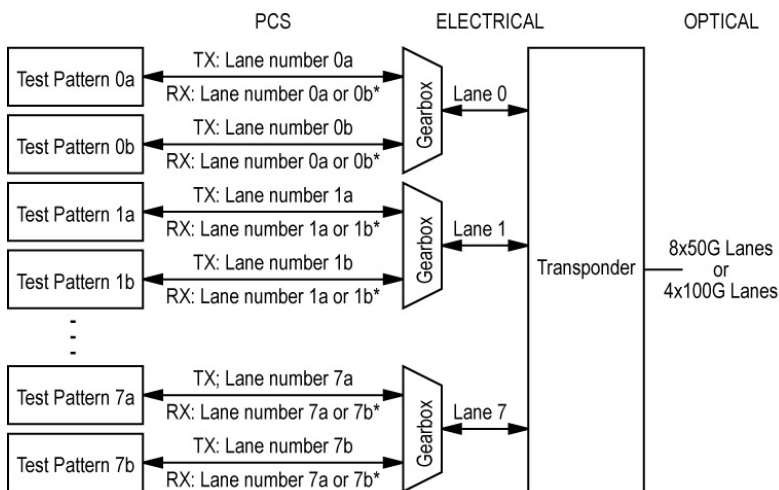

* It is not possible to predict on which Lane a generated pattern will be detected on the receive side.

- **16 Unframed 400GAUI-16:** Independent infinite length test pattern in each 400GAUI-16 lane (no blocks). Available with 400GE (8 Lanes) on 88460 (CFP8 port).

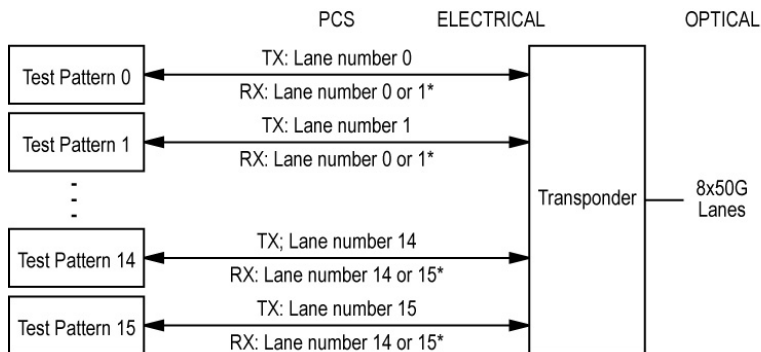

* It is not possible to predict on which Lane a generated pattern will be detected on the receive side.

- **Topology** allows the selection of the network test topology: **Single Port** (default) or **Dual Port**. Dual Port is available for rates up to 100G, for 200G on 88480/88482/888xx, and for 400G on 88480/88481/88482/888xx. Both ports must be from the same group of rates, either rates up to 10G WAN framed/unframed, 25G, 50G, or 40/100G, 200G, or 400G Framed Layer 2. For Dual Port 100G on FTBx-88460, both ports have to be from Port 1/2/3/4 - QSFP28. Dual Port is not supported with multiple link interfaces and when the Host Interface is set to 400GAUI-4.

Setup

Modify Structure - EtherSAM

Modify Structure - EtherSAM

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

Note: For *Dual Port* topology each port is configurable individually.

- **Interface** allows the selection of the interface rate. For Dual Port, both ports must be either 10GE and less, or 40/100GE.

Unit	Interface/Rate	Connector
8870 8880	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port 1 - SFP+ Port 2 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s and 2.5/5/10 Gbit/s)	Port 1 - RJ45 Port 2 - SFP+ (RJ45) ^a
88200NGE	100GE (4 Lanes) [103.125 Gbit/s]	Port 1 - CFP4 Port 2 - QSFP (QSFP28)
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port 2 - QSFP (QSFP28)
	40GE (4 Lanes) [41.25 Gbit/s]	Port 2 - QSFP (QSFP+)
	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port 1 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - SFP+ (RJ45) ^a

Unit	Interface/Rate	Connector
88260	100GE (4 Lanes) [103.125 Gbit/s]	Port A1/A2/B1/B2 - QSFP28 Port A1/B1 - CFP4
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	40GE (4 Lanes) [41.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	25GE 10GE LAN 10GE WAN 1GE Optical 100M Optical	Port A1/A2/B1/B2 - SFP28
	BASE-T Electrical (10/100/1000 Mbit/s and 2.5/5/10 Gbit/s)	Port A1/A2/B1/B2 - SFP28 (RJ45) ^a
88460	400GE (8 Lanes) [425 Gbit/s]	Port 1 - CFP8 Port 1 - QSFP56-DD Port 1 - OSFP
	400GE (4 Lanes) [425 Gbit/s]	Port 1 - QSFP56-DD Port 1 - OSFP
	200GE (4 Lanes) [212.5 Gbit/s]	Port 1 - QSFP56-DD
	100GE (4 Lanes) [103.125 Gbit/s] 100GE (2 Lanes) [106.25 Gbit/s] ^b 100GE (1 Lane) [106.25 Gbit/s]	Port 1 - QSFP56-DD Port 1/2/3/4 - QSFP28
	40GE (4 Lanes) [41.25 Gbit/s]	Port 1/2/3/4 - QSFP28
	25GE 10GE LAN 10GE WAN 1GE Optical	Port 1/2/3/4 - QSFP28 (with adapter)

Setup

Modify Structure - EtherSAM

Unit	Interface/Rate	Connector
88480	400GE (8 Lanes) [425 Gbit/s]	Port 1/2 - QSFP-DD
88481	400GE (4 Lanes) [425 Gbit/s]	Port 2 - OSFP ^c
88482	200GE (4 Lanes) [212.5 Gbit/s]	Port 1/2 - QSFP-DD
	100GE (4 Lanes) [103.125 Gbit/s] 100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port 1/2 - QSFP-DD Port A1/A2 - QSFP28
	40GE (4 Lanes) [41.25 Gbit/s]	Port A1/A2 - QSFP28
	25GE 10GE LAN 10GE WAN 1GE Optical	Port A1/A2 - SFP28

- a. BASE-T Electrical is supported when using an active copper SFP.
- b. Not available on QSFP-DD port.
- c. When this port is available on the module.

➤ **PHY Type** allows selecting the transceiver PHY type:

For 100GE (4 Lanes): **LR4/ER4** (default), **SR4**, **CWDM4**, **CLR4**, **AOC**, or **Other**. The PHY type when set to any except **LR4/ER4**, provides access to RS-FEC configuration (see page 317).

For 100GE (1 Lane): **DR/FR1/LR1** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 100GE (2 Lanes): **SRBD** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 200GE (4 Lanes) and 2 x 200GE (4 Lanes): **Optical** (default), and **AOC**.

For 400GE (8 Lanes): **Optical** (default), **AOC**, and **DAC**.

- **Connector** allows the selection of the physical port (see the **Interface/Rate** table above). Connectors availability depend on the selected **PHY Type**; CFP8 and OSFP connectors are OSFP connector is only available when the **PHY Type** is set to **Optical**.
- **Topology** allows the selection of the network test topology: **Single Port** (default) or **Dual Port**. Available for rates up to 10G WAN.

Setup

Modify Structure - FC BERT

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

Interface/Rate allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870 8880	1X 2X 4X 8X 10X	Port 1 - SFP+ Port 2 - SFP+
88200NGE	1X 2X 4X 8X 10X 16X	Port 1 - SFP+
88260	1X 2X 4X 8X 10X 16X 32X	Port A1/A2/B1/B2 - SFP28
88480, 88482	1X 2X 4X 8X 10X 16X 32X	Port A1/A2 - SFP28
	16X 32X 64X	Port 1 - SFP-DD

Unit	Interface/Rate	Connector
88481	1X 2X 4X 8X 10X 16X 32X	Port A1/A2 - SFP28

- **Connector** allows the selection of the physical port (see the **Interface/Rate** table above).

Modify Structure - FlexE BERT

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

- **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
88260	100GE (4 Lanes) [103.125 Gbit/s] 100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	50GE [53.125 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
88460	400GE (8 Lanes) [425 Gbit/s]	Port 1 - CFP8 Port 1 - QSFP56-DD Port 1 - OSFP
	400GE (4 Lanes) [425 Gbit/s]	Port 1 - QSFP56-DD Port 1 - OSFP
	200GE (4 Lanes) [212.5 Gbit/s]	Port 1 - QSFP56-DD
	100GE (4 Lanes) [103.125 Gbit/s] 100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port 1/2/3/4 - QSFP28

- **PHY Type**, available with 100GE/400GE, allows selecting the transceiver PHY type:

For 100GE (4 Lanes): **LR4/ER4** (default), **SR4**, **CWDM4**, **CLR4**, **AOC**, or **Other**. The PHY type when set to any except **LR4/ER4**, provides access to RS-FEC configuration (see page 317).

For 100GE (1 Lane): **DR1/FR1/LR1** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 100GE (2 Lanes): **SRBD** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 400GE (8 Lanes) QSFP-DD: **Optical** (default), and **DAC**.

- **Group Size** allows the selection of the size of the group. The group size for 50GE/100GE interface must match the aggregate rate of the selected connectors.


Unit	Interface	Group Size
88260	100GE	100G or 200G
	50GE	50G or 100G
88460	400GE	100G, 200G, 300G, or 400G
	200GE	100G or 200G
	100GE	100G, 200G, 300G, or 400G

- **Connector**, available with 200GE/400GE, allows the selection of the physical port (see the **Interface/Rate** table above).
- **Connectors** check boxes, available with 50GE/100GE, allows enabling and selecting the physical port(s) used for FlexE PHYs (see the **Interface/Rate** table above).

Modify Structure - FlexO BERT

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

 - **Interface/Rate** allows the selection of the interface rate.
Port 1 - QSFP28, Port 2 - QSFP28, Port 3 - QSFP28, and Port 4 - QSFP28 check boxes (all selected by default), available with 100G FlexO-1-RS interface/rate, allows the selection of the ports used for the test.
- **OTN** allows the selection of the OTN mapping : **OTUC1, OTUC2, OTUC3, or OTUC4**. The OTUCn rate must match the aggregate rate of the selected ports.
- **Client** is set to **Pattern**.
- **Topology** indicates the topology of the test:
Coupled (TX=RX) uses the same settings for both the TX and RX signals.



Modify Structure - Multi-Channel OTN

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

Note: ODU0 mapping is selected by default. Refer to *Modify Trib Slots/Channels (Multi-Channel OTN)* on page 1016 for test mapping selection and *Multi-Channel OTN* on page 68 for supported path/mapping.


➤ **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
88200NGE	OTU4 (4 Lanes) [111.81 Gbit/s]	Port 1 - CFP4 Port 2 - QSFP ^a

a. This port accepts QSFP+ or QSFP28 transceivers.

- **Connector** allows the selection of the physical port (see the **Interface/Rate** table above).
- **Framing** is set to **Framed**.
- **Client** is set to **Pattern**.
- **Topology** indicates the topology of the test:

Coupled (TX=RX) uses the same settings for both the TX and RX signals.

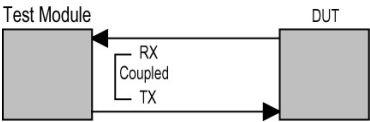

Setup

Modify Structure - NI/CSU Emulation

Modify Structure - NI/CSU Emulation

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

- **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870 8880	DS1 [1.544 Mbit/s]	Bantam RJ48C

- **Connector** allows the selection of the physical port (see the **Interface/Rate** table above).

Modify Structure - OTN BERT

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

- **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870, 8880	OTU2f [11.318 Gbit/s] OTU1f [11.270 Gbit/s] OTU2e [11.096 Gbit/s] OTU1e [11.049 Gbit/s] OTU2 [10.709 Gbit/s] OTU1 [2.666 Gbit/s]	Port 1 - SFP+
88200NGE	OTU4 (4 Lanes) [111.81 Gbit/s]	Port 1 - CFP4 Port 2 - QSFP ^a
	OTU3e2 (4 Lanes) [44.583 Gbit/s] OTU3e1 (4 Lanes) [44.571 Gbit/s] OTU3 (4 Lanes) [43.018 Gbit/s]	Port 2 - QSFP ^a
	OTU2f [11.318 Gbit/s] OTU1f [11.270 Gbit/s] OTU2e [11.096 Gbit/s] OTU1e [11.049 Gbit/s] OTU2 [10.709 Gbit/s] OTU1 [2.666 Gbit/s]	Port 1 - SFP+
88260	OTU4 (4 Lanes) [111.81 Gbit/s]	Port A1/A2/B1/B2 - QSFP28 Port A1/B1 - CFP4
	OTU3e2 (4 Lanes) [44.583 Gbit/s] OTU3e1 (4 Lanes) [44.571 Gbit/s] OTU3 (4 Lanes) [43.018 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	OTU2f [11.318 Gbit/s] OTU1f [11.270 Gbit/s] OTU2e [11.096 Gbit/s] OTU1e [11.049 Gbit/s] OTU2 [10.709 Gbit/s] OTU1 [2.666 Gbit/s]	Port A1/A2/B1/B2 - SFP28


Setup

Modify Structure - OTN BERT


Unit	Interface/Rate	Connector
88460	OTU4 (4 Lanes) [111.81 Gbit/s] OTU3e2 (4 Lanes) [44.583 Gbit/s] OTU3e1 (4 Lanes) [44.571 Gbit/s] OTU3 (4 Lanes) [43.018 Gbit/s]	Port 1/2/3/4 - QSFP28
	OTU2f [11.318 Gbit/s] OTU1f [11.270 Gbit/s] OTU2e [11.096 Gbit/s] OTU1e [11.049 Gbit/s] OTU2 [10.709 Gbit/s] OTU1 [2.666 Gbit/s]	Port 1/2/3/4 - QSFP28 (with adapter)
88480 88481 88482	OTU4 (4 Lanes) [111.81 Gbit/s] OTU3e2 (4 Lanes) [44.583 Gbit/s] OTU3e1 (4 Lanes) [44.571 Gbit/s] OTU3 (4 Lanes) [43.018 Gbit/s]	Port A1/A2 - QSFP28
	OTU2f [11.318 Gbit/s] OTU1f [11.270 Gbit/s] OTU2e [11.096 Gbit/s] OTU1e [11.049 Gbit/s] OTU2 [10.709 Gbit/s] OTU1 [2.666 Gbit/s]	Port A1/A2 - SFP28

a. This port accepts QSFP+ or QSFP28 transceivers.

 - **Connector** allows the selection of the physical port (see the **Interface/Rate** table above).
- **Framing** allows the selection of the test framing type for parallel interfaces and is set to **Framed** for serial interfaces.
- **Framed** (default): A single Pattern or Ethernet client applied toward the physical lanes.




- **4 Unframed Physical Lanes:** Independent test pattern in each physical lane. Available with: **OTU3 (4 Lanes) [43.018 Gbit/s]**, **OTU3e1 (4 Lanes) [44.571 Gbit/s]**, **OTU3e2 (4 Lanes) [44.583 Gbit/s]**, and **OTU4 (4 Lanes) [111.81 Gbit/s]**

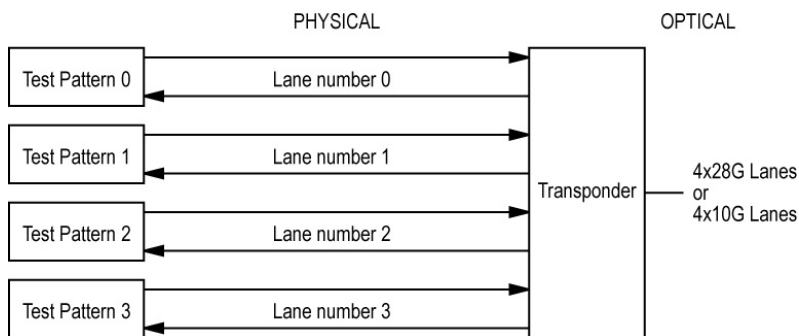

- **20 Unframed Logical Lanes:** Independent test pattern in each logical lane. Available with **OTU4 (4 Lanes) [111.81 Gbit/s]**.

For 88200NGE:

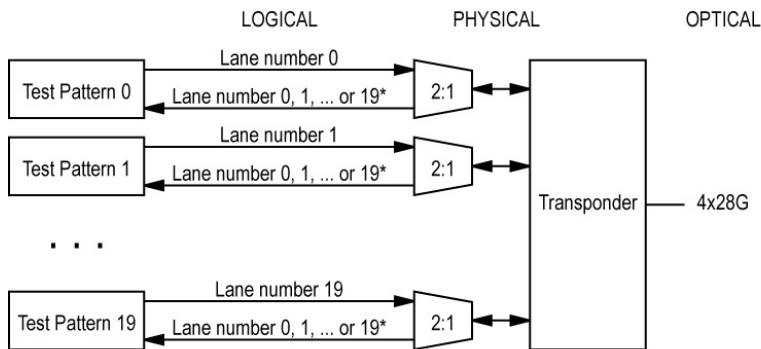


* It is not possible to predict on which Lane a generated pattern will be detected on the receive side.

Setup

Modify Structure - OTN BERT

For 88260/88460/88480/88481/88482:

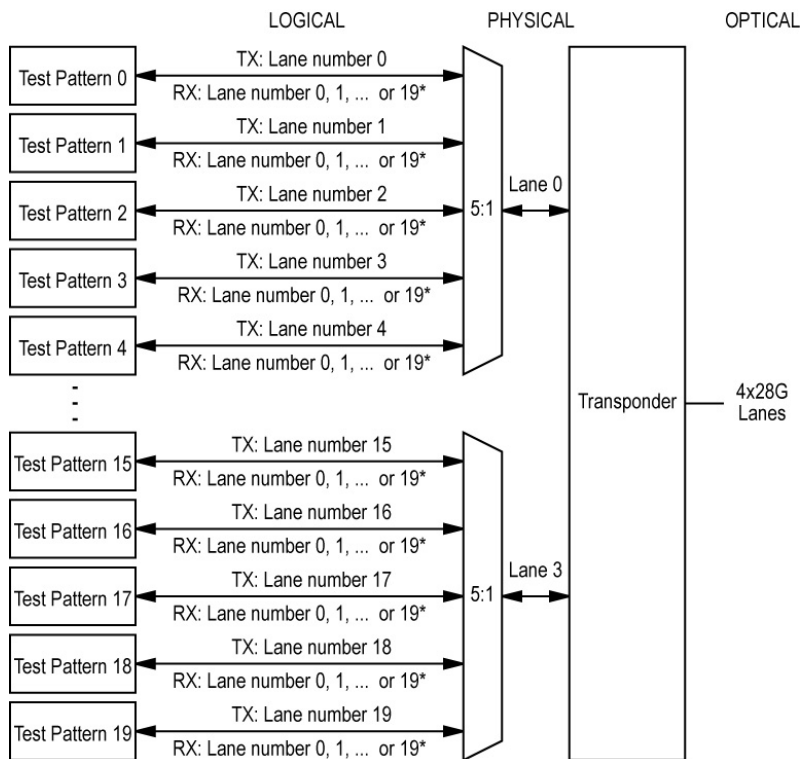

* It is not possible to predict on which Lane a generated pattern will be detected on the receive side.

- **OTN Multiplexing / Config Mux** allows the selection of the OTN test mapping including the selection of the payload type (PT20 or PT21) when applicable. Refer to *OTN BERT* on page 70 for supported path/mapping.


Interface/Rate	OTN Multiplexing
OTU1 [2.666 Gbit/s]	ODU1 ODU1/ODU0
OTU2 [10.709 Gbit/s]	ODU2 ODU2/ODU1 ODU2/ODU1/ODU0 ODU2/ODU0 ODU2/ODUflex
OTU1e [11.049 Gbit/s]	ODU1e
OTU2e [11.096 Gbit/s]	ODU2e
OTU1f [11.270 Gbit/s]	ODU1f
OTU2f [11.318 Gbit/s]	ODU2f
OTU3 (4 Lanes) [43.018 Gbit/s]	ODU3 ODU3/ODU2 ODU3/ODU2/ODU1 ODU3/ODU2/ODU1/ODU0 ODU3/ODU1 ODU3/ODU1/ODU0 ODU3/ODU0 ODU3/ODUflex
OTU3e1 (4 Lanes) [44.571 Gbit/s]	ODU3e1
OTU3e2 (4 Lanes) [44.583 Gbit/s]	ODU3e2

Setup


Modify Structure - OTN BERT

Interface/Rate	OTN Multiplexing
OTU4 (4 Lanes) [111.81 Gbit/s]	ODU4 (default) ODU4/ODU3 ODU4/ODU3/ODU2 ODU4/ODU3/ODU2/ODU1 ODU4/ODU3/ODU2/ODU1/ODU0 ODU4/ODU3/ODU1 ODU4/ODU3/ODU0 ODU4/ODU2 ODU4/ODU2/ODU1/ODU0 ODU4/ODU2/ODU1 ODU4/ODU2/ODU0 ODU4/ODU2/ODUflex ODU4/ODU1 ODU4/ODU1/ODU0 ODU4/ODU0 ODU4/ODU2e ODU4/ODU1e ODU4/ODUflex


- **Client** allows the selection of either **Pattern** (default) or an EoOTN (**1 GbE, 10 GbE, 40 GbE, 100 GbE, or Ethernet (flex/GFP-F)**) client. The client is set to **Pattern** for OTU1f, OTU2f, OTU3e1, and OTU3e2.
- **Topology** allows the selection of the network test topology.
 - **Coupled (TX=RX)** uses the same settings for both the TX and RX signals.

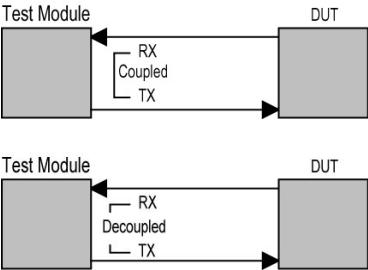

- **Through** loops the RX signal to the TX port without TX overwrite capabilities.

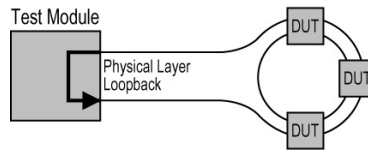

- **Through Intrusive** loops the RX signal to the TX port with TX overwrite capabilities.

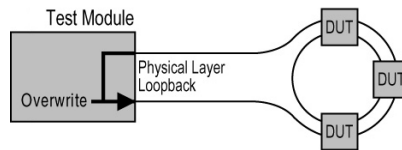

Setup

Modify Structure - OTN-SONET/SDH BERT

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

Note: The OTN-SONET/SDH BERT test is framed.

➤ **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870 8880	OTU2 [10.709 Gbit/s] OTU1 [2.666 Gbit/s]	Port 1 - SFP+
88200NGE	OTU4 (4 Lanes) [111.81 Gbit/s]	Port 1 - CFP4 Port 2 - QSFP ^a
	OTU3 (4 Lanes) [43.018 Gbit/s]	Port 2 - QSFP ^a
	OTU2 [10.709 Gbit/s] OTU1 [2.666 Gbit/s]	Port 1 - SFP+
88260	OTU3 (4 Lanes) [43.018 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	OTU2 [10.709 Gbit/s] OTU1 [2.666 Gbit/s]	Port A1/A2/B1/B2 - SFP28

a. This port accepts QSFP+ or QSFP28 transceivers.

➤ **Connector** allows the selection of the physical port (see the **Interface/Rate** table above).

- **OTN Multiplexing / Config Mux** allows the selection of the OTN test mapping including the selection of the payload type (PT20 or PT21) when applicable. Refer to *OTN-SONET/SDH BERT* on page 73 for supported path/mapping.

Interface/Rate	OTN Multiplexing
OTU1 [2.666 Gbit/s]	ODU1 ODU1/ODU0
OTU2 [10.709 Gbit/s]	ODU2 ODU2/ODU1 ODU2/ODU1/ODU0 ODU2/ODU0 ODU2/ODUflex
OTU3 (4 Lanes) [43.018 Gbit/s]	ODU3 ODU3/ODU2 ODU3/ODU2/ODU1 ODU3/ODU2/ODU1/ODU0 ODU3/ODU1 ODU3/ODU1/ODU0 ODU3/ODU0 ODU3/ODUflex
OTU4 (4 Lanes) [111.81 Gbit/s]	ODU4 (default) ODU4/ODU3 ODU4/ODU3/ODU2 ODU4/ODU3/ODU2/ODU1 ODU4/ODU3/ODU2/ODU1/ODU0 ODU4/ODU3/ODU1 ODU4/ODU3/ODU0 ODU4/ODU2 ODU4/ODU2/ODU1/ODU0 ODU4/ODU2/ODU1 ODU4/ODU2/ODU0 ODU4/ODU2/ODUflex ODU4/ODU1 ODU4/ODU1/ODU0 ODU4/ODU0 ODU4/ODU2e ODU4/ODU1e ODU4/ODUflex

Setup

Modify Structure - OTN-SONET/SDH BERT

- **Embedded SONET/SDH** allows the selection of the embedded SONET/SDH signal.

OTN Multiplexing	Embedded SONET/SDH
ODU4/ODU3 ODU3	OC-768, STM-256
ODU4/ODU3/ODU2 ODU4/ODU2 ODU3/ODU2 ODU2	OC-192, STM-64
ODU4/ODU3/ODU2/ODU1 ODU4/ODU3/ODU1 ODU4/ODU2/ODU1 ODU4/ODU1 ODU3/ODU2/ODU1 ODU3/ODU1 ODU2/ODU1 ODU1	OC-48, STM-16
ODU4/ODU3/ODU2/ODU1/ODU0 ODU4/ODU3/ODU0 ODU4/ODU2/ODU1/ODU0 ODU4/ODU2/ODU0 ODU4/ODU1/ODU0 ODU4/ODU0 ODU3/ODU2/ODU1/ODU0 ODU3/ODU1/ODU0 ODU3/ODU0 ODU2/ODU1/ODU0 ODU2/ODU0 ODU1/ODU0	OC-3, OC-12, STM-1, STM-4

- **SONET/SDH Multiplexing / Config Mux** button allows the selection of SONET/SDH multiplexing.


Embedded SONET/SDH	SONET/SDH Multiplexing
OC-768	STS-768c, STS-192c, STS-48c, STS-12c, STS-3c, STS-1
STM-256	AU-4-256c, AU-4-64c, AU-4-16c, AU-4-4c, AU-4, AU-3
OC-192	STS-192c, STS-48c, STS-12c, STS-3c, STS-1, STS-1/VT2, STS-1/VT1.5
STM-64	AU-4-64c, AU-4-16c, AU-4-4c, AU-4, AU-4/TU-3, AU-4/TU-12, AU-4/TU-11, AU-3, AU-3/TU-12, AU-3/TU-11
OC-48	STS-48c, STS-12c, STS-3c, STS-1, STS-1/VT2, STS-1/VT1.5
STM-16	AU-4-16c, AU-4-4c, AU-4, AU-4/TU-3, AU-4/TU-12, AU-4/TU-11, AU-3, AU-3/TU-12, AU-3/TU-11
OC-12	STS-12c, STS-3c, STS-1, STS-1/VT2, STS-1/VT1.5
STM-4	AU-4-4c, AU-4, AU-4/TU-3, AU-4/TU-12, AU-4/TU-11, AU-3, AU-3/TU-12, AU-3/TU-11
OC-3	STS-3c, STS-1, STS-1/VT2, STS-1/VT1.5
STM-1	AU-4, AU-4/TU-3, AU-4/TU-12, AU-4/TU-11, AU-3, AU-3/TU-12, AU-3/TU-11

- **Client** is set to **Pattern**.


Setup

Modify Structure - OTN-SONET/SDH BERT


- **Topology** allows the selection of the network test topology.
- **Coupled (TX=RX)** uses the same settings for both the TX and RX signals.

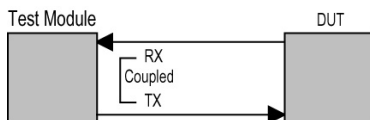

- **Through** loops the RX signal to the TX port without TX overwrite capabilities.

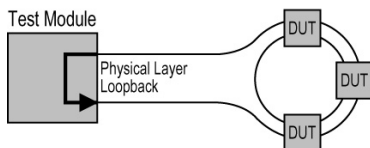

- **Through Intrusive** loops the RX signal to the TX port with TX overwrite capabilities.

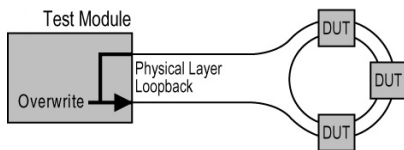

Modify Structure - RFC 2544

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

Note: For *Dual Port* topology each port is configurable individually.

➤ **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870 8880	10GE LAN, 10GE WAN 1GE Optical 100M Optical	Port 1 - SFP+ Port 2 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s and 2.5/5/10 Gbit/s)	Port 1 - RJ45 Port 2 - SFP+ (RJ45) ^a
88200NGE	100GE (4 Lanes) [103.125 Gbit/s]	Port 1 - CFP4 Port 2 - QSFP (QSFP28)
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port 2 - QSFP (QSFP28)
	40GE (4 Lanes) [41.25 Gbit/s]	Port 2 - QSFP (QSFP+)
	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port 1 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - SFP+ (RJ45) ^a

Setup

Modify Structure - RFC 2544

Unit	Interface/Rate	Connector
88260	100GE (4 Lanes) [103.125 Gbit/s]	Port A1/A2/B1/B2 - QSFP28 Port A1/B1 - CFP4
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	40GE (4 Lanes) [41.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	25GE 10GE LAN, 10GE WAN 1GE Optical 100M Optical	Port A1/A2/B1/B2 - SFP28
	BASE-T Electrical (10/100/1000 Mbit/s and 2.5/5/10 Gbit/s)	Port A1/A2/B1/B2 - SFP28 (RJ45) ^a
88460	400GE (8 Lanes) [425 Gbit/s]	Port 1 - CFP8 Port 1 - QSFP56-DD Port 1 - OSFP
	400GE (4 Lanes) [425 Gbit/s]	Port 1 - QSFP56-DD Port 1 - OSFP
	200GE (4 Lanes) [212.5 Gbit/s]	Port 1 - QSFP56-DD
	100GE (4 Lanes) [103.125 Gbit/s] 100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port 1 - QSFP56-DD Port 1/2/3/4 - QSFP28
	40GE (4 Lanes) [41.25 Gbit/s]	Port 1/2/3/4 - QSFP28
	25GE 10GE LAN, 10GE WAN 1GE Optical	Port 1/2/3/4 - QSFP28 (with adapter)

Unit	Interface/Rate	Connector
88480	400GE (8 Lanes) [425 Gbit/s]	Port 1/2 - QSFP-DD
88481	400GE (4 Lanes) [425 Gbit/s]	Port 2 - OSFP ^b
88482	200GE (4 Lanes) [212.5 Gbit/s]	Port 1/2 - QSFP-DD
	100GE (4 Lanes) [103.125 Gbit/s]	Port 1/2 - QSFP-DD
	100GE (2 Lanes) [106.25 Gbit/s] ^c	Port A1/A2 - QSFP28
	100GE (1 Lane) [106.25 Gbit/s]	
	40GE (4 Lanes) [41.25 Gbit/s]	Port A1/A2 - QSFP28
	25GE 10GE LAN 10GE WAN 1GE Optical	Port A1/A2 - SFP28

- a. BASE-T Electrical is supported when using an active copper SFP.
- b. When this port is available on the module.
- c. Not available on QSFP-DD port.

➤ **PHY Type** allows selecting the transceiver PHY type:

For 100GE (4 Lanes): **LR4/ER4** (default), **SR4**, **CWDM4**, **CLR4**, **AOC**, or **Other**. The PHY type when set to any except **LR4/ER4**, provides access to RS-FEC configuration (see page 317).

For 100GE (1 Lane): **DR/FR1/LR1** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 100GE (2 Lanes): **SRBD** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 200GE (4 Lanes) and 2 x 200GE (4 Lanes): Optical (default), and AOC.

For 400GE (8 Lanes): **Optical** (default), **AOC**, and **DAC**.

Setup

Modify Structure - RFC 2544

- **Connector** allows the selection of the physical port (see the **Interface/Rate** table above). Connectors availability depend on the selected **PHY Type**; CFP8 and OSFP connectors are OSFP connector is only available when the **PHY Type** is set to **Optical**.
- **Topology** allows the selection of the network test topology: **Single Port** (default) or **Dual Port**. Available for rates up to 10G WAN.

Modify Structure - RFC 6349

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

- **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate ^a	Connector
8870, 8880	10GE LAN 1GE Optical 100M Optical	Port 1 - SFP+ Port 2 - SFP+
	BASE-T Electrical	Port 1 - RJ45 Port 2 - SFP+ (RJ45) ^a
88200NGE	100GE (4 Lanes) [103.125 Gbit/s]	Port 1 - CFP4 Port 2 - QSFP (QSFP28)
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port 2 - QSFP (QSFP28)
	40GE (4 Lanes) [41.25 Gbit/s]	Port 2 - QSFP (QSFP+)
	10GE LAN 1GE Optical 100M Optical	Port 1 - SFP+
	BASE-T Electrical	Port 1 - SFP+ (RJ45) ^a
88260	100GE (4 Lanes) [103.125 Gbit/s]	Port A1/A2/B1/B2 - QSFP28 Port A1/B1 - CFP4
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	40GE (4 Lanes) [41.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	25GE	Port A1/A2/B1/B2 - SFP28
	10GE LAN 1GE Optical 100M Optical	Port A1/A2/B1/B2 - SFP28
	BASE-T Electrical	Port A1/A2/B1/B2 - SFP28 (RJ45) ^b

Setup

Modify Structure - RFC 6349

Unit	Interface/Rate ^a	Connector
88480	100GE (4 Lanes) [103.125 Gbit/s]	Port 1/2 - QSFP-DD
88481	100GE (2 Lanes) [106.25 Gbit/s] ^c	Port A1/A2 - QSFP28
88482	100GE (1 Lane) [106.25 Gbit/s]	
	40GE (4 Lanes) [41.25 Gbit/s]	Port A1/A2 - QSFP28
	25GE 10GE LAN 10GE WAN 1GE Optical	Port A1/A2 - SFP28

- a. Only rates up to 10GE LAN are supported with **iPerf Compatible Server** operation mode.
- b. BASE-T Electrical is supported when using an active copper SFP.
- c. Not available on QSFP-DD port.

➤ **PHY Type** allows selecting the transceiver PHY type:

For 100GE (4 Lanes): **LR4/ER4** (default), **SR4**, **CWDM4**, **CLR4**, **AOC**, or **Other**. The PHY type when set to any except **LR4/ER4**, provides access to RS-FEC configuration (see page 317).

For 100GE (1 Lane): **DR/FR1/LR1** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 100GE (2 Lanes): **SRBD** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

Connector allows the selection of the physical port (see the **Interface/Rate** table above).

Modify Structure - Smart Loopback

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

- **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870 8880	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port 1 - SFP+ Port 2 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s and 2.5/5/10 Gbit/s)	Port 1 - RJ45 Port 2 - SFP+ (RJ45) ^a
88200NGE	100GE (4 Lanes) [103.125 Gbit/s]	Port 1 - CFP4 Port 2 - QSFP (QSFP28)
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port 2 - QSFP (QSFP28)
	40GE (4 Lanes) [41.25 Gbit/s]	Port 2 - QSFP (QSFP+)
	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port 1 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - SFP+ (RJ45) ^a

Setup

Modify Structure - Smart Loopback

Unit	Interface/Rate	Connector
88260	100GE (4 Lanes) [103.125 Gbit/s]	Port A1/A2/B1/B2 - QSFP28 Port A1/B1 - CFP4
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	50GE [53.125G]	Port A1/A2/B1/B2 - QSFP28
	40GE (4 Lanes) [41.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	25GE	Port A1/A2/B1/B2 - SFP28
	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port A1/A2/B1/B2 - SFP28
	BASE-T Electrical (10/100/1000 Mbit/s and 2.5/5/10 Gbit/s)	Port A1/A2/B1/B2 - SFP28 (RJ45) ^a
88460	400GE (8 Lanes) [425 Gbit/s]	Port 1 - CFP8 Port 1 - QSFP56-DD Port 1 - OSFP
	400GE (4 Lanes) [425 Gbit/s]	Port 1 - QSFP56-DD Port 1 - OSFP
	200GE (4 Lanes) [212.5 Gbit/s]	Port 1 - QSFP56-DD
	100GE (4 Lanes) [103.125 Gbit/s] 100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port 1 - QSFP56-DD Port 1/2/3/4 - QSFP28
	50GE [53.125G]	Port 1/2/3/4 - QSFP28
	40GE (4 Lanes) [41.25 Gbit/s]	Port 1/2/3/4 - QSFP28
	25GE	Port 1/2/3/4 - QSFP28 (with adapter)
	10GE LAN 10GE WAN 1GE Optical	Port 1/2/3/4 - QSFP28 (with adapter)

Unit	Interface/Rate	Connector
88480	400GE (8 Lanes) [425 Gbit/s]	Port 1/2 - QSFP-DD
88481	400GE (4 Lanes) [425 Gbit/s]	Port 2 - OSFP ^b
88482	200GE (4 Lanes) [212.5 Gbit/s]	Port 1/2 - QSFP-DD
	100GE (4 Lanes) [103.125 Gbit/s]	Port 1/2 - QSFP-DD
	100GE (2 Lanes) [106.25 Gbit/s] ^c	Port A1/A2 - QSFP28
	100GE (1 Lane) [106.25 Gbit/s]	
	40GE (4 Lanes) [41.25 Gbit/s]	Port A1/A2 - QSFP28
	25GE	Port A1/A2 - SFP28
	10GE LAN	
	10GE WAN	
	1GE Optical	

- a. BASE-T Electrical is supported when using an active copper SFP.
- b. When this port is available on the module.
- c. Not available on QSFP-DD port.

➤ **PHY Type** allows selecting the transceiver PHY type:

For 100GE (4 Lanes): **LR4/ER4** (default), **SR4**, **CWDM4**, **CLR4**, **AOC**, or **Other**. The PHY type when set to any except **LR4/ER4**, provides access to RS-FEC configuration (see page 317).

For 100GE (1 Lane): **DR/FR1/LR1** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 100GE (2 Lanes): **SRBD** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 200GE (4 Lanes) and 2 x 200GE (4 Lanes): Optical (default), and AOC.

For 400GE (8 Lanes): **Optical** (default), **AOC**, and **DAC**.

➤ **Connector** allows the selection of the physical port (see the **Interface/Rate** table above). Connectors availability depend on the selected **PHY Type**; CFP8 and OSFP connectors are OSFP connector is only available when the **PHY Type** is set to **Optical**.

Setup

Modify Structure - Smart Loopback

➤ **Loopback Mode**

Transparent (Pseudo-Physical) check box when selected (cleared by default) determines that the Smart Loopback operates as a physical loopback by transmitting all received frames unaltered and without discrimination. When the check box is cleared, the Loopback mode is selectable from *Loopback* on page 433.

In transparent mode, the **Network** tab and the **Ping & Trace Route** functions are not available.

Note: *The **Transparent** mode is intended to be used for point-to-point topology, not for switched or routed networks. Use the **Transparent** mode with caution because all received frames are looped back without discrimination.*

Modify Structure - SONET/SDH BERT

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

- **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870 8880	OC-192 [9.953 Gbit/s] STM-64 [9.953 Gbit/s] OC-48 [2.488 Gbit/s] OC-12 [622.08 Mbit/s] OC-3 [155.520 Mbit/s] OC-1 [51.840 Mbit/s] STM-16 [2.488 Gbit/s] STM-4 [622.080 Mbit/s] STM-1 [155.520 Mbit/s] STM-0 [51.840 Mbit/s]	Port 1 - SFP+ ^a
	STS-3e [155.520 Mbit/s] STS-1e [51.840 Mbit/s] STM-1e [155.520 Mbit/s] STM-0e [51.840 Mbit/s]	BNC
88200NGE	OC-192 [9.953 Gbit/s] STM-64 [9.953 Gbit/s] OC-48 [2.488 Gbit/s] OC-12 [622.08 Mbit/s] OC-3 [155.520 Mbit/s] OC-1 [51.840 Mbit/s] STM-16 [2.488 Gbit/s] STM-4 [622.080 Mbit/s] STM-1 [155.520 Mbit/s] STM-0 [51.840 Mbit/s]	Port 1 - SFP+

Setup

Modify Structure - SONET/SDH BERT

Unit	Interface/Rate	Connector
88260	OC-192 [9.953 Gbit/s] STM-64 [9.953 Gbit/s] OC-48 [2.488 Gbit/s] OC-12 [622.08 Mbit/s] OC-3 [155.520 Mbit/s] OC-1 [51.840 Mbit/s] STM-16 [2.488 Gbit/s] STM-4 [622.080 Mbit/s] STM-1 [155.520 Mbit/s] STM-0 [51.840 Mbit/s]	Port A1/A2/B1/B2 - SFP28


a. Port 2 is used with OC-192/STM-64 in Decoupled (TX≠RX) mode.

- **Connector** allows the selection of the physical port (see the **Interface/Rate** table above).
- **Framing** is set to **Framed**.
- **SONET/SDH Multiplexing / Config Mux** button allows the selection of SONET/SDH multiplexing.


Interface/Rate	SONET/SDH Multiplexing
OC-192	STS-192c, STS-48c, STS-12c, STS-3c, STS-1, STS-1/VT2, STS-1/VT1.5
STM-64	AU-4-64c, AU-4-16c, AU-4-4c, AU-4, AU-4/TU-3, AU-4/TU-12, AU-4/TU-11, AU-3, AU-3/TU-12, AU-3/TU-11
OC-48	STS-48c, STS-12c, STS-3c, STS-1, STS-1/VT2, STS-1/VT1.5
STM-16	AU-4-16c, AU-4-4c, AU-4, AU-4/TU-3, AU-4/TU-12, AU-4/TU-11, AU-3, AU-3/TU-12, AU-3/TU-11
OC-12	STS-12c, STS-3c, STS-1, STS-1/VT2, STS-1/VT1.5
STM-4	AU-4-4c, AU-4, AU-4/TU-3, AU-4/TU-12, AU-4/TU-11, AU-3, AU-3/TU-12, AU-3/TU-11
OC-3	STS-3c, STS-1, STS-1/VT2, STS-1/VT1.5
STM-1	AU-4, AU-4/TU-3, AU-4/TU-12, AU-4/TU-11, AU-3, AU-3/TU-12, AU-3/TU-11
OC-1	STS-1, STS-1/VT2, STS-1/VT1.5

Interface/Rate	SONET/SDH Multiplexing
STS-3e	STS-3c, STS-1, STS-1/VT2, STS-1/VT1.5
STS-1e	STS-1, STS-1/VT2, STS-1/VT1.5
STM-0	AU-3, AU-3/TU-12, AU-3/TU-11
STM-1e	AU-4, AU-4/TU-3, AU-4/TU-12, AU-4/TU-11, AU-3, AU-3/TU-12, AU-3/TU-11
STM-0e	AU-3, AU-3/TU-12, AU-3/TU-11


- **Client** is set to **Pattern**.
- **Topology** allows the selection of the network test topology.
 - **Coupled (TX=RX)** uses the same settings for both the TX and RX signals.

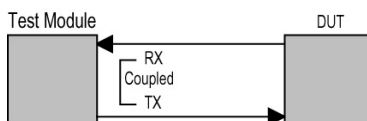

- **Decoupled (TX≠RX)** uses independent settings for TX and RX signals. However, the pattern and some other parameters are always coupled. Available on 8870, 8880, and 88260.

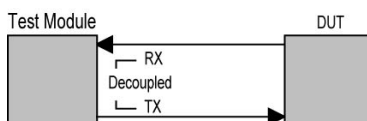

- **Through** loops the RX signal to the TX port without TX overwrite capabilities.

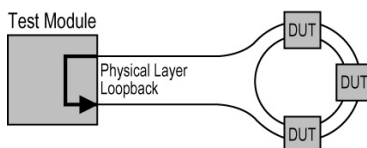

Setup

Modify Structure - SONET/SDH - DSn/PDH BERT

Modify Structure - SONET/SDH - DSn/PDH BERT

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

➤ **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870 8880	OC-192 [9.953 Gbit/s] STM-64 [9.953 Gbit/s] OC-48 [2.488 Gbit/s] OC-12 [622.08 Mbit/s] OC-3 [155.520 Mbit/s] OC-1 [51.840 Mbit/s] STM-16 [2.488 Gbit/s] STM-4 [622.080 Mbit/s] STM-1 [155.520 Mbit/s] STM-0 [51.840 Mbit/s]	Port 1 - SFP+ ^a
	STS-3e [155.520 Mbit/s] STS-1e [51.840 Mbit/s] STM-1e [155.520 Mbit/s] STM-0e [51.840 Mbit/s]	BNC
88200NGE	OC-192 [9.953 Gbit/s] STM-64 [9.953 Gbit/s] OC-48 [2.488 Gbit/s] OC-12 [622.08 Mbit/s] OC-3 [155.520 Mbit/s] OC-1 [51.840 Mbit/s] STM-16 [2.488 Gbit/s] STM-4 [622.080 Mbit/s] STM-1 [155.520 Mbit/s] STM-0 [51.840 Mbit/s]	Port 1 - SFP+

Unit	Interface/Rate	Connector
88260	OC-192 [9.953 Gbit/s] STM-64 [9.953 Gbit/s] OC-48 [2.488 Gbit/s] OC-12 [622.08 Mbit/s] OC-3 [155.520 Mbit/s] OC-1 [51.840 Mbit/s] STM-16 [2.488 Gbit/s] STM-4 [622.080 Mbit/s] STM-1 [155.520 Mbit/s] STM-0 [51.840 Mbit/s]	Port A1/A2/B1/B2 - SFP28

a. Port 2 is used with OC-192/STM-64 in Decoupled (TX≠RX) mode.

- **Connector** allows the selection of the physical port (see the **Interface/Rate** table above).
- **SONET/SDH Multiplexing / Config Mux** button allows the selection of SONET/SDH multiplexing.


Interface/Rate	SONET/SDH Multiplexing
OC-192	STS-192c, STS-48c, STS-12c, STS-3c, STS-1, STS-1/VT2, STS-1/VT1.5
STM-64	AU-4-64c, AU-4-16c, AU-4-4c, AU-4, AU-4/TU-3, AU-4/TU-12, AU-4/TU-11, AU-3, AU-3/TU-12, AU-3/TU-11
OC-48	STS-48c, STS-12c, STS-3c, STS-1, STS-1/VT2, STS-1/VT1.5
STM-16	AU-4-16c, AU-4-4c, AU-4, AU-4/TU-3, AU-4/TU-12, AU-4/TU-11, AU-3, AU-3/TU-12, AU-3/TU-11
OC-12	STS-12c, STS-3c, STS-1, STS-1/VT2, STS-1/VT1.5
STM-4	AU-4-4c, AU-4, AU-4/TU-3, AU-4/TU-12, AU-4/TU-11, AU-3, AU-3/TU-12, AU-3/TU-11
OC-3	STS-3c, STS-1, STS-1/VT2, STS-1/VT1.5
STM-1	AU-4, AU-4/TU-3, AU-4/TU-12, AU-4/TU-11, AU-3, AU-3/TU-12, AU-3/TU-11
OC-1	STS-1, STS-1/VT2, STS-1/VT1.5
STS-3e	STS-3c, STS-1, STS-1/VT2, STS-1/VT1.5

Setup


Modify Structure - SONET/SDH - DS_n/PDH BERT

Interface/Rate	SONET/SDH Multiplexing
STS-1e	STS-1, STS-1/VT2, STS-1/VT1.5
STM-0	AU-3, AU-3/TU-12, AU-3/TU-11
STM-1e	AU-4, AU-4/TU-3, AU-4/TU-12, AU-4/TU-11, AU-3, AU-3/TU-12, AU-3/TU-11
STM-0e	AU-3, AU-3/TU-12, AU-3/TU-11

 
- **Embedded DS_n / Embedded PDH** either indicates or allows the selection of the embedded DS_n/PDH signal. Refer to *SONET/SDH - DS_n/PDH BERT* on page 83 for supported path/mapping.
- **Client** is set to **Pattern**.
- **Topology** allows the selection of the network test topology.
 - **Coupled (TX=RX)** uses the same settings for both the TX and RX signals.



 - **Decoupled (TX≠RX)** uses independent settings for TX and RX signals. However, the pattern and some other parameters are always coupled.



- **Through** loops the RX signal to the TX port without TX overwrite capabilities.

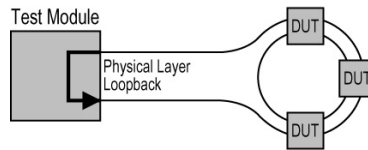

Modify Structure - SyncE

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

- **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870 8880	10GE LAN 1GE Optical 100M Optical	Port 1 - SFP+ Port 2 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - RJ45 Port 2 - SFP+ (RJ45) ^a
88200NGE	10GE LAN 1GE Optical 100M Optical	Port 1 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - SFP+ (RJ45) ^a
88260	10GE LAN 1GE Optical 100M Optical	Port A1/A2/B1/B2 - SFP28
	BASE-T Electrical (10/100/1000 Mbit/s)	Port A1/A2/B1/B2 - SFP28 (RJ45) ^a

a. BASE-T Electrical is supported when using an active copper SFP.

- **Connector** allows the selection of the physical port (see the **Interface/Rate** table above).

Modify Structure - TCP Throughput

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

- **Interface/Rate** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870 8880	1GE Optical	Port 1 - SFP+
	100M Optical	Port 2 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - RJ45 Port 2 - SFP+ (RJ45) ^a
88200NGE	1GE Optical	Port 1 - SFP+
	100M Optical	
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - SFP+ (RJ45) ^a

a. BASE-T Electrical is supported when using an active copper SFP.

- **Connector** allows the selection of the physical port (see the **Interface/Rate** table above).

Setup

Modify Structure - Through Mode

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

- **Interface** allows the selection of the interface rate.

Unit	Interface/Rate	Connector
8870 8880	10GE LAN 1GE Optical 100M Optical	Port 1 - SFP+ Port 2 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - RJ45 Port 2 - SFP+ (RJ45) ^a
88200NGE	100GE (4 Lanes) [103.125 Gbit/s]	Port 1 - CFP4 Port 2 - QSFP (QSFP28)
	10GE LAN 1GE Optical 100M Optical	Port 1 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - SFP+ (RJ45) ^a
88260	100GE (4 Lanes) [103.125 Gbit/s]	Port A1/A2/B1/B2 - QSFP28 Port A1/B1 - CFP4
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	10GE LAN 1GE Optical 100M Optical	Port A1/A2/B1/B2 - SFP28
	BASE-T Electrical (10/100/1000 Mbit/s)	Port A1/A2/B1/B2 - SFP28 (RJ45) ^a

Unit	Interface/Rate	Connector
88480	400GE (8 Lanes) [425 Gbit/s]	Port 1/2 - QSFP-DD
88481 ^b	400GE (4 Lanes) [425 Gbit/s]	
88482	100GE (4 Lanes) [103.125 Gbit/s]	Port 1/2 - QSFP-DD
	100GE (2 Lanes) [106.25 Gbit/s] ^c	Port A1/A2 - QSFP28
	100GE (1 Lane) [106.25 Gbit/s]	
	10GE LAN	Port A1/A2 - SFP28
	10GE WAN	
	1GE Optical	

- a. BASE-T Electrical is supported when using an active copper SFP.
- b. Interface/Rate 400GE is not supported on this module.
- c. Not available on QSFP-DD port.

- **Primary Port / Secondary Port** allows selecting the unit's ports that are respectively used as primary and secondary ports. The configuration of the network configuration parameters will be available on the Primary Port only.
- **PHY Type** allows selecting the transceiver PHY type:

For 100GE (4 Lanes): **LR4/ER4** (default), **SR4**, **CWDM4**, **CLR4**, **AOC**, or **Other**. The PHY type when set to any except **LR4/ER4**, provides access to RS-FEC configuration (see page 317).

For 100GE (1 Lane): **DR/FR1/LR1** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 100GE (2 Lanes): **SRBD** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

Modify Structure - Time Error / Wander

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

- **Measurement Type** allows selecting the type of measurement:
Time Error (default) allows measuring Time Error (TE) 1PPS or Packet Time Error (Pkt TE).
Wander allows measuring Time Interval Error (TIE).
 - **Interface/Rate** allows the selection of the interface rate.
- Time Error**

Unit	Interface/Rate	Connector
8880	1PPS	BNC (Port labelled TX/RX2) RJ48C
88260	1PPS	Port A1/B1 - 1PPS
	100GE (4 Lanes) [103.125 Gbit/s]	Port A1/A2/B1/B2 - QSFP28 Port A1/B1 - CFP4
	25GE 10GE LAN 1GE Optical	Port A1/A2/B1/B2 - SFP28

Wander

Unit	Interface/Rate	Connector
8880	10GE LAN 1GE Optical 100M Optical	Port 1 - SFP+
	BASE-T Electrical	Port 1 - RJ45
	10 MHz 2 MHz	BNC (Port labelled TX/RX2) RJ48C
	DS1 [1.544 Mbit/s]	Port 1 - Bantam Port 1 - RJ48C
	E1 [2.048 Mbit/s]	Port 1 - Bantam Port 1 - BNC Port 1 - RJ48C
88260	100GE (4 Lanes) [103.125 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	25GE 10GE LAN 1GE Optical 100M Optical	Port A1/A2/B1/B2 - SFP28
	10 MHz 2 MHz	Port A1/B1 - EXT-CLK

- **PHY Type** allows selecting the transceiver PHY type:

For 100GE (4 Lanes): **LR4/ER4** (default), **SR4**, **CWDM4**, or **CLR4**. The PHY type when set to any except **LR4/ER4**, provides access to RS-FEC configuration (see page 317).

- **Connector** allows the selection of the physical port (see the **Interface/Rate** table above).

Setup

Modify Structure - Traffic Gen & Mon

Modify Structure - Traffic Gen & Mon

From the test menu, tap **Setup**, **Test Configurator**, and the **Modify Structure** button.

Note: For *Dual Port* topology each port is configurable individually.

- **Interface/Rate** allows the selection of the interface rate. For Dual Port, both ports must be either 10GE and less, 25GE, or 40/100GE.

Unit	Interface/Rate	Connector
8870 8880	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port 1 - SFP+ Port 2 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s and 2.5/5/10 Gbit/s)	Port 1 - RJ45 Port 2 - SFP+ (RJ45) ^a
88200NGE	100GE (4 Lanes) [103.125 Gbit/s]	Port 1 - CFP4 Port 2 - QSFP (QSFP28)
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port 2 - QSFP (QSFP28)
	40GE (4 Lanes) [41.25 Gbit/s]	Port 2 - QSFP (QSFP+)
	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port 1 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - SFP+(RJ45) ^a

Unit	Interface/Rate	Connector
88260	100GE (4 Lanes) [103.125 Gbit/s]	Port A1/A2/B1/B2 - QSFP28 Port A1/B1 - CFP4
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	40GE (4 Lanes) [41.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	25GE	Port A1/A2/B1/B2 - SFP28
	10GE LAN 10GE WAN 1GE Optical 100M Optical	Port A1/A2/B1/B2 - SFP28
	BASE-T Electrical (10/100/1000 Mbit/s and 2.5/5/10 Gbit/s)	Port A1/A2/B1/B2 - SFP28 (RJ45) ^a
88460	400GE (8 Lanes) [425 Gbit/s]	Port 1 - CFP8 Port 1 - QSFP56-DD Port 1 - OSFP
	400GE (4 Lanes) [425 Gbit/s]	Port 1 - QSFP56-DD Port 1 - OSFP
	200GE (4 Lanes) [212.5 Gbit/s]	Port 1 - QSFP56-DD
	100GE (4 Lanes) [103.125 Gbit/s] 100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port 1 - QSFP56-DD Port 1/2/3/4 - QSFP28
	40GE (4 Lanes) [41.25 Gbit/s]	Port 1/2/3/4 - QSFP28
	25GE	Port 1/2/3/4 - QSFP28 (with adapter)
	10GE LAN 10GE WAN 1GE Optical	Port 1/2/3/4 - QSFP28 (with adapter)

Setup

Modify Structure - Traffic Gen & Mon

Unit	Interface/Rate	Connector
88480	400GE (8 Lanes) [425 Gbit/s]	Port 1/2 - QSFP-DD
88481	400GE (4 Lanes) [425 Gbit/s]	Port 2 - OSFP ^b
88482	200GE (4 Lanes) [212.5 Gbit/s]	Port 1/2 - QSFP-DD
	100GE (4 Lanes) [103.125 Gbit/s] 100GE (2 Lanes) [106.25 Gbit/s] ^c 100GE (1 Lane) [106.25 Gbit/s]	Port 1/2 - QSFP-DD Port A1/A2 - QSFP28
	40GE (4 Lanes) [41.25 Gbit/s]	Port A1/A2 - QSFP28
	25GE 10GE LAN 10GE WAN 1GE Optical	Port A1/A2 - SFP28

- a. BASE-T Electrical is supported when using an active copper SFP.
- b. When this port is available on the module.
- c. Not available on QSFP-DD port.

➤ **PHY Type** allows selecting the transceiver PHY type:

For 100GE (4 Lanes): **LR4/ER4** (default), **SR4**, **CWDM4**, **CLR4**, **AOC**, or **Other**. The PHY type when set to any except **LR4/ER4**, provides access to RS-FEC configuration (see page 317).

For 100GE (1 Lane): **DR/FR1/LR1** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 100GE (2 Lanes): **SRBD** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 200GE (4 Lanes) and 2 x 200GE (4 Lanes): Optical (default), and AOC.

For 400GE (8 Lanes): **Optical** (default), **AOC**, and **DAC**.

- **Connector** allows the selection of the physical port (see the **Interface/Rate** table above). Connectors availability depend on the selected **PHY Type**; CFP8 and OSFP connectors are OSFP connector is only available when the **PHY Type** is set to **Optical**.
- **Topology** allows the selection of the network test topology: **Single Port** (default) or **Dual Port**. Available for rates up to 10G WAN.

Signal Auto-Detect

The Signal Auto-Detect allows the detection of the DS1/DS3 interface **Line Coding** (DS1), **Framing**, and **Test Pattern**.

Signal Auto-Detect is only available:

- with DS1 and DS3 interfaces.
- when the test is stopped.
- when Loopback is not activated for NI/CSU Emulation test.

Note: *Test Pattern is not detected with NI/CSU Emulation test application. and ISDN PRI test applications.*

During the detection process, the following messages may be displayed: **Detecting**, **Successful**, and/or **Failed**.

When the auto-detection is successful, the detected parameters are automatically applied as the test interface configuration.

Upon detection of specific alarms, the detection may not be possible, tap **Retry** to invoke the detection again.

1588 PTP (Client)

From the test menu tap **Setup, Test Configurator**, and the block:

- **1588 PTP** for Time Error test
- **1588 PTP (Client)** for 1588 PTP test in Client emulation mode

PTP

Note: Refer to Status Bar on page 44 for PTP link status.

➤ Profile

- **ITU G.8265.1**, also called Telecom Profile, is for frequency synchronization. Not available with **Time Error / Wander** test.
- **ITU G.8275.1** (default), also called Telecom Profile for phase/time synchronization with full timing support from the network, requires that all network elements are equipped with boundary clock to meet stringent time and phase requirements for 4G/5G mobile networks. Full on-path support is typically deployed in Greenfield situations.

For **Time Error / Wander** test with **Time Error** measurement mode, the G.8275.1 profile allows packet time error measurements.

- **ITU G.8275.2**, also called Telecom Profile for phase/time synchronization with partial timing support from the network, requires advanced boundary clocks at intermediate locations through the network to meet the stringent time and phase requirements for 4G/5G mobile networks. Partial on-path support responds to the need for time and phase distribution over existing deployed networks.

For **Time Error / Wander** test with **Time Error** measurement mode, the G.8275.2 profile allows packet selected time error measurements.

Setup

1588 PTP (Client)

- **Domain** is the PTP domain parameter used by the 1588 PTP function to communicate with the GM clock: **0** to **255**. However, the standard values are: **4** (default) to **23** for G.8265.1; **24** (default) to **43** for G.8275.1; **44** (default) to **63** for G.8275.2.
- **Framing** is not selectable and is set to **UDP/IPv4** or **UDP/IPv6** depending on the interface **IP Version** for G.8265.1/G.8275.2 and **Ethernet** for G.8275.1.
- **Pkt Mode** is not configurable and is set to **Unicast** for G.8265.1/G.8275.2 and **Multicast** for G.8275.1.
 - **Unicast** uses a negotiated link between the master and the slave clock.
 - **Multicast** uses a dedicated physical link between the Master clock and Slave clock to exchange Sync/Follow Up and Delay Req/Delay Response message using a Multicast address as the Destination Address.
- **Multicast MAC**, available with G.8275.1, is the multicast address used to send the delay request: **01-1B-19-00-00-00** (forwardable; default), **01-80-C2-00-00-0E** (non-forwardable), or **User Defined** (default user defined address is **01:1B:19:00:00:01**).
- **GM IP Address** is the IP address of the GM Clock used by the 1588 PTP function to communicate with it. Only available with G.8265.1.
- **BC IP Address** is the IP address of the Boundary Clock used by the 1588 PTP function to communicate with it. Only available with G.8275.2.
- **Quick Ping** button allows testing if the GM IP address can be reached. A message is returned indicating if the ping attempt was **Successful** or **Failed**. Only available with **Unicast** mode.
- **Flow Label** (IPv6) is a number used to identify a series of related packets from a source to a destination: **0** (default) to **1048575**. Only available with **Unicast** mode.

- **IP TOS/DS** (IPv4) allows entering the Type of Service (TOS) or Differentiated Services (DS): **0x00** (default) to **0xFF**. Only available with **Unicast** mode.
- **Traffic Class (TOS/DS)** (IPv6) allows entering the Type of Service (TOS) or Differentiated Services (DS): **0x00** (default) to **0xFF**. Only available with **Unicast** mode.
- **TOS/DS Config**: Refer to *TOS/DS Config* on page 1037.
- **Mechanism** is not selectable and is set to **Delay Req-Resp** (Delay Request-Response) which specifies the mechanism used by the 1588 PTP function to communicate with the GM clock. Refer to *Delay Request-Response* on page 847 for more information.
- **Delay Mode** is not selectable and is set to **Two-way** which uses Sync/Follow Up, Delay Request, and Delay Response messages.
- **Connect** button is used to initiate the GM Connection process. This process is also automatically initiated when starting the test if not already initiated. The process automatically ends when stopping the test. Only available with **Unicast** mode.
- **Negotiation Status** is displayed during the Unicast negotiation process which is initiated when either the test is started or the **Connect** button is activated. Only available with **Unicast** mode.

Negotiation Status	Description	Background Color ^a
Request Granted	All the Signaling request types have been granted.	Green
[Message type] Request Denied	The Signaling grant message has not been granted.	Red
Session Canceled	The GM has canceled the Unicast session.	Red

Setup

1588 PTP (Client)

Negotiation Status	Description	Background Color ^a
No Reply	No message is received from the GM following transmission of 3 Signaling requests for a message type. Make sure that both IP address and Domain (refer to <i>1588 PTP (Client)</i> on page 221) of the GM Clock are valid as well as the IP address of the unit's port used to connect on the network (refer to <i>Network</i> on page 355).	Red
Pending	Unicast negotiation has started and no message has been received from the GM.	Gray
Inactive	The Unicast negotiation is not active.	Gray

a. The gray background color is also used for a Link Down.

➤ **GM Info / BC Info:** Refer to *Grandmaster Information / Boundary Clock Information* on page 995.

➤ **Message Rate**

➤ **Announce** determines the transmission interval of the Announce messages:

G.8265.1: **1 msg/16s, 1 msg/8s, 1 msg/4s, 1 msg/2s** (default), **1 msg/s, 2 msg/s, 4 msg/s, or 8 msg/s.**

G.8275.1, indicates the announce rate log message interval.

G.8275.2: **1 msg/s** (default), **2 msg/s, 4 msg/s, or 8 msg/s.**

➤ **Sync** determines the transmission interval of the Sync messages:

G.8265.1: **1 msg/16s, 1 msg/8s, 1 msg/4s, 1 msg/2s, 1 msg/s, 2 msg/s, 4 msg/s, 8 msg/s, 16 msg/s, 32 msg/s** (default), **64 msg/s, or 128 msg/s**

G.8275.1, indicates the sync rate log message interval.

G.8275.2: **1 msg/s, 2 msg/s, 4 msg/s, or 8 msg/s, 16 msg/s, 32 msg/s** (default), **64 msg/s, or 128 msg/s**

- **Delay-Request** determines the transmission interval of the delay request messages. The **Delay-Request** message rate is limited by the **Sync** rate selection; the **Delay-Request** message rate is automatically updated to be smaller than or equal to the **Sync** message rate.

G.8265.1: **1 msg/16s, 1 msg/8s, 1 msg/4s, 1 msg/2s, 1 msg/s, 2 msg/s, 4 msg/s, 8 msg/s, 16 msg/s, 32 msg/s (default), 64 msg/s, or 128 msg/s.**

G.8275.1: **1 msg/16s, 1 msg/8s, 1 msg/4s, 1 msg/2s, 1 msg/s, 2 msg/s, 4 msg/s, 8 msg/s, 16 msg/s (default), 32 msg/s, 64 msg/s, or 128 msg/s.**

G.8275.2: **1 msg/s, 2 msg/s, 4 msg/s, or 8 msg/s. 16 msg/s, 32 msg/s (default), 64 msg/s, or 128 msg/s.**

- **Service Duration** (available with **Unicast** mode)
 - **Lease Duration** is not configurable and is set to **300** seconds which determines the lease duration used between the 1588 PTP function and the GM clock.
 - **Renewal Interval** is not configurable and is set to **150** seconds which determines the interval used by the 1588 PTP function to initiate the renewal of its lease with the GM clock.

Alarm Timeout/Threshold / Alarm Threshold

Note: *The following parameters are also used to declare the Pass/Fail verdict.*

- **Receipt Timeout** defines the threshold used to declare a **Loss Announce** or **Loss Sync** message alarm: **2 to 255** messages (default is **3** messages). A message is considered lost if not received within its expected arrival time and a loss alarm is declared when the number of consecutive lost messages is greater than or equal to the defined **Receipt Timeout**.

Setup

1588 PTP (Client)

- **IPDV Threshold**, available with the 1588 PTP test application, defines the inter packet delay variation threshold used to raise the **Unusable** message alarm. The alarm is raised when IPDV is not within the configured **IPDV Threshold: 0.001 to 1000ms** (default is **2ms**). The minimum value of 0.001 is adjusted when the **Sync** or **Delay-Request** is set to 4 messages/s or less.
- **Unusable (ns)**, available for Time Error measurement with G.8275.2 profile, is based on IPDV but using an independent PTSF-Unusable threshold to raise the **Unusable** alarm: **500 ns to 500000 ns** (default is **5000 ns**).

Verdict

PDV (ns) check box when selected (default) defines the packet delay variation threshold. The alarm is raised when PDV is not within the configured value: **0 ns to 500 000 ns** (default is **500 ns**). Only available for Time Error measurement type with an Ethernet interface.

Quality Level

The quality level, available with the 1588 PTP test application, characterizes the clock quality in terms of network synchronization.

- **QL Mismatch Monitoring** check box when selected (default) enables the quality level mismatch monitoring.

- **Expected QL** allows the selection of the expected quality level value.
Available when the **QL Mismatch Monitoring** check box is selected.

Profile ITU	Quality Level value	PTP Clock Class	Description
G.8265.1	QL-PRS	80	Primary Reference Source Traceable (G.811)
	QL-STU/UNK	82	Synchronized - Traceability Unknown
	QL-PRC (default)	84	Primary Reference Clock Traceable (G.811)
	QL-ST2	86	Traceable to Stratum 2 (G.812 Type II)
	QL-INV3	88	Quality Level Invalid 3
	QL-SSU-A/TNC	90	Type I or V slave clock (G.812) Traceable to Transit Node Clock (G.812 Type V)
	QL-INV5	92	Quality Level Invalid 5
	QL-INV6	94	Quality Level Invalid 6
	QL-SSU-B	96	Type VI slave clock (G.812)
	QL-INV9	98	Quality Level Invalid 9
	QL-ST3E	100	Traceable to Stratum 3E (G.812 Type III)
	QL-EEC2/ST3	102	Ethernet Equipment Clock Option 2 Traceable to Stratum 3 (G.812 Type IV)
	QL-EEC1/SEC	104	Ethernet Equipment Clock Option 1 Synchronous Equipment Clock (G.813 or G.8262, Option 1)
	QL-SMC	106	Traceable to SONET Minimum Clock (G.813 or G.8262, Option 2)
	QL-PROV	108	Provisionable by the Network Operator (PNO)
	QL-DNU/DUS	110	Do Not Use Do Not Use for Synchronization

Setup

1588 PTP (Client)

Profile ITU	Quality Level value	PTP Clock Class	Description
G.8275.1 G.8275.2	QL-PRC/PRS (default)	6, 7, 135, 140	Primary Reference Clock Traceable (G.811)
	QL-SSU-A/ST2	150	Type I or V slave clock (G.812) Traceable to Stratum 2 (G.812 Type II)
	QL-SSU-B/ST3E	160	Type VI slave clock (G.812) Traceable to Stratum 3E (G.812 Type III)
	QL-SEC/EEC1/ST3/EEC2	165, 248, 255	Synchronous equipment clock (G.813 Option I) Ethernet equipment clock (G.8262 Option I) Traceable to Stratum 3 (G.812 Type IV or G.8262 Option II) Ethernet equipment clock (G.8262 Option II)

Pass/Fail Verdict

Pass/Fail Verdict check box when selected (default) enables the use of the pass/fail verdict. The global pass/fail verdict is based on the following criteria: alarms (**Link Down**, **Loss Sync**, **Loss Announce**, **Unusable** (G.8265.1), and/or **QL Mismatch** (when **QL Mismatch Monitoring** is enabled)), or the test is automatically aborted (service request denied, session canceled, or no reply for G.8265.1; sync message rate changed for G.8275.1). Only available with 1588 PTP test.

Restore 1588 PTP Defaults

Reverts the test application to its default factory settings. Only available with 1588 PTP test.

1588 PTP (GM)

From the test menu tap **Setup**, **Test Configurator**, and the **1588 PTP (GM)** test block.

PTP

Note: Refer to Status Bar on page 44 for PTP link status.

➤ Profile

- **ITU G.8275.1** (default), also called Telecom Profile for phase/time synchronization with full timing support from the network, requires that all network elements are equipped with boundary clock to meet stringent time and phase requirements for 4G/5G mobile networks. Full on-path support is typically deployed in Greenfield situations.
- **ITU G.8275.2**, also called Telecom Profile for phase/time synchronization with partial timing support from the network, requires advanced boundary clocks at intermediate locations through the network to meet the stringent time and phase requirements for 4G/5G mobile networks. Partial on-path support responds to the need for time and phase distribution over existing deployed networks. Only available with 1GE and 10GE rates.
- **Domain** is the PTP domain parameter used by the 1588 PTP function to communicate with the client clock: **0** to **255**. However, the standard values are: **24** (default) to **43** for G.8275.1; **44** (default) to **63** for G.8275.2.
- **Framing** is not configurable and set to **UDP/IPv4** for G.8275.2 and **Ethernet** for G.8275.1.
- **Pkt Mode** is not configurable and is set to **Unicast** for G.8275.2 and **Multicast** for G.8275.1.
 - **Unicast** uses a negotiated link between the master and the slave clock.

Setup

1588 PTP (GM)

- **Multicast** uses a dedicated physical link between the Master clock and Slave clock to exchange Sync/Follow Up and Delay Req/Delay Response message using a Multicast address as the Destination Address.
- **Multicast MAC**, available with G.8275.1, is the multicast address used to send the delay request: **01-1B-19-00-00-00** (forwardable; default), **01-80-C2-00-00-0E** (non-forwardable), or **User Defined** (default user defined address is **01:1B:19:00:00:01**).
- **Flow Label** (future use)
- **IP TOS/DS** (IPv4) allows entering the Type of Service (TOS) or Differentiated Services (DS): **0x00** (default) to **0xFF**. Only available with **Unicast** mode.
- **TOS/DS Config**: Refer to *TOS/DS Config* on page 1037.
- **Mechanism** is not selectable and is set to **Delay Req-Resp** (Delay Request-Response) which specifies the mechanism used by the 1588 PTP function to communicate with the client clock. Refer to *Delay Request-Response* on page 847 for more information.
- **Clock Type** allows selecting how the time stamp is carried: **One-step** using the Sync message; **Two-step** (default) using the Sync/Follow Up message.
- **Delay Mode** is not selectable and is set to **Two-way** which uses Sync/Follow Up, Delay Request, and Delay Response messages.
- **Delay Req Receipt Timeout** defines the number of Delay_Request Intervals that must pass without the receipt of the Delay_Request message at which point the Loss Delay Req is raised: **2** to **255** (default is **3**).
- **Pass/Fail Verdict** check box when selected (default) enables the use of the pass/fail verdict. The global pass/fail verdict is based on the following alarms: **LOS**, **Link Down**, **Loss Delay Req**, **Loss Session** (G.8275.2), or **Ref-Fault** (test is automatically aborted).

Clock Attributes

➤ Clock Class

Clock Class	Description
QL-PRC/PRS (6) ^a	Primary Reference Clock Traceable (G.811)
QL-PRC/PRS (7)	
QL-PRC/PRS (135)	
QL-PRC/PRS (140)	
QL-SSU-A/ST2 (150)	Type I or V slave clock (G.812) Traceable to Stratum 2 (G.812 Type II)
QL-SSU-B/ST3E (160)	Type VI slave clock (G.812) Traceable to Stratum 3E (G.812 Type III)
QL-SEC/EEC1/ST3/EEC2 (165)	Synchronous equipment clock (G.813 Option I) Ethernet equipment clock (G.8262 Option I) Traceable to Stratum 3 (G.812 Type IV or G.8262 Option II)
QL-SEC/EEC1/ST3/EEC2 (248) ^b	
QL-SEC/EEC1/ST3/EEC2 (255)	

- a. Default value when Time Source check box is selected.
b. Default value when Time Source check box is cleared.

User Defined allows selecting the clock class code: **0** to **255**.

➤ Clock Accuracy

Clock Accuracy (Code)
Accurate within 25 ns (20)
Accurate within 100 ns (21) ^a
Accurate within 250 ns (22)
Accurate within 1 s (23)
Accurate within 2.5 s (24)
Accurate within 10 s (25)
Accurate within 25 s (26)

Setup

1588 PTP (GM)

Clock Accuracy (Code)
Accurate within 100 s (27)
Accurate within 250 s (28)
Accurate within 1 ms (29)
Accurate within 2.5 ms (2A)
Accurate within 10 ms (2B)
Accurate within 25 ms (2C)
Accurate within 100 ms (2D)
Accurate within 250 ms (2E)
Accurate within 1 s (2F)
Accurate within 10 s (30)
Accurate to > 10 s (31)
Unknown (FE) ^b

- a. Default value when Time Source check box is selected.
- b. Default value when Time Source check box is cleared.

► Time Source

Time Source (Code)
ATOMIC_CLOCK (10)
GPS (20) ^a
TERRESTRIAL_RADIO (30)
PTP (40)
NTP (50)
HAND_SET (60)
OTHER (90)
INTERNAL_OSCILLATOR (A0) ^b

- a. Default value when Time Source check box is selected.
- b. Default value when Time Source check box is cleared.

- **Clock Identity** is an identifier based on the MAC address of the port generating the Clock.
- **UTC Offset** allows selecting the UTC offset: **-1000** to **1000** s (default is **37** s)
- **Priority 1** allows selecting the Priority 1 code: **0** to **255** (default is **128**).
- **Priority 2** allows selecting the Priority 2 code: **0** to **255** (default is **128**).
- **Steps Removed** allows selecting the value of **Steps Removed**: **0** (default) to **100**.
- **Current UTC Offset Valid** check box when selected (default), enables the use of this flag.
- **PTP Timescale** check box when selected (default), enables the use of this flag.
- **Time Traceable** check box when selected (default), enables the use of this flag.
- **Frequency Traceable** check box when selected (default), enables the use of this flag.

Restore 1588 PTP Defaults

Reverts the test application to its default factory settings.

BERT and Unframed BERT

Note: Available with Pattern client.

From the test menu, tap **Setup**, **Test Configurator**, and tap on the **BERT** or **Unframed BERT** block.

Pattern

The icon next to the **Pattern** label indicates the status of the received pattern signal. Refer to *Status Bar* on page 44 for more information.

- **TX Rate**, available with ODUflex mapped to pattern, allows the selection of the transmission rate. Unit choices are %, **Kbit/s**, **Mbit/s**, and **Gbit/s** (default).
- **Coupled RX to TX** check box, when selected (default), couples both the TX and RX signal with the same test pattern. For a framed test, the **Coupled RX to TX** check box is selected and cannot be cleared. For unframed parallel test, the **Coupled RX to TX** check box is selectable (selected by default) when **All Lanes** is selected.
- **No Pattern Analysis (Live)** check box when cleared (default), monitors the received traffic pattern. For live traffic, the **No Pattern Analysis (Live)** check box should be selected as the traffic is a live pattern thus there is no analysis of pattern loss, bit error, and no traffic indications. Only available with a framed test.
- **TX Pattern / RX Pattern** allows selecting the test pattern for each direction. When **User Pattern** is selected, enter the payload pattern hexadecimal value. For Multi-Pattern, see *Multi-Pattern Configuration* on page 239.

For FlexO, OTN, and SONET/SDH:

Test	Framing	Pattern
OTN BERT	Framed ^a	PRBS9, PRBS15, PRBS20, PRBS23, PRBS31 (default), Null Client, and User Pattern.
	Unframed	PRBS9, PRBS11 ^b , PRBS15, PRBS20 ^b , PRBS23, PRBS31 (default), Square Wave 1 zero/one ^c , Square Wave 2 zeros/ones ^c , Square Wave 4 zeros/ones ^c , Square Wave 8 zeros/ones ^c , and Square Wave 16 zeros/ones ^c
OTN-SONET/SDH BERT, SONET/SDH BERT	Framed	PRBS9, PRBS11, PRBS15, PRBS20, PRBS23, PRBS31 (default), 1111, 1100, 1010, 0000, 1in8, 1in16, 2in8, and User Pattern
FlexO BERT	Framed	PRBS31 and Null Client

- Only **PRBS31** is available with ODU0/1/2/3 multiplex in OTU4.
- Not available with OTU4 - **4 Unframed Physical Lanes**.
- Square Wave patterns are only available when the **All Lanes** check box is selected. Not available with **20 Unframed Physical Lanes** and OTU4 - **4 Unframed Physical Lanes**.

For DS_n/PDH interfaces:

Pattern	DS0/E0	DS1	DS3/E1	E3/E4
0000, 1010, 1100, 1111, 1in8, 1in16, 2in8, PRBS9, PRBS20, User Pattern	X	X	X	X
3in24	X	X	X	X (E3 only)
T1 DALY, 55 OCTET, Multi-Pattern	-	X	-	-
PRBS11	X ^a	X	X	X
PRBS15		X	X ^a	X
PRBS23	-	X	X	X ^a
PRBS31	-	X	X	X
QRSS	-	X ^a	-	-
Null Client	-	-	-	-

- Default value.

Setup

BERT and Unframed BERT

- **Invert** check box, when selected (cleared by default), inverts the generated/expected test pattern meaning that every 0 will be changed for 1 and every 1 for 0. For example, the pattern 1100 will be sent as 0011. Patterns **PRBS15**, **PRBS23**, and **PRBS31** are defined inverted as per ITU standard but EXFO uses non-inverted patterns for Transport test applications. Not available when pattern is Multi-Pattern.
- **All Lanes** check box when selected allows setting the same TX and/or RX test pattern for all lanes; when cleared (default) allows setting a different test pattern for each lane: **TX Pattern** with **Invert** and **RX Pattern** with **Invert**). Available with unframed parallel interfaces.

Pattern Sync, available for each lane when the **All Lanes** check box is cleared, indicates the status of the received signal pattern. Refer to *Status Bar* on page 44 for more information.


Bit Error

- **Pass/Fail Verdict** enables or disables the bit-error-rate pass/fail verdict by selecting either **Bit Error Count**, **Bit Error Rate** (default), or **Disabled**.
- **BER Threshold** allows entering the maximum bit error count/rate allowed before declaring a fail verdict: **0** (default) to **999999** for count; **1.0E-14** to **1.9E-01** for rate (default value is **1.0E-12** for framed; **2.1E-5** for **CLR4** unframed; **5.0E-5** for **SR4**, **CWDM4**, **AOC**, and **Other** unframed). The **BER Threshold** applies to individual pattern for **Multi-Pattern**.

Service Disruption

Note: Not available with FlexO BERT, Unframed OTN, and Multi-Pattern.

The presence of a specific Defect triggers the service disruption measurement; this includes any defect above in the hierarchy. If a measurement exceeds the Test Period of 5 minutes, a service disruption equal to the Test Period is recorded. The service disruption measurements are cleared when changing the criteria.

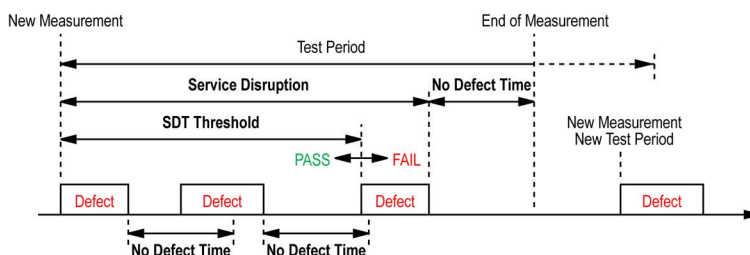

- **Defect** allows choosing on which layer and defect the service disruption time test will be performed. Choices depend on the selected test path.

Layer	Defect
Interface	OTN/SONET/SDH: LOS ^a DSn: LOS, BPV, EXZ PDH: LOS, CV
Section/RS	LOF-S/RS-LOF, B1
Line/MS	AIS-L/MS-AIS, RDI-L/MS-RDI, REI-L/MS-REI, B2
STS/AU Path	AIS-P/AU-AIS, LOP-P/AU-LOP, RDI-P/HP-RDI, REI-P/HP-REI, B3, UNEQ-P/HP-UNEQ, PDI-P (SONET)
VT/TU Path	AIS-V/TU-AIS, LOP-V/TU-LOP, UNEQ-V/LP-UNEQ, RDI-V/LP-RDI, REI-V/LP-REI, BIP-2
DS1	AIS, OOF, RAI, Framing Bit, CRC-6
DS3	AIS, OOF, Idle, RDI, F-Bit, C-Bit, P-Bit, FEBE
E1	AIS, CRC-4, E-Bit, LOMF, TS16 AIS, LOF, FAS, RAI, RAI MF
E4, E3, E2	AIS, LOF, FAS, RAI
OTL ^b	LOF, OOF, LOL, LOR, OOR, Inv. Marker, FAS

Setup

BERT and Unframed BERT

Layer	Defect
FEC	FEC CORR, FEC UNCORR
OTUk ^c	AIS, LOF, OOF, LOM, OOM, BDI, IAE, BIAE, BIP-8, BEI, FAS, MFAS
ODUk ^c	AIS, OCI, LCK, BDI, BIP-8, BEI, FSF, BSF, FSD, BSD
OPUk ^c	AIS, CSF, PLM ^d , MSIM ^e , LOOMFI ^{e, f} , OOMFI ^{e, f} , OMFI ^{e, f}
BER ^g	Pattern Loss, Bit Error (default)

- a. Not available with QSFP transceivers.
- b. The service disruption time measurement is available per lane for OTL defects at the exception of LOL which is global for all lanes. Refer to *OTL-SDT* on page 519 for results per lanes.
- c. Only available on the top layer.
- d. Available when the PLM check box is selected (refer to page 314 for more information).
- e. Available with multiplex test only.
- f. Available with OPU4 only.
- g. Available when the **No Pattern Analysis (Live)** check box (see page 234) is cleared.

Note: *The Service Disruption Time measurement supports a parent defect approach where the SDT measurement is triggered when the selected defect or a higher defect in the signal structure hierarchy is detected. For example, if Bit Error is selected, an OPU AIS error will trigger an SDT event.*

- **No Defect Time (ms)** allows selecting the period without any defects before stopping SDT measurement: **0.005 ms to 2000 ms** (default is **300 ms**).
- **Disruption Monitoring** check box when selected (disabled by default) enables the disruption time measurements. However, the measurement will only start if the test is already started, or when the test will be started. Clearing the **Disruption Monitoring** check box or stopping the test, stops the measurement without clearing the results. Starting the test while the **Disruption Monitoring** check box is selected resets the results.

- **Pass/Fail Verdict** check box when selected (cleared by default) enables service disruption pass/fail verdict and allows setting the threshold value.
- **SDT Threshold (ms)** allows configuring the acceptable maximum service disruption time before failing the test: **0.001** to **299999.999 ms** (default is **50 ms**).

Multi-Pattern Configuration

Note: Only available for **DSn/PDH BERT** test application with **DS1** signal (**DS0** disabled) and when the pattern is **Multi-Pattern**.

The **Multi-Pattern** feature allows sending each pattern for a specific duration, sequentially and continuously.

- **Pattern** represents a sequence of patterns that will be generated: **1111**, **1in8**, **2in8**, **3in24**, and **QRSS**.
- **Enable** check box allows enabling the generation of each pattern individually in the pattern sequence. All patterns are enabled by default. All 1's (1111) is disabled for unframed test.
- **Individual Pattern Duration** specifies the transmission duration of each pattern: **15 s**, **30 s**, **45 s**, **1 min**, **2 min**, **3 min** (default),... up to **15 min**.

Restore < Test Application > Defaults

Reverts the test application to its default factory settings.

Setup

BERT and Unframed BERT - CPRI/OBSAI

BERT and Unframed BERT - CPRI/OBSAI

From the test menu, tap **Setup**, **Test Configurator** and tap on the **BERT** or **Unframed BERT** block.

Restore CPRI/OBSAI /BERT Defaults

Reverts the test application to its default factory settings.

Pattern

The icon next to the **Pattern** label indicates the status of the received pattern signal. Refer to *Status Bar* on page 44 for more information.

- **Coupled RX to TX** check box, when selected (default and dimmed), couples both the TX and RX signal with the same test pattern.
- **No Pattern Analysis (Live)** check box when cleared (default), monitors the incoming traffic pattern and Round-Trip Latency. For live traffic, the **No Pattern Analysis (Live)** check box should be selected as the traffic is a live pattern and in this case no monitoring is required. The **No Pattern Analysis (Live)** check box is however selected by default for framed CPRI.
- **TX Pattern / RX Pattern** allows selecting the test pattern for each direction: **PRBS9**, **PRBS11**, **PRBS15**, **PRBS20**, **PRBS23**, **PRBS31** (default), and **User Pattern**. When **User Pattern** is selected, enter the payload pattern hexadecimal value.
- **Invert** check box, when selected (cleared by default), inverts the generated/expected test pattern meaning that every 0 will be changed for 1 and every 1 for 0. For example, the pattern 1100 will be sent as 0011.

Bit Error

- **Pass/Fail Verdict** enables and sets the bit error rate/count threshold prior to run the test. This allows for a simple pass/fail verdict, leaving no room for misinterpretation of the test results. To enable the pass/fail verdict, select either **Bit Error Count** or **Bit Error Rate** (default is **Disabled**).
- **BER Threshold** allows entering the maximum bit error count/rate allowed before declaring a fail verdict: **0** (default) to **999999** for count; **1.0E-14** to **1.9E-01** (default is **1.0E-12**) for rate.


CPRI/OBSAI

Note: *Available with Framed L2.*

Pass/Fail Verdict check box, when selected (default), enables the pass/fail verdict. A pass verdict is declared when the link status is up and no CPRI/OBSAI alarm and/or error are recorded for the duration of the test. For CPRI 24.3G with RS-FEC enabled, the FEC-COR-CW and Pre-FEC-SYMB errors are not considered in the pass/fail verdict since they are not causing any traffic error.

BERT and Unframed BERT - CPRI/OBSAI

The presence of any defect, listed in the following table, triggers the service disruption measurement; this includes any defect above in the hierarchy. If a measurement exceeds the Test Period of 5 minutes, a service disruption equal to the Test Period is recorded. The service disruption measurements are cleared when changing the criteria. Only available with framed test.

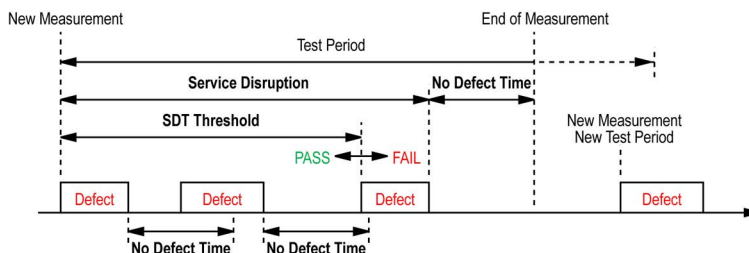

Test	Defect
CPRI BERT	LOS, Code Violation, Sync Header, 66B Block, K30.7, LOF, FAS, R-LOS, R-LOF, RAI, SDI, Bit Error ^a , FEC-UNCORR-CW
OBSAI BERT	LOS, CV, K30.7, CRC, LOF, FAS, Bit Error ^a

- a. Only applicable when the **No Pattern Analysis (Live)** check box is cleared.
- **No Defect Time (ms)** allows selecting the period without any defects before stopping SDT measurement: **0.005 ms** to **2000 ms** (default is **300 ms**).
- **Disruption Monitoring** check box when selected (disabled by default) enables the disruption time measurements. However, the measurement will only start if the test is already started, or when the test will be started. Clearing the **Disruption Monitoring** check box or stopping the test, stops the measurement without clearing the results. Starting the test while the **Disruption Monitoring** check box is selected resets the results.

- **Pass/Fail Verdict** check box when selected (cleared by default) enables the service disruption pass/fail verdict and allows setting the threshold value.
- **SDT Threshold (ms)** allows configuring the acceptable maximum service disruption time before failing the test: **0.001** to **299999.999 ms** (default is **50** ms).

BERT and Unframed BERT - eCPRI

From the test menu, tap **Setup**, **Test Configurator** and tap on the **BERT** or **Unframed BERT** block.

Pattern

The icon next to the **Pattern** label indicates the status of the received pattern signal. Refer to *Status Bar* on page 44 for more information.

- **Coupled RX to TX** check box, when selected (default and dimmed), couples both the TX and RX signal with the same test pattern.
- **No Pattern Analysis (Live)** check box when cleared (selected by default), monitors the incoming traffic pattern and Round-Trip Latency. For live traffic, the **No Pattern Analysis (Live)** check box should be selected as the traffic is a live pattern and in this case no monitoring is required.
- **TX Pattern / RX Pattern** indicates **PRBS31** as the test pattern for each direction and is not configurable.
- **Invert** check box, when selected (cleared by default), inverts the generated/expected test pattern meaning that every 0 will be changed for 1 and every 1 for 0. For example, the pattern 1100 will be sent as 0011.
- **Invert** check box, when selected (cleared by default), inverts the generated/expected test pattern meaning that every 0 will be changed for 1 and every 1 for 0. For example, the pattern 1100 will be sent as 0011.


Bit Error

- **Pass/Fail Verdict** enables and sets the bit error rate/count threshold prior to run the test. This allows for a simple pass/fail verdict, leaving no room for misinterpretation of the test results. To enable the pass/fail verdict, select either **Bit Error Count** or **Bit Error Rate** (default is **Disabled**).
- **BER Threshold** allows entering the maximum bit error count/rate allowed before declaring a fail verdict: **0** (default) to **999999** for count; **1.0E-14** to **1.9E-01** (default is **1.0E-12**) for rate.

Service Disruption

Note: Not available when **No Pattern Analysis (Live)** check box is selected.

The absence of traffic exceeding the configured **No Traffic Time** triggers the service disruption measurement. The service disruption event is closed when valid Ethernet frames are received for at least the **Debounce Time** without any service disruption event. Reaching the Test Period or stopping the test also closes the SDT event.

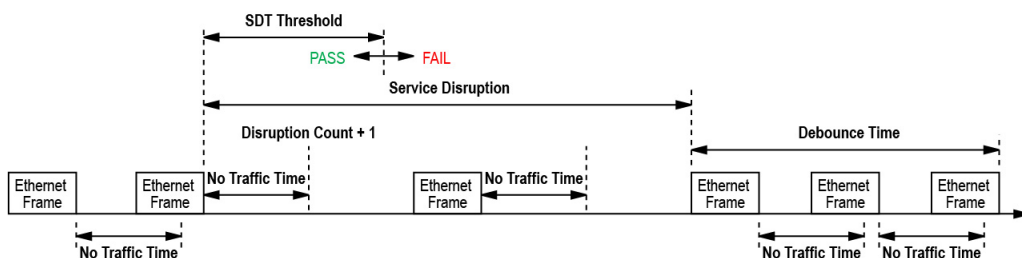

- **No Traffic Time (ms)** is the time acceptable between two Ethernet frames without any service disruption event: **0.005 ms** to **1000 ms** (default is **1 ms**).
- **Debounce Time (ms)** allows setting the period without any service disruption event before stopping the current SDT measurement: **0** (default) to **500 ms**.

Setup

BERT and Unframed BERT - eCPRI

- **Disruption Monitoring** check box when selected (disabled by default) enables the disruption time measurements. However, the measurement will only start if the test is already started, or when the test will be started. Clearing the **Disruption Monitoring** check box or stopping the test, stops the measurement without clearing the results. Starting the test while the **Disruption Monitoring** check box is selected resets the results.
- **Pass/Fail Verdict** check box when selected (cleared by default) enables the service disruption pass/fail verdict and allows setting the threshold value.
- **SDT Threshold** allows configuring the acceptable maximum service disruption time before failing the test: **0.005** to **299999.999** ms (default is **50** ms). The threshold value cannot be less than the **No Traffic Time** value.

Restore eCPRI BERT Defaults

Reverts the test application to its default factory settings.

BERT - Client - DCO BERT

From the test menu, tap **Setup, Test Configurator**, the **Client** block and the **BERT** tab.

- **Client**, available with multiple link client (ex. 4 x 100GE), allows selecting the client to be displayed.

Enable check box when selected (default), includes the selected client in the test. At least one of the clients must remain enabled.

LINK

Note: *Only available with Ethernet clients.*

A green/red arrow is used to indicate the status of the link at the PCS level: link up (green arrow); alarms at the PCS level, the link is down (red arrow).

The **Local Fault Detected**, **Local Fault Received**, **Remote Fault**, **LOA**, and **Hi-BER** alarms are displayed; refer to *Ethernet* on page 916 for more information.

Pattern

- **Coupled RX to TX** check box, when selected (default), couples both the TX and RX signal with the same test pattern. Enabled and dimmed for OTUCn clients.
- **No Pattern Analysis (Live)** check box when cleared (default), monitors the received traffic pattern. For live traffic, the **No Pattern Analysis (Live)** check box should be selected as the traffic is a live pattern thus there is no analysis of pattern loss and bit error.
- **TX Pattern / RX Pattern** allows selecting the test pattern for each direction: **PRBS31** (default) or **Null Client**.
TX Pattern / RX Pattern is set to **PRBS31** for Ethernet clients.

Setup

BERT - Client - DCO BERT

- **Invert** check box, when selected (cleared by default), inverts the generated/expected test pattern meaning that every 0 will be changed for 1 and every 1 for 0. For example, the pattern 1100 will be sent as 0011.

Bit Error

- **Pass/Fail Verdict** enables and sets the bit error rate/count threshold prior to run the test. This allows for a simple pass/fail verdict, leaving no room for misinterpretation of the test results. To enable the pass/fail verdict, select either **Bit Error Count** or **Bit Error Rate** (default is **Disabled**).
- **BER Threshold** allows entering the maximum bit error count/rate allowed before declaring a fail verdict: **0** (default) to **999999** for count; **1.0E-14** to **1.9E-01** (default is **1.0E-12**) for rate.

BERT - FlexE BERT

From the test menu, tap **Setup**, **Test Configurator**, the **Clients** block, then the **BERT** tab.

- **Pattern on Client ID** selects the Client ID on which the pattern is applied. The pattern applies to a single client only.

Pattern

- **Coupled RX to TX** check box, when selected (default), couples both the TX and RX signal with the same test pattern.
- **No Pattern Analysis (Live)** check box when cleared (default), monitors the incoming traffic pattern and Round-Trip Latency. For live traffic, the **No Pattern Analysis (Live)** check box should be selected as the traffic is a live pattern and in this case no monitoring is required.
- **TX Pattern / RX Pattern** indicates **PRBS31** as the test pattern for each direction and is not configurable.
- **Invert** check box, when selected (cleared by default), inverts the generated/expected test pattern meaning that every 0 will be changed for 1 and every 1 for 0. For example, the pattern 1100 will be sent as 0011.

Setup

BERT - FlexE BERT

Bit Error


- **Pass/Fail Verdict** enables and sets the bit error rate/count threshold prior to run the test. This allows for a simple pass/fail verdict, leaving no room for misinterpretation of the test results. To enable the pass/fail verdict, select either **Bit Error Count** or **Bit Error Rate** (default is **Disabled**).
- **BER Threshold** allows entering the maximum bit error count/rate allowed before declaring a fail verdict: **0** (default) to **999999** for count; **1.0E-14** to **1.9E-01** (default is **1.0E-12**) for rate.

Cable Test

From the test menu, tap **Setup**, **Test Configurator**, and the **Cable Test** block.

Global Options

- **Wiring Standard** is the pin-to-pair assignment corresponding to the UTP cable used: **T568A** (default) or **T568B**.

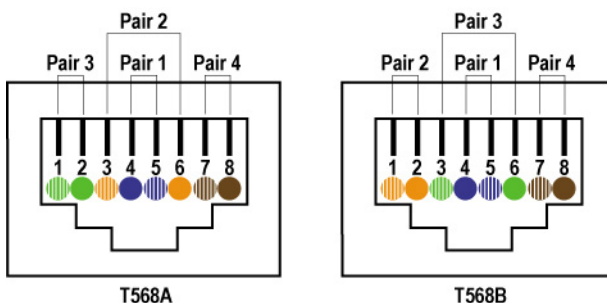

- **Length Unit** is the unit used for cable length and distance to fault results: **Meter** (default) or **Feet**.
- **PoE** check box when selected (cleared by default) allows verifying that the Power Sourcing Equipment (PSE) is capable to deliver appropriate power (PoE) to the Powered Device (PD). The PoE test is performed after the cable test is executed confirming that the cable is ready to carry data and power: either the Wire Map test reported **No fault**, **Straight pair**, **Crossed Pair**, or **Noise (link up)**. Only available on 8870/8880 module up to revision B.

Setup

Cable Test

- **Power Class**, available when PoE is enabled, selects the power class of the simulated powered device:

Power Class	Power Device
Class 0 (13.0W) - (default)	Type 1
Class 1 (3.8W)	
Class 2 (6.5W)	
Class 3 (13.0W)	
Class 4 (25.5W)	Type 2

Pass/Fail Verdict

Pass/Fail Verdict check box when selected (default) enables the cable test pass/fail verdict and allows setting the threshold values.

- **Prop. Delay Threshold (ns)** is the maximum time for a pulse to reach the far end: **0** to **1000** ns (default is **1000** ns for 10 Mbit/s, **556** ns for 100 Mbit/s, and **570** ns for 1 Gbit/s).
- **Delay Skew Threshold (ns)** is the maximum time between the fastest and slowest pairs of a 1000BASE-T signal: **0** to **120** ns (default is **50** ns).
- **Length Threshold (m)** is the maximum acceptable cable length: **0** to **120** m (0 to 394 feet) (default is **100** m (328 ft)).
- **PoE Loaded Voltage Threshold (V)**, available when the **PoE** check box is selected, allows the configuration of the acceptable voltage range when a load is applied: minimum value is either **37** (default) for Class 0 to 3 or **42.5** (default) for Class 4; maximum value is 57 (default). A Pass verdict is declared when the measured voltage is within the defined range.

Restore Cable Test Defaults

Reverts the test application to its default factory settings.

CFP/OSFP/QSFP/SFP

This tab gives hardware information related to the inserted transceiver module.

From the test menu, tap **Setup, Test Configurator**, tap on the interface block or on the **Local** block for iSAM, and on the CFP/OSFP/QSFP/SFP tab.

Port, available with FlexE BERT/FlexO BERT, allows selecting the physical port to be displayed.

- **FlexO Instance ID**, available with FlexO BERT, indicates the FlexO instance identifier per port.
- **FlexE PHY Number**, available with FlexE BERT, indicates the FlexE PHY number assigned to the port.

Parameters

The following parameters are retrieved from the transceiver unless otherwise indicated:

Parameter	CFP2 CFP4	CFP8	QSFP+ QSFP112 QSFP56 QSFP28 QSFP-DD OSFP	SFP SFP+ SFP28 SFP56
Module ID ^a	X	X	X	X
Vendor Name	X	X	X	X
Part Number	X	X	X	X
Serial Number	X	X	X	X
Hardware Revision	X	X	X	X
Firmware Version	X	X	X ^b	-
Revision Compliance	-	-	X	-
Connector Type	X	X	X	X

Setup

CFP/OSFP/QSFP/SFP

Parameter	CFP2 CFP4	CFP8	QSFP+ QSFP112 QSFP56 QSFP28 QSFP-DD OSFP	SFP SFP+ SFP28 SFP56
Speed	X	X	X	X
Type/Compliance Code	X	X	X ^c	X
Wavelength	-	-	-	X
Applications Advertisement ^d	-	-	X	-
Mode	X	X	X	X
Reach / Cable Length ^e	-	-	X	-
Power Class	X	X	X	X
Power (Actual/Max) ^f	X	X	X	-
Current (Actual/Max) ^f	X	X	X	-
Temperature (Actual/Max) ^g	X	X	X	X
Lane Ratio Type	X	-	-	-
Host Lane Signal Spec	-	X	-	-
WDM Type	X	X	-	-
Signal Code - Modulation	-	X	-	-
Signal Code - Coding	-	X	-	-
CLEI Code	X	X	X	-

- a. Also displays **(Tunable)** for transceivers having the tunable capability.
- b. Available with transceiver using CMIS.
- c. Not available with DCO BERT, replaced by **Applications Advertisement**.
- d. Only available with transceivers supporting CMIS. When this information is available, using the **View** button gives access to the following information for each application code: **Host Interface**, **Media Interface**, **Host Lane Count**, **Media Lane Count**, **Host Lane Assignment**, and **Media Lane Assignment**. The highlighted row identifies the currently active application.
- e. Only available when **Applications Advertisement** is reported.
- f. This value is measured and only supported on 88460/8848x/8880x. Only supported on CFP2, CFP8, QSFP28 (40G and up), QSFP-DD/QSFP56-DD, and OSFP ports.
- g. Displays respectively the current and the maximum temperature recorded. For iOptics this information is available on the *Summary - iOptics* page (refer to *Temperature* on page 604).

Clock

Allows the configuration of the clock synchronization.

From the **Test** menu, tap **Setup, Test Configurator**, and tap on the clock block.

Note: *A TA-Sync transceiver system is required on the 88260 module when using an external clock input or when generating an external clock out. In this case a message is displayed when there is an issue with the TA-Sync (see Transceiver System Status on page 141).*

Clock Synchronization

Clock Mode allows selecting the clock source that will be used for transmission (TX). The clock mode for One-way Latency measurement mode is limited to **External 1PPS** or **Internal GNSS**.

- **Internal:** Internal clock of the unit (STRATUM 3). The clock mode is forced to **Internal** for Multi-Channel OTN and for eCPRI BERT in Round-Trip or One-Way P<m> → P<m> Latency mode.
- **Recovered:** Line clock from the input port signal involved in the test. Available with Transport test applications, CPRI/OBSAI RRH, and Ethernet applications using 10G WAN. The clock mode is forced to **Recovered** for 1GE electrical interface using **Slave** local clock (see **Local Clock** on page 319).
- **External:** Clock signal from the EXT CLK port.
- **External 1PPS:** 1PPS clock signal from the EXT CLK or 1PPS (88260) port.
- **Internal GNSS:** 1PPS clock signal provided by the Internal GNSS Receiver. Requires a GNSS antenna connected to the ANTENNA port (88260). Available with test applications supporting 1PPS clock.

Setup

Clock

- **Backplane:** Clock from another module on the platform (only supported on FTB-2 and FTB-2 Pro platforms). The other module must support the backplane clock feature and must be enabled. Not available when the **Backplane Clock** check box is selected (see page 261). The Backplane clock cannot be shared between FTB- and FTBx-modules.

Note: *For CPRI/OBSAI Base Station single port topology, the clock is configurable to **Internal** or **External**; for CPRI/OBSAI Remote Radio Head, the clock is fixed to **Recovered**; for CPRI dual port topology, the clock block is not displayed and the clock mode is automatically set to **Internal** for the Base Station and **Recovered** for the Remote Radio Head.*

Internal GNSS

Note: *Available when the **Clock Mode** is set to **Internal GNSS**. The Internal GNSS receiver settings are configurable from System - GNSS on page 448.*

- **Reference** is set to **1PPS**.
- **LOPPS-L** on a green background indicates that a valid clock is received.

Ext Clock In

Note: *Available when the **Clock Mode** is set to **External** or **External 1PPS**.*

Allows setting the external clock for test synchronization.

- **Interface** allows the selection of the clock interface: **DS1** (default), **E1**, **2 MHz**, **10 MHz**, or **1PPS**. **2 MHz** is selected by default when DS1 is not supported. **1PPS** is automatically selected in **One-Way** latency measurement mode (**Dual Test Set** and eCPRI BERT). **10 MHz** is only available with CPRI/OBSAI BERT.

Ext Clock In on a green background indicates that a valid clock is received.

LOS on a red background indicates that the received clock is not valid.

LOPPS-L, available with 1PPS, on a green background indicates that a valid clock is received.

- **Connector** either indicates the connector type used for the clock or on 8880 allows the selection of **Bantam** or **RJ48C** when the BNC connector is used by the test application. The module connector blue LED used for Ext Clock In is flashing.
- **Termination** mode specifies how the module is connected to the synchronization signal. The **Termination** mode is set to **TERM** for 2MHz and configurable for DS1 and E1.

For DS1:

- **TERM** provides an input that terminates the DS1 signal.
- **DSX-MON** provides high-input impedance and compensation for resistive loss. This setting is useful for monitoring DS1 signals at DSX monitor points, which are resistor-isolated.
- **BRIDGE** provides high-input impedance for bridging lines that are already terminated. This setting is useful for bridging directly across copper cable pairs.

For E1:

- **TERM** provides an input that terminates the E1 signal.
- **MON** provides high-input impedance and compensation for resistive loss. This setting is useful for monitoring E1 signals at monitor points, which are resistor-isolated.
- **BRIDGE** provides high-input impedance for bridging lines that are already terminated. This setting is useful for bridging directly across copper cable pairs.
- **Line Coding** allows the selection of the interface line coding:
For DS1: **AMI** and **B8ZS** (default).
For E1: **AMI** and **HDB3** (default).

Setup

Clock

- **Framing:** Allows the selection of the interface framing.
For DS1: **SF**, **SLC-96**, and **ESF** (default).
For E1: **PCM30** (default), **PCM30 CRC-4**, **PCM31**, and **PCM31 CRC-4**.
- **Frequency (MHz)** displays the frequency of the received signal rate.
- **Offset (ppm)** displays the positive or negative frequency offset between the standard rate specification and the rate from the received signal. The background color is used to indicate if the received clock meets (green) or not (red) the standard rate specification.

Signal	Standard Rate specification
DS1	1544000 ± 8 bit/s (± 4.6 ppm)
E1	2048000 ± 10 bit/s (± 4.6 ppm)
2MHz	2048000 ± 10 bit/s (± 4.6 ppm)

Ext Clock Out

Note: Available when the **Clock Mode** is set to **Internal**, **Recovered**, or **Backplane**. Not available on 8870.

Allows setting the clock that will be generated.

- **Interface Type** allows the selection of the clock interface: **None** (default when DS1 is not supported), **DS1** (default), **E1**, and **2MHz** (default for 88460). For eCPRI BERT the interface type is fixed to **None**.

Ext Clock Out on a green background indicates that a valid clock is generated on the clock port.

LOC on a red background indicates that no clock is generated on the clock port.

- **Connector** either indicates the connector type used for the clock or on 8880 allows the selection of **Bantam** or **RJ48C** when the BNC connector is used by the test application.

- **LBO** (Line Build Out), available with DS1 only, allows the selection of the interface Line Build Out that meets the interface requirements over the full range of cable lengths: **DSX-1 (0-133 ft)** (default), **DSX-1 (133-266 ft)**, **DSX-1 (266-399 ft)**, **DSX-1 (399-533 ft)**, and **DSX-1 (533-655 ft)**.
- **Line Coding** allows the selection of the interface line coding:
For DS1: **AMI** and **B8ZS** (default).
For E1: **AMI** and **HDB3** (default).
- **Framing**, available with DS1 and E1, allows the selection of the interface framing.
For DS1: **SF**, **SLC-96**, and **ESF** (default).
For E1: **PCM30** (default), **PCM30 CRC-4**, **PCM31**, and **PCM31 CRC-4**.

REF OUT

Note: Available with CFP4 and QSFP28 transceivers. *Not available with QSFP28 on 88480/88481/88482.*

Source allows selecting the clock that will be used for transmission (TX) on the **REF OUT** port: **TX MCLK** (default for CFP4), **Internal 1/8**, **Internal 1/40**, **Internal 1/160** (default for QSFP28). **TX MCLK** is a clock derived from the inserted transceiver and its frequency is based on the setting of the *<rate> Advanced - <transceiver> Control* on page 673.

Setup

Clock

Frequency (MHz) displays the frequency of the clock generated on the **REF OUT** port based on the test interface rate¹ and divider ratio as follows:

Interface/Rate	Divider Ratio			
	1/8 ^a	1/16	1/40 ^a	1/160 ^a
OC-192 STM-64 10G WAN	-	622.08 MHz	-	-
10G LAN 40GE	-	644.5313 MHz	-	-
OTU2	-	669.3266 MHz	-	-
OTU1e	-	690.5692 MHz	-	-
OTU2e	-	693.4813 MHz	-	-
OTU1f	-	704.3806 MHz	-	-
OTU2f	-	707.3527 MHz	-	-
OTU3	-	672.1627 MHz	-	-
OTU3e1	-	696.4214 MHz	-	-
OTU3e2	-	696.6149 MHz	-	-
OTU4	3494.1 MHz	-	698.8123 MHz	174.7031 MHz
100GE	3222.6 MHz	-	644.5313 MHz	161.1328 MHz

- a. Only available with CFP4 and QSFP28 transceivers. Not available for QSFP28 transceivers on FTBx-88260.

1. For parallel interfaces, the REF OUT signal is derived from the interface lane rate.

Clock Out indicates the status of the clock generated on the **REF OUT** port as follows:

- Green: a valid clock is generated.
- Red: the clock is either not available (--) then not generated, or not valid but generated.

Note: *The Ref Out clock port provides an eye diagram timing reference for 10G and above optical devices. This clock is provided for basic assessment. Formal qualification may require specialized external circuitry.*

Backplane

Note: *Only supported on FTB-2 and FTB-2 Pro platforms when the **Clock Mode** is set to **External**, **Recovered**, or **Internal**.*

Backplane Clock check box when selected (cleared by default) makes available the source clock (**Clock Synchronization - Clock Mode**) to other modules on the platform. Other modules on the platform need to set the **Clock Mode** as **Backplane** to use this clock. The **Backplane Clock** should be only enabled on one module on the same platform. The Backplane clock cannot be shared between FTB- and FTBx- modules.

Backplane indicates that the background clock is generated (green) or disabled (gray).

LOC on a red background indicates, when the backplane clock is enabled, that the synchronization is not possible with the selected reference clock.

Tributary Synchronization

Note: Only available with SONET/SDH - DS_n/PDH and DS_n/PDH test applications. Not supported in Through topology.

Clock Mode allows selecting the source clock that will be used for tributary transmission (TX); default is **Internal**. The availability of clock modes is as follows:

Clock Synchronization	Tributary Synchronization
Internal	Internal
Recovered	Internal Recovered
External	Internal External
Backplane	Internal Backplane

- **Internal:** Internal clock of the unit (STRATUM 3).
- **Recovered:** Line clock from the input port signal involved in the test.
- **External:** Clock signal from the EXT CLK port.
- **Backplane:** Clock from another module on the platform (only supported on FTB-2 and FTB-2 Pro platforms). The other module must support the backplane clock feature and must be enabled. The Backplane clock cannot be shared between FTB- and FTBx-modules.

Device Under Test - iOptics

From the test menu, tap **Setup**, and **Test Configurator**.

- Transceiver selection: Tap on a transceiver icon to select the interface/port. The selected transceiver is highlighted with an amber contour. The selected transceiver type and its status are displayed.

Status	Description
	Validating the transceiver.
	Transceiver correctly detected.
	Incompatible transceiver detected.
	Missing transceiver.

For 88260 module a message is displayed when either no transceiver systems are inserted or are all invalid. Inserting or removing a transceiver system triggers the transceiver system detection process resulting that the default port is selected and results are cleared.

Status	Description
	Invalid Transceiver System.
	No Transceiver System Detected.

- For standard optical transceivers, a fiber loopback patch cord is required to perform the test with applicable attenuation to protect the optical device. Ensure the laser is turned on.

Setup

Device Under Test - iOptics

- For bidirectional transceivers using compatible transceivers, same rate and connector type, for upstream and downstream respectively. Connect a fiber patch cord with the necessary attenuator between the port under test and the port in transparent loopback mode  and ensure the laser is turned on.

- For an Active Optical Cable (AOC) or a Direct Attached Copper (QSFP-DD DAC):

For a module having at least two transceiver ports with the same connector: Connect the other end of the cable to the port automatically selected and configured in transparent loopback  and ensure the laser is turned on.

For a module having only one transceiver port with the same connector: Connect the other end of the cable to the port with the same connector of another module which must be configured in Smart Loopback with **Transparent (Pseudo-Physical)** mode enabled (see **Loopback Mode on page 202**). Ensure the laser is turned on.

- **Use with QSFP28 to SFP28 Adapter** check box need to be selected (cleared by default) when testing low rates (25G and less) using a QSFP28 to SFP28 adapter inserted in the selected QSFP28 port of a 88460 module.
- **Tunable:** For transceivers having tunable capability, **(Tunable)** is written next to the transceiver module ID.

- **Rate:** Once the transceiver is correctly detected , select the interface rate. Rates depend on the selected port, the inserted transceiver, and the rates supported on the module. Only rates 100GE, 200GE, 400GE and DCO interfaces are supported on 88480/88481/88482.

Transceiver	Transport	Rate		
		Ethernet	Fibre Channel	CPRI/OBSAI
QSFP-DD	400ZR (Amplified) 400ZR (Unamplified) 400ZR+ 100ZR+	400GE (8 Lanes)	-	-
QSFP56	-	200GE (4 Lanes) 100GE (4 Lanes)	-	-
OSFP	400ZR (Amplified) 400ZR (Unamplified) 400ZR+	400GE (4 Lanes)	-	-
CFP8	-	400GE (8 Lanes)	-	-
CFP4	OTU4 (4 Lanes)	100GE (4 Lanes)	-	-
QSFP28	OTU4 (4 Lanes)	100GE (4 Lanes) 100GE (2 Lanes) 100GE (1 Lane)	-	-
QSFP+	OTU3e2 (4 Lanes) OTU3e1 (4 Lanes) OTU3 (4 Lanes)	40GE (4 Lanes)	-	-
SFP28	-	25GE 10GE WAN 10GE LAN 1GE Optical	32X	-

Setup

Device Under Test - iOptics

Transceiver	Transport	Rate		
		Ethernet	Fibre Channel	CPRI/OBSAI
SFP+ SFP/SFP+ (Port 1 only)	OTU2	10GE WAN	1X	CPRI - 1.2G
	OTU1e	10GE LAN	2X	CPRI - 2.4G
	OTU2e	1GE Optical	4X	CPRI - 3.1G
	OTU1f	100M Optical	8X	CPRI - 4.9G
	OTU2f		10X	CPRI - 6.1G
	OTU1		16X	CPRI - 9.8G
	OC-192/STM-64			CPRI - 10.1G
	OC-48/STM-16			OBSAI- 1.5G
	OC-12/STM-4			OBSAI - 3.1G
	OC-3/STM-1			OBSAI - 6.1G
	OC-1/STM-0			

- **Client**, available with DCO transceivers, allows the selection of the Ethernet client:

Interface	Client
400ZR (DWDM Amplified)	400GE (400GAUI-8)
400ZR (Unamplified)	
400ZR+	400GE (400GAUI-8)

- **App Code**, available with DCO transceivers supporting CMIS, displays the application code which is **Auto** by default indicating that the transceiver application code is automatically set matching the interface/client; if not matching, the pluggable module keeps its default application code. The application code is configurable from **1** to **15** using the **Modify** button.

Modify button beside **Client** is used to configure the global interface parameters: **Interface**, **Transceiver App Code**, and **Client**.

- **Bidirectional** check box when selected (default, when the transceiver reports that it is bidirectional) allows testing bidirectional transceivers. Available with Ethernet and CPRI rates up to 25G on module having two ports supporting the same connector/rate.
- **Vendor Name**, **Part Number**, **Serial Number**, **Connector Type**, **Wavelength**, and **Mode** are information retrieved from the transceiver (see page 267). **Connector Type** and **Mode** are not displayed with DCO transceivers (see **More** on page 267).

Modify button beside **Wavelength**, available with tunable or DCO transceivers, is used to configure the transceiver wavelength. Refer to *Modify Wavelength (SFP)* on page 1022 or *Modify Wavelength - DCO BERT* on page 1023.
- **Host/Media Loopback** allows the selection of the transceiver loopback mode: **None** (default), **Host Side Input**, **Media Side Output**. Only available when the QSFP56 transceiver is supporting host/media loopback.
- **More** gives additional transceiver system/module information and settings.

Transceiver System tab: See *Transceiver System (TA/TA4)* on page 455.

Device Under Test tab:

- **Parameters** are retrieved from the transceiver (see *Parameters* on page 253).
- **Lasers OFF at Start-Up** allows turning off all lasers automatically when starting the module or when switching from one test application to another. This check box is cleared by default. Not available with DAC and Host/Media Loopback mode.

eCPRI Flow - Profile

From the **Test** menu, tap **Setup, Test Configurator**, the protocol block, and the **Profile** tab.

Traffic Shaping

➤ **Frame Size (Bytes)**

The frame size is programmable from 64 to 16000. The minimum frame size will be adjusted according to the frame structure and components selected. The following table lists each component that may affect the minimum frame size value.

The following table lists each component that may affect the minimum frame size value.

Component	Description
VLAN	4 bytes per VLAN (up to 3 VLAN)
UDP	8 bytes
Ethernet Header	14 bytes
eCPRI	8 or 12 bytes depending on the message type
IPv4	20 bytes
BERT Tag	14 bytes
BERT Minimum payload content (PRBS)	8 or 24 (depending on the Message Type or Transport layer used with the message generation)
Ethernet FCS	4 bytes

- **TX Rate** allows the selection of the transmission rate in percentage of utilization (100 percent by default), Mbit/s, or Gbit/s. The maximum percentage is 105 percent depending on the frame size selected.

QoS Measurements

Note: For Dual Port topology in **One-Way P<m> ↔ P<n>**, these settings are coupled.

- **Latency/Jitter** check box, when selected (default), allows latency/jitter configuration and monitoring.

- **Measurement Mode:**

One-Way measurement provides the delay measurement for each direction independently on a specific port. This mode requires a 1PPS interface/reference (see *Clock* on page 255); the **LOPPS-L** alarm is displayed reporting its status (refer to *Clock* on page 914). On the 88260 module dual port topology, both ports must be on the same transceiver system since a TA-SYNC is required for the 1PPS interface/reference.

Round-Trip Latency measurement provides the total delay measurement for both directions on a specific port.

One-Way P<m> ↔ P<n> provides the delay measurement of each direction independently between two separate ports of a single module (Dual Port test). Only available when the rate and framing parameters (Frame Format, Network Layer, and Transport Layer) are the same on both ports.

Setup

eCPRI Flow - Profile

- **Measurement Role** determines whether the eCPRI node acts as the **Sender** (default) or the **Receiver**.

Remote Status indicates whether a configuration mismatch exist between each end based on the one-way delay messages that are exchanged:

Remote Status	Sender	Receiver	Description
Ready-R	X	X	Indicates that one-way delay flows normally between sender and receiver for both request/response and remote request/request
Mismatch-R	X	-	Indicates, for Sender measurement role, that the remote end is also configured as Sender.
Inactive-R	X	X	Indicates that there is no one-way delay message received within 5 seconds that can be caused by: a Link Down condition, an LOPPS-L being present on the local or peer device, both ends configured as Receiver, or incompatible framing.
--	X	X	Indicates pending state which occurs upon starting a test or when a Link Down condition is detected.

- **Measurement Rate**, available with **Sender** measurement role, defines the number of Latency/Jitter measurements to perform per second: **1 Measurements/s**.
- **Frame Loss/Out-of-Sequence** check box, when selected (default), allows Frame Loss and Out-of-Sequence monitoring.

QoS Thresholds

Note: For Dual Port topology in *One-Way* $P<m> \leftrightarrow P<n>$, these enable/disable settings are coupled.

- **Global Pass/Fail Verdict** check box when selected (default) allows enabling and configuring each metrics individually, otherwise all pass/fail verdicts are disabled.
- **Latency** check box when selected (default) enables the latency pass/fail verdict and allows setting the maximum threshold delay per direction when applicable.
- **Jitter** check box when selected (default) enables the jitter pass/fail verdict and allows setting the maximum threshold value per direction when applicable.
- **Frame Loss Rate** check box when selected (default) enables the Frame Loss pass/fail verdict and allows setting the frame loss rate for the port: 0.0E-00 to 5.0E-02 (default is 1.0E-07). However entering a value of 0.0E-00 or below 1.0E-14 is treated as a pass/fail verdict based on loss count instead of rate.
- **Throughput** check box when selected (default) enables the throughput pass/fail verdict and allows setting the minimum and maximum threshold values for the port.

EtherBERT and Unframed BERT

From the test menu, tap **Setup, Test Configurator** and tap on the **EtherBERT** or **Unframed BERT** block.

- **Link**, available with EtherBERT multiple link interface (ex: 2 x 100GE), allows selecting the link to be displayed.

Enable check box when selected (default) includes the selected link in the test. At least one of the links must remain enabled.

LINK

Note: *Available with OTN BERT test application with Ethernet client (EoOTN).*

A green/red arrow is used to indicate the status of the link at the PCS level: link up (green arrow); alarms at the PCS level, the link is down (red arrow).

Refer to *Ethernet* on page 916, *Ethernet - PCS Lanes* on page 918, and *Transcoding* on page 929 for more information on alarms.

Restore OTN BERT Defaults

Reverts the test application to its default factory settings. Available with OTN BERT test application with Ethernet client (EoOTN).

Pattern

- **Coupled RX to TX** check box, when selected (default), couples both the TX and RX signal with the same test pattern. For unframed parallel test, the **Coupled RX to TX** check box is selectable (selected by default) when **All Lanes** is selected. For **Seed A**, **Seed B**, and **PRBS31 Unscrambled** patterns, the **Coupled RX to TX** check box is selected and dimmed. the **Coupled RX to TX** check box is cleared and dimmed with 4 Unframed 200GAUI-4, and 8 Unframed 400GAUI-8.
- **No Pattern Analysis (Live)** check box when cleared (default), monitors the incoming traffic pattern and Round-Trip Latency. For live traffic, the **No Pattern Analysis (Live)** check box should be selected as the traffic is a live pattern and in this case no monitoring is required. Only available with framed test.
- **TX Pattern / RX Pattern** allows selecting the test pattern for each direction. When **User Pattern** is selected, enter the payload pattern hexadecimal value. The patterns are not configurable and set to **PRBS31** for: 40/100GE dual port topology; 200GE/400GE framed test; 2 x 200GE / 2 x 400GE / 8 x 100GE framed interface.

Framing	Pattern
Framed	PRBS9, PRBS11, PRBS15, PRBS20, PRBS23, PRBS31 (default), CSPAT ^a , CJTPAT ^a , CRPAT ^a , Short CRTPAT ^a , Long CRTPAT ^a , User Pattern
Unframed (Interop)	PRBS9, PRBS11, PRBS15, PRBS20, PRBS23, PRBS31 (default), Seed A, Seed B, PRBS31 Unscrambled, User Pattern
Unframed parallel	PRBS9 ^b , PRBS11 ^{b, c} , PRBS15 ^b , PRBS20 ^{b, c} , PRBS23, PRBS31 (default)
4 Unframed 200GAUI-4 8 Unframed 400GAUI-8	PRBS13Q ^d , PRBS31Q (default), SSPRQ ^d
8 Unframed 800GAUI-8	PRBS9Q, PRBS13Q, PRBS31Q ^e (default), SSPRQ ^{d, e}

- a. Only available for 1G optical with **Framed Layer 1** (see Framing on page 163).
- b. Not available with 2 Unframed 50GAUI-2, 8 Unframed 200GAUI-4, and 16 Unframed 400GAUI-8/16.
- c. Not available with 100GE - 4 **Unframed CAUI-4**.
- d. Only available in TX, the RX pattern parameters and status are not available.
- e. Only available when the **All Lanes** check box is selected.

Setup

EtherBERT and Unframed BERT

- **Invert** check box, when selected (cleared by default), inverts the generated/expected test pattern meaning that every 0 will be changed for 1 and every 1 for 0. For example, the pattern 1100 will be sent as 0011. Patterns **PRBS15**, **PRBS23**, and **PRBS31** are defined inverted as per ITU standard but EXFO uses non-inverted patterns for Ethernet test applications and EoOTN. Not available with 4 Unframed 200GAUI-4 and 8 Unframed 400GAUI-8 with either PRBS13Q or SSPRQ patterns. Not available with 8 Unframed 800GAUI-8 with SSPRQ pattern.
- **All Lanes** check box when selected allows setting the same TX and/or RX test pattern for all lanes; when cleared (default) allows setting a different test pattern for each lane: **TX Pattern** with **Invert** and **RX Pattern** with **Invert**). Available with unframed parallel interfaces. The **All Lanes** check box is selected and dimmed for 4 Unframed 200GAUI-4, 8 Unframed 400GAUI-8, and 8 Unframed 800GAUI-8 with PRBS31Q or SSPRQ pattern.

Pattern Sync, available for each lane when the **All Lanes** check box is cleared, indicates the status of the received signal pattern. Refer to *Status Bar* on page 44 for more information.

Bit Error / Pattern Error

Note: *Bit Error* is available with all patterns at the exception of **Seed A** and **Seed B** for which **Pattern Error** is available.

- **Pass/Fail Verdict** enables and sets the bit/pattern error rate/count threshold prior to run the test. This allows for a simple pass/fail verdict, leaving no room for misinterpretation of the test results. To enable the pass/fail verdict, select either **Bit Error Count / Pattern Error Count** or **Bit Error Rate / Pattern Error Rate** (default is **Disabled**). Only **Bit Error Rate** and **Disabled** are available with 2 Unframed 50GAUI-2, 4 Unframed 200GAUI-4 (PRBS31Q), 8 Unframed 200GAUI-4, 8 Unframed 400GAUI-8 (PRBS31Q), 16 Unframed 400GAUI-8/16, and 8 Unframed 800GAUI-8 (PRBS9Q/PRBS13Q/PRBS31Q). Not supported with 4 Unframed 200GAUI-4 (PRBS13Q/SSPRQ), 8 Unframed 400GAUI-8 (PRBS13Q/SSPRQ), and 8 Unframed_800GAUI-8 (SSPRQ).
- **BER Threshold** allows entering maximum bit/pattern error count allowed before declaring a fail verdict: **0** (default) to **999999** for count; **1.0E-14** to **1.9E-01** for rate (the default value is **1.0E-12**; **2.4E-4** for unframed 200/400/800G).

Service Disruption

Note: *Not available with: **No Pattern Analysis (Live)** check box selected; **Seed A**, **Seed B**, or **PRBS31 Unscrambled** patterns; multiple link interface; OTN BERT with EoOTN client.*


The absence of traffic exceeding the configured **No Traffic Time** triggers the service disruption measurement.

For a **Framed**, **Unframed**, or **Unframed with Sync** test, the service disruption event is closed when valid Ethernet frames are received for at least the **Debounce Time** without any service disruption event. Reaching the Test Period or stopping the test also closes the SDT event.

Setup

EtherBERT and Unframed BERT

For an **Unframed (Interop)** test, the service disruption event is closed when either the Test Period of 5 minutes is reached or the test is stopped.

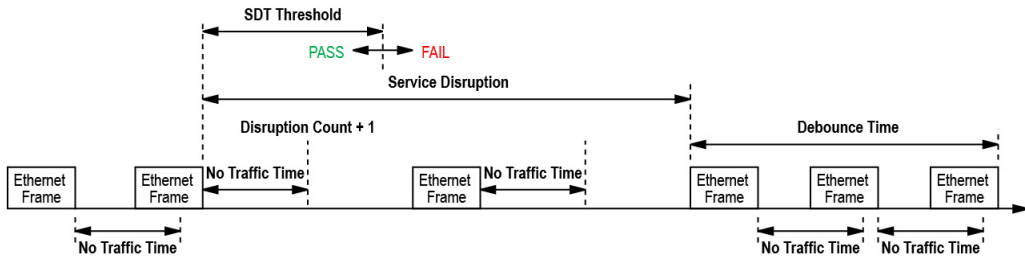

- **No Traffic Time (ms)** is the time acceptable between two Ethernet frames without any service disruption event: **0.005 ms to 1000 ms** (default is **1 ms**).
- **Debounce Time (ms)** allows setting the period without any service disruption event before stopping the current SDT measurement: **0** (default) to **500 ms**.
- **Disruption Monitoring** check box when selected (disabled by default) enables the disruption time measurements. However, the measurement will only start if the test is already started, or when the test will be started. Clearing the **Disruption Monitoring** check box or stopping the test, stops the measurement without clearing the results. Starting the test while the **Disruption Monitoring** check box is selected resets the results.
- **Pass/Fail Verdict** check box when selected (cleared by default) enables service disruption pass/fail verdict and allows setting the threshold value.
- **SDT Threshold** allows configuring the acceptable maximum service disruption time before failing the test: **0.005 to 299999.999 ms** (default is **50 ms**). The threshold value cannot be less than the **No Traffic Time** value.

Shaping

- **TX Rate** allows the selection of the transmission rate in percentage of utilization (100 percent by default), Mbit/s, Gbit/s, Frame/s, or IFG. For Ethernet, the maximum percentage is 105 percent depending on the frame size selected.
- **Enable TX** check box is automatically selected when starting the test allowing stream generation. The **Enable TX** check box may also be selected or cleared while the test is running.


Latency

Note: Available with Framed Layer 2 and higher. In Dual port topology, Latency is only available for rates up to 10G.

- **Enable** check box when selected, cleared by default, enables latency measurements.
- **Mode**

Note: For 88200NGE and 890 modules, only **Round-Trip Latency** is supported.


Round-Trip Latency measurement provides the total delay measurement for both directions on a specific port.

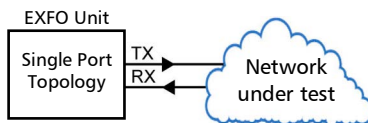

Setup

EtherBERT and Unframed BERT

One-Way P<m> ↔ P<n> provides the delay measurement of each direction independently between two separate ports of a single module. Only available when the rate and framing structure parameters are the same on both ports; changing any of these parameters automatically selects the **Round-Trip Latency** mode.

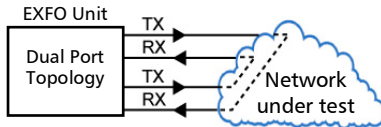

- **Pass/Fail Verdict** check box when selected enables the pass/fail verdict and allows setting the maximum latency threshold. This parameter is coupled on both ports for one-way measurement mode.
- **Unit** allows selecting the Latency unit: **ms** (default) or **μs**.
- **Round-Trip Threshold (ms)** is configurable from **5 μs** for 10Mbit/s, **1 μs** for 100Mbit/s and 10G WAN, or **100 ns** for all other rates up to **2 s** (default is **75 ms**).
- **One-Way P<m> -> P<n> Threshold** is configurable at the current P<m> RX port: from **5 μs** for 10Mbit/s, **1 μs** for 100Mbit/s and 10G WAN, or **100 ns** for all other rates up to **2 s** (default is **75 ms**).

Ethernet Frame

- **Frame Size (Bytes)** allows selecting the frame type (**Fixed** (default) or **EMIX**) and the frame size (**48¹** to **16000²**). Sending traffic with frame size > 1518 in switched network may result in losing all frames. EMIX is not available with 800GE.

The following table lists each component that may affect the minimum size value.

Component	Description
VLAN	4 bytes per VLAN (up to 3 VLAN for EtherBERT test application and only 1 VLAN for EoTN client)
EoE Header	16 bytes
EoE VLAN	4 bytes
PBB-TE Header	18 bytes
B-VLAN	4 bytes
UDP	8 bytes
TCP	20 bytes
Ethernet Header	14 bytes
LLC and SNAP Headers	8 bytes
IPv4	20 bytes
IPv6	40 bytes
Latency	8 bytes

EMIX button is available when **EMIX** frame size is selected. The EMIX frame sequence is repeated continuously (refer to *EMIX* on page 988).

1. The minimum of 48 bytes is only available for rates up to 10GE, for higher rates the minimum frame size is 64 bytes. The minimum frame size will be adjusted according to the frame structure and components selected.

2. The maximum frame size is limited to 10000 for 10/100/1000Mbps electrical interface.

Setup

EtherBERT and Unframed BERT

Note: The following frame parameters are only available for OTN BERT test application with Ethernet client (EoOTN).

- **Source MAC Address** allows entering the source MAC address for the stream. The default setting is the module default and unique Source Media Access Control (MAC) address.
- **Destination MAC Address** allows entering the destination MAC address for the stream. The default setting is the MAC address of the port.
- **VLAN ID** check box, when selected (cleared by default), allows the configuration of the following VLAN parameters. Selecting the **VLAN ID** check box affects the **Frame Size** value.

VLAN ID allows selecting the VLAN ID: **0** through **4095** (default is **2**). Special VID values (IEEE Std 802.1Q-1998):

ID	Description
0	The null VLAN ID. Indicates that the tag header contains only user priority information; no VLAN identifier is present in the frame. This VID value must not be configured as a PVID, configured in any Filtering Database entry, or used in any Management operation.
1	The default PVID value used for classifying frames on ingress through a Bridge Port. The PVID value can be changed on a per-Port basis.
4095	Reserved for implementation use. This VID value shall not be configured as a PVID, configured in any Filtering Database entry, used in any Management operation, or transmitted in a tag header.

Priority allows selecting the VLAN priority: **0** (default) to **7**:

0	000 - Low Priority	4	100 - High Priority
1	001 - Low Priority	5	101 - High Priority
2	010 - Low Priority	6	110 - High Priority
3	011 - Low Priority	7	111 - High Priority

- **Type** indicates the supported VLAN Ethernet type which is **0x8100**.

EtherSAM - Burst

Note: The **Burst** settings are only available for configuration when the **Burst Test** check box is selected (see page 283).

From the test menu, tap **Setup, Test Configurator**, tap on the test block, and on the **Burst** tab.

Note: The burst configuration parameters are defined globally for all services but **CBS**, **EBS**, and **Burst Max Rate** parameters are as per each service configuration.

Burst Sequence

The graphic illustrates the configured burst sequence that contains in order, from left to right:

- **Refill Delay** represents the pre-burst recuperation time in percentage that is equal to the remaining percentage not used by the post-burst time (**Refill Delay Ratio**).
- **Burst Frames** represents the burst frame ratio in percentage that is equal to the subtraction of **100 % - Burst/IR Frame Ratio**.
- **Refill Delay** represents the post-burst recuperation time in percentage that is equal to the configured **Refill Delay Ratio**.
- **CIR or CIR+EIR Frames** represents the percentage of transmission at CIR or CIR+EIR rate. The **CIR or CIR+EIR Frames** percentage is equal to the configured **Burst/IR Frame Ratio**.
- The “. . .” next to the burst sequence indicates that the burst sequence is repeated the number of times specified in the **Number of Burst Sequence** field.

Parameters

- **Number of Burst Sequence** is the number of times, **1** to **100** (default is **2**), the burst sequence will be repeated for the CBS and EBS tests.
- **Refill Delay Ratio (%)** is the percentage of time required to refill the **CBS/EBS** token buckets. The refill delay ratio is used for post-burst delay and the remaining percentage is applied to the pre-burst delay. The **Refill Delay Ratio** is configurable from **0** to **100** percent (**50** percent is the default as well as the standard's minimum recommended value).
- **Burst/IR Frame Ratio (%)** is the percentage of frames transmitted at **CIR** rate for the **CBS** test and the percentage of frames transmitted at **CIR+EIR** rate for the **EBS** test. The **Burst/IR Frame Ratio** is configurable from **10** to **90** percent (**90** percent is the default as well as the standard's recommended percentage value).

Table

Note: *Test time values are only displayed for enabled services.*

- **Service No** indicates the service number.
- **Service Name** indicates the name of the service.
- **Direction**, available with **Dual Test Set** or **Dual Port** topology, indicates respectively results for local (**L**) and remote (**R**) directions, or port to port directions.
- **CBS Test Time (s)** indicates the total time required to perform all burst sequence iterations of the CBS test for this service.
- **EBS Test Time (s)** indicates the total time required to perform all burst sequence iterations of the EBS test for this service.
- **Total Burst Test Time (s)** indicates the total time required to perform all burst sequence iterations of both **CBS** and **EBS** tests for this service.

EtherSAM - Global

From the test menu, tap **Setup, Test Configurator**, tap on the test block, and on the **Global** tab.

Dual Test Set

- **Dual Test Set** (DTS) check box when selected (cleared by default) enables the **Dual Test Set** testing mode. Once **Dual Test Set** is enabled, use the **Discover Remote** button to select a remote unit. Not available in **Dual Port** topology.

Note: *It is also possible using the **Discover Remote** button to connect to a remote unit and automatically enable **Dual Test Set**. For more details, refer to Discover Remote on page 782.*

Disconnected indicates that there is no connection established with a remote unit.

NAT LAN/WAN and **WAN IP** indicate presence of NAT (Network Address Translation) router. The NAT router is automatically detected and graphically displayed with LAN/WAN indication as well as the WAN IP address when the unit is behind a NAT router.

Note: *When there is a NAT at the Remote site, it is required to create UDP/TCP port 62819 forwarding rule on this NAT router to allow DTS communication. In addition, when there is a NAT in both directions (L->R and R->L), it is also required to create port forwarding rules on the NAT router located at the Remote side for every service defined.*

- **Discover Remote** allows discovering remote unit supporting **Remote Loopback** and/or **Dual Test Set**. For more details, refer to *Discover Remote* on page 782.

Subtests

- **Service Configuration Test** verifies if the network configuration is correct for each service before starting a long term test (Service Performance Test). To test the network configuration, an L2CP Handling test, a ramp test, and/or a burst test is/are executed for each configured service.
- **Subtest Duration** indicates the **Service Configuration Test** duration based on the configured Services, L2CP Handling, Ramp, and Burst settings.
- **L2CP Handling Test** check box when selected (cleared by default) verifies that L2CP frames are handled appropriately. Only available with Dual Test Set. Not supported at 200/400G rate.

Once the test is started, the configured quantity of L2CP frames for the service under test are transmitted at the configured frame rate. The test validates that the frames are received or not at the destination (remote unit). Then, based on the Expected L2CP Handling of each L2CP frame, a verdict is assessed for the service, per L2CP frame, and per direction.

The L2CP Handling test is performed when enabled for each enabled service.

- **Ramp Test** check box when selected (default) enables the ramp test:

In the first stage of the test, when **CIR** check box is selected (see *SLA Parameters* on page 413), the throughput is increased incrementally in steps until the CIR level is reached. During the first stage, the maximum Jitter, Latency, Frame Loss, and throughput are measured and are compared to the SLA thresholds to declare a pass/fail verdict.

In the second stage of the test, when the **CIR+EIR** check box is selected (see *SLA Parameters* on page 413), the throughput is increased to the **CIR+EIR** level to compare against expected maximum throughput threshold to declare a pass/fail verdict.

In the third stage of the test, when the **Traffic Policing** check box is selected (see *Test Parameters* on page 412), the throughput is increased one step over the **CIR+EIR** if selected otherwise over the **CIR** to compare against expected maximum throughput threshold to declare a pass/fail verdict.

The ramp test procedure is performed for each enabled service.

- **Burst Test** check box when selected (cleared by default) verifies that the expected burst size can be transmitted at maximum burst rate with minimal loss. Not supported at 200/400G rate.

CBS (Committed Burst Size) check box when selected (see *SLA Parameters* on page 413), verifies the performance of a committed burst size at **CIR**'s average **TX** rate.

EBS (Excess Burst Size) check box when selected (see *SLA Parameters* on page 413), verifies the performance of an excess burst size at **CIR+EIR**'s average **TX** rate.

The maximum Jitter, Latency, Frame Loss, and throughput are measured. For **CBS**, the Jitter, Latency, and Frame Loss are compared to the SLA thresholds to declare a pass/fail verdict. For **EBS**, the throughput is compared to the SLA thresholds to declare a pass/fail verdict.

The burst test procedure is performed for each enabled service.

- **Service Performance Test** check box when selected (default) verifies that the **SLA** parameters (see *SLA Parameters* on page 413) are met over time by running multiple services simultaneously. The maximum Jitter, Latency, Frame Loss, and average throughput are measured and compared to the configured thresholds to declare pass/fail verdicts. The **Service Performance Test** is only performed for services that have their **CIR** check box selected.

Subtest Duration allows setting the duration time, in HH:MM:SS format, for the **Service Performance Test** (default is 10 minutes).

- **Global Test Duration Estimation** indicates the total estimate duration of the test.

Global Options

- **Per Direction Configuration** check box when selected (default) specifies that the values can be configured independently for each direction (local to remote and remote to local) for **Dual Test Set** or for each port direction for **Dual Port**; for **Dual Port** using a different rate on each port, the check box is forced selected. When the **Per Direction Configuration** check box is cleared the configuration will be coupled and the values apply to both directions/ports. For **Dual Test Set** the **Per Direction Configuration** is only available when the communication with the remote unit is established.
- **Pass/Fail Verdict** check box when selected (default) enables the pass/fail verdict. A global pass/fail verdict is given for the EtherSAM test, **Service Configuration Test**, and **Service Performance Test** (for each service). The pass/fail verdict is based on the following criteria: **Frame Loss**, **Max Jitter**, **Round-Trip Latency**, and **Average - RX Rate**.
- **Latency Measurement Mode**, available with **Dual Test Set**, allows the selection of the latency measurement mode: **Round-Trip** (default) or **One-Way**¹ (for rates from 10M to 10GE).

Synchronization with 1PPS interface/reference is required to perform One-Way Latency measurement. One-Way Latency is only possible when both local and remote 1PPS signal clocks are valid. The following alarms are available with One-Way Latency measurement.

LOPPS-L and **LOPPS-R** (Loss Of Pulse Per Second - Local/Remote) are declared when either no pulse is received or when no pulse is received within 1 second $\pm 6.6 \mu s$ after the previous pulse. LOPPS-R is only monitored once the DTS connection is established.

Restore EtherSAM Defaults

Reverts the test application to its default factory settings.

1. Not available on 88480/88481/88482.

EtherSAM - L2CP

From the test menu, tap **Setup, Test Configurator**, tap on the test block, and on the **L2CP** tab.

- **Frame Rate** defines the rate of L2CP frames to be transmitted: **1 frame/s** or **10 frame/s** (default).
- **Frame Count** defines the quantity of each configured L2CP frame to be transmitted: **10** (default), **100**, **1000** frames.

L2CP Frame Table

Lists predefined and user defined L2CP frames. Use the corresponding “...” button to edit each L2CP frame individually.

For predefined L2CP frames, only the **Name** and **Destination MAC Address** (frames having more than one allowed MAC Addresses) are configurable; the other parameters are fixed along with their L2CP type. For user defined frames, the following parameters are configurable at the exception of **Type** and **Subtype**:

- **Name**: Up to 20 characters are allowed. Default names are the type of the L2CP frame for predefined frames and **User 1/2/3/4 (01-80-C2)** and **User 5/6/7/8 (01-00-0C)** for user defined frames.
- **Type**: Indicates the type of the L2CP frame for predefined frames and **User (01-80-C2)** or **User (01-00-0C)** for user defined frames.
- **Frame Format**: **Ethernet II** (default), **LLC**, or **SNAP**.
- **Frame Size**: **64** bytes (default) to **1518** bytes. The frame size excludes the VLAN encapsulation.
- **Destination MAC Address**: For predefined L2CP frames allows selecting the **Destination MAC Address** for frames having more than one allowed MAC Addresses. For user defined allows selecting the **Destination MAC Address** from **01-80-C2-00-00-00** (default) to **01-80-C2-FF-FF-FF** for **User (01-80-C2)** and from **01-00-0C-00-00-00** (default) to **01-00-0C-FF-FF-FF** for **User (01-00-0C)**.

- **LLC** (available with LLC and SNAP frame formats)
 - **SSAP: 0x00 to 0xFF (0x42 by default)** for LLC frame format; fixed to **0xAA** for SNAP frame format.
 - **DSAP: 0x00 to 0xFF (0x42 by default)** for LLC frame format; fixed to **0xAA** for SNAP frame format.
 - **Control: 0x00 to 0xFF (0x03 by default)** for LLC frame format; fixed to **0x03** for SNAP frame format.

Note: *For LLC frame format, the following concatenated values of DSAP/SSAP/Control are not valid since they are reserved for SNAP frame format: 0xAAAA03 or 0xABAB03.*

- **OUI** (available with SNAP frame format): **0x000000** (default) to **0xFFFFFFFF**.
- **EtherType** (available with SNAP and Ethernet II frame formats): **0x0000** to **0xFFFF** for SNAP and **0x0600** to **0xFFFF** (excluding 0x8100, 0x88A8, 0x9100, 0x9200, 0x9300, 0x8847, and 0x8848) for Ethernet II. Default is **0x0600**.
- **Subtype**, only available for some predefined L2CP frames, indicates the subtype for the frame.
- **Custom Bytes** (16 bytes) **0x00000000000000000000000000000000** (default) to **0xFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF**. Only available for user defined L2CP frames.

Setup

EtherSAM - L2CP

Predefined L2CP frame parameters:

Type	Frame Format	EtherType Subtype	LLC (DSAP + SSAP + Control)	OUI	Size (bytes)	Allowed Destination MAC Address
LACP (Link Aggregation Control Protocol)	Ethernet II	0x8809 0x01			128	01-80-C2-00-00-00 01-80-C2-00-00-02 01-80-C2-00-00-03
LAMP (Link Aggregation Marker Protocol)	Ethernet II	0x8809 0x02			128	01-80-C2-00-00-00 01-80-C2-00-00-02 01-80-C2-00-00-03
Link - OAM (802.3 OAM)	Ethernet II	0x8809 0x03			64	01-80-C2-00-00-02
ESMC (Ethernet Synchronization Messaging Channel)	Ethernet II	0x8809 0x0A			64	01-80-C2-00-00-02
PTP (Precision Time Protocol)	Ethernet II	0x88F7			64	01-80-C2-00-00-0E
E-LMI (Ethernet Local Management Interface)	Ethernet II	0x88EE				01-80-C2-00-00-07
LLDP (Link Layer Discovery Protocol)	Ethernet II	0x88CC			64	01-80-C2-00-00-00 01-80-C2-00-00-03 01-80-C2-00-00-0E
VDP (Virtual Station Interface Discovery and Configuration Protocol)	Ethernet II	0x8940 0x0001			64	01-80-C2-00-00-00
PE-CSP (Port-Extender Control and Status Protocol)	Ethernet II	0x8940 0x0002			64	01-80-C2-00-00-03
802.1X (Port-Based Network Access Control)	Ethernet II	0x888E			64	01-80-C2-00-00-00 01-80-C2-00-00-03 01-80-C2-00-00-0E

Type	Frame Format	EtherType Subtype	LLC (DSAP + SSAP + Control)	OUI	Size (bytes)	Allowed Destination MAC Address
MAC-PAUSE (802.3 MAC Control - PAUSE)	Ethernet II	0x8808 0x0001			64	01-80-C2-00-00-01
MAC-PFC (802.3 MAC Control - Priority Flow Control)	Ethernet II	0x8808 0x0101			64	01-80-C2-00-00-01
MPMAC-Gate (802.3 Multipoint MAC Control - Gate)	Ethernet II	0x8808 0x0002			64	01-80-C2-00-00-01
MPMAC-Report (802.3 Multipoint MAC Control - Report)	Ethernet II	0x8808 0x0003			64	01-80-C2-00-00-01
MPMAC-Register-req (802.3 Multipoint MAC Control - Register-req)	Ethernet II	0x8808 0x0004			64	01-80-C2-00-00-01
MPMAC-Register (802.3 Multipoint MAC Control - Register)	Ethernet II	0x8808 0x0005			64	01-80-C2-00-00-01
MPMAC-Register-ack (802.3 Multipoint MAC Control - Register-ack)	Ethernet II	0x8808 0x0006			64	01-80-C2-00-00-01
MAC-Org-Spec-Ext (802.3 MAC Control - Organisation Specific Extensions)	Ethernet II	0x8808 0xFFFE			64	01-80-C2-00-00-01
STP (Spanning Tree Protocol)	LLC		0x424203		64	01-80-C2-00-00-00 01-80-C2-00-00-08
RSTP (Rapid Spanning Tree Protocol)	LLC		0x424203		64	01-80-C2-00-00-00 01-80-C2-00-00-08
MSTP (Multiple Spanning Tree Protocol)	LLC		0x424203		64	01-80-C2-00-00-00 01-80-C2-00-00-08

Setup

EtherSAM - L2CP

Type	Frame Format	EtherType Subtype	LLC (DSAP + SSAP + Control)	OUI	Size (bytes)	Allowed Destination MAC Address
SPB (Shortest Path Bridge)	LLC		0xFEFE03		64	01-80-C2-00-00-2E 01-80-C2-00-00-2F
MMRP (Multiple MAC Registration Protocol)	Ethernet II	0x88F6			64	01-80-C2-00-00-20
MVRP (Multiple VLAN Registration Protocol)	Ethernet II	0x88F5			64	01-80-C2-00-00-21 01-80-C2-00-00-0D
MSRP (Multiple Stream Registration Protocol)	Ethernet II	0x22EA			64	01-80-C2-00-00-0E
MIRP (Multiple ISID Registration Protocol)	Ethernet II	0x8929			64	01-80-C2-00-00-00
CDP (Cisco Discovery Protocol)	SNAP	0x2000	0xAAAA03	0x00000C	64	01-00-0C-CC-CC-CC
VTP (VLAN Trunking Protocol)	SNAP	0x2003	0xAAAA03	0x00000C	64	01-00-0C-CC-CC-CC
PAgP (Port-Aggregation Protocol)	SNAP	0x0104	0xAAAA03	0x00000C	88	01-00-0C-CC-CC-CC
UDLD (Unidirectional Link Detection)	SNAP	0x0111	0xAAAA03	0x00000C	64	01-00-0C-CC-CC-CC
DTP (Dynamic Trunking Protocol)	SNAP	0x2004	0xAAAA03	0x00000C	64	01-00-0C-CC-CC-CC
PVST+(LLC) (Per VLAN Spanning Tree)	LLC		0x424203		64	01-00-0C-CC-CC-CD
PVST+(SNAP) (Per VLAN Spanning Tree)	SNAP	0x010B	0xAAAA03	0x00000C	68	01-00-0C-CC-CC-CD

Type	Frame Format	EtherType Subtype	LLC (DSAP + SSAP + Control)	OUI	Size (bytes)	Allowed Destination MAC Address
STP-ULFAST (Spanning Tree Protocol - Uplink Fast)	LLC		0x424203		64	01-00-0C-CD-CD-CD
VLAN-BRDSTP (VLAN Bridge Spanning Tree)	LLC		0x424203		64	01-00-0C-CD-CD-CE
ISL (Inter-Switch Link)	SNAP	0x0003	0xAAAA03	0x00000C	94	01-00-0C-00-00-00
GMRP (Generic MAC Registration Protocol)	LLC		0x424203		64	01-80-C2-00-00-20
GVRP (Generic VLAN Registration Protocol)	LLC				64	01-80-C2-00-00-21

EtherSAM - Ramp

Note: The **Ramp** tab is only available for configuration when the **Ramp Test** check box is selected (see page 283).

From the test menu, tap **Setup**, **Test Configurator**, tap on the test block, and on the **Ramp** tab.

Note: The ramp configuration parameters are defined globally for all services but the presence of CIR+EIR, and Traffic Policing steps are as per each service configuration. CIR, CIR+EIR, and Traffic Policing steps are part of the step list as soon as they are enabled for at least one service even if that service is not enabled.

- **Dynamic Ramp** graph displays the percentage of each CIR level step in time.
- **Step Time** indicates the test duration for each ramp step: **5** (default) to **60** seconds.
- **Ramp Duration** indicates the total time required to perform all the ramp steps for each service.
- **Add Step** allows adding a new ramp step. Enter the CIR percentage from **1** to **99**. A maximum of 7 pre CIR steps can be added in the ramp configuration.
- **Delete Step** allows deleting a step from the ramp. Select the step from the list and tap on **Delete**.
- **Defaults** reverts the ramp configuration to its default factory settings.

External Reference / Internal GNSS

External Reference / Internal GNSS, available with Time Error / Wander test application, allows configuring the external reference or internal GNSS signal.

From the test menu, tap **Setup**, **Test Configurator**, and the **External Reference / Internal GNSS** block.

Reference

- **Mode** allows selecting the clock source; forced to Internal GNSS for Time Error with an Ethernet interface.
 - **External Reference** (default): Clock signal from the EXT CLK port.
EXT REF status icon indicates if the signal is valid (green) or impaired (red).
 - **Internal GNSS**: 1PPS clock signal provided by the Internal GNSS Receiver. Requires a GNSS antenna connected to the ANTENNA port (88260). The Internal GNSS receiver settings are configurable from *System - GNSS* on page 448.
GNSS status icon indicates if the reference from the internal GNSS receiver is valid (green) or not (red).
HOLDOVER status icon indicates if the reference from the internal GNSS receiver is either in holdover with its performance within (green) / outside (yellow) its uncertainty specifications or the reference is not valid (red).

Ext Reference In / Reference In

Allows selecting the reference signal for TE/TIE measurements.

- **Signal** allows the selection of the reference interface: **2 MHz**, **10 MHz**, and **1PPS**. The reference signal is set to **1PPS** for a test using 1PPS interface/rate and for Internal GNSS clock mode.

Ext Ref In / Ref In on a green background indicates that a valid reference is received.

LOS on a red background indicates that the received signal is not valid.

- **Connector** indicates the connector used for the external reference signal: **RJ48C** or **BNC**.
- **Frequency (MHz)**, available with 2 MHz and 10 MHz, displays the frequency of the received reference signal.

FC BERT

From the test menu, tap **Setup, Test Configurator** and tap on the **FC BERT** block.

Pattern

- **Coupled RX to TX** check box, when selected (default), couples both the TX and RX signal with the same test pattern.
- **TX Pattern / RX Pattern** allows selecting the test pattern for each direction: **PRBS9, PRBS11, PRBS15, PRBS20, PRBS23, PRBS31** (default), and **User Pattern**. When **User Pattern** is selected, enter the payload pattern hexadecimal value.
- **Invert** check box, when selected (cleared by default), inverts the generated/expected test pattern meaning that every 0 will be changed for 1 and every 1 for 0. For example, the pattern 1100 will be sent as 0011.
- **Pattern Sync** icon indicates the status of the received signal pattern. Refer to *Status Bar* on page 44 for more information.


Bit Error

- **Pass/Fail Verdict** enables and sets the bit error rate/count threshold prior to run the test. This allows for a simple pass/fail verdict, leaving no room for misinterpretation of the test results. To enable the pass/fail verdict, select either **Bit Error Count** or **Bit Error Rate** (default is **Disabled**).
- **BER Threshold** allows entering the maximum bit error count/rate allowed before declaring a fail verdict: **0** (default) to **999999** for count; **1.0E-14** to **1.9E-01** (default is **1.0E-12**) for rate.

Service Disruption

Note: Only available on the FTBx-88260 module.

The absence of traffic exceeding the configured **No Traffic Time** triggers the service disruption measurement. The service disruption event is closed when valid FC frames are received for at least the **Debounce Time** without any service disruption event. Reaching the Test Period or stopping the test also closes the SDT event.

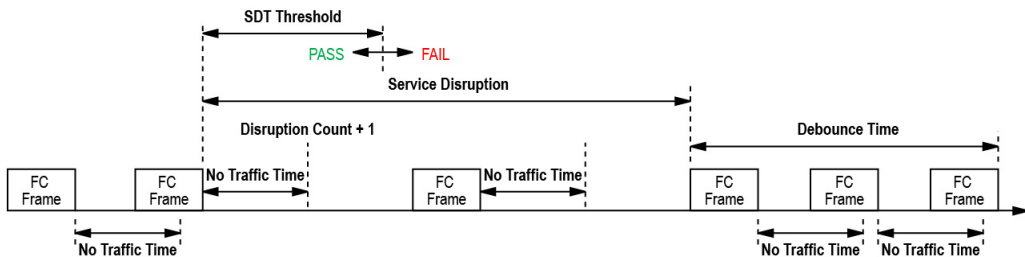

- **No Traffic Time (ms)** is the time acceptable between two FC frames without any service disruption event: **0.005 ms** to **1000 ms** (default is **1 ms**).
- **Debounce Time (ms)** allows setting the period without any service disruption event before stopping the current SDT measurement: **0** (default) to **500 ms**.
- **Disruption Monitoring** check box when selected (disabled by default) enables the disruption time measurements. However, the measurement will only start if the test is already started, or when the test will be started. Clearing the **Disruption Monitoring** check box or stopping the test, stops the measurement without clearing the results. Starting the test while the **Disruption Monitoring** check box is selected resets the results.

- **Pass/Fail Verdict** check box when selected (cleared by default) enables the service disruption pass/fail verdict and allows setting the threshold value.
- **SDT Threshold** allows configuring the acceptable maximum service disruption time before failing the test: **0.005** to **299999.999** ms (default is **50** ms). The threshold value cannot be less than the **No Traffic Time** value.

FC Frame

Frame Size (Bytes) allows entering the frame size (in step of 4 bytes) for FC BERT test application: **40** to **2148** bytes (default). However the minimum frame size is 64 bytes when the **Latency Tags** check box is selected.

Latency Tags Insertion

Round trip latency measures the average round trip latency (delay) between the time the data was transmitted and received.

- **Latency Tags** check box when selected enables latency measurements.
- **Pass/Fail Verdict** check box when selected (cleared by default) enables the service disruption pass/fail verdict and allows setting the threshold value.
- **Round-Trip Latency Threshold (ms)** allows the selection of the round trip latency threshold: **0.015** (default) to **8000 ms**.

Shaping

TX Rate allows the selection of the transmission rate in percentage (%) of utilization (100 percent by default), Mbit/s, Gbit/s, or MB/s.

Fibre Channel

From the **Test** menu, tap **Setup, Test Configurator**, and the **Fibre Channel** block.

World Wide Name (WWN)

The following WWN settings are only available when the **Login - Enable** check box is selected (see page 301).

- **Source** allows setting the 64-bit WWN address of the local fibre channel port: **00-00-00-00-00-00-00-00** to **FF-FF-FF-FF-FF-FF-FF-FF** (default is **20-00-00-03-01** [IEEE-MAC lsb (bits 23..0)]).
- **Destination** allows setting the 64-bit WWN address of the remote fibre channel port: **00-00-00-00-00-00-00-00** (default) to **FF-FF-FF-FF-FF-FF-FF-FF**. The destination WWN address is displayed and grayed-out for Point-to-Point topology after a successful login.

Buffer to Buffer Flow Control

Buffer to Buffer (BB) Flow Control, also called Flow Control Management, manages the control of data traffic between the local and remote fibre channel ports based on the network, distance, and traffic congestion.

Each remote port advertises the buffer size (**BB_Credit**) during the login.

- **Enable** check box when selected allows setting or use buffers to receive frames. The **Enable** check box is force selected when the **Login - Enable** check box is selected (see page 301).
- **Available BB_Credit** is the number of frame buffers that the remote port has available to receive frames from the local port: **1 to 65535** (default is **10**). The **Available BB_Credit** is not editable when the **Login - Enable** check box is selected but its value received from the remote interface through the login process is displayed. If the login fails, the **Available BB_Credit** displays “-”.

Login

After a link is established, it is possible to login to the Fibre Channel Network to send and receive data between a local and remote fibre channel port.

- **Enable** check box when selected (default) allows pressing the **Login** button to start the login process.
- **Advertised BB_Credit** is the number of frame buffers the local port has available to receive frames from the remote port: **1** to **65535** (default is **10**). **Advertised BB_Credit** is advertised to the remote port through the **Login** process. Changing the **Advertised BB_Credit** requires to manually re-send a login using the **Login** button.
- **Login/Re-Login** button allows the initiation of the Login process with the selected **Advertised BB_Credit**. Available when the **Login - Enable** check box is selected. The **Login** button initiates a log-in when not logged-in while the **Re-Login** re-initiates a log-in after changing the **BB_Credit** and/or **WWN** when already logged-in. The capability to login is available only with Framed Layer 2 (FC-2) when a successful link has been established. There are two Login processes supported by Fibre Channel: **Port Login** (PLOGI) and **Fabric Login** (FLOGI).

It is possible to skip the **Login** procedure and use the **BB_Credit** value. This is called **Implicit Login** and is only applicable for **Point-to-Point** topology. For **Point-to-Point** topology using implicit login, you must manually configure the **Available BB_Credit** value for the remote port.

- **Discovered Topology** indicates the discovered topology.

Fabric: Ports are interconnected to a fabric switching network. A **Fabric** and **Port** login are required, and the **BB_Credit** value is set based on the buffer capacity of the fabric switch.

Point To Point: Direct link between two ports.

Setup

Fibre Channel

- **Fabric Status** indicates the status of the Fabric switching network. The status is not available when the discovered topology is Point-to-Point.
 - **Logged-in** indicates that the login process has completed successfully.
 - **Failed** indicates that the login process is not completed successfully or an error has been detected.
 - **In Progress** indicates that the login process is running (not completed yet).
 - **Logged-out** (default) indicates that the system has not logged in yet or has received a valid Logout command from the remote port.
- **Port Status** indicates the state of the port login process.
 - **Logged-in** indicates that the login process has completed successfully.
 - **Failed** indicates that the login process is not completed successfully or an error has been detected.
 - **In Progress** indicates that the login process is running (not completed yet).
 - **Logged-out** (default) indicates that the system has not logged in yet, has received a valid Logout command from the remote port, or the Fabric status is either Failed, In Progress, or Logged-out.

FlexE Group

From the test menu, tap **Setup, Test Configurator**, and on the **FlexE Group** protocol block.

Note: *Only one client is supported in the FlexE Group.*

- **FlexE Status** indicates the global FlexE group status: up (green arrow) or down (red arrow).
- **Calendar Mismatch** indicates if the received calendar differs from the one expected using the following colors: red for mismatch; green for match; otherwise it is gray.
- **FlexE Group Number** allows associating a number to the FlexE Group: **1** to **1048575**.
- **Calendar** allows selecting the calendar **A** or **B** that is used for mapping/demapping the FlexE clients into/from the FlexE group.
- **Calendar Granularity** allows selecting the calendar granularity: **5G** (default) or **25G**. When changing the granularity from 5G to 25G, it is possible that there are incompatibilities (sizes and/or boundaries) with existing clients, in this case these clients will be deleted.

Table

- **Client ID** indicates the client identification number.
- **Size (Gbit/s)** indicates the size of the client.
- **Link** indicates the client link status: link up (green arrow) or link down (red arrow).
- **Qty of Clients** indicates the number of clients assigned to the FlexE group.
- **Assigned Capacity (Gbit/s)** indicates the sum of client size assigned to the FlexE group.

Setup

FlexE Group

- **Unused Capacity (Gbit/s)** indicates the client size not assigned to the FlexE group.
- **Modify** (refer to *FlexE Calendar* on page 993)

Restore FlexE BERT Defaults

Reverts the test application to its default factory settings.

FlexO/OTN

From the test menu, tap **Setup, Test Configurator**, the **FlexO-OTUCn** protocol block, and **FlexO/OTN** tab.

Note: *Only one client is supported in the FlexO Group.*

FlexO

- **FlexO Status** indicates the global FlexO group status: up (green arrow) or down (red arrow).
- **FlexO Group ID** indicates the FlexO group identification number.

OTUCn

- **Client ID** allows selecting the client identification number.
- **Type** indicates the ODUk container (client).
- **Size (Gbit/s)** indicates the ODUk client size.
- **Edit ID** button allows editing the client identification number: **1** (default) to **40**.
- **OTUCn/ODUCn/ODUk** represents the mapping of the signal.
- **Payload Type** indicates the payload type which is **22**.
- **Qty of Clients** indicates the quantity of clients which is **1**.
- **Usage** indicates the number of tributary slot used and its corresponding rate in Gbit/s.

FlexO/OTUCn

Note: Available with FOICn interfaces.

From the test menu, tap **Setup**, **Test Configurator**, the **Client** block, and the **FlexO-OTUCn** tab.

Note: Only one client is supported in the FlexO Group.

FlexO

- **FlexO Status** indicates the global FlexO group status: up (green arrow) or down (red arrow).
- **FlexO Instance ID** allows configuring the instance identifier (**1** to **254**) for each 100G instance of the FlexO client.
- **FlexO Group ID** allows selecting the FlexO group identification number.

OTUCn

- **Client ID** allows selecting the client identification number.
- **Type** indicates the ODUk container (client).
- **Size (Gbit/s)** indicates the ODUk client size.

Frequency

Note: *The Frequency tab is only available for parallel interfaces.*

From the test menu, tap **Setup, Test Configurator**, tap on the interface block, and on the **Frequency** tab. For DCO BERT, tap **Setup, Test Configurator**, tap on the **Client** block, and on the **Frequency** tab.

- **Port**, available with FlexE BERT/FlexO BERT, allows selecting the physical port to be displayed.
- **FlexO Instance ID**, available with FlexO BERT, indicates the FlexO instance identifier per port.
- **FlexE PHY Number**, available with FlexE BERT, indicates the FlexE PHY number assigned to the port.
- **Client**, available with DCO BERT multiple link client (ex. 4 x 100GE), allows selecting the client to be displayed.

Enable check box when selected (default), includes the selected client in the test. At least one of the clients must remain enabled.

- **Link**, available with EtherBERT multiple link interface (ex: 2 x 100GE), allows selecting the link to be displayed.

Enable check box when selected (default) includes the selected link in the test. At least one of the links must remain enabled.

TX Frequency

Frequency (GHz) indicates the frequency (actual frequency + Frequency offset) used for transmission.

Note: *Frequency offset is not available with: Multi-Channel OTN, multiple link interface, FlexE BERT/FlexO BERT, Time Error / Wander.*

Setup

Frequency

- **Offset (ppm)** check box, when selected (cleared by default), enables the frequency offset generation. The frequency offset¹ range is ± 120 ppm for Ethernet test applications (± 60 ppm for 800G), ± 50 ppm for Transport Framed, and ± 120 ppm for Transport Unframed test applications.
- **Fixed (default)**: uses a fixed offset frequency value for generation. Use the “+” or “-” button to respectively increment or decrement the frequency offset value based on the defined **Step Size (ppm)**, or directly type the frequency offset value in the field.

Step Size (ppm), available with **Fixed** frequency, allows setting the increment/decrement value (from 0.1 to either 50 or 120 depending on the test configuration) that will be used when changing the frequency offset with the “+” or “-” button.

- **Sweep** increases and decreases repetitively the frequency to cover the defined frequency offset range using a 1 ppm step at an average rate of up to 10 ppm/sec. Starting at offset 0 the min value is reached then repetitively increases to the maximum value then decreases to minimum value.

Range (ppm), available with **Sweep** frequency offset mode, allows setting the range for frequency sweep generation.

1. The frequency offset range is guaranteed for a source signal at 0 ppm. In the event that the source signal already has an offset, then the output signal may exhibit an offset larger than the range specified.

RX Frequency

Note: The following frequency statistics are available for each lane.

- **Frequency (GHz)** indicates the frequency of the input signal.

Note: Frequency offset is not available with Time Error / Wander.

- **Offset (ppm)** indicates the frequency offset between the standard rate specification and the rate at the input signal.

Note: For both **Frequency** and **Offset** the following background colors are used.

Background color	Description
Green	The frequency is in range.
Red	The frequency is out-of-range or LOC Lane.
Gray	Pending state.

Note: In the **Test Configurator - Interface** block, **LO** and **HI** report respectively the current lowest and highest RX frequency offset values from any lane.

- **Max. Negative Offset (ppm)** indicates the maximum negative frequency offset between the standard rate specification and the rate from the received signal.
- **Max. Positive Offset (ppm)** indicates the maximum positive frequency offset between the standard rate specification and the rate from the received signal.

Note: Refer to Interface on page 921 for more information on standard rate specifications.

Setup

Frequency - DCO BERT (Client)

Frequency - DCO BERT (Client)

From the test menu, tap **Setup**, **Test Configurator**, the **Client** block, and on the **Frequency** tab.

TX Frequency

Frequency (GHz) indicates the transmitted Ethernet client frequency (bit rate).

RX Frequency

Note: *The following frequency statistics are available for each lane.*

- **Frequency (GHz)** indicates the received Ethernet client frequency (symbol rate).
- **Offset (ppm)** indicates the frequency offset between the nominal and the received Ethernet client frequencies.

Note: *For both **Frequency** and **Offset** the following background colors are used.*

Background color	Description
Green	The frequency is in range.
Red	The frequency is out-of-range or LOC Lane.
Gray	Pending state.

Note: *Refer to Interface on page 921 for more information on nominal frequencies.*

FTFL/PT / PT

For **OTN BERT** and **OTN-SONET/SDH BERT**, from the test menu tap **Setup**, **Test Configurator**, the interface block, and the **FTFL/PT** tab.

For **Multi-Channel OTN**, from the test menu, tap **Setup**, **Test Configurator**,

- For the higher ODU layer: the interface block, and the **PT** tab.
- For the lower ODU layer: the **ODU Channels** test block, and the **PT** tab.

ODUx Buttons

Tap on an **ODUx** button to select the multiplexed level. Not available with Multi-Channel OTN lower ODU level.

FTFL

FTFL allows the configuration of the Forward and Backward ODU Fault Type Fault Location (FTFL) to be generated. Not available with Multi-Channel OTN.

- **Overwrite** check box when selected generates the defined FTFL. Only available with **Through Intrusive** topology and applies only to the ODU top layer.
- **Fault Indication** and **Code** allow the selection of the FTFL fault indicator message/code (byte 0 for forward, byte 128 for backward) to be generated.

Fault Indication	Code (Hex)
No fault	00 (default)
Signal fail	01
Signal Degrade	02
Reserved	03 ^a

- a. Selecting **Reserved** will use the hexadecimal code **03** but, all codes from **03** to **FF** are reserved for future international standardization.

Setup

FTFL/PT / PT

Note: The **Code** field is automatically updated when the **Fault Indication** is changed and vice versa.

- **Operator Identifier** allows editing the Operator Identifier to be generated (bytes 1 to 9 for forward, bytes 129 to 137 for backward; 9 characters allowed; not defined by default).
- **Operator Specific** allows editing the Operator Specific to be generated (bytes 10 to 127 for forward, bytes 138 to 255 for backward; 118 characters allowed; not defined by default).

PT / Global PT

Allows configuring the generated/expected payload type (PT). Changing the generated payload type does not alter the signal structure; it only modifies the OH value that is generated.

Note: *Global PT, available with Muti-Channel OTN, indicates that the PT settings apply to all channels.*

- **Overwrite** check box when selected generates the defined PT. Only available with Through Intrusive topology and applies only to the ODU top layer.
- **Payload Type** and **Code** allows the selection of the generated/expected payload signal type either by selecting the payload type from the list or by entering its code in hexadecimal (**00** to **FF**).

Note: *Codes not listed in the table are reserved for future standardization (Reserved For International Standardization).*

Payload type	Hex Code	MSB 1234	LSB 5678
Reserved for International Standardization ^a	00	0000	0000
Experimental mapping	01	0000	0001

Payload type	Hex Code	MSB 1234	LSB 5678
Asynchronous CBR mapping	02	0000	0010
Bit Synchronous CBR mapping	03	0000	0011
ATM mapping	04	0000	0100
GFP mapping	05	0000	0101
Virtual Concatenation Signal	06	0000	0110
PCS Codeword Transparent Ethernet	07	0000	0111
FC-1200 into ODU2e	08	0000	1000
GFP mapping into extended OPU2	09	0000	1001
OC-3/STM-1 into ODU0	0A	0000	1010
OC-12/STM-4 into ODU0	0B	0000	1011
FC-100 into ODU0	0C	0000	1100
FC-200 into ODU1	0D	0000	1101
FC-400 into ODUFlex	0E	0000	1110
FC-800 into ODUFlex	0F	0000	1111
Bit Stream with Octet Timing mapping	10	0001	0000
Bit Stream Without Octet Timing mapping	11	0001	0001
IB SDR mapping into ODUFlex	12	0001	0010
IB DDR mapping into ODUFlex	13	0001	0011
IB QDR mapping into ODUFlex	14	0001	0100
SDI mapping into OPU0	15	0001	0101
(1.485/1.001) Gbit/s SDI mapping into OPU1	16	0001	0110
1.485 Gbit/s SDI mapping in to OPU1	17	0001	0111
(2.970/1.001) Gbit/s SDI mapping into OPUflex	18	0001	1000
2.970 Gbit/s SDI mapping into OPUflex	19	0001	1001
SBCON/ESCON mapping into OPU0	1A	0001	1010
DVB_ASI mapping into OPU0	1B	0001	1011
FC-1600 mapping into OPUflex	1C	0001	1100

Setup

FTFL/PT / PT

Payload type	Hex Code	MSB 1234	LSB 5678
FlexE Client mapping into OPUflex	1D	0001	1101
FlexE aware (partial rate) mapping into OPUflex	1E	0001	1110
FC-3200 mapping into OPUflex	1F	0001	1111
ODU Multiplex with ODTUjk	20	0010	0000
ODU Multiplex with ODTUk.ts/ODTUjk	21	0010	0001
ODU multiplex with ODTUCn.ts	22	0010	0010
25GBASE-R mapping into OPUflex	30	0011	0000
200GBASE-R mapping into OPUflex	31	0011	0001
400GBASE-R mapping into OPUflex	32	0011	0010
Not Available ^b	55	0101	0101
Reserved Codes for Proprietary Use ^c	80	1000	0000
NULL Test Signal mapping	FD	1111	1101
PRBS Test Signal mapping	FE	1111	1110

- a. Selecting **Reserved for International Standardization** will use the hexadecimal code 00 but, all codes not listed in the previous table at the exception of those covered in notes b and c are reserved for future standardization.
- b. Selecting **Not Available** will use the hexadecimal code 55 but, 66 and FF are also Not Available payload types.
- c. Selecting **Reserved Proprietary** will use the hexadecimal code 80 but, all codes from 80 to 8F are reserved proprietary payload types.

Note: The **Code** field is automatically updated when the **Payload Type** is changed and vice versa.

- **OPU-PLM** check box when selected enables the OPU-PLM alarm analysis.

GFP-F/GFP-T

Note: *Only available with Ethernet **1GbE**, **10GbE**, or **Ethernet (flex/GFP-F)** client.*

From the **Test** menu, tap **Setup**, **Test Configurator**, and tap on the **GFP-F/GFP-T** block.

Note: *Refer to Generic Framing Procedure (GFP) on page 877 for more information on **Client Data** and **Client Management** frames.*

- **CDF pFCS** (Client Data Frames payload Frame Check Sequence) enables the presence of the payload FCS for the client frames. This setting is only available with **Ethernet (flex/GFP-F)** client.
- **CMF pFCS** (Client Management Frames payload FCS) enables the presence of the payload FCS for the management frames. The **CMF pFCS** check box is automatically cleared when injecting FDI or RDI alarms.
- **EXI** (Extension Header Identifier) allows the selection of the type of GFP Extension Header. Choices are **Null** (0000) - (Default) and **Linear** (0001). EXI is only configurable with **Ethernet (flex/GFP-F)** client.
- **CID** (Channel Identifier) selects the communication channel used for the signal transmission for *both **Client Data** and **Client Management** frames*. Choices are from **0** (default) through **255**. CID is only available when EXI is set to **Linear**.

The status **Mismatch** is displayed next to the CID value when the TX and RX CID values differ.

- **Delta** indicates the GFP state machine synchronization parameter. Delta is set to 1.

Interface

Note: With host/media loopback mode only **LINK** is available for a framed test and the **Interface** tab is not supported with an unframed test.

From the test menu, tap **Setup, Test Configurator**, the interface block, and the **Interface** tab.

Port, available with FlexE BERT/FlexO BERT, allows selecting the physical port to be displayed.

- **FlexO Instance ID**, available with FlexO BERT, indicates the FlexO instance identifier per port.
- **FlexE PHY Number**, available with FlexE BERT, allows configuring the FlexE PHY number assigned to the port:

Interface	FlexE PHY Number
400G	1 to 62
200G	1 to 126
100G	1 to 254
50G	1 to 126

- **Link**, available with EtherBERT multiple link interface (ex: 2 x 100GE), allows selecting the link to be displayed.
Enable check box when selected (default) includes the selected link in the test. At least one of the links must remain enabled.
- **FEC** check box, available with FlexO BERT, when selected (default) enables the FEC in TX/RX and allows detecting, reporting, and correcting up to 15 symbol errors (Correctable) per codeword. If there are over 15 symbol errors detected, they are reported as uncorrectable errors.

LINK (Ethernet and Sync Test Applications)

- **LINK** indicates the port link status (at the PCS level for parallel interfaces): link up (green arrow), error or link down (red arrow), or awaiting incoming data to provide a status (gray arrow).

Note: Refer to: *Ethernet* on page 916; *Ethernet - PCS Lanes* on page 918; *RS-FEC (Ethernet)* on page 927; *PHY* on page 926 for more information on alarms.

- **RS-FEC** check box when selected (default), available with framed 25GE interface, enables the use of RS-FEC.
- **RS-FEC** check box when selected (default), available with framed 100GE interface, enables the use of the RS-FEC; ensure both ends of the circuit have the FEC enabled. The **RS-FEC** check box should be selected when using a 100GBASE-SR4, 100G-CWDM4, or 100G AOC transceiver but may be cleared for testing purposes. The **RS-FEC** check box is selected and dimmed for: 100GE (1 Lane), 100GE (2 Lanes), 4 x 100GE, 8 x 100GE, 100GE (4 Lanes) SR4/CWDM4 with Time Error / Wander. Not available when the **PHY Type** is set to **LR4/ER4**.
- **All Links** check box when selected, available with multiple link interface, applies the same settings on all enabled links.
- **RS-FEC (RX Only)** check box when selected (default), available with framed 50GE/200GE/400GE interface, enables the use of the RS-FEC in RX; when cleared, ignores RS-FEC parity symbols, detection of FEC errors, and no correction of message symbols are performed.
- **FEC Degraded SER** check box when selected, enables the monitoring of local/remote degraded SER alarms. Only available when **RS-FEC (RX Only)** check box is selected.
- **Thresholds** is available when **FEC Degraded SER** is enabled and allows setting the threshold values used to raise and clear the **Local Degraded SER Detected** alarm. Refer to *FEC Degraded SER Thresholds* on page 990.

Setup

Interface

- **Remote Fault Emulation** check box when selected, generates **Remote Fault** ordered sets when a **Link Fault** is received. Available for optical rates 10GE and up with EtherBERT (all framing at the exception of **Unframed (Interop)** for 10GE and only framed for 25GE and up), Traffic Gen & Mon (framed), and eCPRI (framed).
- **Precoding**, when enabled (default), activates the precoding capability on the link. Available with DAC for 8 x 100GE / 2 x 400GE (4 Lanes) / 400GE (4 Lanes) / 800GE (8 Lanes).
- **Auto-Negotiation** check box when selected (default), available with BASE-T Electrical and 1GE Optical interfaces, indicates to the remote port which parameters to use. For 1GE Electrical interface or when using an active copper SFP, the **Auto-Negotiation** check box is selected and dimmed.

Note: *When the **Auto-Negotiation** check box is selected, the port **Speed**, **Duplex**, **Flow Control**, and **Local Clock** parameters can be set. Those settings are not applied immediately to the port, they are used only when the negotiation process is started and take effect only when the auto-negotiation succeeds. However current settings are applied immediately to the port when the **Auto-Negotiation** check box is cleared.*

- **Speed**, available with BASE-T Electrical interface, allows the selection of the interface rate: **10M**, **100M**, **1GE**, **2.5G**, **5GE**, **10GE**, or **Auto**. **Auto** is only available when the **Auto-Negotiation** check box is selected. The negotiated speed will be displayed next to the **Speed** field selection. The **10M** speed is not available with SyncE test application.
- **Duplex** is configurable for **10M** and **100M** electrical interfaces and choices depend on the test application: **Full Duplex** (default), **Half Duplex**, or **Auto** (available when the **Auto-Negotiation** check box is selected). For other rates the duplex is set to **Full Duplex**. **Half Duplex** is not available with an active copper SFP. The negotiated duplex will be displayed next to the **Duplex** field selection.

- **Flow Control** is configurable and choices depend on the test application: **Enable TX**, **Enable RX**, **Enable RX and TX**, **None** (default), or **Auto** (available when the **Auto-Negotiation** check box is selected). When the **Flow Control** is set to **None**, pause frames received are ignored.
- **Cable Mode**, available with BASE-T Electrical interface, indicates the cable mode based on the test application configuration.

Manual mode is selected when the **Auto-Negotiation** check box is cleared and allows selecting the type of cable: **MDI** (default) for straight through cable or **MDIX** for crossover cable.

Automatic mode is selected when the **Auto-Negotiation** check box is selected and allows the unit to automatically detect the MDI or MDIX cable type.

- **Local Clock**, available with 1GE electrical interface, allows setting the source of the clock: **Master** (default), **Slave**¹, or **Auto** (available when the **Auto-Negotiation** check box is selected). Not available with SyncE test application.
- **LLDP Neighbor**, available with EtherBERT L2 and up, allows listening and decoding LLDP packet content. Refer to *LLDP Neighbor* on page 1003.

LINK (Fibre Channel)

- **LINK** indicates the port link status: link up (green arrow), error or link down (red arrow), or awaiting incoming data to provide a status (gray arrow).

Note: *For alarms, refer to Fibre Channel on page 919 for more information.*

- **Link Degrade Signaling** check box when selected (cleared by default), available with FC 64X, allows monitoring the **Link Degrade** alarm.

1. **Slave** is the only available choice for Time Error / Wander test application.

- **Thresholds**, available when **Link Degrade Signaling** is enabled, allows setting the threshold values used to raise and clear the **Link Degrade** alarm. Refer to *Link Degrade Signaling Thresholds* on page 1002.
- **PSP (Link Protocol)** (Primitive Sequence Protocol) check box when selected (default) allows link management by activating the port.

LINK (CPRI)

- **LINK** indicates the port link status: link up (green arrow), error or link down (red arrow), or awaiting incoming data to provide a status (gray arrow).
- **Scrambling** check box when selected (default), available with **Unframed** test, enables the scrambler. Only available with CPRI rates 4.9152 Gbit/s and higher.
- **Sequence** indicates the last Startup Sequence State: **Standby (A)**, **L1 Sync (B)**, **Protocol (C)**, **L2 C&M (D)**, **Vendor (E)**, **Operation (F)**, or **Passive (G)**. **Frame Sync** indicates the synchronization status: green for active, red for inactive, or gray for pending.
- **Protocol** defines how the CPRI Startup Sequence negotiates the protocol version.
 - **Auto** can use protocol **Version 1** and **Version 2** during the negotiation.
 - **Version 1** negotiates the protocol with **Scrambling** disabled for all supported CPRI rates with the exception of 10.1 and 24.3 Gbits/s for which the **Scrambling** is enabled.
 - **Version 2** negotiates the protocol with **Scrambling** enabled. Available with CPRI rates: 9.8, 6.1, and 4.9 Gbit/s.

Protocol table indicates either the last received (**Version 1** or **Version 2**) or negotiated (**Auto**) protocol version. A light-red background indicates a Protocol version mismatch between the received value and the expected generated value.

- **C&M Channel** defines the kind of channel that will be used by the startup sequence for negotiation. When **Vendor** is set to **Ericsson** or **Samsung**, **C&M Channel** is set to **Disabled** and dimmed.
 - **Auto** (default): Overhead byte #Z.66.0 can use any of the HDLC rates and Overhead byte #Z.194.0 can use any of the Ethernet Subchannel in the negotiation process.
 - **HDLC**: Only overhead byte #Z.66.0 is used with the configured HDLC Rate during the negotiation process. Ethernet #Z.194.0 byte is set to rr00 0000 as it is disabled.
 - **Ethernet**: Only overhead byte #Z.194.0 is used with the configured Ethernet Subchannel during the negotiation process. HDLC #Z.66.0 byte is set to rrrr r000 as it is disabled.
 - **Disabled**: Both HDLC Rates and Ethernet Subchannel are disabled to simulate a Passive Link. Ethernet #Z.194.0 byte is set to rr00 0000 and HDLC #Z.66.0 byte is set to rrrr r000. Only available with **Base Station** emulation mode.

C&M table indicates either the received (**HDLC** or **Ethernet**) or negotiated (**Auto**) C&M for Ethernet subchannel and HDLC rates in Mbit/s. A red background indicates either a C&M type mismatch or HDLC Rate/Ethernet subchannel mismatch compared to the generated C&M channel. An arrow is displayed indicating which C&M Channel should normally be selected as per the standard rules.

- **Subchannel**, available with **Ethernet C&M Channel**, selects the Ethernet subchannel number: **20** to **63** where 63 is the lowest bit rate and 20 the highest.
- **Rate (Mbit/s)** is available with **HDLC** and **Ethernet C&M Channel**.

For **Ethernet**: Indicates the bit rate corresponding to the selected **Subchannel**.

For **HDLC**: Allows the selection of the HDLC bit rate. Choices depend on the selected CPRI interface rate. HDLC **Proprietary** is used to exercise a case where the Base Station is aware in advance of the

Setup

Interface

HDLC rate to use. The proprietary rate are not described in the standard. If an HDLC Proprietary is received during the negotiation process while the **C&M Channel** is set to **Auto**, the negotiation completes but no actual bit rate is reported as it is unknown. Similarly, if an equipment vendor uses an invalid rate (as per the CPRI Standard) during the negotiation process, this rate is reported as **Unspecified (Code)** where **Code** is a decimal value representing an invalid rate based on the configured interface rate.

CPRI Rate (Gbit/s)	HDLC Rate (Mbit/s)
1.2	0.240, 0.480, 0.960 (default), Proprietary
2.4	0.240, 0.480, 0.960, 1.920 (default), Proprietary
3.1	0.240, 0.480, 0.960, 1.920, 2.400 (default), Proprietary
4.9	0.240, 0.480, 0.960, 1.920, 2.400, 3.840 (default), Proprietary
6.1	0.240, 0.480, 0.960, 1.920, 2.400, 4.800 (default), Proprietary
9.8, 10.1, 24.3	0.240, 0.480, 0.960, 1.920, 2.400, 7.680 (default), Proprietary

- **RS-FEC** check box when selected (default) enables the use of RS-FEC (only available with 24.3G).

LINK (OBSAI Framed L2)

- **Sync** indicates the RX State Machine status: green for FRAME_SYNC, gray for pending, or red for other states. The TX and RX State Machines are also displayed.
- **Force TX Idle** check box when selected forces the TX State Machine to Idle state and when cleared (default) allows the TX State Machine to operate normally.

- **Scrambling** check box when selected (default) enables the scrambler. Available with OBSAI 6.1 Gbit/s rate.

TX Seed is the start value of the scrambler training process: **0x01** (default) to **0x7F** limited to the Seed values defined in the standard.

RX Seed is the current seed value detected.

- **Frame Clock Burst Generation** check box when selected (default) enables the generation of the frame clock burst message. Available with base station emulation mode.

RP3 Address (OBSAI Framed L2)

- **Source** identifies the source node of RP3 messages: **0000** to **1FFF**; default is **1234**. The RP3 address 1FFF corresponds to the empty message address that is dropped according to the standard.
- **Target** identifies the peer node that is receiving the RP3 messages: **0000** (default) to **1FFF**.
- **Peer Target** indicates the RP3 Peer Target Address; indicates a mismatch when displayed in red.
- **Address Mismatch** check box when selected, cleared by default, enables the monitoring of the mismatch between the **Source** and received **Peer Target** addresses.

RP3 Address (OBSAI Framed L2)

- **Type** identifies the type of RP3 Data Message generated by the OBSAI node: **WCDMA/FDD** (00010) - (default), **LTE** (01110), **GSM/EDGE** (00100), and **802.16** (01100).
- **Msg Grp/Frame (N_MG)** indicates the number of Message Group per Frame parameter.

Setup

Interface

- **Msg/Grp (M_MG)** indicates the number of Message per Message Group parameter.
- **Idle/Grp (K_MG)** indicates the number of Idle per Message Group parameter.

ESMC

Note: *Available with Time Error / Wander test application with Ethernet rates. Refer to Status Bar on page 44 for ESMC arrow status description.*

- **Generated QL** allows selecting the QL message that will be generated. See page 530 for the list of QL message (default is **QL-DNU/DUS**).
- **ESMC Monitoring** check box when selected (cleared by default) validates the presence of ESMC messages in the received frames.
- **Received QL** indicates the received Quality Level monitored even when the test is not started. Available when the **ESMC Monitoring** check box is selected.

WIS Button

Note: *The WIS button is available with 10GE WAN interface.*

- **J0 Trace** allows setting the trace value in 16 bytes format (default is **EXFO 10GigE**).
- **J1 Trace** allows setting the trace value in 16 bytes format allowing up to 15 bytes (a CRC-7 byte will be added in front for a total of 16 bytes). Default is **EXFO 10GigE**.

Note: *Trace values should be 7-bit T.50 suitable characters. The **Padding** drop list from the message keyboard allows selecting **Null** or **Space** to fill up the trace message up to 15-byte value automatically. The **Ctrl Char.** button from the trace message keyboard, allows selecting the required character (see Keyboard Usage on page 58).*

- **Path Signal Label (C2)** byte is allocated to indicate the content of the STS SPE, including the status of the mapped payload.

C2 (Hex.)	Description
00	Unequipped
01	Equipped - Non-Specific
1A ^a	10 Gbit/s Ethernet (IEEE 802.3)
FE	Test Signal, ITU-T 0.181

a. Default value.

Physical Interface

Note: For parallel interfaces, the following information is displayed for each optical lane. Not supported when **PHY Type** is set to **DAC**.

- **Optical Lane** indicates the optical lane number for parallel interfaces.

Optical Interface	Optical Lane Number
100GE (2 Lanes)	0 and 1
40GE (4 Lanes) [41.25 Gbit/s] 100GE (4 Lanes) [103.125 Gbit/s] 200GE (4 Lanes) [212.5 Gbit/s] 400GE (4 Lanes) [425 Gbit/s]	0 through 3
400GE (8 Lanes) [425 Gbit/s]	0 through 7

- **Laser** indicates the status of the laser: **ON** with the laser pictogram (emitting an optical laser signal) or **OFF**.
- **TX Power (dBm)** indicates, when supported, the transmit power level of the optical laser/lane in dBm.
- **Wavelength (nm)** indicates, when supported, the detected lane/laser wavelength.

- **RX Power (dBm)** indicates, when supported, the current received power level of the optical laser/lane in dBm.

Green: Power level in range.

Yellow: Power level out-of-range.

Red: Loss of signal or power level is close to damage.

Gray: Invalid operational range value or not available/supplied by the transceiver.

For parallel interfaces, **LO** and **HI** report respectively the current lowest and highest RX power levels from any lane. Not available with 50GE.

- **Min RX Power (dBm)** indicates, when supported, the minimum received power level of the optical laser/lane in dBm.
- **Max RX Power (dBm)** indicates, when supported, the maximum received power level of the optical laser/lane in dBm.
- **Laser ON/OFF** button, available with parallel interfaces, is used to activate the laser control per optical lane or for all lanes. Select the **Laser** check box to enable/disable the laser for each lane individually or select the **All Lanes** check box to enable/disable all optical lanes at once. Not available with 50GE.
- **Lasers OFF at Start-Up** check box when selected (cleared by default) automatically turns OFF the laser for serial interfaces or all lasers for parallel interfaces when starting the unit or when switching from one test application to another. However the laser remains ON, on a remote unit receiving a request for a DTS connection or a loopback command.
- **Modify Wavelength**, available with tunable SFP transceivers, refer to *Modify Wavelength (SFP)* on page 1022.
- **Power Range (dBm)** indicates the transceiver operational RX power range.

TX Frequency

Note: *The following TX Frequency information applies to serial interface only, refer to TX Frequency on page 307 for parallel interfaces. Not available when using an active copper SFP.*

- **Frequency (GHz)** indicates the frequency (actual frequency + Frequency offset) used for transmission.

Note: *Frequency offset is not available with OBSAI, CPRI in RRH emulation mode, RFC 6349 test application.*

- **Offset (ppm)** check box, when selected (cleared by default), allows setting the frequency offset that will be generated: ± 120 ppm for all Sync, Fibre Channel, and Ethernet rates at the exception of 10GE WAN which is ± 50 ppm; not supported for 10M electrical. Use the “+” or “-” button to respectively increment or decrement the frequency offset value based on the defined **Increment/Decrement Size**, or directly type the frequency offset value in the field.

Step Size (ppm) allows setting the increment/decrement value (from 0.1 to the maximum offset) that will be used when changing the frequency offset with the “+” or “-” button.

RX Frequency

Note: *The following RX Frequency information applies to serial interface only, refer to RX Frequency on page 309 for parallel interfaces. Not available when using an active copper SFP.*

- **Frequency (GHz)** indicates the frequency of the input signal.
- **Offset (ppm)** indicates the frequency offset between the standard rate specification and the rate at the input signal.

Setup

Interface

Note: For both *Frequency* and *Offset* the following background colors are used.

Background color	Description
Green	The frequency is in range.
Red	The frequency is out-of-range or LOC Lane.
Gray	Pending state.

- **Max. Negative Offset (ppm)** indicates the maximum negative frequency offset between the standard rate specification and the rate from the received signal.
- **Max. Positive Offset (ppm)** indicates the maximum positive frequency offset between the standard rate specification and the rate from the received signal.

Interface - DCO BERT

From the test menu, tap **Setup, Test Configurator**, the interface block, and on the **Interface** tab.

Note: *The **Local Degrade**, **Remote Degrade**, and **Remote PHY Fault** alarms are displayed; refer to Interface (DCO) on page 921 for more information. The **FDD** and **FED** alarms are displayed when their corresponding check box is selected; refer to Media RX FEC on page 921 for more information.*

- **FED** check box when selected (cleared by default), available when supported by the DCO transceiver, enables the use of the **FEC Excessive Degrade** function.
- **FDD** check box when selected (cleared by default), available when supported by the DCO transceiver, enables the use of the **FEC Detected Degrade** function.
- **Thresholds** button is available when either the **FDD** or **FED** check box is selected (refer to *Thresholds - FED/FDD* on page 1034).

Physical Interface

- **Laser** indicates the status of the laser: **ON** with the laser pictogram (emitting an optical laser signal) or **OFF**.
- **TX Power (dBm)** indicates the transmit power level of the optical laser/lane in dBm.
- **Wavelength (nm)** indicates the detected lane/laser wavelength.

Setup

Interface - DCO BERT

- **RX Power (dBm)** indicates the current received power level of the optical laser/lane in dBm.

Green: Power level in range.
Yellow: Power level out-of-range.
Red: Loss of signal or power level is close to damage.
Gray: Invalid operational range value or not available/supplied by the transceiver.
- **Lasers OFF at Start-Up** check box when selected, cleared by default, automatically turns OFF the laser for serial interfaces or all lasers for parallel interfaces when starting the unit or when switching from one test application to another. However the laser remains ON, on a remote unit receiving a request for a DTS connection or a loopback command.
- **Modify TX Power**, refer to *Modify TX Power - DCO BERT* on page 1020.
- **Modify Wavelength**, refer to *Modify Wavelength - DCO BERT* on page 1023.
- **Power Range (dBm)** indicates the transceiver operational RX power range.

TX Frequency

- **Frequency (GHz)** indicates the frequency (actual frequency + Frequency offset) used for transmission.
- **Offset (ppm)** check box, when selected (cleared by default), enables the frequency offset generation. The frequency offset range¹ is ± 30 ppm.
 - **Fixed** (default) uses a fixed offset frequency value for generation. Use the “+” or “-” button to respectively increment or decrement the frequency offset value based on the defined **Step Size (ppm)**, or directly type the frequency offset value in the field.

Step Size (ppm) allows setting the increment/decrement value (from 0.1 to the maximum offset) that will be used when changing the frequency offset with the “+” or “-” button.

- **Sweep** increases and decreases repetitively the frequency to cover the defined frequency offset range using a 1 ppm step at an average rate of up to 10 ppm/sec. Starting at offset 0 the min value is reached then repetitively increases to the maximum value then decreases to minimum value.

Range (ppm), available with **Sweep** frequency offset mode, allows setting the range for frequency sweep generation (-20 to 20 ppm by default).

1. The frequency offset range is guaranteed for a source signal at 0 ppm. In the event that the source signal already has an offset, then the output signal may exhibit an offset larger than the range specified.

Optical Metrics

When supported by the DCO transceiver, the following **Current** (live) metrics values are reported by the DCO transceiver:

- **CD (ps/nm)**, the Chromatic Dispersion, indicates the difference in propagation time between the different wavelengths.
- **CFO (MHz)**, the Carrier Frequency Offset, indicates the frequency offset between the carrier and the local oscillator.
- **DGD (ps)**, the Differential Group Delay, indicates the difference in propagation time between two polarizations.
- **OSNR (dB)**, the Optical Signal to Noise Ratio, indicates the ratio of service signal power to noise power within a valid bandwidth. It quantifies the degree of noise interference on the optical signal.
- **PDL (dB)**, the Polarization Dependent Loss, indicates the difference between the maximum and minimum values of the channel insertion loss or gain of the link due to a variation of the State of Polarization over all polarizations states.
- **SOPCR (krad/s)**, the State of Polarization Change Rate, indicates the rate of rotation of the two polarizations of the optical signal at the receiver.
- **SOPMD (ps²)**, the Second Order Polarization Mode Dispersion, indicates the derivative of the polarization dispersion vector with respect to the optical frequency.

Labels

For SONET/SDH BERT and SONET/SDH - DS_n/PDH BERT: From the test menu, tap **Setup, Test Configurator**, the interface block, and on the **Labels** tab.

For OTN-SONET/SDH BERT: From the test menu, tap **Setup, Test Configurator**, the protocol block, and on the **Labels** tab.

Labels

Note: *Selecting a Label byte to be generated automatically update the corresponding OH byte and vice versa. Refer to OH - SONET/SDH on page 727 for more information. Check boxes are coupled with settings from Labels on page 505.*

- **STS Path (C2) / AU Path (C2):** The C2 byte is allocated to indicate the content of the STS SPE / VC, including the status of the mapped payloads.

Generated allows the selection of C2 byte (refer to C2 on page 735).

- **PLM-P/UNEQ-P / HP-PLM/HP-UNEQ** check box when selected (cleared by default) enables the Payload Mismatch and STS/AU UNEQ monitoring.

Expected allows the selection of the expected C2 byte value (refer to C2 on page 735).

Setup

Labels

- **VT Path (V5) / TU Path (V5):** The V5 byte is allocated to indicate the content of the VT/TU path, including the status of the mapped payloads.

Generated allows the selection of the V5 byte value (refer to V5 on page 738).

- **PLM-V/UNEQ-V / LP-PLM/LP-UNEQ** check box when selected (cleared by default) enables the Payload Mismatch and VT/TU UNEQ monitoring.

Expected allows the selection of the expected V5 byte value (refer to V5 on page 738).

Link OAM

From the test menu, tap **Setup, Test Configurator**, and the **Link-OAM (802.3)** test block.

OAM Mode

Allows the selection of the OAM mode:

- **Active** (default) initiates the OAM discovery and send OAMPDU loopback control; doesn't respond to variable request nor generate Link Event Notification.
- **Passive** doesn't initiate OAM discovery nor send OAMPDU loopback control.

OAMPDU Destination MAC Address

Indicates and allows changing the default multicast OAM PDU destination MAC address: **01:80:C2:00:00:02**.

Default check box when cleared (default is selected), allows the configuration of the OAM PDU destination MAC address: **00:00:00:00:00:00** to **FF:FF:FF:FF:FF:FF**.

Pass/Fail Verdict

Pass/Fail Verdict check box when selected (default) enables the use of the pass/fail verdict. A global fail verdict is declared when any of the following condition is met: **Link Down**, any Link OAM alarm, **Remote Alarms** (if enabled), or **Remote Loopback** (if enabled).

- **Remote Alarms** check box when selected (default) considers the following alarms to declare the pass/fail verdict: **Critical Event**, **Dying Gasp**, and **Link Fault**.
- **Remote Loopback** check box when selected (default) considers successful/unsuccessful remote loopback request to declare the pass/fail verdict.

OAM Discovery Status

- **Local** reports the local OAM discovery status as follows:

Status	Description
Evaluating	OAM discovery is started.
Stable	OAM discovery is completed. Local OAM is satisfied with the remote OAM settings.
Unsatisfied	OAM discovery cannot complete successfully. Local OAM equipment is unsatisfied with the remote OAM settings.

- **Remote** reports the remote OAM discovery status as follows:

Status	Description
Evaluating	OAM discovery is started.
Stable	OAM discovery is completed. Remote OAM is satisfied with the local OAM settings.
Unsatisfied	OAM discovery cannot complete successfully. Remote OAM equipment is unsatisfied with the local OAM settings.

Loopback

- **Local and Remote**
 - **Status** indicates the status of the local and remote loopback: **Enabled** represents a Looped-Up condition and **Disabled** a Looped-Down condition.
 - **Enable/Disable** button allows respectively Looping-Up (**Enable**) or Looping-Down (**Disable**).

Local Details - iSAM

From the test menu, tap **Setup**, **Test Configurator**, and the **More** button from the **Local** block.

- **LINK** indicates the port link status (at the PCS level for parallel interfaces): link up (green arrow), error or link down (red arrow), or awaiting incoming data to provide a status (gray arrow).

Note: For 88260, a message is displayed when there is a warning or a problem with the transceiver system as described in the following table:

Icon	Displayed Message	Description
	Missing TA-...	No transceiver system detected
	Validating TA-...	Validation process is on-going
	Invalid TA-...	Validating process completed and incompatibility has been found

➤ Interface/Rate:

Unit	Interface/Rate	Connector
8870 8880	10GE LAN 1GE Optical 100M Optical	Port 1 - SFP + Port 2 - SFP +
	BASE-T Electrical (10/100/1000 Mbit/s and 2.5/5/10 Gbit/s)	Port 1 - RJ45 Port 2 - SFP + (RJ45) ^a
	10GE LAN 1GE Optical 100M Optical	Port 1 - SFP + Port 2 - SFP +
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - RJ45 Port 2 - SFP + (RJ45) ^a

Setup

Local Details - iSAM

Unit	Interface/Rate	Connector
88200NGE	100GE (4 Lanes) [103.125 Gbit/s]	Port 1 - CFP4 Port 2 - QSFP (QSFP28)
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port 2 - QSFP
	40GE (4 Lanes) [41.25 Gbit/s]	Port 2 - QSFP (QSFP+)
	10GE LAN 1GE Optical 100M Optical	Port 1 - SFP+
	BASE-T Electrical (10/100/1000 Mbit/s)	Port 1 - SFP+ (RJ45) ^a
88260	100GE (4 Lanes) [103.125 Gbit/s]	Port A1/A2/B1/B2 - QSFP28 Port A1/B1 - CFP4
	100GE (2 Lanes) [106.25 Gbit/s] 100GE (1 Lane) [106.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	40GE (4 Lanes) [41.25 Gbit/s]	Port A1/A2/B1/B2 - QSFP28
	10GE LAN 1GE Optical 100M Optical	Port A1/A2/B1/B2 - SFP28
	BASE-T Electrical (10/100/1000 Mbit/s and 2.5/5/10 Gbit/s)	Port A1/A2/B1/B2 - SFP28 (RJ45) ^a

a. BASE-T Electrical is supported when using an active copper SFP.

➤ **Connector** allows the selection of the physical port (see the **Interface/Rate** table above).

➤ **PHY Type** allows selecting the transceiver PHY type:

For 100GE (4 Lanes): **LR4/ER4** (default), **SR4**, **CWDM4**, **CLR4**, **AOC**, or **Other**. The PHY type when set to any except **LR4/ER4**, provides access to RS-FEC configuration (see page 317).

For 100GE (1 Lane): **DR1/FR1/LR1** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

For 100GE (2 Lanes): **SRBD** (default and dimmed); ensure the other end of the circuit has the FEC enabled.

- **RS-FEC** check box when selected (default), available with framed 100GE interface, enables the use of the RS-FEC; ensure both ends of the circuit have the FEC enabled. The **RS-FEC** check box should be selected when using a 100GBASE-SR4, 100G-CWDM4, or 100G AOC transceiver but may be cleared for testing purposes. For 100GE (1 Lane) and 100GE (2 Lanes) , the **RS-FEC** check box is selected and dimmed. Not available when the **PHY Type** is set to **LR4/ER4**.
- **Auto-Negotiation** check box when selected (default), available with BASE-T Electrical and 1GE Optical interfaces, indicates to the remote port which parameters to use. For 1GE Electrical interface and when using an active copper SFP, the **Auto-Negotiation** check box is selected and dimmed.

Note: When the **Auto-Negotiation** check box is selected, the port **Speed** can be set. This setting is not applied immediately to the port, it is used only when the negotiation process is started, and takes effect only when the auto-negotiation succeeds. However, the current setting is applied immediately to the port when the Auto-Negotiation check box is cleared.

- **Speed**, available with BASE-T Electrical interface, allows the selection of the interface rate: **10M**, **100M**, **1GE**, **2.5G**, **5GE**, **10GE**, or **Auto**. **Auto** is only available when the **Auto-Negotiation** check box is selected. The negotiated speed will be displayed next to the **Speed** field selection.

Note: **Full Duplex** is used and there is no **Flow Control** (pause frames received are ignored).

Setup

- **Lasers OFF at Start-Up** check box when selected (cleared by default) automatically turns OFF the laser for serial interfaces or all lasers for parallel interfaces when starting the unit or when switching from one test application to another. However the laser remains ON, on a remote unit receiving a request for a DTS connection or a loopback command.
- **Wavelength (nm)** indicates, when supported, the detected wavelength.

Modify button, available with tunable transceivers, is used to configure the transceiver wavelength. Refer to *Modify Wavelength (SFP)* on page 1022.

MAC

- **MAC** indicates the default and unique Media Access Control (MAC) address given to the Ethernet port.
- **VLAN ID/Priority** check box when selected (cleared by default) enables C-VLAN with VLAN Ethernet type of 8100 and allows setting both VLAN ID and priority.

VLAN ID allows selecting the VLAN ID: **0** through **4095** (default is **2**). Special VID values (IEEE Std 802.1Q-1998):

ID	Description
0	The null VLAN ID. Indicates that the tag header contains only user priority information; no VLAN identifier is present in the frame. This VID value must not be configured as a PVID, configured in any Filtering Database entry, or used in any Management operation.
1	The default PVID value used for classifying frames on ingress through a Bridge Port. The PVID value can be changed on a per-Port basis.
4095	Reserved for implementation use. This VID value shall not be configured as a PVID, configured in any Filtering Database entry, used in any Management operation, or transmitted in a tag header.

Priority allows selecting the VLAN priority: **0** (default) to **7**:

0	000 - Low Priority	4	100 - High Priority
1	001 - Low Priority	5	101 - High Priority
2	010 - Low Priority	6	110 - High Priority
3	011 - Low Priority	7	111 - High Priority

IP

- **IP Version** is set to **IPv4** and dimmed.
- **Automatic IP (DHCP)** check box when selected (cleared by default) allows obtaining an IP address dynamically from a DHCP (Dynamic Host Configuration Protocol) server.

Note: *IP Address, Subnet Mask, and Default Gateway are not configurable when the **Automatic IP (DHCP)** check box is selected.*

- **IP Address** allows entering the source IP address for the stream. The default setting is 10.10.x.y, where x and y are respectively the two least significant bytes of the port default MAC address.
- **Subnet Mask** allows entering the Subnet Mask (default is **255.255.0.0**).
- **Default Gateway** check box when selected (cleared by default) allows entering a default Gateway IP address (default is **0.0.0.0**).

Remote Discovery ID

Remote Discovery ID is used to easily identify this module in case another module is performing a discovery scan. Up to 16 alpha-numeric characters are allowed.

MAC/IP/UDP

Note: *Only available with Framed Layer 2 and higher.*

From the **Test** menu, tap **Setup**, **Test Configurator**, and...

For **RFC 2544** and **EtherBERT**, tap on the protocol block.

For **EtherSAM**, and **Traffic Gen & Mon**, tap on the protocol block, and on the **MAC/IP/UDP** tab.

For **FlexE BERT**, tap on the **Clients** block, and on the **MAC** tab.

For **eCPRI BERT**, tap on the **eCPRI FLOW** block, and on the **MAC** tab.

For **DCO BERT**, tap on the **Client** block, and on the **MAC/IP/UDP** tab.

- **Client**, available with DCO BERT multiple link client (ex. 4 x 100GE), allows selecting the client to be displayed.

Enable check box when selected (default), includes the selected client in the test. At least one of the clients must remain enabled.

- **Link**, available with EtherBERT multiple link interface (ex: 2 x 100GE), allows selecting the link to be displayed.

Enable check box when selected (default) includes the selected link in the test. At least one of the links must remain enabled.

- **Client ID**, available with FlexE BERT, allows selecting the client identification to be displayed.
- **Size (Gbit/s)**, available with FlexE BERT, indicates the size of the client ID.
- **Stream selection**, available with Traffic Gen & Mon, allows the configuration of up to 16 streams individually by either using the left/right arrow or by tapping over the stream numbers area then on a specific number.

- Service selection, available with EtherSAM, allows the configuration of up to 10 services individually by either using the left/right arrow or by tapping over the service numbers area then on a specific number.
- **Couple with Interface** check box when selected (default) couples the following settings with the interface (see *Network* on page 355) as default configuration; changing any Network setting re-applies the coupling process for that setting: **Frame Format**, **Network Layer**, **Source MAC Address**, and all **IP** and **VLAN**¹ settings. The **Source MAC Address** is always coupled when the Network Layer is set to IPv4 or IPv6. Not available when using **Provider Encapsulation**.
- **Discovery**, available with Traffic Gen & Mon for rates up to 25GE and for 100GE (*not supported at 100GE on 88200NGE*), allows scanning the remote interface to discover packet signatures that can be used for stream configuration. Refer to *Remote Interface Discovery* on page 1031.

Modify Frame Structure

Note: Refer to *Modify Frame Structure* on page 1010.

Preamble/SFD

Preamble/SFD indicates that the frame structure contains the Preamble and SFD.

EoE

Note: Available when **EoE** is selected as the **Provider Encapsulation** (see *Modify Frame Structure* on page 343).

1. VLAN is not coupled for EtherSAM.

Setup

MAC/IP/UDP

- **Source EoE MAC Address** indicates and allows changing (when the **Factory Default** check box is cleared) the default EoE Media Access Control (MAC) address. The default setting is **0E:01:00:xx:xx:xx**.
- **Destination EoE MAC Address** allows entering the destination EoE MAC address for the stream. The default setting is **0E:01:00:00:00:01**.
- **EoE VLAN**

Note: Available when **EoE VLAN** is enabled; refer to Modify Frame Structure on page 343.

VLAN ID allows selecting the VLAN ID: **0** through **4095** (default is **2**). Special VID values (IEEE Std 802.1Q-1998):

ID	Description
0	The null VLAN ID. Indicates that the tag header contains only user priority information; no VLAN identifier is present in the frame. This VID value must not be configured as a PVID, configured in any Filtering Database entry, or used in any Management operation.
1	The default PVID value used for classifying frames on ingress through a Bridge Port. The PVID value can be changed on a per-Port basis.
4095	Reserved for implementation use. This VID value shall not be configured as a PVID, configured in any Filtering Database entry, used in any Management operation, or transmitted in a tag header.

Priority allows selecting the VLAN priority: **0** (default) to **7**:

0	000 - Low Priority	4	100 - High Priority
1	001 - Low Priority	5	101 - High Priority
2	010 - Low Priority	6	110 - High Priority
3	011 - Low Priority	7	111 - High Priority

Type allows selecting the EoE VLAN type: **0x8100**, **0x88A8**, **0x9100**, **0xA100** (default), **0x9200**, or **0x9300**.

Drop Eligible when set to **Yes** (DEI = 1), the transmitted frames will be dropped first on receipt when congestion occurs under test. Drop Eligible is not available when VLAN type is 0x8100. This setting is set to **No** by default.

- **TTL** allows selecting the Time To Live: **0** to **255** (default is **64**).
- **ETag** allows selecting the Extended Tag: **0** to **255** (default is **1**).

PBB-TE

Note: Available when **PBB-TE** is selected as the **Provider Encapsulation** (see Modify Frame Structure on page 343).

- **Source B-MAC Address** indicates and allows changing (when the **Factory Default** check box is cleared) the default source Backbone MAC address: **00:03:01:xx:xx:xx**.
- **Destination B-MAC Address** allows entering the destination Backbone MAC address. The default setting is **00:00:00:00:00:00**.
- **B-VLAN** (EtherType: 0x88A8) is available when the **B-VLAN** check box is selected (see Modify Frame Structure on page 343).

VLAN ID allows selecting the VLAN ID: **0** through **4095** (default is **2**). Special VID values (IEEE Std 802.1Q-1998):

ID	Description
0	The null VLAN ID. Indicates that the tag header contains only user priority information; no VLAN identifier is present in the frame. This VID value must not be configured as a PVID, configured in any Filtering Database entry, or used in any Management operation.
1	The default PVID value used for classifying frames on ingress through a Bridge Port. The PVID value can be changed on a per-Port basis.
4095	Reserved for implementation use. This VID value shall not be configured as a PVID, configured in any Filtering Database entry, used in any Management operation, or transmitted in a tag header.

Setup

MAC/IP/UDP

Priority allows selecting the VLAN priority: **0** (default) to **7**:

0	000 - Low Priority	4	100 - High Priority
1	001 - Low Priority	5	101 - High Priority
2	010 - Low Priority	6	110 - High Priority
3	011 - Low Priority	7	111 - High Priority

Drop Eligible when set to **Yes** (DEI = 1), the transmitted frames will be dropped first on receipt when congestion occurs under test. This parameter is set to **No** by default.

➤ **I-TAG** (EtherType: 0x88E7)

SID allows selecting the Service Instance Identifier: **0** through **16777215** (default is **256**).

Priority allows selecting the VLAN priority: **0** (default) to **7**:

0	000 - Low Priority	4	100 - High Priority
1	001 - Low Priority	5	101 - High Priority
2	010 - Low Priority	6	110 - High Priority
3	011 - Low Priority	7	111 - High Priority

Drop Eligible when set to **Yes** (DEI = 1), the transmitted frames will be dropped first on receipt when congestion occurs under test. This parameter is set to **No** by default.

MAC

➤ **Source MAC Address** either indicates or allows changing the source Media Access Control (MAC) address. For multiple link interface, each link has its own MAC address. The MAC address is editable per stream/service when either:

- The **Network Layer** is set to **None** and the **MAC Address - Factory Default** check box (from the **Network** tab) is cleared.

- The **Network Layer** is set to **None**, the **MAC Address - Factory Default** check box (from the **Network** tab) is selected, and the **Couple with Interface** check box is cleared.
- For **DCO BERT**, the **MAC Address - Factory Default** check box (next to the **Source MAC Address**) is cleared.
- Using Provider Encapsulation.
- Using multiple link interface.
- **Factory Default** check box when selected (default) indicates that the factory source MAC address is used. Available with **DCO BERT**.
- **Destination MAC Address** allows entering the destination MAC address for the stream. The default setting is the source MAC address. The destination MAC Address field is not accessible when the **Resolve MAC Address** check box is selected.
- **Resolve MAC Address** check box, when selected (default), sends a request to the network to retrieve the MAC address corresponding to the selected destination IP address. This setting is coupled with the **Resolve MAC Address** check box from *IP (IPv4) / IPv6* on page 351. Not available when the **Network Layer** is set to **None** (refer to *Modify Frame Structure* on page 343).
- **OAM Quick Ping** button automatically starts the quick Ping utility for the stream destination MAC address and provides either a successful or failed result. The quick Ping uses 3 attempts, a delay of 1 second, and a Timeout of 5 seconds.
- **EtherType** is set to the following values by default and is configurable from **0x0000** to **0xFFFF** when the **Network Layer** is set to **None**:
 - 0x0000** when **Network Layer** is set to **None**
 - 0x0800** for IPv4
 - 0x86DD** for IPv6
 - 0x8847** for MPLS

Setup

MAC/IP/UDP

0x88B7 when **Network Layer** is set to **None** with EtherBERT test
0x8902 for S-OAM (available with EtherSAM)
0xAEFE for eCPRI Framed Layer 2 (no IP/UDP) and is not configurable

Note: Depending on the **Layer Mode** (available with EtherSAM), some **EtherType** require to set the configuration parameters through the **Modify Frame Structure** pop-up instead of configuring its value from this field; in this case a pop-up message is displayed indicating the reason. The following **EtherType** are not supported for **Mixed** layer mode: 0x0001 to 0x05FF and 0x8870.

- **OUI**, available when the frame format **802.3 SNAP** is selected, allows the selection of the Organizationally Unique Identifier (OUI):
RFC1042 (0x000000) - (default)
User Defined, available when **Network Layer** is set to **None**, allows entering the **OUI** value: **0x000000** (default) to **0xFFFFF**.
- **Source Flooding** and **Destination Flooding** check boxes when selected (cleared by default) allows generation of frames using source/destination MAC addresses flooding as follows: The first frame is transmitted starting with the least significant bits of the source/destination MAC address covered by the range set to 0; each subsequent frame is transmitted by incrementing the least significant bits by 1; when the upper limit of the range is reached, the source/destination MAC address restarts over with the least significant bits covered by the range set to 0. Available with Traffic Gen & Mon when the **Network Layer** is set to **None** (see page 1011).
- **Flood Range** is the range of the least significant bits used for the Source Flooding and/or Destination Flooding: **2 (1 bit)**, **4 (2 bits)**, **8 (3 bits)**, **16 (4 bits)**... up to **16777216 (24 bits)** (default). Available with Traffic Gen & Mon when the **Network Layer** is set to **None** (see page 1011).

VLAN

Note: *VLAN is only available when **VLAN Tag** is enabled; refer to Modify Frame Structure on page 343.*

For each VLAN tag enabled (C-VLAN/S-VLAN/E-VLAN) the following parameters are configurable.

- **VLAN ID** allows selecting the VLAN ID: **0** through **4095** (default is **2**). Special VID values (IEEE Std 802.1Q-1998):

ID	Description
0	The null VLAN ID. Indicates that the tag header contains only user priority information; no VLAN identifier is present in the frame. This VID value must not be configured as a PVID, configured in any Filtering Database entry, or used in any Management operation.
1	The default PVID value used for classifying frames on ingress through a Bridge Port. The PVID value can be changed on a per-Port basis.
4095	Reserved for implementation use. This VID value shall not be configured as a PVID, configured in any Filtering Database entry, used in any Management operation, or transmitted in a tag header.

- **Priority** allows selecting the VLAN priority: **0** (default) to **7**:

0	000 - Low Priority	4	100 - High Priority
1	001 - Low Priority	5	101 - High Priority
2	010 - Low Priority	6	110 - High Priority
3	011 - Low Priority	7	111 - High Priority

- **Type** allows selecting the VLAN Ethernet Type: **0x8100** (default for C-VLAN), **0x88A8** (default for S-VLAN), **0x9100** (default for E-VLAN), **0x9200**, or **0x9300**.
- **Drop Eligible** when set to **Yes** (DEI = 1), the transmitted frames will be dropped first on receipt when congestion occurs under test. Drop Eligible is not available when VLAN type is 0x8100. This setting is set to **No** by default.

MPLS

Note: *MPLS is only available when **MPLS Label** is enabled; refer to Modify Frame Structure on page 343.*

- **Label** allows the selection of the MPLS TX labels: **0** to **1048575** (default is **16**). Refer to for the list of MPLS labels.
- **COS** allows the selection of the Class Of Service.
 - 0 (000 - Low)** (default)
 - 1 (001 - Low)**
 - 2 (010 - Low)**
 - 3 (011 - Low)**
 - 4 (100 - High)**
 - 5 (101 - High)**
 - 6 (110 - High)**
 - 7 (111 - High)**
- **TTL** allows selecting the Time to Live: **0** to **255** (default is **128**).

S-OAM

*Only available with EtherSAM when the **S-OAM** check box is selected; refer to Modify Frame Structure on page 343.*

MEG/MD Level allows the selection of the Maintenance Entity Group Level / Maintenance Domain Level: **0** to **7** (default).

IP (IPv4) / IPv6

For **IPv4** only:

- **Automatic IP (DHCP)** check box when selected (cleared by default) allows obtaining an IP address dynamically from a DHCP (Dynamic Host Configuration Protocol) server.

Note: *Source IP Address, Subnet Mask, and Default Gateway are not configurable when the Automatic IP (DHCP) check box is selected.*

- **Source IP Address** allows entering the source IP address for the stream. The default setting is 10.10.x.y, where x and y are respectively the two least significant bytes of the port default MAC address. Not available when the **Automatic IP (DHCP)** check box is selected.
- **Destination IP Address** allows entering the destination IP address for the stream. The default setting is the source IP address.
- **Subnet Mask** allows entering the Subnet Mask (default is **255.255.0.0**).
- **Default Gateway** check box when selected (cleared by default) allows entering a default Gateway IP address (default is **0.0.0.0**).
- **TTL** allows selecting the Time to Live: **1** to **255** (default is **128**).
- **IP TOS/DS** allows entering either an hexadecimal value, **00** (default) to **FF**, or tap on the **TOS/DS Config** button to set each TOS or DS parameter individually (Refer to *TOS/DS Config* on page 1037). Changing the **IP TOS/DS** value will affect the **TOS/DS Config** settings and vice versa.

For **IPv6** only; refer to *IPv6 Address Configuration* on page 997 for **Source Link-Local IPv6 Address**, **Source Global IPv6 Address**, and for additional settings.

- **IPv6 Destination Address** allows selecting the destination IP address for the stream that must start with **FE80**. The accepted range is from **0000:0000:0000:0000:0000:0000:0001** to **FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF**. The default address is **2001::**. When the **Address** field is selected for editing using virtual keyboard, the **Previous IPs** button appears allowing the selection of a previously configured IP address.
- **Flow Label** is a number used to identify a series of related packets from a source to a destination: **0** (default) to **1048575**.
- **HOP Limit TTL** sets the Time To Live value: **1** to **255** (default is **128**).
- **Traffic Class (TOS/DS)** allows entering either an hexadecimal value, **00** (default) to **FF**, or tap on the **TOS/DS Config** button to set each TOS or DS parameter individually (Refer to *TOS/DS Config* on page 1037). Changing the **IP TOS/DS** value will affect the **TOS/DS Config** settings and vice versa.

For both IPv4 and IPv6:

- **Quick Ping** button automatically starts the quick Ping utility for the stream destination IP address and provides either a successful or failed result. The quick Ping uses 3 attempts, a Delay of 1 second, a Timeout of 2 seconds, and a Data Size of 32 Bytes. Refer to *Ping & Trace Route* on page 750 for more options.

- **Resolve MAC Address** check box, when selected (default), sends a request to the network to retrieve the MAC address corresponding to the selected destination IP address. This setting is coupled with the **Resolve MAC Address** check box from *MAC* on page 346. The Resolve MAC address status is displayed as follows:

Status	Description
--	The Resolve MAC address is not enabled.
Resolving	The MAC address is being resolved.
Resolved	The MAC address is resolved.
Failed	The MAC address cannot be resolved.

- **Source IP Multiplier** check box, when selected (cleared by default), allows changing the 7 LSB (Least Significant bit) of the source IP address as specified in the range: **1-128** (default) or **0-127**. Not available with eCPRI.

UDP

- **Source Port** allows configuring the source UDP port number: **0** to **65535** (default is **49184**).
- **Destination Port** allows configuring the destination UDP port number: **0** to **65535** (default is **7 (echo)**).

TCP

- **Source Port** allows configuring the source TCP port number: **0** to **65535** (default is **49184**).
- **Destination Port** allows configuring the destination TCP port number: **0** to **65535** (default is **7 (echo)**).

eCPRI

Message Type allows selecting the message type to be generated: **IQ Data**, **Bit Sequence**, **Real-Time Control Data**, or **Generic Data Transfer**.

Payload

For RFC 2544 and EtherBERT, indicates that the frame structure contains a Payload.

For Traffic Gen & Mon, allows the selection of both user defined header and pattern. Payload is not configurable when the **QoS Metrics Tags Insertion** check box is selected (see the **Global** tab).

- **User Defined Header** check box when selected (cleared by default) allows defining a 16-byte header.
- **Pattern** allows the selection of a pattern: **00** to **FF** (default is **CC**).

FCS

FCS indicates that the frame structure contains an Ethernet FCS.

Network

From the test menu tap **Setup**, **Test Configurator**, the interface block, and the **Network** tab.

Note: *For Through Mode test application, the Network tab is only available for the Primary Port but the configured parameters apply to both ports.*

- **Link**, available with EtherBERT multiple link interface (ex: 2 x 100GE), allows selecting the link to be displayed.

Enable check box when selected (default) includes the selected link in the test. At least one of the links must remain enabled.

MAC

- **MAC Address** indicates and allows changing, when the **Factory Default** check box is cleared, the default and unique Media Access Control (MAC) address given to the Ethernet port.
- **Factory Default** check box when selected (default) indicates that the factory source MAC address is used.
- **Frame Format** (layer 2) allows selecting **Ethernet II** (default) or **802.3 SNAP** as the frame format. Only **Ethernet II** is available with 25G/50G/200G/400G, multiple link interface, and eCPRI.

IP

- **IP Version** allows selecting **IPv4** (default) or **IPv6**¹. **IP Version** is coupled for all links with multiple link interface.

For **IPv4** only:

- **Automatic IP (DHCP)** check box when selected (cleared by default) allows obtaining an IP address dynamically from a DHCP (Dynamic Host Configuration Protocol) server.

Note: ***IP Address**, **Subnet Mask**, and **Default Gateway** are not configurable when the **Automatic IP (DHCP)** check box is selected.*

- **IP Address** allows entering the IP address of the port. The default address is 10.10.x.y, where x and y are respectively the two least significant bytes of the port default MAC address.
- **Subnet Mask** allows entering the Subnet Mask (default is **255.255.0.0**).
- **Default Gateway** check box when selected (cleared by default) allows entering a default Gateway IP address (default is **0.0.0.0**).

For **IPv6** only; refer to *IPv6 Address Configuration* on page 997 (**Config...** button) for **Link-Local IPv6 Address**, **Global IPv6 Address**, **Default Gateway**, and for additional settings.

1. Not supported with: 50GE, 800GE, 100GE (88460 for RFC 2544 and Smart Loopback), eCPRI, TCP Throughput, 1588 PTP GM Emulation Mode using G.8275.2 profile. For 25G, only supported with Traffic Gen & Mon.

VLAN

- **VLAN Tag** check box when selected (cleared by default) enables and allows setting up to 3 stacked VLANs. For each VLAN tag enabled (C-VLAN, S-VLAN, E-VLAN) the following parameters are configurable.
- **VLAN ID** allows selecting the VLAN ID: **0** through **4095** (default is **2**). Special VID values (IEEE Std 802.1Q-1998):

ID	Description
0	The null VLAN ID. Indicates that the tag header contains only user priority information; no VLAN identifier is present in the frame. This VID value must not be configured as a PVID, configured in any Filtering Database entry, or used in any Management operation.
1	The default PVID value used for classifying frames on ingress through a Bridge Port. The PVID value can be changed on a per-Port basis.
4095	Reserved for implementation use. This VID value shall not be configured as a PVID, configured in any Filtering Database entry, used in any Management operation, or transmitted in a tag header.

- **Priority** allows selecting the VLAN priority: **0** (default) to **7**:

0	000 - Low Priority	4	100 - High Priority
1	001 - Low Priority	5	101 - High Priority
2	010 - Low Priority	6	110 - High Priority
3	011 - Low Priority	7	111 - High Priority

- **Type** allows selecting the VLAN Ethernet Type: **0x8100** (default for C-VLAN), **0x88A8** (default for S-VLAN), **0x9100** (default for E-VLAN), **0x9200**, or **0x9300**.
- **Drop Eligible** when set to **Yes** (DEI = 1), the transmitted frames will be dropped first on receipt when congestion occurs under test. Drop Eligible is not available when VLAN type is 0x8100. This setting is set to **No** by default.

Network / Network Details - iSAM

From the test menu, tap **Setup**, **Test Configurator**, and the **More** button from the **Network** block.

Network Block

The **Network** block, available before clicking on the **More** button, allows configuring the basic network settings, click on **More** for all settings.

The total bandwidth (when the **Performance Test** is enabled) and the estimated test duration are displayed.

NAT LAN/WAN indicate presence of NAT (Network Address Translation) router. The NAT router is automatically detected and graphically displayed with LAN/WAN indication.

When there is a NAT at the remote site, it is required to create UDP/TCP port 62819 forwarding rule on this NAT router to allow DTS communication. In addition, when there is a NAT in both directions (L->R and R->L), it is required to create port forwarding rules on the NAT router located at the remote side for UDP port 7.

iSAM

Layer is the layer used for all services. The layer is fixed to **L3/L4** when the **RFC 6349 Test on Service 1** is enabled.

L2 (default) for Ethernet II.

L3/L4 for Ethernet II, IP (IPv4), and respectively UDP for the Configuration and Performance subtests, and TCP for RFC-6349 subtest.

Classification defines the traffic classification used in the provider network: **VLAN ID**, **VLAN Priority**, or **DSCP** (available with layer L3/L4).

Note: *At least one check box (**Configuration Test**, or **Performance Test**, or **RFC 6349 Test on Service 1**) has to be selected.*

Configuration Test check box when selected (default) verifies if the network configuration is correct for each service before starting a long term test (**Performance Test**).

Set the **Configuration Test** duration in seconds per step enabled (**CIR** and **CIR+EIR**): 5 seconds (default) to 60 seconds.

Performance Test check box when selected (default) verifies that the SLA parameters (FD, IFDV, and FLR) are met over time by running multiple services simultaneously. Results are measured and compared to the configured thresholds to declare the pass/fail verdicts. The *Περιορισμένη* Test is only performed for services that have their **CIR** check box selected.

Set the **Performance Test** duration in hh:mm format: 1 minute to 24 hours (default is 10 minutes).

RFC 6349 Test on Service 1 check box when selected (cleared by default) verifies that the Ethernet service is able to properly carry TCP traffic; Service 1 is used to performed the RFC 6349 test. Enabling the **RFC 6349 Test on Service 1** automatically set the operation mode to DTS and the layer to **L3/L4**; direction is bidirectional, max MTU is 1500 bytes, multiple connections as well as Path MTU Discovery are enabled.

Duration: The field next to the **RFC 6349 Test on Service 1** check box is used to set the duration of the TCP Throughput phase per direction in hh:mm format: 1 minute (default) to 24 hours.

Threshold (% of ideal) allows entering the TCP Throughput as a percentage of the Ideal L4 Throughput that will be used to declare the pass/fail verdict for both directions: **0** to **100** %; default is **95** %.

Services

Services allows the selection of the number of services: **1** (default) to **4**.

The following parameters are configurable individually for each service:

Profile: Two profiles are defined by default as well as **User Profile**. Profiles are user definable and up to 25 profiles can be predefined (see *Customizable Profiles* on page 365).

Profile	Parameter				
	Frame Type	Frame Size	VLAN Priority	DSCP	Performance Criteria
Priority	EMIX	64, 128, 512, 1024, and 1518 ^a	7	CS7 ^b	MEF Metro High
Best Effort			0	CS0 ^b	MEF Metro Low

- a. The minimum frame size value is adjusted according to the frame structure and components selected as shown in the table of **Frame Size** on page 362.
- b. ECN is not present and not configurable but is set to 00 (Not-ECT).

Note: *At least one check box (**CIR** or **CIR+EIR**) has to be selected. Thus, clearing the CIR check box while CIR+EIR check box is cleared, will automatically select the CIR+EIR check box and vice versa.*

Note: *For Dual Test Set, the CIR and CIR+EIR values are the same (Symmetric) for both **L->R** and **R->L** directions.*

CIR (Mbit/s) (Committed Information Rate) check box when selected (default) sets the service rate guaranteed by the SLA (default is **1 Mbit/s**).

CIR+EIR (Mbit/s) check box when selected (cleared by default) sets the best effort allowed traffic for the service. The EIR (Excess Information Rate) value is equal to the CIR+EIR value minus CIR (default is 1.5 Mbit/s). The threshold value is configurable from the defined CIR value for this service to the line rate minus the total CIR from all services.

Frame Type allows the selection of the frame type and frame size(s):

Fixed allows setting a single frame size.

EMIX allows setting up to 8 EMIX frame sizes. The EMIX frame sequence is repeated until the test ends. Default are **64, 128, 512, 1024, and 1518**.

Quantity allows selecting the number of EMIX frame sizes: 2 to 8 frames (default is **5**).

Setup

Network / Network Details - iSAM

► Frame Size

Frame Type	Frame Size (bytes)
Fixed (default)	64 ^a (default) to 16000 ^b
EMIX	64 ^a to 16000 ^b

- a. The minimum value is adjusted according to the frame structure and components selected as shown in the following table.
- b. The maximum frame size is limited to 10000 for 10/100/1000Mbps electrical interface.

The following table lists each component that may affect the minimum size value.

Component	Description
C-VLAN	4 bytes
UDP	8 bytes
Ethernet Header	14 bytes
IPv4	20 bytes
Using DTS	4 bytes

Note: *Sending traffic with frame size > 1518 in switched network may result in losing these frames.*

Classification allows the selection of the value for the selected classification:

VLAN ID allows selecting the VLAN ID: **0** through **4095** (default is **2**).
Special VID values (IEEE Std 802.1Q-1998):

ID	Description
0	The null VLAN ID. Indicates that the tag header contains only user priority information; no VLAN identifier is present in the frame. This VID value must not be configured as a PVID, configured in any Filtering Database entry, or used in any Management operation.
1	The default PVID value used for classifying frames on ingress through a Bridge Port. The PVID value can be changed on a per-Port basis.
4095	Reserved for implementation use. This VID value shall not be configured as a PVID, configured in any Filtering Database entry, used in any Management operation, or transmitted in a tag header.

VLAN Priority allows selecting the VLAN priority: **0** (default) to **7**:

0	000 - Low Priority	4	100 - High Priority
1	001 - Low Priority	5	101 - High Priority
2	010 - Low Priority	6	110 - High Priority
3	011 - Low Priority	7	111 - High Priority

DSCP allows selecting the DSCP Codepoints value (**000000 (CS0)** by default):

000000 (CS0)	110000 (CS6)	010100 (AF22)	100100 (AF42)
001000 (CS1)	111000 (CS7)	010110 (AF23)	100110 (AF43)
010000 (CS2)	001010 (AF11)	011010 (AF31)	101110 (EF)
011000 (CS3)	001100 (AF12)	011100 (AF32)	110011 (51)
100000 (CS4)	001110 (AF13)	011110 (AF33),	110110 (54)
101000 (CS5)	010010 (AF21)	100010 (AF41)	User Defined ^a

- a. For **User Defined** enter the DSCP binary value.

Setup

Performance Criteria offers the following performance criteria by default:

Name	≤ FD (ms)	≤ IFDV (ms)	≤ FLR (%)
MEF Metro High	10	3	0.01
MEF Metro Med	20	8	0.01
MEF Metro Low	37	Disabled	0.1
MEF Regional High	25	8	0.01
MEF Regional Med	75	40	0.01
MEF Regional Low	125	Disabled	0.1
MEF Continental High	77	10	0.025
MEF Continental Med	115	40	0.025
MEF Continental Low	230	Disabled	0.1
MEF Global High	230	32	0.05
MEF Global Med	250	40	0.05
MEF Global Low	390	Disabled	0.1

User Performance allows the configuration of the following criteria per service: **FD (Latency)**, **IFDV (Jitter)**, and **FLR (Frame Loss)**.

*The **Performance Criteria** list is user definable and up to 25 performance criteria can be created (see Customizable Performance Criteria on page 367).*

Customizable Profiles

As previously mentioned, 2 profiles are available by default and up to 25 profiles can be predefined by editing the profile's text file (iSAMProfilesTemplate.ini) using a text editor like **Notepad**. The file is located under ProgramData\EXFO\ProtocolProducts\.

Example of profile's text file:

```
[Priority]
Frame Type = EMIX
Frame Size = 64, 128, 512, 1024, 1518
VLAN Priority = 7
DSCP = CS7
Performance Criteria = MEF Metro High

[Best Effort]
Frame Type = EMIX
Frame Size = 64, 128, 512, 1024, 1518
VLAN Priority = 0
DSCP = CS0
Performance Criteria = MEF Metro Low
```

Setup

Each profile entry has the following parameters.

- **Profile Name:** 1 to 16 characters. All ASCII characters from 32 to 126 decimal are supported.
- **Frame Type:** Enter **Fixed** or **EMIX**. When the frame type is missing from a profile, **EMIX** is used.
- **Frame Size** (see **Frame Size on page 362** for possible values); when the frame size is missing from a profile, default value(s) is used:
For **Fixed**: Enter a unique frame size.
For **EMIX**: Enter 2 to 8 frame sizes with a comma between each entry.
- **VLAN Priority**¹ (optional): Enter the priority number.
- **DSCP**¹ (optional): Enter either the DSCP name or its binary value.
- **Performance Criteria**¹: Enter the name of the performance criteria. When the **Performance Criteria** is missing from a profile or is not available from the user profile file, the **User Performance** criteria is used.

When a parameter is missing from a profile, the default value of the missing parameter is used.

The value of a parameter is validated to ensure it is within the supported range; otherwise the profile entry is unsupported.

If the profile file contain more than 25 profiles, only the first 25 valid profiles are retained.

1. See *Classification allows the selection of the value for the selected classification:* on page 362 for possible values.

Customizable Performance Criteria

As previously mentioned, factory performance criteria are available and up to 25 performance criteria can be defined by editing the performance criteria text file (iSAMPerformanceCriteriaTemplate.ini) using a text editor like **Notepad**. The file is located under ProgramData\EXFO\ProtocolProducts\.

Example of performance criteria's text file:

```
[MEF Metro High]
FD = 10
IFDV = 3
FLR = 0.01

[MEF Metro Med]
FD = 20
IFDV = 8
FLR = 0.01

[MEF Metro Low]
FD = 37
IFDV =
FLR = 0.1
```

Each profile entry has the following parameters:

- Performance Criteria Name: 1 to 16 characters. All ASCII characters from 32 to 126 decimal are supported.
- Frame Delay (FD) Threshold: 0.001 ms (0.005 ms for 10M) to 8000 ms.
- Inter-Frame Delay (IFDV) Threshold: 0.001 ms (0.005 ms for 10M) to 8000 ms.
- Frame Loss Ratio (FLR) Threshold: 0.00 % to 5.00 %.

If the threshold value for a parameter is not defined, it is considered as disabled (as in the example above for IFDV =).

The value of a parameter is validated to ensure it is within the supported range; otherwise the performance criteria entry is unsupported.

ODU Channels - Global

From the test menu, tap **Setup, Test Configurator, ODU Channels**, and on the **Global** tab.

Note: *The ODU channels global configuration applies to all channels.*

Pattern

The icon next to the **Pattern** label indicates the status of the received pattern signal. Refer to *Status Bar* on page 44 for more information.

No Pattern Analysis (Live) check box when cleared (default), monitors the received traffic pattern. For live traffic, the **No Pattern Analysis (Live)** check box should be selected as the traffic is a live pattern thus there is no analysis of pattern loss and bit error.

Pattern sets the test pattern that will be generated: **PRBS31** (default) or **NULL Client** (0000).

Invert check box, when selected (cleared by default), inverts the generated/expected test pattern meaning that every 0 will be changed for 1 and every 1 for 0. For example, the pattern 1100 will be sent as 0011.

Bit Error

Pass/Fail Verdict enables and sets the bit error rate/count threshold prior to run the test. This allows for a simple pass/fail verdict, leaving no room for misinterpretation of the test results. To enable the pass/fail verdict, select either **Bit Error Count** or **Bit Error Rate** (default is **Disabled**).

BER Threshold allows entering the maximum bit error count/rate allowed before declaring a fail verdict: **0** (default) to **999999** for count; **1.0E-14** to **1.9E-01** (default is **1.0E-12**) for rate.

Service Disruption

The Service Disruption Time (SDT) corresponds to the duration associated to a defect that occurred in the network. For example a disruption that occurs during a network switching from the active channels to the backup channels or vice versa. The service disruption measurements are cleared when changing the criteria.

Disruption Monitoring check box when selected (disabled by default) enables the disruption time measurements. However, the measurement will only start if the test is already started, or when the test will be started. Clearing the **Disruption Monitoring** check box or stopping the test, stops the measurement without clearing the results. Starting the test while the **Disruption Monitoring** check box is selected resets the results.

Defect allows choosing on which layer and defect the service disruption time test will be performed. Choices depend on the selected test path.

Layer	Defect
ODUk	LOFLOM, AIS, OCI, LCK, BDI, BIP-8, BEI
OPUk	AIS, CSF

The Service Disruption Time measurement supports a parent defect approach where the SDT measurement is triggered when the selected defect or a higher defect in the signal structure hierarchy is detected.

No Defect Time (ms) allows selecting the period without any defects before stopping SDT measurement: **0.005 ms** to **2000 ms** (default is **300 ms**).

Pass/Fail Verdict check box when selected (cleared by default) enables the service disruption pass/fail verdict and allows setting the threshold value.

Setup

ODU Channels - Global

SDT Threshold (ms) allows configuring the acceptable maximum service disruption time before failing the test: **0.001** to **299999.999 ms** (default is **50 ms**).

Channel Summary

The **Channel Summary** table indicates the ODU mapping type for each channel number.

Payload Type indicates the mapped ODU payload type.

Quantity of Channels indicates the number of channels part of the test.

Unused Capacity indicates the number of tributary slot not used; either configured as background traffic or Unallocated.

Modify Trib Slots/Channels, refer to *Modify Trib Slots/Channels (Multi-Channel OTN)* on page 1016.

Restore Multi-Channel OTN Defaults

Reverts the test application to its default factory settings.

Path OAM

From the test menu, tap **Setup**, **Test Configurator** and tap on the **Clients** block and on the **Path OAM** tab.

- **Path OAM** check box when selected (cleared by default) enables the use of Path OAM configuration and monitoring including APS function.
- **OAM Responder** check box when selected (default) enables the path OAM responder to respond to the 2DMM messages.
- **Global Pass/Fail Verdict** check box when selected (default) enables the global Path OAM pass/fail verdict.
- **Path OAM on Client ID** allows selecting on which client ID the path OAM applies.

Basic OAM

- **CC Function** check box when selected (default) allows generating and monitoring Basic OAM messages.
- **Period** allows selecting the transmission period of the Basic OAM Message: **16K**, **32K**, **64K** (default), **512K**.

Bidirectional Delay Measurement

- **2DM Function** check box when selected (cleared by default) enables the bidirectional delay measurement function.
- **TX Enable** check box when selected (cleared by default) allows transmitting 2DMM messages once the test is started. When the delay measurement generation is not continuous, the **TX Enable** check box is automatically cleared once all messages have been transmitted.
- **Period** allows entering the transmission period of the 2DMM multi-block messages: **1 s**, **10 s** (default), or **1 min**.

Setup

Path OAM

- **Continuous** check box when selected (default) enables the continuous delay measurement generation.
- **Count** allows entering the quantity of 2DMM multi-block messages to be transmitted when not in **Continuous** mode: **1** to **1000** (default is **10**).

Connectivity Verification

- **CV Function** check box when selected (cleared by default) allows generating and monitoring CV messages once the test is started.
- **Period** allows entering the transmission period of the CV multi-block message: **1 s**, **10 s** (default), or **1 min**.
- **SAPI** (Source Access Point Identifier) allows setting the generated SAPI message (**EXFO SAPI** by default) and the expected SAPI message (**EXFO SAPI** by default) when the Expected check box is selected. A maximum of 16 characters is allowed.
- **DAPI** (Destination Access Point Identifier) allows setting the generated DAPI message (**EXFO DAPI** by default) and the expected DAPI message (**EXFO DAPI** by default) when the Expected check box is selected. A maximum of 16 characters is allowed.
- **Expected** check box when selected (cleared by default) allows setting the expected SAPI and DAPI messages. When enabled, a mismatch detection is performed between the generated and expected messages.

CS Type

- **CS Type Function** check box when selected (cleared by default) allows the generation and monitoring of CS Type messages once the test is started.
- **Period** allows entering the CS Type period: **1 s**, **10 s** (default), or **1 min**.
- **Type** allows selecting the CS Type to be generated: **Channel Not Loaded**, **Ethernet** (default), **SDH**, **FC**, or **CPRI**.
- **Expected** check box when selected (cleared by default) performs a mismatch detection between the generated and expected CS Type: **Channel Not Loaded**, **Ethernet** (default), **SDH**, **FC**, or **CPRI**.

Profile - DCO BERT

From the test menu, tap **Setup**, **Test Configurator**, the **Client** block, and the **Profile** tab.

- **Client**, available with multiple link client (ex. 4 x 100GE), allows selecting the client to be displayed.
- **Enable** check box when selected (default), includes the selected client in the test. At least one of the clients must remain enabled.

Ethernet Frame

- **Frame Size (Bytes)** allows selecting the frame type (**Fixed** (default) or **EMIX**) and the frame size (**64**¹ to **16000**²). Sending traffic with frame size > 1518 in switched network may result in losing all frames.

The following table lists each component that may affect the minimum size value.

Component	Description
VLAN	4 bytes per VLAN (up to 3 VLAN)
UDP	8 bytes
Ethernet Header	14 bytes
IPv4	20 bytes
IPv6	40 bytes

EMIX button is available when **EMIX** frame size is selected. The EMIX frame sequence is repeated continuously (refer to *EMIX* on page 988).

1. The minimum frame size will be adjusted according to the frame structure and components selected.
2. The maximum frame size is limited to 10000 for 10/100/1000Mbps electrical interface.

Shaping

- **TX Rate** allows the selection of the transmission rate in percentage of utilization (100 percent by default), Mbit/s, Gbit/s, Frame/s, or IFG. For Ethernet, the maximum percentage is 105 percent depending on the frame size selected.
- **Enable TX** check box is automatically selected when starting the test allowing stream generation. The **Enable TX** check box may also be selected or cleared while the test is running.

Profile - FlexE BERT

From the test menu, tap **Setup**, **Test Configurator** and tap on the **Clients** block and on the **Profile** tab.

Client ID and Size (Gbit/s)

- **Client ID** allows selecting the client identification to be displayed.
- **Size (Gbit/s)** indicates the size of the client.

Ethernet Frame

Frame Size (Bytes) allows entering the frame size. The range is from **64** to either **2000** for multiple clients or **10000** for a single client.

Shaping

- **TX Rate** allows the selection of the transmission rate in **Mbit/s** or **Gbit/s**.
- **Enable TX** check box when selected (default) generates streams for the selected client ID when the test is started while the **TX** button is enabled (refer to *Start/Stop | TX Button* on page 805). The **Enable TX** check box may also be selected or cleared while the test is running.

Remote Details - iSAM

The remote block automatically scans the remote modules for **DTS** and **Remote Loopback** modes and allows the selection of the remote module that is used to loop back the traffic via **Smart Loopback** or EtherSAM in **Dual Test Set** (DTS) mode for simultaneous bidirectional results. If the connection with the remote module is not manually established, the remote connection process is automatically performed when starting the test.

From the test menu, tap **Setup**, **Test Configurator**, and the **More** button from the **Remote** block.

Note: *Not available with **Manual Loopback** remote operation mode.*

For both DTS and Remote Loopback Operation Modes

➤ Discovered Remotes

The modules are discovered dynamically and listed with their **Name**, **IP** address, **Status**, **Connection**, and **Preferred** information. **Name** and **Status** are only available for remote 88000 Series, and 85100G modules. Only modules from the same subnet are automatically discovered. To access a module from a different subnet, use the **Add** button.

Setup

Remote Details - iSAM

- **Preferred** check box when selected indicates that this module is part of the preferred module's list. Preferred remote modules will be considered first during the automatic connection process as follows:

Priority	Preferred or not	Status
1	Preferred	Available
2		Taken
3		Test in Progress
4	Non Preferred	Available
5		Taken
6		Test in Progress

- **Status**

Background Color	Status	Description
Green	Ready	Connected with the local unit
	Running	
Yellow	Taken	Connected with another unit
Red	Test in Progress	Test in progress with another unit
No color	Unreachable	Preferred remote does not reply
	Available	Not connected

- **Connection** indicates **Connected** when the local unit is connected to a remote module.
- **Add** button is used to add a preferred remote module to the preferred list. Enter the IP address of the remote module and tap **OK**. This is useful to access a module from a different subnet.

For Remote Loopback Operation Mode

- **Loop-Up** button establishes the connection with the selected remote module and sets the remote module into **Smart Loopback** test application.

Following a successful loop-up, the IP address of the remote module will be used as the destination IP address for the test.

- **Overtake** button manually establishes the connection with the remote module and set the remote module into Smart Loopback test application. Available when the status is **Taken** or **Test in Progress** with another unit. A confirmation is required to overtake a module.
- **Loop-Down** button ends the connection between the local and the remote modules.

For DTS Operation Mode

- **Connect** button manually establishes the connection with the selected remote module and sets the remote module into DTS EtherSAM test application.

Following a successful connection, the IP address of the remote module will be used as the destination IP address for the test.

- **Overtake** button manually establishes the connection with the remote module and set the remote module into DTS EtherSAM test application. Available when the status is **Taken** or **Test in Progress** with another unit. A confirmation is required to overtake a module.

Following a successful connection, the IP address of the remote module will be used as the destination IP address for the test.

- **Disconnect** button, available once the connection with the remote module is established, terminates the connection with the remote module. Available when the status is **Ready**.

For Manual Loopback Operation Mode

- **MAC**, available with layer L2, allows entering the destination MAC address of the remote.
- **IP**, available with L3/L4, allows entering the destination IP address of the remote.
- Resolved MAC address status, available with L3/L4, indicates:
 - **Resolving** when the ARP process is resolving.
 - **Resolved** when the ARP process is resolved.
 - **Failed** when the ARP process failed.
- **Quick Ping**, available with layer L3/L4, tests if the destination IP address can be reached. A message displays if the ping attempt is **Successful** or **Failed**.

RFC 2544 - Global

From the test menu, tap **Setup, Test Configurator**, tap on the **RFC 2544** block, and on the **Global** tab.

Dual Test Set

- **Dual Test Set** (DTS) check box when selected (cleared by default) enables the **Dual Test Set** testing mode. Once **Dual Test Set** is enabled, use the **Discover Remote** button to select a remote unit. Not available in **Dual Port** topology.

Note: *It is also possible using the **Discover Remote** button to connect to a remote unit and automatically enable **Dual Test Set**. For more details, refer to Discover Remote on page 782.*

Disconnected indicates that there is no connection established with a remote unit.

Connected indicates that the connection is established with a remote unit.

- **Discover Remote** allows discovering remote unit supporting **Remote Loopback** and/or **Dual Test Set**. For more details, refer to *Discover Remote* on page 782.

Global Options

- **Flow Direction** allows the selection of the traffic direction as follows:
 - **TX to RX** for **Single Port** topology.
 - **Port <m> to Port <n>**, **Port <n> to Port <m>**, and **Bidirectional** for **Dual Port** topology.
 - **Local to Remote**, **Remote to Local**, or **Bidirectional** for **Dual Test Set**.

Setup

RFC 2544 - Global

- **Coupled**, available with **Bidirectional** flow direction, defines if the decision to increase or decrease the TX Rate of the next iteration is taken either independently per direction (**Coupled** check box is cleared) or commonly for both directions (**Coupled** check box is selected).
- **Rate Unit** allows selecting either %, **Mbit/s**, or **Gbit/s** as the reference for the rate values.
- **Pass/Fail Verdict** check box when selected (default) enables the use of the pass/fail verdict.

Subtests / Estimated Time

- **Subtests** allows enabling the **Throughput**, **Back-to-Back**, **Frame Loss**, and **Latency** subtests individually.
- **Estimated Time (H:MM)** indicates the estimated time required to complete each subtest at best conditions. The total estimated time to complete all subtests is also displayed.

Frame Distribution

- **Frame Distribution** allows selecting either **RFC 2544** (default) or **User Defined** distribution.
- **Quantity** is only available when **User Defined** is selected and allows selecting the number of frames, from **1** to **10** (**7** by default), in the distribution.

- **Frame Size (Bytes)** either gives predefined frame size distribution values (**RFC 2544**) or allows entering the frame size values (**User Defined**).

Distribution	Frame Size
RFC 2544	64 ^a , 128, 256, 512, 1024, 1280, and 1518
User Defined	64 ^a to 16000 ^b

- The minimum frame size will be adjusted according to the frame structure and components selected.
- The maximum frame size is limited to 10000 for 10/100/1000Mbps electrical interface.

The following table lists each component that may affect the minimum size value.

Component	Description
VLAN	4 bytes per VLAN tag (up to 3 VLAN tags)
LLC and SNAP Headers	8 bytes
IPv4	20 bytes
IPv6	40 bytes
Using DTS	4 bytes

Restore RFC 2544 Defaults

Reverts the test application to its default factory settings.

RFC 2544 - Subtests

From the test menu, tap **Setup, Test Configurator, RFC 2544** block, and on the **Subtests** tab.

Allows the configuration of each enabled subtest.

Throughput

The objective of the **Throughput** test is to find the throughput of the device under test for which there is no frame loss. Starting at the specified maximum rate (**Max. Rate**), the rate converges towards the highest throughput without frame loss. The search is done with a halving/doubling method until a final value is reached. The test performs the number of trials defined (**Trials**). The throughput measurement is validated by the number of times specified (**Validations**) for the predefined duration (**Trial Duration**). The **Accuracy** and **Acceptable Errors** specify how precise the result must be. The test is performed for each defined frame size.

- **Max. Rate** is the maximum rate the test should begin with, in terms of a percentage of the line rate (%), **Mbit/s**, or **Gbit/s**. For **Dual Test Set** Max. Rate is configurable for both local (**L**) and remote (**R**) directions. For **Dual Port** topology, **Max. Rate** is configurable for both port directions.

Interface Speed		Max. Rate	
		%	
		Mbit/s	Gbit/s
10 Mbit/s	0.0050 to 100.0000 ^a	0.00001 to 10.000 ^a	Not Applicable
100 Mbit/s	0.0050 to 100.0000 ^a	0.0001 to 100.000 ^a	Not Applicable
1000 Mbit/s	0.0050 to 100.0000 ^a	0.001 to 1000.00 ^a	0.000001 to 1.000 ^a
10G LAN	0.0050 to 100.0000 ^a	0.01 to 10000.000 ^a	0.00001 to 10.000 ^a
10G WAN ^b	0.0005 to 92.8571 ^a	0.01 to 9285.71 ^a	0.00001 to 9.28571 ^a
25G	0.0050 to 100.0000 ^a	1.25 to 25000.00 ^a	0.00125 to 25.00000 ^a
40G	0.0050 to 100.0000 ^a	2.00 to 40000.0 ^a	0.00200 to 40.0000 ^a
100G	0.0050 to 100.0000 ^a	5.00 to 100000.0 ^a	0.00500 to 100.0000 ^a
200G	0.0050 to 100.0000 ^a	10.0 to 200000.0 ^a	0.0100 to 200.0000 ^a
400G	0.0050 to 100.0000 ^a	20.0 to 400000.0 ^a	0.0200 to 400.0000 ^a

- a. Default value.
- b. The maximum value for 10G WAN may be lower depending on the frame size. The maximum value will be adjusted for each frame size.

- **Trial Duration** is the time for each trial in minutes:seconds: **1** second (default) to **30** minutes.
- **Trials** is the number of times the test will be generated: **1** (default) to **50** trials.

Setup

RFC 2544 - Subtests

- **Accuracy** is the accuracy measurement in percentage of the line rate (%), **Mbit/s**, or in **Gbit/s**. The accuracy is not based on the configured **Maximum Rate** but on the Ethernet line rate:

Interface Speed	Max. Rate		
	%	Mbit/s	Gbit/s
10 Mbit/s	0.01 to 10.0 (default 1.0)	0.01 to 1.0 (default 0.10)	Not Applicable
100 Mbit/s	0.01 to 10.0 (default 1.0)	0.1 to 10.0 (default 1.0)	Not Applicable
1000Mbit/s	0.01 to 10.0 (default 1.0)	1 to 100.0 (default 10)	0.001 to 0.100 (default 0.010)
10G LAN	0.01 to 10.0 (default 1.0)	10.0 to 1000.0 (default 100)	0.01 to 1.00 (default 0.10)
10G WAN	0.01 to 10.0 (default 1.0)	10.0 to 1000.0 (default 100.00)	0.01 to 1.00 (default 0.1)
25G	0.01 to 10.0 (default 1.0)	2.0 to 2500.0 (default 250.0)	0.002 to 2.50 (default 0.250)
40G	0.01 to 10.0 (default 1.0)	40.0 to 4000.0 (default 400.0)	0.04 to 4.00 (default 0.40)
100G	0.01 to 10.0 (default 1.0)	100.0 to 10000.0 (default 1000.0)	0.10 to 10.00 (default 1.0000)
200G	0.01 to 10.0 (default 1.00)	20 to 20000 (default 2000)	0.02 to 20.00 (default 2.00)
400G	0.01 to 10.0 (default 1.00)	40 to 40000 (default 4000)	0.04 to 40.00 (default 4.00)

Note: *For Dual Test Set using different rates on local and remote, the accuracy on the remote will be set using the same percentage of its line rate as the local. For example, if the local interface is 1GE with an accuracy of 0.1 Gbit/s which correspond to an accuracy of 10% and the remote interface is 10GE, the 10% is applied to its line rate corresponding to an accuracy of 1 Gbit/s.*

Acceptable Errors represents the number of acceptable errors for the test: **0** (default) to **10**.

Validations represents the number of times the result should be validated: **1** (default) to **50** times.

Back-to-Back

The objective of the **Back-to-Back** test is to find the maximum number of frames that can be sent at maximum throughput without frame loss. A burst of frames (**Burst Time**) is sent with minimum inter-frame gaps to the device under test and the number of forwarded frames is counted. If the count of transmitted frames is equal to the number of forwarded frames, the length of the burst is increased and the test is rerun. If the number of forwarded frames is less than the number of transmitted frames, the length of the burst is reduced and the test is rerun. The Back-to-Back value is the number of frames in the longest burst that the Device Under Test (DUT) can handle without the loss of any frames. The test performs the number of defined trials (**Trials**). The **Accuracy** and **Acceptable Errors** settings specify how precise that result must be. The test is performed for each defined frame size.

- **Burst Time** is expressed in seconds: **1** (default) to **5** seconds.
- **Trials** is the number of times the test will be generated: **1** (default) to **50** trials.
- **Accuracy (Frames)** is the accuracy measurement value in frames: **1** (default) to **50** frames.
- **Acceptable Errors** represents the number of acceptable errors for the test: **0** (default) to **10**.
- **Bursts** represents the number of burst that will be generated: **1** (default) to **10**.

Frame Loss

The objective of the **Frame Loss** test is to find the percentage of frames that are lost due to lack of resources. Starting at the specified maximum rate (**Max. Rate**), the test is performed for a specific frame size and for the specified duration (**Trial Duration**). The test is repeated by decreasing the rate by the specified granularity (**Granularity**), then the test is repeated again until there are two successive trials in which no frames are lost. The test is performed for the defined number of trials (**Trials**). The test is performed for each defined frame size.

- **Max. Rate** is the maximum rate the test should begin with, in terms of a percentage of the line rate (%), **Mbit/s**, or **Gbit/s**. The accepted values are as shown in the Max. Rate table on page 385. For **Dual Test Set** the **Max. Rate** is configurable for both local (**L**) and remote (**R**) directions. For **Dual Port** topology, **Max. Rate** is configurable for both port directions.
- **Trial Duration** is the time for each trial in minutes:seconds: **1** second (default) to **30** minutes.
- **Trials** is the number of times the test will be generated: **1** (default) to **50** trials.
- **Granularity** corresponds to the percentage interval between each throughput value used for the test: 1 % to 10 % (RFC) - (default). For example, 10 % granularity means that the test will be performed for 100 %, 90 %, 80 %... of the rate value.

Latency

The objective of the **Latency** test is to measure the time required for the frame to go through the device under test and return back to source. Starting by sending a stream of frames for the predefined duration (**Trial Duration**) and throughput (**Max. Rate**) at a particular frame size, an identifying dependent tag is included in one frame. The time at which this frame is transmitted is recorded (*timestamp A*). When the tagged frame comes back, the time is recorded again (*timestamp B*) and the Latency result is: *timestamp B - timestamp A*. The test is repeated for the defined number of times (**Trials**) and the average result is calculated. The test is performed for each defined frame size.

- **Trial Duration** is the time for each trial in minutes:seconds: **1** second (default) to **2** minutes.
- **Trials** is the number of times the test will be generated: **1** (default) to **50** trials.
- **Copy From Throughput** check box, when selected (default), uses the Throughput subtest results max rate value for each corresponding frame size. When the check box is cleared, it is possible to set the **Max. Rate** by tapping on the **Config. per Frame Size** button.
- **Margin %**, available when **Copy From Throughput** check box is selected, decreases the max rate value(s) from the Throughput subtest by a value corresponding to the percentage of the line rate specified: **0** (default) to **10** percent.

Setup

RFC 2544 - Subtests

- **Measurement Mode**, available with **Dual Test Set**, allows the selection of the latency measurement mode for rates 10M to 10GE: **Round-Trip** (default) or **One-Way**¹. For other rates, the measurement mode is set to **Round-Trip**.

Synchronization with a 1PPS interface/reference is required to perform One-Way Latency measurement. One-Way Latency is only possible when both the local and remote 1PPS signal clocks are valid. The following alarms are available with One-Way Latency measurement mode.

LOPPS-L and **LOPPS-R** (Loss Of Pulse Per Second - Local/Remote) are declared when either no pulse is received or when no pulse is received within 1 second $\pm 6.6 \mu s$ after the previous pulse. LOPPS-R is only monitored once the DTS connection is established.

- **Config. per Frame Size** is available when the **Copy From Throughput** check box is cleared and allows setting the **Max. Rate** for each frame size. For **Dual Test Set** the **Max. Rate** is configurable for both local (**L**) and remote (**R**) directions. For **Dual Port** topology, **Max. Rate** is configurable for both port directions.

All Frames check box when selected (cleared by default) allows entering the maximum rate that will be applied to all frame sizes.

Thresholds

Note: Refer to *Thresholds - RFC 2544* on page 1035.

1. Not available on 88480/88481/88482.

RFC 6349

From the test menu, tap **Setup, Test Configurator**, and the RFC 6349 block.

Connection

- **Operation Mode** allows the selection of the test operation mode:
 - **RFC 6349 DTS** mainly validates how well a service can handle TCP.
 - **TCP Throughput DTS** mainly measures the maximum TCP Throughput of the link under test.
 - **iPerf Compatible Server** acts as a TCP responder. Not available for 40GE interface.

Once a Dual Test Set (DTS) connection is established with a remote module, it is not possible to change the Operation Mode until the remote is disconnected.

For **RFC 6349 DTS** and **TCP Throughput DTS** the connection is graphically displayed with its status as follows:

Operation Mode	Status	Description
RFC 6349 DTS	Disconnected	No connection established with a remote module.
TCP Throughput DTS	NAT LAN/WAN, WAN IP	Connection established with a remote module. NAT LAN/WAN and WAN IP indicate presence of NAT (Network Address Translation) router. The NAT router is automatically detected and graphically displayed with LAN/WAN indication as well as the WAN IP address when the Power Blazer is behind a NAT router. When there is a NAT at the Remote site, it is required to create the following rules on this NAT router: 1- for UDP/TCP port 62819 to allow DTS communication. 2- for the defined TCP port (see TCP Port on page 392).

For **RFC 6349 DTS** and **TCP Throughput DTS**:

- **Discover Remote** button allows discovering remote modules supporting Dual Test Set. For more details, refer to *Discover Remote* on page 782.
- **Direction** allows the selection of the traffic direction: **Local to Remote**, **Remote to Local**, and **Bidirectional** (default).
- **TCP Port** is the port used by the server located at the remote side: **1** to **65535** (excluding **62819** that is used for DTS connection), default is **50201**. The port forwarding rule for the defined TCP port must be created on the NAT router when the remote is behind a NAT.

For **iPerf Compatible Server**:

- **Listening TCP Port** allows the selection of the port used by the server located at the remote side: **1** to **65535** (excluding **62819** that is used for DTS connection), default is **5001**.
- **Max Nb of Connection Allowed** for 25/100GE interface, allows selecting the maximum number of connections the iPerf compatible server is allowed to accept: **16** (default) or **128**. Using a maximum of 16 connections allocates more memory per connection useful when the path delay is large and only few connections are used.

Parameters

For **RFC 6349 DTS** and **TCP Throughput DTS**:

- **TOS/DS (IPv4)** or **Traffic Class (TOS/DS)** - (IPv6) allows entering either an hexadecimal value, **00** (default) to **FF**, or tap on the **TOS/DS Config** button to set each TOS or DS parameter individually. Changing the **IP TOS/DS** value will affect the **TOS/DS Config** settings and vice versa.
- **TOS/DS Config** button allows to set the Type of Service or the Differentiated Service parameters. Refer to *TOS/DS Config* on page 1037.

For **RFC 6349 DTS**:

- **Multiple Connections** check box when selected (default) indicates that the applicable TCP Throughput phases are performed with multiple connections; otherwise TCP Throughput phases are performed within a single connection. For 40/100GE rate, this check box is selected and the **Window Size Target per Connection** can be used to set the target window.
- **Window Size Target per Connection**, available for 40/100GE rate, selects the target send window per connection: 1 MiB, 4 MiB, 8 MiB, 16 MiB (default), and 32 MiB.
- **CIR** is the Committed Information Rate per direction of the Ethernet Service under test: **1.0 Mbit/s** to Line Rate. The CIR is not used to actually transmit frames at this rate but to calculate a Bandwidth Delay Product (BDP) which in turn is used to set the maximum window size of the TCP connections.

Rate Unit allows selecting either **Mbit/s** (default) or **Gbit/s** as the reference for the rate value.

- **Window Boost - Enable** check box when selected (cleared by default) boosts the BDP value which affects the maximum window size of the TCP connections.

The Local-to-Remote and Remote-to-Local define respectively the BDP boost factor for each direction: **0.1** to **10.0** (default is **1.0**).

For **TCP Throughput DTS**:

- **Number of Connections** allows selecting the number of connections: **Auto** (default) or **Manual** (from 1 to the maximum number of connections allowed). In **Manual** mode, the value is readjusted downwards when connecting to a remote unit offering less connections than the configured value.

MTU (RFC 6349 DTS and TCP Throughput DTS)

- **Max MTU (bytes)** determines the Maximum Transfer Unit (MTU) to use when the client is generating TCP traffic toward the server: from **1080** to **9600** bytes (**1500** bytes by default).
- **Path MTU Discovery** check box when selected (default) allows performing a Packetization Layer Path MTU Discovery phase.

Window Sweep (RFC 6349 DTS)

- **Window Sweep** check box when selected (default) allows performing the Window Sweep phase.
- **Duration (per step)** is the duration of the Window Sweep phase per direction and per Window tested: 30 seconds (default) to 5 minutes.

TCP Throughput

For **RFC 6349 DTS** and **TCP Throughput DTS**:

- **Duration** is the duration of the TCP Throughput phase per direction: 15 seconds to 1 day (30 seconds by default).
- **Pass/Fail Verdict** check box when selected (default) enables the use of the pass/fail verdict.
- **Threshold (% of ideal)** allows entering the TCP Throughput as a percentage of the Ideal L4 Throughput that will be used to declare the pass/fail verdict for both directions: **0** to **100** %; default is **95** %. For **TCP Throughput DTS**, only available when the **Pass/Fail Verdict** check box is selected.

For **TCP Throughput DTS**:

- **CIR** is the Committed Information Rate per direction of the Ethernet Service under test: **1.0 Mbit/s** to Line Rate. The CIR is used as the threshold to declare the **Ideal L4** pass/fail verdict. Available when the **Pass/Fail Verdict** check box is selected.

Rate Unit allows selecting either **Mbit/s** (default) or **Gbit/s** as the reference for the rate value.

Advanced (RFC 6349 DTS)

Recommended Window Boost

- **Buffer Delay Weight** is a multiplier applied to the Buffer Delay value used in the Suggested Window Boost formula: **0** to **10** (default is **1**).
- **TCP Throughput Weight** is a multiplier applied to the TCP Throughput value used in the Suggested Window Boost formula: **0** (default) to **10**.

Restore RFC 6349 Defaults

Reverts the configured parameters to their default values.

S-OAM and MPLS-TP OAM

From the test menu, tap **Setup**, **Test Configurator**, and the **S-OAM (Y.1731/802.1ag/MEF)** or **MPLS-TP OAM (G.8113.1)** test block.

OAM Mode

Allows the selection of the OAM mode.

OAM Type	OAM Mode
S-OAM	Y.1731 (default) supports both Connectivity Fault Management and Performance Monitoring which includes all S-OAM functions supported by this module.
	802.1ag supports Connectivity Fault Management including only the Continuity Check, Loopback, Link Trace, and RDI functions.
	MEF supports both Connectivity Fault Management and Performance Monitoring which includes all S-OAM functions supported by this module.
MPLS-TP OAM	G.8113.1 (default) supports both Connectivity Fault Management and Performance Monitoring which includes all MPLS-TP OAM functions supported by this module.

S-OAM and MPLS-TP OAM Responder

S-OAM Responder or **MPLS-TP OAM Responder** check box when selected (default) allows responding to LBM, LTM, DMM, LMM, and SLM valid messages (test running or not). LTM and SLM are only available with Ethernet OAM. Traffic statistics are also monitored (refer to *Responder* on page 664).

For S-OAM: A valid message must have its source MAC address matching the Peer MEP MAC address, destination MAC address matching either the unit port Unicast MAC address or a Multicast class 1 address, VLANs matching the unit port VLANs, and MEG/MD Level matching the local MEG/MD Level. Refer to *Unicast/Multicast Addresses for Ethernet OAM* on page 907 for more information.

For MPLS-TP OAM: A valid message must have its: destination MAC address matching either the unit MAC address, FF:FF:FF:FF:FF:FF, or 01:00:5E:90:00:00; VLANs matching the unit port VLANs; MPL Labels matching the local MPLS Label Stack configuration, including GAL; MEG Level matches the local MEG Level. For the Loopback function, a valid message must also have its: MEP ID of the target MEP ID TLV matching the Local MEP ID or ID Sub-Type is 0x00 (Discovery); and MEP ID and MEG ID of the requesting MEP ID TVL, if present, matching respectively the Peer MEP ID and the Local MEG ID.

Respond to... message	Respond with... message
LBM	LBR
LTM ^a	LTR
DMM	DMR
LMM	LMR
SLM ^a	SLR

a. Only available with Ethernet OAM.

Pass/Fail Verdict

Pass/Fail Verdict check box when selected (default) enables the use of the pass/fail verdict. A global fail verdict is declared when any of the following condition is met: **Link Down** alarm, **Loss Continuity** alarm, or any fail verdict for **Frame Delay**, **Frame Loss**, **Synthetic Loss** (Only applicable to Ethernet OAM), **Frame Delay Failure**, **Frame Loss Failure**, **Synthetic Loss Failure** (Only applicable to Ethernet OAM), **Loopback Failure**, or **Test Failure**.

Thresholds

Note: Refer to Thresholds (S-OAM) on page 1036.

Next HOP Router (G.8113.1)

- **MAC Address**, available when **Resolve MAC** check box is cleared, allows entering the Next HOP Router MAC address: 00:00:00:00:00:00 to FF:FF:FF:FF:FF:FF, default is 01:00:5E:90:00:00. The MAC Address 01:00:5E:90:00:00 is reserved for point-to-point link and can be used when the unicast address is unknown (as per RFC-7213).
- **Resolve MAC** check box, when selected (cleared by default), sends a request to the network to retrieve the MAC address corresponding to the selected IP address.
- **IP Address**, available when **Resolve MAC** check box is selected, allows entering the Next HOP Router IP address: 0.0.0.0 to 255.255.255.255 for IPv4; default is the source IP address; ::1 to FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF for IPv6, default is 2001::.

Local Parameters

- **MEG ID** (Y.1731 and G.8113.1), the Maintenance Entity Group Level identification, allows defining a 13-bytes MEG ID value/message to be generated (default value is **EXFO MEG ID**). Values should be ASCII suitable characters including the *ITU T.50 Characters* on page 60.

Padding allows the selection of the character (**Null** or **Space**) to be used for remaining byte values.

- **MAID** (802.1ag and MEF) is a 45 bytes Maintenance Association Identification that is divided into two parameters:
 - **Domain ID** is an optional domain identification text field (0 byte (Domain ID not present), up to 44 bytes minus the **MA Name** field length) set to **EXFO Domain ID** by default.
 - **MA Name** (Short MA Name) is a Maintenance Association Name text field set to **EXFO MA Name** by default. The length of the **MA Name** field is from 1 to either 44 bytes minus the **Domain ID** field length when Domain ID is present or 45 bytes when not present.

- **MEG Level** (Y.1731, MEF, and G.8113.1) is the Maintenance Entity Group Level configurable from **0** to **7** (default).
- **MD Level** (802.1ag) is the Maintenance Domain Level and is configurable from **0** to **7** (default).
- **MEP ID** is the Maintenance Entity Group End Point Identification configurable from **0x0001** (default) to **0x1FFF**.

Peer MEP Parameters

- **MAC Address**, available with S-OAM Mode, allows entering the unique Media Access Control (MAC) address of the peer MEP (default is **00:00:00:00:00:00**).
- **MEP ID** is the Maintenance Entity Group End Point Identification configurable from **0x0001** (default) to **0x1FFF**.
- **OAM Quick Ping** verifies the bidirectional connectivity with the peer MEP. The **Successful** message is reported when at least one of three attempts has been successful otherwise **Failed** is reported.

Continuity Check

- **CC Function** check box when selected (default) allows transmitting and monitoring CCM frames.

The following parameters are only configurable when the **CC Function** check box is cleared.

- **Address Type**, available with S-OAM Mode, defines the destination address type of the CCM frames: **Unicast** or **Multicast** (default).
- **Priority**, available with S-OAM Mode or when VLAN is enabled (see *VLAN* on page 357), allows selecting the VLAN user priority: **0** to **7** (default).

Setup

S-OAM and MPLS-TP OAM

- **Drop Eligible**, available with S-OAM Mode or when VLAN is enabled (see *VLAN* on page 357), is set to **No** (no frames will be dropped when congestion occurs) and is not configurable.
- **Period** determines the transmission period of the CCM frame: **3.33 ms**, **10 ms**, **100 ms** (default), **1 s**, **10 s**, **1 min**, or **10 min**.

MPLS-TP Label Stack (G.8113.1)

➤ MPLS-TP Mode

PW (Pseudo-Wire) (default) provides an emulation of a point-to-point connection over a packet-switching network. The PW begins and ends at the LER or PE (Provider Edge).

LSP (Label Switch Path) is a path through a MPLS network, it begins and ends at LER or LSR.

Section is a segment between two adjacent LER/LSR.

- **Label 2** check box when selected enables the MPLS Label 2. The Label 2 check box is configurable for PW and LSP (cleared by default) and is forced cleared for Section.
- **Label 1** check box when selected enables the MPLS Label 1. The **Label 1** check box is forced selected for PW and LSP and forced cleared for Section.
- **GAL** check box when selected enables the Generic Associated Channel Label. The GAL check box is forced selected for LSP and Section and is configurable for PW (selected by default).
- **Label** is configurable for **Label 1** and **Label 2**: **16** to **1048575**, default is **16**. Label is not configurable for GAL and is set to **13**.
- **TC** sets the Traffic Class: **0** (default) to **7**.
- **TTL** sets the Time To Live: **1** to **255**, default is **128**.

Test Function

Note: *Test Function parameters are not configurable when the **TX Enable** check box is selected.*

- **Function** allows the selection of the test function to be performed.
 - **Loopback** (default) function is used to verify the bidirectional connectivity to a peer MEP (**Continuous** check box cleared) and to verify its capability to sustain close to line rate traffic (diagnostic test; **Continuous** check box selected).
 - **Test** function is used to generate a test signal and/or verify the integrity of received test signal from the peer MEP.
 - **Frame Delay** function is used to measure the round trip delay with the peer MEP.
 - **Frame Loss** function is used to measure the frame loss with the peer MEP in both directions from a single end point.
 - **Synthetic Loss** function is used to measure the frame loss with the peer MEP in both directions from a single end point using synthetic frames.
- **TX Enable** check box when selected (cleared by default) allows transmission of frames. However the transmission will only begin when the test is started or if the test is already running. When the **Continuous** check box is cleared, the **TX Enable** check box is automatically cleared once all frames have been transmitted.
- **Address Type**, available with S-OAM Mode, defines the destination address type of the frame: **Unicast** (default) or **Multicast**. Availability of address types depend on selected **S-OAM Mode** and **Test Function**.
- **Continuous** check box when selected (default) specifies that the frame generation is continuous. The **Continuous** check box is cleared for Multicast address type.

Setup

S-OAM and MPLS-TP OAM

- **Requesting MEP ID TLV** (G.8113.1) check box when selected (default) determines if the Requesting MEP ID TLV is present in the LBM frame. The **Requesting MEP ID TLV** check box is cleared and not selectable when the **Continuous** check box is selected.
- **Priority**, available with S-OAM Mode or when VLAN is enabled (see *VLAN* on page 357), allows selecting the VLAN user priority: **0** (default) to **7**.
- **Drop Eligible**, available with S-OAM Mode or when VLAN is enabled (see *VLAN* on page 357), when set to **Yes** (DEI = 1), the transmitted frames will be dropped first on receipt when congestion occurs under test. Drop Eligible is only configurable with **Unicast** address type, otherwise is set to **No** (Default). Drop Eligible is set to **No** for **Frame Delay**, **Frame Loss**, and **Synthetic Loss** functions.
- **Period** determines the transmission period of frames which is set to **100 ms**. **Period** is not applicable for Multicast address type or when the **Continuous** check box is selected.
- **TX Rate (%)** is the transmission rate of the LBM frame: **0.0001** to **95 %** for 10M, **99.5 %** for 100M, **99.95 %** for 1G, **99.995 %** for 10G LAN, and **92.8521 %** for 10G WAN. Only available with Loopback test function when the **Continuous** check box is selected.

- **Frame Size** allows entering the frame size. The frame size range for Ethernet II frame format is as follows:
 - S-OAM Mode: 64 to 1518¹. The minimum frame size is adjusted according to the frame structure and parameters selected. For Frame Loss function, the frame size is not configurable and set to the minimum value.
 - MPLS-TP OAM Mode: Minimum and maximum values are as follows. The minimum frame size is adjusted according to the frame structure and parameters selected.

Test Function	MPLS-TP Mode		
	PW	LSP	Section
Loopback	68 ^a to 16000 ¹	72 to 16000 ¹	68 to 16000 ¹
Test	68 to 1522	68 to 1522	64 to 1518
Frame Delay	68 ^{a,b} to 1522	72 ^b to 1522	68 ^b to 1518
Frame Loss ^c	68	68	64

- a. Add 4 bytes when the **GAL** check box is selected.
- b. Add 2 bytes when **Test ID** is selected as **TLV Type**.
- c. The frame size is not configurable and set to the minimum value.

The following table lists each parameter that may affect the minimum and maximum¹ frame size value.

Parameter	Number of bytes to be added	Apply to
802.3 SNAP	8 bytes	Y.1731, MEF, G.8113.1
VLAN	4 bytes per VLAN (up to 3 VLAN)	

1. For the Loopback function the maximum frame size is 16000 bytes for all rates at the exception of 10/100/1000 Mbps electrical interface which is 10000 bytes.

Setup

S-OAM and MPLS-TP OAM

Parameter	Number of bytes to be added	Apply to
Label 2	4 bytes	G.8113.1
Continuous	18 bytes for Data TLV Type 21 bytes for Test TLV Type	
Requesting MEP ID TLV	56 bytes	

Note: Sending traffic with frame size >1518 in switched network may result in losing all frames.

- **Frame Count** is the quantity of frames to be transmitted: **1** to **1000** at the exception of **Frame Loss** function which is **2** to **1000** (default is **10**); set to **1** for Loopback function with Multicast address type; not applicable when the **Continuous** check box is selected at the exception of **Synthetic Loss** function.
- **TLV Type** defines the TLV Type included in the frame: **Data** (Default), **Test (Loopback (Y.1731 and G.8113.1) and Test functions)**, and **Test ID (Frame Delay function)**; is set to **Test** for the **Test** function; set to **Data** for **Synthetic Loss** function; not available for **Frame Loss** function.
- **Payload**, available with **Data** TLV Type, defines the repeating byte pattern used to fill the payload of the **Data** TLV: **0x00** to **0xFF** (default is **0xCC**).
- **Test Pattern**, available with **Test** TLV Type, defines the test pattern used to fill the **Test** TLV: **PRBS31** (default), **NULL**.
- **Test ID**, available with **Test ID** TLV or **Synthetic Loss** function, defines the test ID: **0x00000000** to **0xFFFFFFFF** (default is **0x00000001**).

Restore Carrier Ethernet OAM Defaults

Reverts the Carrier Ethernet OAM test application to its default factory settings.

Services - Global

From the **Test** menu, tap **Setup, Test Configurator**, tap on the services block, the **Global** tab, and on the **General** button.

General Button

The following parameters are displayed and configurable per service.

- Check boxes:
 - The first check box (top-left) allows enabling sequentially service(s) within the limit of the link capacity when the **Service Performance Test** is enabled or enabling all services when the **Service Performance Test** is disabled.
 - The check boxes next to the service numbers allow enabling each service individually.

When the **Service Performance Test** is enabled, up to 10 services can be enabled one after the other, as long as the **Total TX Rate** (bandwidth) is not reached (**Committed**). For example, if the first service is using the full bandwidth available, then no other service can be enabled. If the first enabled service uses half bandwidth, then at least another service can be enabled using up to half bandwidth. Thus, to enable a second service, first set the CIR value within the non-used bandwidth (**Available**), then enable it.

When the **Service Performance Test** is disabled, up to 10 services can be enabled one after the other; the total TX rate is not limited.

- **Service Name** indicates the name of each service. Tap on the **Service Name** button to modify the name of each service. See *Services - Profile* on page 409 for more information.
- **Direction**, available with **Dual Test Set** or **Dual Port** topology, indicates respectively results for local (**L**) and remote (**R**) directions, or for both port directions.

Setup

Services - Global

- **Frame Size** indicates the frame size of each service. Tap on the **Frame Size** button to modify the frame size of each service.
- **Framing** indicates the framing of each service. Tap on the **Framing** button to modify the **Frame Format**, **Network Layer**, **Transport Layer**, **VLAN**, **S-OAM MEG/MD Level**, and **MPLS** when applicable (see **Modify Frame Structure** from the *MAC/IP/UDP* on page 342).
- **VLAN (ID/Priority)** indicates the ID and Priority of each VLAN level for each service. Tap on the **VLAN** button to modify the VLAN settings (see **VLAN** from the *MAC/IP/UDP* on page 342).
- **Addressing** indicates the source and destination IP or MAC addresses for each services. Tap on the **Addressing** button to modify the addressing (see **MAC** and **IP** from the *MAC/IP/UDP* on page 342).

Batch button allows bulk configuration for services addressing. Select the check box of each configuration parameter that needs to be copied and set its parameters. From **Apply To**, select all services the copy applies to and tap on the **Copy From** to proceed.

SLA Button

The SLA parameters are displayed and configurable per service. Click on the desired column button to access the configuration settings.

See *General Button* on page 405 for more information on check boxes, **Direction**, and **Service Name**.

See *SLA Parameters* on page 413 for more information on **CIR**, **CIR+EIR**, **CBS**, **EBS**, **Max Jitter**, **Max Latency**, and **Frame Loss Rate**.

Total TX Rate

Note: Only available when the **Service Performance Test** check box is selected (see EtherSAM - Global on page 283). For **Dual Test Set**, the total TX rates are displayed for both **Local** and **Remote** directions.

- **Committed** displays the total enabled TX rate (bandwidth) that will be generated by the selected service(s).
- **Available** displays the total TX rate (bandwidth) available for traffic generation.

Global Options

- **Rate Unit** allows selecting either %, **Mbit/s**, or **Gbit/s** as the reference for the rate values.
- **Latency Unit** allows selecting either **ms** (default) or **μs** as the reference unit for **Latency** and **Jitter**.

Copy Service Button

Copy Service button allows copying the services configuration to one or several services.

- **Copy Service** allow selecting the services number from which the configuration will be copied from.
- **To the following Services** allows selecting all services that will inherit the configuration from the selected service. An orange background represents a selected service. A service that is already enabled cannot be selected for copy.
- **Copy** allows confirming the service configuration copy for all selected services.

Services - L2CP

The EtherSAM test application supports the configuration of up to 10 different services individually. All parameters are configurable per service.

From the **Test** menu, tap **Setup**, **Test Configurator**, tap on the services block, and on the **L2CP** tab.

Service Selection and L2CP Handling Test

- **Service Name** indicates the name to the selected service. Select the service to be configured by either using the left/right arrow or by tapping over the service numbers area then tapping on a specific service number. An orange background indicates the selected service while a green background indicates the services that are enabled.
- **L2CP Handling Test** check box when selected (default) enables the L2CP Handling test for the selected service.

Table

The following parameters are displayed and/or configurable per service.

- **Check boxes:**
 - The first check box (top-left) allows enabling/disabling all L2CP frames at once.
 - The check box in front of each L2CP name allows enabling/disabling each L2CP frame individually; enabled by default for predefined frames and disabled for user defined frames.
- **Name** indicates the name of each L2CP frame.
- **Destination MAC address** indicates the L2CP frame destination MAC address.
- **Expected L2CP Handling** selects the expected L2CP handling for each L2CP frame: **Pass Through** (default) or **Discard/Peer**.

Services - Profile

The EtherSAM test application supports the configuration of up to 10 different services individually. All parameters are configurable per service.

From the **Test** menu, tap **Setup**, **Test Configurator**, tap on the services block, and on the **Profile** tab.

Service Selection and Activation

Select the service to be configured by either using the left/right arrow or by tapping over the service numbers area then tapping on a specific service number. An orange background indicates the selected service while a green background indicates the services that are enabled.

- **Service** associates a name to the selected service number. Up to 16 characters are allowed. Default service names are **Service 1** to **Service 10**.
- **Enable** check box when selected (cleared by default) enables the selected service. However, the service will be generated only when the test is started. For **Dual Test Set**, services can only be enabled once the connection with the remote unit is established.

When the **Service Performance Test** is enabled, up to 10 services can be enabled one after the other, as long as the **Total TX Rate** (bandwidth) is not reached (**Committed**). For example, if the first service is using the full bandwidth available, then no other service can be enabled. If the first enabled service uses half bandwidth, then at least another service can be enabled using up to half bandwidth. Thus, to enable a second service, first set the CIR value within the non-used bandwidth (**Available**), then enable it.

When the **Service Performance Test** is disabled, up to 10 services can be enabled one after the other; the total TX rate is not limited.

Total TX Rate

Note: Only available when the **Service Performance Test** check box is selected (see EtherSAM - Global on page 283).

Indicates the total transmit rate of all services enabled for transmission. Unit selection is available from the *SLA Parameters* on page 413.

Profile

- **Profile** button allows selecting the emulation profile. The selected service profile icon, name, and configuration (when applicable) is displayed next to the **Profile** button. Refer to *Profile (Services)* on page 1028.
- **Frame Size (Bytes)** indicates the frame size for **Voice** and **Video** profiles and allows changing the frame size for **Data** profile:

Profile and Codec	Type	Frame Size (bytes)	
		IPv4	IPv6
Voice Codec: - VoIP G.711 - VoIP G.723.1 - VoIP G.729	Fixed	138 82 78	158 102 98
Video Codec: All	Fixed	1374	1394
Data	Fixed (default)	64 ^a (default) to 16000 ^b	
	Random	64 ^a to 1518 ^c	
	EMIX	64 ^a to 16000 ^b	

- a. The minimum value is adjusted according to the frame structure and components selected as shown in the following table.
- b. The maximum frame size is limited to 10000 for 10/100/1000Mbps electrical interface.
- c. The maximum frame size value is adjusted for each enabled VLAN (+4 bytes per VLAN).

The following table lists each component that may affect the minimum frame size value.

Component	Description
VLAN	4 bytes per VLAN (up to 2 VLAN)
MPLS	4 bytes per label (up to two labels)
UDP	8 bytes
TCP	20 bytes
Ethernet Header	14 bytes
LLC and SNAP Headers	8 bytes
IPv4	20 bytes
IPv6	40 bytes
Using DTS	4 bytes

Note: *Sending traffic with frame size > 1518 in switched network may results in losing theses frames.*

- **EMIX** button is available when **EMIX** frame size is selected. The EMIX frame sequence is repeated continuously (refer to *EMIX* on page 988).

Test Parameters

Note: *Unit selection is available from the SLA Parameters on page 413.*

For **Dual Test Set**, parameters are configurable for both local (**L**) and remote (**R**) directions.

For **Dual Port** topology, parameters are configurable for both port directions.

- **Traffic Policing** check box when selected (default) allows stressing the rate limiting of the network by sending traffic at higher rate than committed by the SLA.
- **Burst Max Rate** allows setting the rate that is used for the CBS and EBS burst tests. Only available when the **Burst Test** is enabled (see *EtherSAM - Global* on page 283).

Note: *Changing a criteria value (CIR, CIR+EIR, Ramp Traffic Policing, or Burst Max Rate) may affect the other criteria values in order to comply to the following rules:*

$CIR \leq CIR+EIR \leq \text{Ramp Traffic Policing Rate} \leq \text{Line Rate}$

$CIR \leq CIR+EIR \leq \text{Burst Max Rate} \leq \text{Line Rate}$

However, make sure that the criteria values comply to the following rule with an adequate margin, as per ITU-T Y.1564 standard, for a burst test to be valid:

$CIR < CIR+EIR < \text{Burst Max Rate} \leq \text{Line Rate}$

SLA Parameters

The Service-Level Agreement (SLA) parameters allow enabling and defining the pass/fail verdict thresholds for the service.

For **Dual Test Set**, parameters are configurable for both local (**L**) and remote (**R**) directions at the exception of Max Round-Trip Latency for which the value is unique.

For **Dual Port** topology, parameters are configurable for both port directions.

Information Rate

- Unit choices are % (default), **Mbit/s**, or **Gbit/s**. This unit is also used for **Total TX Rate** and for **Test Parameters (Traffic Policing and Burst Max Rate)**.

Note: *At least one check box (**CIR** or **CIR+EIR**) has to be selected. Thus, clearing the CIR check box while CIR+EIR check box is cleared, will automatically select the CIR+EIR check box and vice versa.*

- **CIR** (Committed Information Rate) check box when selected (default) sets the service rate guaranteed by the SLA. The threshold value is configurable from **0.0001**¹ to **100** percent (default is **50** percent). CIR and preceding steps are not performed for services that have the CIR check box cleared.
- **CIR+EIR** check box when selected (cleared by default) sets the best effort allowed traffic for the service. The EIR (Excess Information Rate) value is equal to the CIR+EIR value minus CIR. The threshold value is configurable from **0.0001**¹ to **100** percent (default is **75** percent).

Burst Size settings are only available when the **Burst Test** is enabled (see *EtherSAM - Global* on page 283).

- Burst Size unit choices are **Bytes** (default) or **ms**.

1. The minimum rate is 1Mbit/s when the **Frame Size** is **Random**.

Setup

Services - Profile

- **CBS** check box when selected (default) sets the maximum committed burst size to which services' frames will be sent and be CIR-compliant (default is **12144** bytes). The CBS minimum and maximum values are affected by the **CIR**, **Burst Max Rate**, and **Frame Size** values. CBS is only available when CIR check box is selected.
- **EBS** check box when selected (cleared by default) sets the maximum excess burst size to which services' frames will be sent and be CIR+EIR compliant (default is **12144** bytes). The EBS minimum and maximum values are affected by the **CIR+EIR**, **Burst Max Rate**, and **Frame Size values**. EBS is only available when **CIR+EIR** check box is selected.

Performance Criteria

- **Max Jitter** allows setting the maximum jitter value allowed for the service.
- **Max Round-Trip Latency** allows setting the maximum round-trip latency value allowed for the service. For **Dual Test Set**, only available with **Round-Trip Latency Measurement Mode** (see *Global Options* on page 287). Not available in **Dual Port** topology.
- **Max Latency**, available for **Dual Test Set** with **One-Way Latency Measurement Mode** (see *Global Options* on page 287) and Dual Port topology, allows setting the maximum one-way latency allowed for the service.
- **Frame Loss Rate** allows setting the maximum rate of Frame Loss allowed for the service.

Note: *For Dual Test Set, the Frame Loss Rate is changed to percentage when the remote module does not support exponential notation. In this case a Frame Loss Rate Threshold lower than 1.0E-06 (0.0001 %) is considered as 0 %.*

Signal

From the test menu, tap **Setup, Test Configurator**, the interface block, and the **Signal** tab.

Physical Interface

Note: *The following settings are available with optical signal. For parallel interfaces, the following information is displayed for each optical lane.*

- **Optical Lane** indicates the optical lane number for parallel interfaces.

Optical Interface	Optical Lane Number
OTU3 (4 Lanes) [43.018 Gbit/s] OTU3e1 (4 Lanes) [44.571 Gbit/s] OTU3e2 (4 Lanes) [44.583 Gbit/s] OTU4 (4 Lanes) [111.81 Gbit/s]	0 through 3

- **Laser** indicates the status of the laser: **ON** with the laser pictogram (emitting an optical laser signal) or **OFF**.
- **TX Power (dBm)** indicates, when supported, the transmit power level of the optical laser/lane in dBm.
- **Wavelength (nm)** indicates, when supported, the detected lane/laser wavelength.
- **RX Power (dBm)** indicates, when supported, the current received power level of the optical laser/lane in dBm.

Green: Power level in range.

Yellow: Power level out-of-range.

Red: Loss of signal or power level is close to damage.

Gray: Invalid operational range value or not available/supplied by the transceiver.

Setup

Signal

- **Min RX Power (dBm)** indicates, when supported, the minimum received power level of the optical laser/lane in dBm.
- **Max RX Power (dBm)** indicates, when supported, the maximum received power level of the optical laser/lane in dBm.
- **Laser ON/OFF** button, available with parallel interfaces, is used to activate the laser control per optical lane or for all lanes. Select the **Laser** check box to enable/disable the laser for each lane individually or select the **All Lanes** check box to enable/disable all optical lanes at once.
- **Lasers OFF at Start-Up** check box when selected (cleared by default) automatically turns OFF the laser for serial interfaces or all lasers for parallel interfaces when starting the unit or when switching from one test application to another. However the laser remains ON, on a remote unit receiving a request for a DTS connection or a loopback command.
- **Power Range (dBm)** indicates the transceiver operational RX power range.

Note: The following settings are available with electrical signal and their availability depend on the signal itself and its mapping.

- **LBO** (Line Build Out) allows meeting the interface requirements over the full range of cable lengths.

Signal	LBO
DS1	Preamplification values: DSX-1 (0-133 ft)^a , DSX-1 (133-266 ft) , DSX-1 (266-399 ft) , DSX-1 (399-533 ft) , DSX-1 (533-655 ft) , Cable simulation (CSU Emulation mode) values: CSU (0.0 dB) , CSU (-7.5 dB) , CSU (-15.0 dB) , CSU (-22.5 dB) .
DS3	0 to 225 ft range^a , 225 to 450 ft range , and Cable Simulation 900 ft .
E1/E3/E4	Not available
STS-1e/STM-0e	0 to 225 ft range^a , 225 to 450 ft range , and Cable Simulation 900 ft .
STS-3e/STM-1e	0 to 225 ft range .

a. Default value

➤ Line Coding

Signal	Line Coding
DS1	AMI and B8ZS^a
DS3	B3ZS
E1	AMI and HDB3^a
E3	HDB3
E4	CMI
STS-1e/STM-0e	B3ZS
STS-3e/STM-1e	CMI

a. Default value.

Setup

Signal

➤ RX Termination

Signal	Termination
DS1/E1	Term ^a , Mon, and Bridge.
DS3/E3/E4/STS-1e/STM-0e/STS-3e/STM-1e	Term ^a , and Mon

a. Default value.

- **Power** indicates the received signal level in dBdsx for DS_n or dBm for PDH and SONET/SDH.
- **Amplitude** indicates the received signal amplitude as well as its MIN, and MAX received values.

TX Frequency

Note: The following TX Frequency information applies to serial interface only, refer to TX Frequency on page 307 for parallel interfaces.

- **Frequency (GHz)** indicates the frequency (actual frequency + Frequency offset) used for transmission.
- **Offset (ppm)** check box, when selected (cleared by default), allows setting the frequency offset that will be generated. Use the “+” or “-” button to respectively increment or decrement the frequency offset value based on the defined **Increment/Decrement Size**, or directly type the frequency offset value in the field. Possible offsets are:

Interface	Frequency Offset ^a	Nominal Frequency
DS1	±140 ppm	1544000 bit/s
E1	± 70 ppm	2048000 bit/s

Interface	Frequency Offset ^a	Nominal Frequency
E3	± 50 ppm	34368000 bit/s
DS3		44736000 bit/s
STS-1e/STM-0e		51840000 bit/s
E4		139264000 bit/s
STS-3e/STM-1e		155520000 bit/s
OC-1/STM-0	± 50 ppm	51840000 bit/s
OC-3/STM-1		155520000 bit/s
OC-12/STM-4		622080000 bit/s
OC-48/STM-16		2488320000 bit/s
OC-192/STM-64		9953280000 bit/s
OTU1	± 50 ppm	2666057143 bit/s
OTU2	± 50 ppm (Framed) ± 120 ppm (Unframed)	10709225316 bit/s
OTU1e	± 120 ppm	11049107143 bit/s
OTU2e		11095727848 bit/s
OTU1f		11270089286 bit/s
OTU2f		11317642405 bit/s

- a. The frequency offset range is guaranteed for a source signal at 0 ppm. In the event that the source signal already has an offset, then the output signal may exhibit an offset larger than the range specified.

Note: Frequency offset is not available when **Through** mode is selected.

Step Size (ppm) allows setting the increment/decrement value (from 0.1 to the maximum offset) that will be used when changing the frequency offset with the “+” or “-” button.

RX Frequency

Note: *The following RX Frequency information applies to serial interface only, refer to RX Frequency on page 309 for parallel interfaces.*

- **Frequency (GHz)** indicates the frequency of the input signal.
- **TX Power (dBm)** indicates, when supported, the transmit power level of the optical laser/lane in dBm.

Note: *For both **Frequency** and **Offset** the following background colors are used.*

Background color	Description
Green	The frequency is in range.
Red	The frequency is out-of-range or LOC Lane.
Gray	Pending state.

- **Max. Negative Offset (ppm)** indicates the maximum negative frequency offset between the standard rate specification and the rate from the received signal.
- **Max. Positive Offset (ppm)** indicates the maximum positive frequency offset between the standard rate specification and the rate from the received signal.

Note: *Refer to Interface on page 921 for more information on standard rate specifications.*

Signal Configuration

- For OTN, see *Signal - Signal Configuration - OTN* on page 426 for more information.
- For SONET/SDH, see *Signal - Signal Configuration - SONET/SDH* on page 429 for more information.
- For DS_n/PDH, see *Signal - Signal Configuration - DS_n/PDH* on page 422 for more information.

Setup

Signal - Signal Configuration - DSn/PDH

For **SONET/SDH - DSn/PDH BERT**, from the test menu, tap **Setup**, **Test Configurator**, and the protocol block. Only **Framing** setting and the **Loopback** button are available.

For **DSn/PDH BERT** and **NI/CSU Emulation**, from the test menu, tap **Setup**, **Test Configurator**, and the interface block.


Signal Configuration

- **Framing** allows the selection of the framing used for transmission:

DS1	DS3	E1	E3/E4
Unframed SF ESF ^a SLC-96	Unframed C-Bit Parity ^a M13	Unframed PCM30 ^a PCM30 CRC-4 PCM31 PCM31 CRC-4	Unframed Framed ^a

a. Default value

- **Background**, for multiplex test, allows the selection of the default timeslot background traffic: **AIS** (default) or **All Zeros**. The following diagram shows a test defined with DSn/PDH traffic where the background traffic is also inserted for the unused timeslots in a test data path. The insertion is similar to the low order path SONET/SDH terminated signal where the background traffic format inserted uses the same rate as the one defined in the test data path.

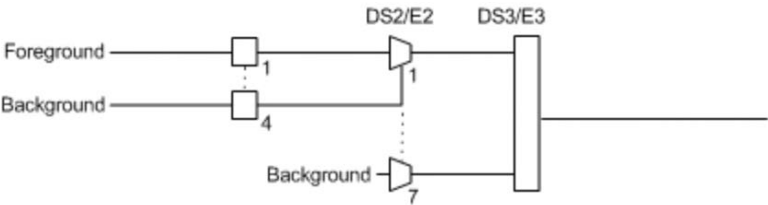

- **Channel**, for multiplex text case, allows the selection of the channel number of the mapped signal.
- **DS0/E0** check box when selected, cleared by default, activates the DS0/E0 testing. DS0/E0 configuration is not available when the framing is set to **Unframed**. Once selected, a summary of the payload content is displayed indicating the number of timeslot set to Pattern and Idle/Tone. The Modify DS0/E0 button is also displayed.
- **TX Signaling** check box when selected (cleared by default) allows generation of the signaling bits for either the 24 - DS0 channels or 30 - E0 channels (PCM-30 and PCM30 CRC-4). Only available when the **DS0/E0** check box is selected.
- **Modify DS0/E0** button is available when the **DS0/E0** check box is selected. Refer to *Modify DS0/E0* on page 1007.
- **Loopback** (refer to *DS1 Loopback* on page 986)

For **NI/CSU Emulation** test the DS1 Loopback feature generates a code that is interpreted by the DUT. The DUT interprets the command and implements the loopback.

- **Mode** selects the loopback control mode: **Manual** or **Auto-Response**.
- **Type**, for **Manual** mode, selects the type of loopback code that will be applied: **Line** or **Payload**. Payload is not available when the framing is **Unframed**.

Type, for **Auto-Response**, selects the type of loopback code on which the unit will respond: **In-Band** or **Out-of-Band**. **Out-of-Band** is only available when the interface framing is set to ESF. The **Loop UP** and **Loop Down** values are automatically updated to the **In-Band** or **Out-of-Band** type selection.

- **Status** indicates either **Loopback Active** with a green loopback icon or **No Loopback** with a gray loopback icon.

Setup

Signal - Signal Configuration - DSn/PDH

- **Loop Code** selects the type of loopback that will be used to overwrite the traffic that will be generated.

In-Band loop code	Loop-UP Code	Loop-Down Code
CSU (10000/100)	10000	100
NIU FAC1 (1100/1110)	1100	1110
NIU FAC2 (11000/11100)	11000	11100
NIU FAC3 (100000/100)	100000	100
Loop Code 1 to 10	Refer to <i>Modify Loop Codes</i> allows the configuration of 10 DS1 loop code pairs. Configure each loop code Name, Loop-Up and Loop-Down values. The name field allows up to 16 characters. Loop-Up and Loop-Down range is from 3 to 16 bits (000 to 1111111111111111). The default DS1 loop codes correspond to the DS1 In-Band loop codes (Loop-Up=10000, and Loop-Down=100). on page 425.	

Out-of-Band loop code	Loop-UP Code	Loop-Down Code
Line	00001110 11111111	00111000 11111111
Payload	00010100 11111111	00110010 11111111
Reserved For Network Use	00010010 11111111	00100100 11111111
ISDN Line (NT2)	00101110 11111111	00100100 11111111
CI/CSU Line(NT1)	00100000 11111111	00100100 11111111

- **Force Release** button, available with **Auto-Response** mode when a loopback is active, allows releasing a loopback condition initiated from the network.
- **Activate** button, available with **Manual** mode when no loopback is active, allows sending a loopback condition.
- **Release** button, available with **Manual** mode when a loopback is active, allows releasing the loopback condition.

- **Loop Up** indicates the selected loop up code.
- **Loop Down** indicates the selected loop down code.
- **Modify Loop Codes** allows the configuration of 10 DS1 loop code pairs. Configure each loop code **Name**, **Loop-Up** and **Loop-Down** values. The name field allows up to 16 characters. **Loop-Up** and **Loop-Down** range is from 3 to 16 bits (**000** to **1111111111111111**). The default DS1 loop codes correspond to the DS1 In-Band loop codes (Loop-Up=**10000**, and Loop-Down=**100**).

Signal - Signal Configuration - OTN

Note: *The following signal configuration parameters are available from the interface block.*

From the test menu, tap **Setup, Test Configurator**, the interface block, and on the **Signal** tab.

Signal Configuration

➤ OTU<n>

Note: *At least one of the two check boxes, **FEC** or **Scrambler**, must be selected in order to prevent potential alarms caused by a lack of bit transition on the optical signal. For example to disable **FEC**, first select the **Scrambler** check box then clear the **FEC** check box.*

- **FEC** check box when selected (default) enables the FEC in TX/RX and allows detecting, reporting, and correcting up to 8 symbol errors (Correctable) per codeword. If there are over 8 symbol errors detected, they are reported as uncorrectable errors.
- **Frame Error Alarming** check box when cleared (selected by default) does not report the error status (current/history), seconds, and does not affect the global test verdict for: **FEC-CORR**; **FAS** and **Invalid Marker** for OTL; **FAS** and **MFAS** for OTU.
- **Scrambler** check box when selected (default) provides enough “0” and “1” transitions on the optical signal for clock recovery.

Note: *When the **Scrambler** check box is cleared, the receiver circuitry is forced to operate in a condition which is outside of the specified OTN operating conditions, potentially causing alarms/errors. This configuration can be used for special analysis in a lab environment.*

➤ **ODU<n>**

Note: Only the higher ODU layer is available with Multi-Channel OTN.

- **OPU Trib Port**, available for each OPU level of a mapped signal, indicates the OPU tributary port used for the test. Tap the **Modify Tributary Slots/Port** button to change the OPU tributary port (refer to *Modify Tributary Slots/Port* on page 1014). Not available with Multi-Channel OTN.
- **OPU Trib Slots**, available for each OPU level of a mapped signal, indicates the OPU tributary slots used for the test. Tap the **Modify Tributary Slots/Port** button to change the OPU tributary slots (refer to *Modify Tributary Slots/Port* on page 1014). Not available with Multi-Channel OTN.
- **TCM** indicates each Tandem Connection enabled; **No TCM** indicates that no TCM is enabled. To enable TCM, tap the **Config TCM** button (refer to *Config TCM* on page 984; not available with Multi-Channel OTN).

Setup

Signal - Signal Configuration - OTN

- **Background Traffic**, available for a multiplex signal, is used to generate traffic on the timeslots that are not part of the foreground test traffic. Choices are **Unallocated** (available with PT21 only), **AIS**, **Null Client**, and **PRBS31** (default). The background traffic is configurable for each mux type when the multiplex signal contains both PT20 and PT21 mux types.

Higher Layer	Tributary	Background Traffic ^a
ODU4	ODU3, ODU2, ODU1, ODU0, ODU2e, ODU1e, ODUflex	1.25 Gbit/s ^b or Unallocated
ODU3	ODU2	Fixed structure: ODU2 Non fixed structure: ODU1
	ODU1	ODU1
	ODU0, ODUflex	1.25 Gbit/s ^b or Unallocated
ODU2	ODU1	ODU1
	ODU0, ODUflex	1.25 Gbit/s ^b or Unallocated
ODU1	ODU0	ODU0

- a. Uses the selected AIS, Null Client, or PRBS31 background traffic unless Unallocated is selected which corresponds to undefined traffic.
- b. Per tributary slot.

- **Modify Tributary Slots/Port** (refer to *Modify Tributary Slots/Port* on page 1014)
- **Config TCM** (refer to *Config TCM* on page 984).

Signal - Signal Configuration - SONET/SDH

For OTN-SONET/SDH BERT, from the test menu, tap **Setup, Test Configurator**, the protocol block, and the **Signal** tab.

For SONET/SDH BERT, from the test menu, tap **Setup, Test Configurator**, the interface block, and the **Signal** tab.

Signal Configuration

➤ OC/STM Signal

- **Synchronization Status Message (S1)**: Bits 5 through 8 of the S1 byte are used to convey synchronization status of the NE. Not available with **Through** topology.

Bits 5 to 8	Description	
	SONET	SDH
0000 ^a	Synchronized - Traceability Unknown (STU)	Quality Unknown
0001	Stratum 1 Traceable (ST1)	Reserved
0010	Reserved	ITU G.811 (PRC)
0011	Reserved	Reserved
0100	Transit Node Clock Traceable (TNC)	SSU-A
0101	Reserved	Reserved
0110	Reserved	Reserved
0111	Stratum 2 Traceable (ST2)	Reserved
1000	Reserved	SSU-B
1001	Reserved	Reserved
1010	Stratum 3 Traceable (ST3)	Reserved
1011	Reserved	ITU-T G.813 Option I (SEC)
1100	SONET Minimum Clock Traceable (SMC)	Reserved
1101	Stratum 3E Traceable (ST3E)	Reserved
1110	Provisionable by the Network Operator (PNO)	Reserved
1111	Don't Use for Synchronization (DUS)	Do not use for synchronization

- a. Default message.


Setup

Signal - Signal Configuration - SONET/SDH

- **REI-L Computation Method / MS-REI Computation Method** (OC-192/STM-64 only): Allows selecting the default method used to calculate the REI-L/MS-REI error for OC-192 and STM-64 signals. Choices are **M1 Only** (default) and **M0 M1 (M0 and M1)**.
- **STS/AU and VT/TU Mappings**
 - **Timeslot** (SONET) allows the selection of the STS timeslot number. Refer to *SONET Numbering Convention* on page 899 for more information.
 - **Number** (SDH) allows the selection of the AU channel number. Refer to *SDH Numbering Convention* on page 900 for more information.
 - **TCM** check box when selected (cleared by default) allows Tandem Connection Monitoring (TCM).
 - **TC-UNEQ-P / TC-UNEQ-V / HPTC-UNEQ / LPTC-UNEQ** check boxes when selected (cleared by default) allows the monitoring of the corresponding Tandem Connection - Unequipped alarm. Only available when the **TCM** check box is selected.
 - **Overwrite Fixed Stuff** (STS-1 only) check box when selected (default) fills up the bytes of the STS-1 SPE's columns 30 and 59 with the selected pattern from the tab *BERT and Unframed BERT* on page 234.

- **Background** allows the selection of the high order path background traffic: **AIS**, **Equipped** (PRBS23) (default), or **Unequipped**.


STS/AU Path (SONET/SDH HOP): The following diagram shows a test case data path that is terminated right after SONET/SDH high order path. High order background traffic is automatically adapted to the rate (STS-1, AU-3, or AU-4) signal level for the paths that are not defined in the test case. In the situation where the traffic pattern is replaced by GFP the background traffic remains the same for the STS-1/AU-3/AU-4 that are not involved in the test case data path. In the situation where contiguous concatenation or virtual concatenation is used, the background traffic continues to be applied on the remaining timeslots not involved in the test case data path.

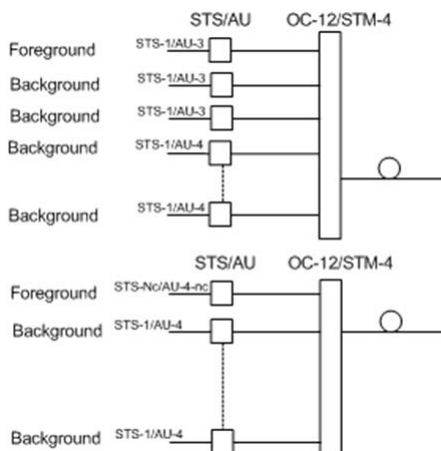

Setup

Signal - Signal Configuration - SONET/SDH

VT/TU Path (SONET/SDH LOP): The following diagram shows a test case data path that is terminated at the SONET/SDH low order path. The remaining STS-1 or AU-3 timeslot not involved in the test case are filled with background traffic of STS-1 or AU-3 level depending on the interface being SONET or SDH. At the low order path level, the data path not involved in the data path defined in the test case are filled with a background traffic equivalent to the VT Group (VTG) or Tributary Unit Group (TUG) type defined by the traffic selected in the data path. Further, the remaining VTG or TUG within the high order path, selected in the test case, are respectively filled with traffic of equivalent rate for SONET and SDH data paths.

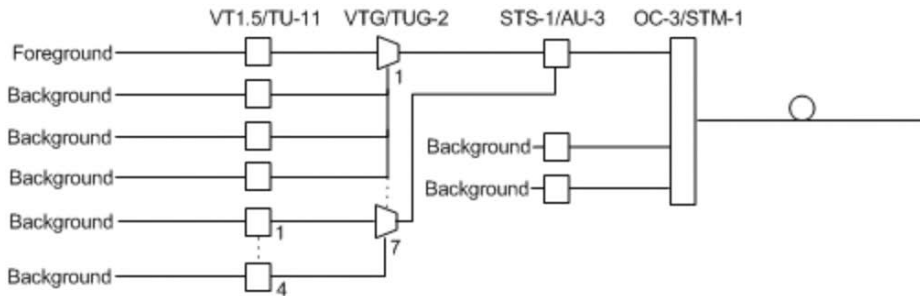

Smart Loopback

Note: *The Smart Loopback block is only displayed when the **Transparent (Pseudo-Physical)** check box is cleared (see **Loopback Mode on page 202**).*

From the test menu, tap **Setup, Test Configurator**, and the Smart Loopback block.

Loopback

- **Mode** determines at which layer the Smart Loopback address/port swapping operation will be.
 - **Ethernet** swaps the MAC addresses of received packets having their **Destination MAC** address matching the MAC address of the loopback port.
 - **Ethernet (All Unicast)** swaps the MAC addresses of received packets having Unicast **Destination MAC** address.
 - **IP**, for Ethernet Layer 3 and 4, swaps the MAC and IP addresses of received packets having their **Destination IP** address matching the IP address of the loopback port. For Ethernet Layer 2, swaps the **MAC addresses** for packets having their **Destination MAC** address matching the MAC address of the loopback port.

Setup

Smart Loopback

- **UDP/TCP** (default), for Ethernet Layer 4, swaps the UDP or TCP ports and the MAC and IP addresses of received packets having their **Destination IP** address matching the IP address of the loopback port. For Ethernet Layer 3, swaps the MAC and IP addresses for packets having their **Destination IP** address matching the IP address of the loopback port. For Ethernet Layer 2, swaps the **MAC addresses** for packets having their **Destination MAC** address matching the MAC address of the loopback port.
- **Matching & Swapping** indicates the Loopback parameters that will be used based on the Loopback Mode selected.

S-OAM Responder

The S-OAM Responder check box when selected (default) allows responding to LBM, LTM, DMM, LMM, and SLM valid messages (test running or not). Traffic statistics are also monitored (refer to *Responder* on page 664).

Respond to... message	Respond with... message
LBM	LBR
LTM	LTR
DMM	DMR
LMM	LMR
SLM	SLR

Streams - Global

From the **Test** menu, tap **Setup, Test Configurator**, the protocol block, and the **Global** tab.

The following parameters are displayed and configurable per stream.

➤ Check boxes:

The first check box (top-left) allows enabling stream(s) sequentially within the limit of the link capacity.

The check boxes next to the stream numbers allow enabling each stream individually within the limit of the link capacity.

- **Stream Name**¹ indicates the name of each stream. Tap on the **Stream Name** button to modify the name of each stream.
- **Frame Size**¹ indicates the frame size of each stream. Tap on the **Frame Size** button to modify the frame size of each stream.
- **TX Rate**¹ indicates the transmission rate for each stream. Tap on the **TX Rate** button to modify the transmission rate (see page 440).
- **Framing** indicates the framing of each service. Tap on the **Framing** button to modify the **Frame Format, Network Layer, Transport Layer, VLAN, and MPLS** when applicable (see **Modify Frame Structure** from the *MAC/IP/UDP* on page 342).
- **VLAN** indicates the ID and Priority of each VLAN level for each stream. Tap on the **VLAN** button to modify the VLAN settings (see **VLAN** from the *MAC/IP/UDP* tab).
- **Addressing MAC/IP** indicates the source and destination MAC/IP addresses for each stream. Tap on the **Addressing MAC/IP** button to modify the customer addressing (see **MAC** and **IP** from the *MAC/IP/UDP* tab). When using **Provider Encapsulation**, the source and destination addresses displayed are respectively EoE MAC for EoE and B-MAC for PBB-TE.

1. See the Profile tab for more information.

Setup

Streams - Global

Batch button allows bulk configuration for stream addressing. Select the check box of each configuration parameter that needs to be copied and set its parameters. From **Apply To**, select all streams the copy applies to and tap on the **Copy From** to proceed.

The following parameters are global for all streams.

- **Total TX Rate** indicates the percentage of the total line utilization which is the TX rate sum of all enabled streams.
- **Link Capacity** indicates the total rate available for traffic generation.
- **Global Options:**
 - **Rate Unit** allows selecting either %, **Mbit/s**, or **Gbit/s, frame/s**, and **IFG** as the reference for the rate values.
 - **Latency Unit** allows selecting either **ms** (default) or **μs** as the reference unit for **Latency**.
 - **QoS Metrics Tags Insertion** check box when selected (default) automatically adds a stream analysis tag containing Jitter, Latency, Throughput, and sequence tags in all frames that is generated.
- **Copy Stream** button allows copying the stream configuration to one or several streams.

Select the stream number the configuration will be copied from.

From **To the following Streams**, select all streams that will inherit the configuration from the selected stream. An orange background represents a selected stream. A stream that is already enabled (Enable TX) cannot be selected for copy.

Tap **Copy** to confirm the stream configuration for all selected streams.

- **Restore Default** button reverts the current test application to its default factory settings.

Streams - Profile

The Traffic Gen & Mon test application supports the configuration of up to 16 different streams individually.

From the **Test** menu, tap **Setup, Test Configurator**, the protocol block, and the **Profile** tab.

Note: *All parameters are configurable per stream.*

Stream Selection and Activation

Select the stream to be configured by either using the left/right arrow or by tapping over the stream numbers area then tapping on a specific stream number. An orange background indicates the selected stream while a green background indicates the streams that are enabled.

- **Stream** associates a name to the selected stream number. Default stream names are **Stream 1** to **Stream n**.
- **Enable** check box when selected (cleared by default) enables the selected stream. However, the stream will be generated only when the test is started while the global **Enable TX** check box is selected from the **Global** tab.

Profile

- **Profile** button allows the selection and configuration of either **Voice**, **Video**, or **Data** (default) emulation profile. The selected profile icon and its Codec for Voice and Video are displayed next to the **Profile** button. Refer to *Profile (Stream)* on page 1027.
- **Frame Size (Bytes)** indicates the frame size for **Voice** and **Video** profiles and allows changing the frame size for **Data** profile:

Profile and Codec	Type	Frame Size (bytes)	
		IPv4	IPv6
Voice Codec: - VoIP G.711 - VoIP G.723.1 - VoIP G.729	Fixed	138 82 78	158 102 98
Video Codec: All	Fixed	1374	1394
Data	Fixed (default)	48 ^a to 16000 ^b	
	Random	64 ^a to 1518 ^c	
	EMIX	48 ^a to 16000 ^b	
	Sweep	48 ^a to 16000 ^b	

- a. The minimum value is adjusted according to the frame structure and components selected as shown in the following table. The minimum of 48 bytes is only available for rates up to 10GE, for higher rates the minimum frame size is 64 bytes.
- b. The maximum frame size is limited to 10000 for 10/100/1000Mbps electrical interface.
- c. The maximum frame size value is adjusted for each enabled VLAN (+4 bytes per VLAN).

The following table lists each component that may affect the minimum frame size value.

Component	Description
VLAN	4 bytes per VLAN (up to 2 VLAN)
MPLS	4 bytes per label (up to two labels)
EoE Header	16 bytes
EoE VLAN	4 bytes
PBB-TE Header	18 bytes
B-VLAN	4 bytes
LLC and SNAP Headers	8 bytes
UDP	8 bytes
Ethernet Header	14 bytes
IPv4	20 bytes
IPv6	40 bytes

Note: Only *Fixed* frame size is available when using *Provider Encapsulation*.

- **Sweep** button is available when **Sweep** frame size is selected. The first frame is generated starting with the minimum number of bytes defined, then each subsequent frame is incremented by 1 byte until the maximum number of bytes is reached and start over with minimum.


EMIX button is available when **EMIX** frame size is selected. The EMIX frame sequence is repeated continuously (refer to *EMIX* on page 988).

Shaping

- **TX Mode** allows the selection of the transmission mode for the selected stream when **Data** profile is selected. The TX Mode is forced to **Continuous** for Voice and Video profiles and when using **Provider Encapsulation**.


Continuous (default) transfers the selected frame continuously according to the selected percentage of bandwidth.

n-Frame transfers the selected number of frames.

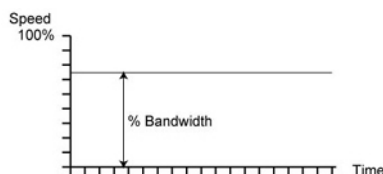


Burst transfers the selected frame at maximum bandwidth for the selected **Burst Duty Cycle** over the **Period**.

n-Burst transfers the selected number of Burst.

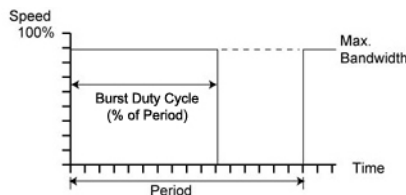

Ramp^a transfers the selected bandwidth in a stair shape according to the selected step time, number of steps, and maximum bandwidth.

n-Ramp^a transfers the selected number of Ramp.

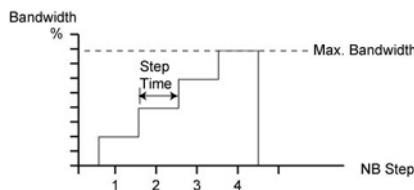

a. Not supported with 200GE and 400GE.

- **TX Rate / Max TX Rate** indicates the transmission rate for Voice and Video profiles, and allows entering the transmission rate for Data profile. The available stream transmission rate will be calculated according to the selected TX Mode. The default setting is 100 percent for all interfaces at the exception of 10Gig-E WAN which is 92.8571 percent (depending on the frame format).

Unit choices are: % (default), **Mbit/s**, **Gbit/s**, **frame/s**, **IFG**. However **frame/s** and **IFG** are not available for **Random** and **Sweep** frame sizes.

- **Customer Frame TX Rate**, available when using **Provider Encapsulation**, indicates the customer frame TX rate based on the **TX Rate** defined.
- **Frame Count** is only available with n-Frame Transmit Mode. Enter the frame count number: **1** (default) to **267857142857**.
- **Shaping** button, refer to *Shaping* on page 1032.
- **Total TX Rate** indicates the percentage of the total line utilization which is the sum of all TX rate enabled streams.

Note: *The Individual stream can be enabled/disabled even when the test is started and running. The streams can be enabled one after the other, up to 16, as long as the maximum rate is not reached. For example, if the first stream is using the full rate available, then no other stream can be enabled. However, if the first enabled stream uses half rate, then at least another stream can be enabled using up to half rate. Thus, to enable a second stream, first set the TX rate value within the non-used rate, then enable it. A stream cannot be enabled if its MAC address is not valid (it can be either not resolved or wrongly entered).*

- **Link Capacity** indicates the total rate available for traffic generation.

QoS Metrics

Note: *QoS Metrics settings apply to all streams.*

- **Global Pass/Fail Verdict** check box when selected (default) enables the pass/fail verdict for all streams.
- **Global Thresholds Type** button
 - **Throughput** allows selecting if the verdict is based on the **Current Throughput** (default) or **Average Throughput**.
 - **Frame Loss** allows selecting if the verdict is based on a frame loss **Count** (default) or **Rate**.
 - **Out-of-Sequence** allows selecting if the verdict is based on an Out-of-Sequence **Count** (default) or **Rate**.
- **Throughput (%)** check box when selected enables the throughput pass/fail verdict and allows setting the minimum and maximum threshold values.
- **Customer Frame Throughput**. available when using **Provider Encapsulation**, displays the calculated customer frame throughput minimum and maximum thresholds based on the throughput values.
- **Frame Loss Count/Rate** check box when selected enables the Frame Loss pass/fail verdict and allows setting the threshold of frame that are lost.

For **Count**, enter the maximum count of frame that are lost before declaring a fail verdict: **0** (default) to **999999999**.

For **Rate**, enter the maximum rate of frame that are lost before declaring a fail verdict: **1.0E-14** (default) to **1.0E00**.

- **Out-of-Sequence Count/Rate** check box when selected enables the Out-of-Sequence pass/fail verdict and allows setting the threshold of frames that are Out-of-Sequence.

For **Count**, enter the maximum count of frames that are Out-of-Sequence before declaring a fail verdict: **0** (default) to **9999999999**.

For **Rate**, enter the maximum rate of frames that are Out-of-Sequence before declaring a fail verdict: **1.0E-14** (default) to **1.0E00**.

- **Jitter** check box when selected enables the Jitter verdict and allows setting the maximum Jitter before declaring a fail verdict.
- **Latency** check box when selected enables the Latency verdict and allows setting the maximum Latency before declaring a fail verdict.

SyncE

From the test menu, tap **Setup**, **Test Configurator**, and the **SyncE** test block.

ESMC Monitoring

- **ESMC** (Ethernet Synchronization Message Channel) is a live value monitored even when the test is not started. The arrow next to the **ESMC** label indicates that ESMC valid information frames are received or not.
 - A green arrow indicates that at least one ESMC valid information frame, containing a valid FCS, was received within a second in the last 5-second interval.
 - A red arrow indicates that no ESMC valid information frames were received for more than 5 seconds.
 - A gray arrow indicates awaiting incoming data to provide a status.
- **Received QL** indicates the received Quality Level monitored even when the test is not started.
- **QL Mismatch Monitoring** check box when selected (default) enables the Quality Level mismatch monitoring. The quality level characterizes the clock quality in terms of network synchronization.
- **Expected QL** available when the **QL Mismatch Monitoring** check box is selected, allows the selection of the Expected Quality Level value. See page 533 for more information.
- **Pass/Fail Verdict** check box when selected (default) enables the use of the pass/fail verdict. The global pass/fail verdict is based on the following criteria: **ESMC Rate Threshold** (when enabled), **QL Mismatch Monitoring** (when enabled), **ESMC Loss**, or **Link Down**.
- **ESMC Rate Threshold** check box when selected (default) enables the ESMC rate threshold monitoring which will declare a Fail verdict when the ESMC frame rate is outside the range of 0.8 to 10.2 frames/s.

ESMC Generation

- **Generated QL** check box when selected (default) enables the generation of the selected QL message. See page 530 for the list of QL message (default is **QL-EEC2/ST3**). For 1GE Electrical interface using **Local Clock** set to **Slave**, **Generated QL** is dimmed with its check box selected and set to **QL-DNU/DUS**.
- **QL Rate (frame/s)** defines the frame rate at which the ESMC transmit the QL message value: **1** (default), **5**, or **10** frames per second. For 1GE Electrical interface using **Local Clock** set to **Slave**, the **QL Rate** is dimmed and set to **1** frame/s.

Restore SyncE Defaults

Reverts the test application to its default factory settings.

System - General

From the **Test** menu, tap **Setup**, and **System**.

For 88260: From the **Test** menu, tap **Setup**, **System**, and **General**.

Factory Default

- **Restore Default** button restores the factory default settings for all test applications.
- **Restore Default at Start-Up** check box when cleared (default), reloads the last configuration settings when the application is launched; when selected, the factory settings are restored.

Remote Control

User Information allows a user to leave a message to other users connected on the same module. Up to 80 characters are allowed.

Time Zone allows the selection of the time zone source.

- **Local** (default) uses and displays the time from the FTBx-88000 Series module or from the PC for a Remote ToolBox session.
- **Test Equipment**, available for a Remote ToolBox session, uses and displays the time from the FTBx-88000 Series module.

Notification Control

Transceiver Transaction Fault check box when selected (cleared by default) displays a transceiver transaction fault message in the **Test Configurator** page (see *Test Configurator Overview* on page 137) when either the module is unable to discover the transceiver device or experiences abnormal communication conditions such as: register access is blocked, read/write errors are detected, transceiver is present but unresponsive, etc. A transceiver fault message remains displayed until either the **Transceiver Transaction Fault** check box is cleared, the transceiver is removed, or when switching the test application.

Whether the **Transceiver Transaction Fault** check box is selected or cleared, a log file is generated/updated when a transceiver transaction fault occurs. The log file contains the information about the transceiver and the related fail condition(s); up to 5000 entries are allowed; a log full indication is recorded if the limit is reached. The file name is **TransactionFault.log** and is located in the **Users\Public\Public Documents\<product>\Logs** folder. The content of the file can be cleared manually by opening the file, erasing its content, and saving the file. The file can also be deleted from disk and will be automatically regenerated when a new transceiver transaction fault occurs.

System - GNSS

Note: Only available on 88260 module.

From the test menu, tap **Setup**, **System**, and **GNSS**.

Configuration

- **Band** allows selecting the band used by the GNSS receiver:
For TA-SYNC-PREMIUM: **L1** or **L1 + L2** (default).
For TA-SYNC: **L1** (default) and dimmed.
- **Constellation** allows selecting the constellation:
 - GPS Galileo, GLONASS, Beidou¹** (Default for TA-SYNC-PREMIUM)
 - GPS, Galileo, GLONASS**
 - GPS, Galileo, BeiDou** (Default for TA-SYNC)
 - GPS GLONASS, Beidou¹**
 - Galileo, GLONASS, Beidou¹**
 - GPS, Galileo**
 - GPS, BeiDou**
 - GPS, GLONASS**
 - Galileo, BeiDou**
 - Galileo, GLONASS**
 - BeiDou, GLONASS**
 - GPS**
 - Galileo**
 - BeiDou**
 - GLONASS**
- **QZSS** check box when selected (default) determines that the QZSS constellation is used. **QZSS** is only available when GPS is part of the selected constellation(s).

1. Available with TA-SYNC-PREMIUM.

➤ **Time Source / Variant**

- **Time Source** allows selecting the time source based on the selected constellation(s):

UTC (Default)

GPS

Galileo

BeiDou

GLONASS

- **Variant** allows selecting the UTC Variant based on the selected constellation(s):

Auto (Default): Automatic selection

USNO: Unites States Naval Observatory

SU: Soviet Union

NTSC: National Time Service Center

Europe: European Laboratory

➤ **Position Mode** allows selecting how the position is acquired:

- **Survey-In** (Default): Once selected, starts the Survey-In process until the actual position accuracy is within the desired accuracy; the process last for at least 2 minutes.

- **Manual** allows configuring the antenna coordinates manually.

- **Coordinates (Antenna Coordinates)**, available with **Manual** position mode, allows selecting the WGS84 coordinates:

Latitude: **-90** to **90** degrees (default is **0**)

Longitude: **-180** to **180** degrees (default is **0**)

Altitude: **-500** to **9999** meters (default is **0**)

- **Restart**, available with Survey-In, performs a cold start of the GNSS receiver then, once booted, the Survey-In process starts automatically and runs until the desired accuracy is met. It is recommended to select the desired test application before restarting the GNSS receiver.

Setup

System - GNSS

- **Desired Accuracy**, available with Survey-In, allows selecting the required position accuracy:
 - Very High** (default): 1 meter
 - High**: 3 meters
 - Medium**: 10 meters
 - Low**: 30 meters
- **Cable Delay** allows selecting the signal propagation delay of the antenna and its cable: **0** to **32767 ns** (default is **50 ns**).

Holdover

The Holdover function provides a stable clock, for a specific period, when the access to the satellite network is no longer available. To achieve holdover, the circuitry must be warmed up and then disciplined using the GNSS Receiver while connected to the satellite network. Only available when using a TA-SYNC PREMIUM or TA-SYNC PREMIUM v2 transceiver system module.

Note: *When using a TA-SYNC PREMIUM, it is important to notice that turning off the unit or closing the application will require to restart all holdover functions. This is not applicable to the TA-SYNC PREMIUM v2 when the PWR IN port is connected to the platform USB 3.0 port (SS↔).*

Note: *Disabling **Holdover** while a test is running and using the holdover timing reference may cause unexpected results.*

- **Drift Stability** control allows optimizing the warm-up time duration. Only available with TA-SYNC-PREMIUM v2.
 - **High** (Default) provides the best drift stability thus increasing the warm-up time.
 - **Low** significantly reduces the warm-up time thus lowering the Drift Stability.
- **Oscillator Warm-Up** is required to achieve acceptable holdover performance; the warm-up starts as soon as a TA-SYNC-PREMIUM transceiver system is detected by the Power Blazer. A progress bar and remaining time is displayed during the oscillator warm-up until the process terminates at which point **Completed** is reported.

Note: *With a TA-SYNC-PREMIUM v2 it is possible to connect the PWR IN port to the platform USB port to preserve the Warm-Up operation before turning off the platform. Use the supplied cable to connect the PWR IN port to the platform USB 3.0 port () which is next to the Ethernet (RJ45) port; it is mandatory to use the USB 3.0 port for sufficient power. When disconnecting the platform from the AC power source, the USB port power is only maintained on a platform that supports the **Always keep USB ports powered on** and is enabled (refer to the platform user guide for more information); ensure the platform has sufficient battery power.*

PWR IN LED, available with a TA-SYNC-PREMIUM v2, indicates that a 5 VDC source is present (green) or not (gray).

- **Discipline Oscillator** allows tuning the parameters of the holdover circuitry. Only available once the **Oscillator Warm-Up** status is **Completed**, the **GNSS** status is **Ready**, and the GNSS receiver **Time Lock** status is **Lock**; not available when **Holdover** is enabled. The **Tuning Status** is reported as a percentage (%) within a progress bar until the process is **Completed** (with green LED). The process can be manually aborted or autonomously aborted if the reference signal is degraded, in which case **Disabled** is reported. During the discipline oscillator process the 1PPS output signal is unavailable until the process is completed or manually disabled. Once **Completed** the **Discipline Oscillator** button is dimmed; in order to restart the **Discipline Oscillator** toggle **Holdover** and then enable **Discipline Oscillator**.
- **Holdover** allows the unit to operate without the support of the GNSS Receiver. Available when the **Discipline Oscillator** status is **Completed**. Once the Holdover is enabled and its status is **Ready** an appropriate reference signal is available without the support of the GNSS Receiver and the antenna can be disconnected. Enabling the Holdover automatically disables the **Discipline Oscillator**. Holdover status is **Disabled**, **In Progress**, or **Ready**.

Estimated Holdover Remaining Time provides an indication for which the holdover timing reference is within its specification.

Elapsed time indicates the time elapsed since the holdover was enabled and **Ready**.

Statuses

- **GNSS** reports the GNSS global status as **Ready** when the GNSS status is in **Fixed Mode** and the GNSS Time Lock status is **Locked**; otherwise **Not Ready** is reported. When the status is **Ready**, the 1PPS signal can be used as the clock synchronization for the test by selecting **Internal GNSS** as clock mode and **1PPS** as reference (see *Clock* on page 255). The 1PPS signal is aligned with the Time Source and Variant when applicable.

- **Status** reports the current GNSS status:
 - **Acquiring** indicates that no position has been acquired yet or the GNSS receiver reports an invalid Fix.
 - **Survey-In**, available with Survey-In position mode, indicates that the Survey-In process is running.
 - **Fixed Mode** indicates operating in timing mode and the GNSS receiver reports a valid Fix.
- **Time Lock** reports **Locked** when the time source is known and confirmed, and when using UTC time source that the UTC Variant is known; otherwise **Not Locked** is reported.
- **UTC Variant** is reported when using an UTC time source:
 - **--**: UTC Variant not known yet
 - **USNO**: Unites States Naval Observatory
 - **SU**: Soviet Union
 - **NTSC**: National Time Service Center
 - **Europe**: European Laboratory

Setup

System - GNSS

- **Jamming** reports position and jamming/interference status.
 - **OK:** Position OK and no jamming/interference detected
 - **Warning:** Position OK and jamming/interference detected
 - **Critical:** No Position and jamming/interference detected
 - **Unknown:** Unknown (disabled/uninitialized or antenna disconnected)
- **# of Sat used** reports the number of satellites that are used by the GNSS receiver to determine the actual position and time.
- **Coordinates** reports the latitude, longitude, and altitude WGS84 coordinates determined by the Survey-In process. The coordinates are updated as soon as the first position is obtained, then throughout the survey-in process until it completes.

Satellites Histogram

Reports each satellite seen by the GNSS receiver.

- X axis reports satellite ID: **G..** for GPS, **E..** for Galileo, **B..** for BeiDou, **R..** for GLONASS, **Q..** for QZSS.
- Y axis reports satellite power: RX Power (C/No, in dBHz)
- Color: Green for used satellites and gray for those not used.

Transceiver System (TA/TA4)

Gives the transceiver system insertion counter and information on the inserted transceiver system. Only available on 88260 and 88460 modules.

From the **Test** menu:

- For iOptics, tap **Setup, Test Configurator**, tap **More...** from the **Device Under Test** block, and on the **Transceiver System** tab.
- For other tests, tap **Setup, Test Configurator**, tap on the interface block and on the transceiver system (**TA/TA4-...**) tab.
- For TA-Sync, tap either:
 - **Setup, Test Configurator**, tap on the clock block and on the **TA-Sync** tab. This tab is not displayed when Ext Clock Out is set to **None**.
 - **Setup, System** and on the **TA-Sync** tab.

Port / Port A/B

Note: *Port A/B on 88260 indicates on which port the transceiver system is inserted.*

- **Transceiver System Insertion Counter** indicates the number of time a transceiver system has been inserted into this FTBx module port.
- **Transceiver System Parameters** are as follows:
 - **ID** indicates the name of the transceiver system.
 - **Serial Number** indicates the serial number of the transceiver system.
 - **Revision** indicates the hardware revision of the transceiver system.

Setup

Transceiver System (TA/TA4)

- **Battery**¹ indicates the status level of the battery: **Good**, **Low**, or **Depleted**.
- **Optical Module Insertion Counter**¹ indicates the number of time an optical transceiver has been inserted into this transceiver system port.

1. Not available with TA-SYNC.

TCP Throughput

From the test menu, tap **Setup, Test Configurator**, and tap on the test block.

TCP Mode

Since two units are required to perform a TCP Throughput test, one unit must be the source (**Local**) unit and the other one the destination (**Remote**). Set the TCP Mode on both units: **Local** (default) or **Remote**.

TCP Connection Configuration

- **Remote IP Address**, available with **Local** TCP mode, allows entering the IP address of the remote unit.
- **Quick Ping** button automatically starts the quick Ping utility for the remote IP address and provides either a successful or failed result. The quick Ping uses 3 attempts, a Delay of 1 second, a Timeout of 2 seconds, and a Data Size of 32 Bytes. Refer to *Ping & Trace Route* on page 750 for more options.
- **Accept Connection from IP**, available with **Remote** TCP mode, allows entering the IP address of the local unit. The IP address **0.0.0.0** (default) listens to any TCP stream.
- **IP TOS/DS**, available with **Local** TCP mode, is configurable from **0x00** (default) to **0xFF**.
- **TCP Port**, available with **Local** and **Remote** TCP modes, allows the selection of the TCP port number: **0** to **65535** (default is **50201**). For the local unit, the specified TCP port will be used for the TCP initialization algorithm with the remote unit. The following TCP segments sent by the local unit will use the TCP port number replied by the remote unit.

TCP Throughput Configuration

Note: *TCP Throughput Configuration is only available on the local unit.*

- **Initial Window Size**¹ is the window size that is used when the test is started: **1024** Bytes to **65536** KBytes (default is **2** KBytes). The Initial Window Size value must be between the **Minimum Window Size** and the **Maximum Window Size** values.
- **Minimum Window Size**¹ is the minimum window size used for the test: **1024** Bytes to **65536** KBytes (default is **1** KBytes).
- **Maximum Window Size**¹ is the maximum window size used for the test: **1024** Bytes to **65536** KBytes (default is **64** MBytes).
- **Rate Unit** allows selecting the unit that will be used to set the Throughput Pass/Fail Verdict Threshold and throughput results: % (default) or **MBit/s**.
- **Throughput Pass/Fail Verdict** check box when selected (default) enables the throughput verdict.
- **Threshold** allows setting the pass/fail verdict threshold value: **0** to **100** % (default).

Restore TCP Throughput Defaults

Reverts the TCP Throughput test application to its default factory settings.

1. The entered value will be rounded to the closest multiple of 1024 Bytes. Unit choices are Bytes, KBytes (default), and MBytes.

Test Sequence - iOptics

From the test menu, tap **Setup**, and **Test Configurator**.

- **Control Pin Check** check box when selected (default) stimulates the **TX_DISABLE** pin for SFPs or the **Reset** pin for other transceivers. Clear this check box to bypass this test for transceiver not supporting the control pin. The **Control Pin Check** check box is cleared and dimmed for DCO interfaces.
- **Laser Tuning Test** check box when selected (default) validates the laser tuning function of the transceiver at minimum and maximum laser wavelengths as well as the fine tuning capability. Only available for DCO interfaces (not available with 400ZR Unamplified interfaces).
- **Power Threshold (W)**¹ indicates the power consumption threshold based on the power level/class detected including uncertainty from the selected transceiver to declare the pass/fail verdict. Not available on 8870 and 8880 modules.

Power Consumption - Pass/Fail Verdict¹ check box when selected (default) enables the power consumption pass/fail verdict based on the **Power Threshold** value. In the case where the Power Class needs to be disregarded, clear this check box to avoid reporting a fail verdict.

- **Temp. Threshold (°C)**¹ allows selecting the temperature threshold to declare the pass/fail verdict: **0** to **75 °C** (default is **70 °C**).
- **TX Power Range (dBm)**¹ indicates, when supported, the optical device TX operational range to declare the pass/fail verdict.
- **RX Power Range (dBm)**¹ indicates the optical device RX operational range to declare the pass/fail verdict.
- **BERT Duration** is the time duration of the bit error test:
1 minute (default), **2, 3, 4, 5**, or **30 minutes**.

1. Not available when PHY Type is set to DAC.

Setup

Test Sequence - iOptics

- **BERT Threshold** indicates the bit error test threshold (set to **0**) to declare the pass/fail verdict.
- **BERT Edge Testing** check box when selected (default) validates the signal integrity at minimum and maximum bit rate, minimum and maximum Laser Wavelength (when applicable), and minimum (when applicable) and maximum TX Power. When the **BERT Edge Testing** check box is cleared, validates the signal integrity at nominal bit rate, maximum TX Power, and configured Laser Wavelength (when applicable).
- **Skew Threshold (Bits)**, available with parallel interfaces, indicates the skew threshold that is automatically set based on the rate to declare the pass/fail verdict.

Time Error / Wander

From the test menu, tap **Setup**, **Test Configurator**, and either the **Time Error** or **Wander** test block.

Test

- **Sampling Rate**, available with Wander measurement mode, allows selecting the time interval error measurement sampling rate: **30 samples/s** (default), **20 samples/s**, **10 samples/s**, **5 samples/s**, and **1 sample/s**. For time error measurement the sampling rate is fixed to 1 sample/s.

For both Time Error and Wander measurements:

- **Maximum Test Duration** displays the maximum test duration based on the selected sampling rate.
- **Mask** allows selecting the MTIE/TDEV ITU mask for Time Error / Time Interval Error pass/fail validation.

Mask	MTIE	TDEV
None (default)	-	-
G.811- Primary Reference Clock (PRC)	X	X
G.812- Type I Node Clock (SSU) - Constant Temperature	X	X
G.812- Type I Node Clock (SSU) - Variable Temperature	X	-
G.812- Type II and III Node Clock (SSU) - Constant Temperature	X	X
G.813- Option 1 SDH Equipment Clock (SEC) - Constant Temperature	X	X
G.813- Option 1 SDH Equipment Clock (SEC) - Variable Temperature	X	-
G.813- Option 2 SDH Equipment Clock (SEC) - Constant Temperature	X	X
G.823- Primary Reference Clock (PRC)	X	X
G.823- Synchronization Supply Unit (SSU)	X	X
G.823- SDH Equipment Clock (SEC)	X	X
G.823- PDH Synchronization Interface	X	X
G.824- 1544 kbit/s Reference Interface	X	X
G.824- 1544 kbit/s Reference Interface for Option 2 SEC	-	X

Setup

Time Error / Wander

Mask	MTIE	TDEV
G.8261- CES Case 1 - 2048 kbit/s (MRTIE)	X	-
G.8261- CES Case 1 - 1544 kbit/s	X	-
G.8261- CES Case 2A - 2048 kbit/s (MRTIE)	X	-
G.8261- EEC Option 1 - SyncE Interface	X	X
G.8261- EEC Option 2 - SyncE Interface	-	X
G.8261.1- PEC-Slave Frequency Case 3	X	-
G.8262- EEC Option 1- SyncE - Constant Temperature	X	X
G.8262- EEC Option 1- SyncE - Variable Temperature	X	-
G.8262- EEC Option 2- SyncE - Constant Temperature	X	X
G.8263- PEC-Slave Frequency - Constant Temperature	X	-
G.8263- PEC-Slave Frequency - Variable Temperature	X	-
G.8271.1- Dynamic Time Error	X	-

- **Duration** check box when selected (cleared by default) allows selecting/entering the test duration: **15 minutes**, **1/2/4/6/12/24/72 hours**, or **User Defined** (1 second up to 30 days depending on the selected **Sampling Rate**); with the G.8275.2 profile, the duration should be more than 200 seconds in order to obtain TE values.

Note: *Once the test completes (after the duration is reached or when manually stopped), MTIE calculation may take some time depending on the test duration and sampling rate used.*

For Time Error measurements:

- **cTE Averaging Period (s)**, available with either G.8275.1 profile or 1PPS interface, defines the averaging period used to calculate the constant Time Error (cTE) value over a specific period of time: **Elapsed time** (default), **100 s**, **500 s**, **1000 s**, **10000 s**.
- **dTE_H Observation Period (s)**, available with either G.8275.1 profile or 1PPS interface, defines the observation period used for qualifying the Time Error after High-Pass filtering 0.1 Hz: **100 s**, **500 s**, **1000 s**, **10000 s** (default).

- **Cable Delay Compensation (ns)**, available with 1PPS interface, allows manual compensation of external cable delay asymmetry: **-1000 ns to 1000 ns (0 ns by default)**.

The cable delay asymmetry is caused by the difference between the length of the cable feeding the reference signal and the one feeding the signal under test.

In the case where the cable length of the signal under test is longer than the reference signal, a negative value is needed to compensate for the asymmetry. For example to compensate for a cable delay of -10 ns, enter this measured value as the **Cable Delay Compensation (ns)**: $-10 - (-10) = 0 \text{ ns}$.

In the case where the cable length of the signal under test is shorter than the reference signal, a positive value is needed to compensate for the asymmetry. For example to compensate for a cable delay of 10 ns, enter this measured value as the **Cable Delay Compensation (ns)**: $10 - (10) = 0 \text{ ns}$.

- **Window Step Size**, available with G.8275.2 profile, allows selecting the window step size based on a 200 seconds window: **1** (default), **2**, **5**, **10**, **15**, or **20** seconds.
- **Pkt sel cTE Averaging Period (s)**, available with G.8275.2 profile, defines the averaging period used to calculate the packet selected constant time error value over a specific period of time: **EIapse time** (default), **100 s**, **500 s**, **1000 s**, **10000 s**.

Verdict

For both Time Error and Wander measurements:

- **MTIE** check box when selected (default) reports the Maximum Time Interval Error (**MTIE**) verdict. Available when **MTIE** is supported by the selected **Mask**.

Setup

Time Error / Wander

- **TDEV** check box when selected (default) reports the Time Deviation (**TDEV**) verdict. Available when **TDEV** is supported by the selected **Mask**.

For Time Error measurement with either G.8275.1 profile or 1PPS interface:

- **Max Absolute TE (ns)** check box when selected (default) allows selecting the maximum absolute time error threshold value: **50 ns** to **2000 ns** (default is **1100 ns**).
- **Max dTE_H pk-pk (ns)** check box when selected (default) allows selecting the maximum dynamic time error (after High-Pass filtering 0.1 Hz) peak-to-peak threshold value: **20 ns** to **400 ns** (default is **200 ns**).
- **Max cTE (ns)** check box when selected (default) allows selecting the maximum constant time error threshold value: (+/-) **15 ns** to **600 ns** (default is **600 ns**).

For Time Error measurement with G.8275.2 profile:

- **Max Abs pkt sel TE (ns)** check box when selected (default) allows selecting the maximum absolute packet selected time error threshold value: **50 ns** to **2000 ns** (default is **1100 ns**).
- **Pk-pk pkt sel TE (ns)** check box when selected (default) allows selecting the peak-to-peak packet selected time error threshold value: **50 ns** to **2000 ns** (default is **1100 ns**).
- **Max pkt sel cTE (ns)** check box when selected (default) allows selecting the maximum packet selected constant time error threshold value: **15 ns** to **600 ns** (default is **600 ns**).

Restore Time Error / Wander Defaults

Reverts the test application to its default factory settings.

Timer

Allows starting and/or stopping automatically the test at a given time or for a specific duration.

From the **Test** menu, tap **Setup**, and **Timer**.

Note: *For RFC 6349 the Timer is only available with operation modes **Dual Test Set** (local unit).*

Timer

Note: *For RFC 2544 and RFC 6349, only **Start Time** and the **ARM** button are available.*

- **Duration:** Selects the test duration based on the test start time. The test start time can be either the time the user starts the test or the time the test is automatically started when the start time is enabled. The **Duration** check box has to be selected to be included in the test timer. Choices are **15 minutes** (default), **1, 2, 4, 6, 12, 24, 72 hours, 7 days**, and **User Defined**.

When **User Defined** is selected, the field next to it becomes available to enter the test duration using the format: dd:hh:mm:ss.

Note: *Duration cannot be enabled while stop time is enabled. When the test is started while duration is enabled, the stop time is calculated and the Stop Time field is updated to indicate the time the test will stop.*

- **Start Time** selects the time the test will automatically start. The **Start Time** check box has to be selected to be included in the test timer.

Note: *A valid start time has to be subsequent to the current time.*

Setup

Timer

- **Stop Time** selects the time the test will automatically stop. The **Stop Time** check box has to be selected to be included in the test timer.

Note: *A valid stop time has to be subsequent to the current time or to the start time, when enabled. The stop time must not exceed 30 days based on the start time. The stop time cannot be enabled while **Duration** is enabled.*

- **ARM** button, available when the **Start Time** check box is selected (cleared by default), enables the start test timer. Not available while the test is running. It is not possible to start the test case when the start time is armed.

Note: *An icon is displayed in the global test status area indicating that the timer is enabled. **Armed** is displayed when the test start time is armed while the test is not started. Refer to Global Indicator on page 49 for more information.*

Traces - OTN

For OTN BERT and OTN-SONET/SDH BERT: From the test menu tap **Setup**, **Test Configurator**, tap on the interface block, and on the **Traces** tab.

For Multi-Channel OTN: From the test menu, tap **Setup**, **Test Configurator**, tap on either:

- the interface block, and the **Traces** tab to configure the higher ODU layer.
- the test block (**ODU Channels**), and the **Traces** tab to configure the lower ODU layer. Traces settings apply to all channels unless otherwise indicated.

Note: Configuration is coupled with settings from *Traces - OTN* on page 647.

OTUx, ODUx, and TCMx Buttons

Tap on either OTUx or an ODUx button. For ODUx when TCM is enabled (see *Modify TCM* on page 428), tap on a TCMx button to select a TCM level. TCM is not available with Multi-Channel OTN.

SM TTI Traces / PM TTI Traces / ODUx TCM TTI Traces

Note: The TTI Traces are configurable for SM (OTUx), PM (ODUx), and TCM (ODUx when TCM is enabled; see **Config TCM** on page 428).

Note: For Multi-Channel OTN lower ODU layer, expected traces apply to all channels but may be overwritten individually per channel from *Traces - OTN* on page 647; In this case the  icon appears next to the expected message indicating that at least one channel uses a different message.

- **Overwrite** check box when selected generates the defined messages. Only available with **Through Intrusive** topology and applies only to the OTU and ODU top layers.

Setup

Traces - OTN

- **SAPI** (Source Access Point Identifier) allows entering the SAPI message to be generated (TTI bytes 0 to 15). The expected SAPI message is available when the **SAPI OTU-TIM** / **SAPI ODU-TIM** check box is selected. A maximum of 16¹ characters is allowed.

TTI Traces	Default Message ^a
SM	EXFO OTU SAPI
PM	EXFO ODU SAPI ^b
TCM ^c	EXFO TCMi SAPI

- a. The default message contains a NULL (all 0's) character preceding it. NULL (all 0's) characters are automatically appended to the message for bytes that are not defined.
- b. The channel number is automatically appended to the message.
- c. Not available with Multi-Channel OTN.

- **DAPI** (Destination Access point Identifier) allows entering the DAPI message to be generated (TTI bytes 16 to 31). The expected DAPI message is available when the **DAPI OTU-TIM** / **DAPI ODU-TIM** check box is selected. A maximum of 16¹ characters is allowed.

TTI Traces	Default Message ^a
SM	EXFO OTU DAPI
PM	EXFO ODU DAPI ^b
TCM ^c	EXFO TCMi DAPI

- a. The default message contains a NULL (all 0's) character preceding it. NULL (all 0's) characters are automatically appended to the message for bytes that are not defined.
- b. The channel number is automatically appended to the message.
- c. Not available with Multi-Channel OTN.

1. For Multi-Channel OTN lower ODU layer, a maximum of 13 characters are allowed since the channel number is automatically appended to the message.

- **Operator Specific** allows entering the Operator Specific message to be generated (TTI bytes 32 to 63). A maximum of 32 characters are allowed.

For OTN BERT and OTN-SONET/SDH BERT:

TTI Traces	Default Message ^a
SM	EXFO OTU OPERATOR SPECIFIC
PM	EXFO ODU OPERATOR SPECIFIC
TCM	EXFO TCMi OPERATOR SPECIFIC

- a. NULL (all 0's) characters are automatically appended to the message for bytes that are not defined.

For Multi-Channel OTN:

TTI Traces	Default Message ^a
SM	XFO OTU OPERATOR SPECIFIC
PM	XFO ODU OPERATOR SPECIFIC

- a. NULL (all 0's) characters are automatically appended to the message for bytes that are not defined.

- **SAPI OTU-TIM / SAPI ODU-TIM / SAPI TCM-TIM** check box, when selected (cleared by default), allows editing the expected Source Access Point Identifier and also enables OTU/ODU/TCM-TIM alarm monitoring.
- **DAPI OTU-TIM / DAPI ODU-TIM / DAPI TCM-TIM** check box, when selected (cleared by default), allows editing the expected Destination Access Point Identifier and also enables the OTU/ODU-TIM alarm monitoring.

Traces - SONET/SDH

For SONET/SDH BERT and SONET/SDH - DS_n/PDH BERT: From the test menu, tap **Setup**, **Test Configurator**, the interface block, and on the **Traces** tab.

For OTN-SONET/SDH BERT: From the test menu, tap **Setup**, **Test Configurator**, the protocol block, and on the **Traces** tab.

Traces

Note: *Selecting a Trace byte to be generated will automatically update the corresponding OH byte. Refer to OH - SONET/SDH on page 727 for more information. Configuration is coupled with settings from Traces - SONET/SDH on page 650.*

- **Section (J0) / RS (J0), STS Path (J1) / AU Path (J1) / TU-3 Path (J1), VT Path (J2) / TU Path (J2)**

Format allows the selections of the J0/J1/J2 format: **1 Byte** (default), **16 Bytes**, or **64 Bytes**.

Generated, available when the 16 bytes or 64 bytes format is selected, allows entering the J0/J1/J2 trace value/message to be generated.

Format (bytes)	Default Traces	J0/J1/J2
1	01 ^a	J0/J1/J2
16	EXFO SONET/SDH	J0/J1/J2
64	EXFO SONET/SDH Analyzer Section/RS trace test message	J0
	EXFO SONET/SDH Analyzer high order path trace test message	J1 (STS/AU)
	EXFO SONET/SDH Analyzer low order path trace test message	J1 (TU-3)/J2

a. Hexadecimal value. Refer to OH - SONET/SDH on page 727 to change this value.

Note: 16-bytes selection allows typing up to 15 bytes (a CRC-7 byte will be added in front for a total of 16 bytes). 64-bytes selection allows typing up to 62-bytes ($\langle C_R \rangle$ and $\langle L_F \rangle$ bytes will be added at the end for a total of 64-bytes). Traces values should be ASCII suitable characters including the ITU T.50 Characters on page 60.

- **TIM-S / RS-TIM, TIM-P / HP-TIM, TIM-V / LP-TIM** check box when selected (cleared by default) enables the corresponding Trace Identifier Mismatch for the expected message defined.

Format allows the selection of the expected format:

16 Bytes (default), or **64 Bytes**.

Expected allows entering the expected J0 trace message.

TCM Access Point Identifier

Note: Available when **TCM** is enabled from the Signal - Signal Configuration - SONET/SDH on page 429.

- **STS Path (N1) / AU Path (N1), and VT Path (Z6) / TU-Path (N2) / TU-Path (N1)** for (TU-3) allows entering the N1/N2/Z6 value/message to be generated.
- **TC-TIM-P / HPTC-TIM / TC-TIM-V / LPTC-TIM** check box when selected (cleared by default) enables the corresponding TCM Access Point Identifier and allows the configuration of the expected message.

Traces/PT - FlexO

From the test menu, tap **Setup, Test Configurator**, the **FlexO-OTUCn** protocol block, and the **Traces/PT** tab.

OTUCn / ODUcN / ODUk

Tap on either the OTU or an ODU button.

SM TTI Traces / PM TTI Traces / Global PM TTI Traces

Note: *The TTI Traces are configurable for SM (OTUCn), PM (ODUCn), and Global PM (ODUk).*

Note: *The expected message settings are coupled with the **Expected Message** from Traces/PT - FlexO on page 652. For ODUk, the  icon appears next to the expected message indicating that the **Expected Message** has been changed from Traces/PT - FlexO on page 652.*

- **SAPI** (Source Access Point Identifier) allows entering the SAPI message to be generated (TTI bytes 0 to 15). The expected SAPI message is available when the **SAPI OTU-TIM** / **SAPI ODU-TIM** check box is selected. A maximum of 16 characters are allowed; 13 characters for lower ODU layer since the channel number is automatically appended to the message.

TTI Traces	Default Message ^a
SM	EXFO OTU SAPI
PM	XFO ODU SAPI ^b

- a. The default message contains a NULL (all 0's) character preceding it. NULL (all 0's) characters are automatically appended to the message for bytes that are not defined.
- b. For ODUk, the client ID is automatically appended to the generated/expected message.

- **DAPI** (Destination Access point Identifier) allows entering the DAPI message to be generated (TTI bytes 16 to 31). The expected DAPI message is available when the **DAPI OTU-TIM / DAPI ODU-TIM** check box is selected. A maximum of 16 characters is allowed; 13 characters for lower ODU layer since the channel number is automatically appended to the message.

TTI Traces	Default Message ^a
SM	EXFO OTU DAPI
PM	XFO ODU DAPI ^b

- a. The default message contains a NULL (all 0's) character preceding it. NULL (all 0's) characters are automatically appended to the message for bytes that are not defined.
- b. For ODUk, the client ID is automatically appended to the message.

- **Operator Specific** allows entering the Operator Specific message to be generated (TTI bytes 32 to 63). A maximum of 32 characters are allowed.

TTI Traces	Default Message ^a
SM	EXFO OTU OPERATOR SPECIFIC
PM	XFO ODU OPERATOR SPECIFIC

- a. NULL (all 0's) characters are automatically appended to the message for bytes that are not defined.

Setup

Traces/PT - FlexO

- **SAPI OTU-TIM / SAPI ODU-TIM** check box, when selected (cleared by default), allows editing the expected Source Access Point Identifier and also enables OTU/ODU-TIM alarm monitoring.
- **DAPI OTU-TIM / DAPI ODU-TIM** check box, when selected (cleared by default), allows editing the expected Destination Access Point Identifier and also enables the OTU/ODU-TIM alarm monitoring.

PT / Global PT

Note: *Global PT indicates that the PT settings apply to all Client ID.*

Note: *Changing the payload type (PT) does not alter the signal structure; it only modifies the OH value that is generated.*

- **Payload Type and Code** allows the selection of the generated/expected payload signal type either by selecting the payload type from the list or by entering its code in hexadecimal (**00** to **FF**).

Note: *Codes not listed in the table are reserved for future standardization (Reserved For International Standardization).*

Payload type	Hex Code	MSB 1234	LSB 5678
Reserved for International Standardization ^a	00	0000	0000
Experimental mapping	01	0000	0001
Asynchronous CBR mapping	02	0000	0010
Bit Synchronous CBR mapping	03	0000	0011
ATM mapping	04	0000	0100
GFP mapping	05	0000	0101
Virtual Concatenation Signal	06	0000	0110
PCS Codeword Transparent Ethernet	07	0000	0111
FC-1200 into ODU2e	08	0000	1000

Payload type	Hex Code	MSB 1234	LSB 5678
GFP mapping into extended OPU2	09	0000	1001
OC-3/STM-1 into ODU0	0A	0000	1010
OC-12/STM-4 into ODU0	0B	0000	1011
FC-100 into ODU0	0C	0000	1100
FC-200 into ODU1	0D	0000	1101
FC-400 into ODUflex	0E	0000	1110
FC-800 into ODUflex	0F	0000	1111
Bit Stream with Octet Timing mapping	10	0001	0000
Bit Stream Without Octet Timing mapping	11	0001	0001
IB SDR mapping into ODUflex	12	0001	0010
IB DDR mapping into ODUflex	13	0001	0011
IB QDR mapping into ODUflex	14	0001	0100
SDI mapping into OPU0	15	0001	0101
(1.485/1.001) Gbit/s SDI mapping into OPU1	16	0001	0110
1.485 Gbit/s SDI mapping in to OPU1	17	0001	0111
(2.970/1.001) Gbit/s SDI mapping into OPUflex	18	0001	1000
2.970 Gbit/s SDI mapping into OPUflex	19	0001	1001
SBCON/ESCON mapping into OPU0	1A	0001	1010
DVB_ASI mapping into OPU0	1B	0001	1011
FC-1600 mapping into OPUflex	1C	0001	1100
FlexE Client mapping into OPUflex	1D	0001	1101
FlexE aware (partial rate) mapping into OPUflex	1E	0001	1110
FC-3200 mapping into OPUflex	1F	0001	1111
ODU Multiplex with ODTUjk	20	0010	0000
ODU Multiplex with ODTUk.ts/ODTUjk	21	0010	0001
ODU multiplex with ODTUCn.ts	22	0010	0010
25GBASE-R mapping into OPUflex	30	0011	0000

Setup

Traces/PT - FlexO

Payload type	Hex Code	MSB 1234	LSB 5678
200GBASE-R mapping into OPUflex	31	0011	0001
400GBASE-R mapping into OPUflex	32	0011	0010
Not Available ^b	55	0101	0101
Reserved Codes for Proprietary Use ^c	80	1000	0000
NULL Test Signal mapping	FD	1111	1101
PRBS Test Signal mapping	FE	1111	1110

- a. Selecting **Reserved for International Standardization** will use the hexadecimal code 00 but, all codes not listed in the previous table at the exception of those covered in notes b and c are reserved for future standardization.
- b. Selecting **Not Available** will use the hexadecimal code 55 but, 66 and FF are also Not Available payload types.
- c. Selecting **Reserved Proprietary** will use the hexadecimal code 80 but, all codes from 80 to 8F are reserved proprietary payload types.

Note: *The **Code** field is automatically updated when the **Payload Type** is changed and vice versa.*

- **OPU-PLM** check box when selected enables the OPU-PLM alarm analysis.

9 *Test Results*

The Test Results menu offers the following structure:

Intelligent Apps

Test Applications	Page or Pop Up	Page
iOptics	Logger	510
	Summary	602
iSAM	Logger	510
	Summary	605

Transport

Test Application	Page, Sub-Page, or Pop Up	Page
DCO BERT	Alarms/Errors	489
	Logger	510
	Measurements	513
	Summary	574
	Traffic - Ethernet	655
DSn/PDH BERT	Alarms/Errors	489
	Logger	510
	Performance Monitoring	521
	Summary	553
FlexO BERT	Alarms/Errors	489
	Logger	510
	Summary	600
	Traces/PT	652

Test Results

Test Application	Page, Sub-Page, or Pop Up	Page
Multi-Channel OTN	PT	499
	Logger	510
	SDT	541
	Summary	611
	Traces	647
NI/CSU Emulation	Logger	510
	Summary	613
OTN BERT	Alarms/Errors	489
	FTFL/PT	499
	GFP-F/GFP-T	501
	Logger	510
	OTL-SDT	519
	Performance Monitoring	521
	Summary	553
	Traces	647
	Traffic - Ethernet	655
OTN-SONET/SDH BERT	Alarms/Errors	489
	FTFL/PT	499
	Labels	505
	Logger	510
	OTL-SDT	519
	Performance Monitoring	521
	Summary	553
	Traces	647 650

Test Application	Page, Sub-Page, or Pop Up	Page
SONET/SDH BERT	Alarms/Errors	489
	Labels	505
	Logger	510
	Performance Monitoring	521
	Summary	553
	Traces	650
SONET/SDH - DS _n /PDH BERT	Alarms/Errors	489
	Labels	505
	Logger	510
	Performance Monitoring	521
	Summary	553
	Traces	650

Ethernet

Test Application	Page, Sub-Page, or Pop Up	Page
Cable Test	Summary	563
Carrier Ethernet OAM	Alarms/Errors	489
	Link OAM	506
	Logger	510
	MPLS-TP OAM	536
	S-OAM	536
	Summary	609 623
	Traffic - MPLS-TP OAM	663
	Traffic - S-OAM	663
	Traffic - Ethernet	655
	WIS	666
EtherBERT	Alarms/Errors	489
	FEC Statistics	498
	Logger	510
	Summary	581
	Traffic - Ethernet	655
	WIS	666

Test Application	Page, Sub-Page, or Pop Up	Page
EtherSAM (Y.1564)	Alarms/Errors	489
	FEC Statistics	498
	Logger	510
	Service Configuration - Burst	543
	Service Configuration - L2CP	544
	Service Configuration - Ramp	546
	Service Performance	521
	Summary	585
	Traffic - Ethernet	655
	WIS	666
FlexE BERT	Alarms/Errors	489
	FEC Statistics	498
	Logger	510
	Summary	592
	Client Summary	595
	Traffic - Ethernet	655
RFC 2544	Traffic - Path OAM	661
	Alarms/Errors	489
	FEC Statistics	498
	Graph	504
	Logger	510
	Summary	614
	Traffic - Ethernet	655
	Traffic - Flow Control	658
	WIS	666

Test Results

Test Application	Page, Sub-Page, or Pop Up	Page
RFC 6349	Alarms/Errors	489
	Logger	510
	Summary	617
	TCP Throughput	646
	Traffic - Ethernet	655
	Traffic - Flow Control	658
	Window Sweep	665
Smart Loopback	Alarms/Errors	489
	FEC Statistics	498
	Summary	622
	Traffic - Ethernet	655
	Traffic - MPLS-TP OAM	663
	Traffic - S-OAM	663
	WIS	666
TCP Throughput	Alarms/Errors	489
	Logger	510
	Summary	631
	Traffic - Ethernet	655
	Traffic - Flow Control	658
Through Mode	Alarms/Errors	489
	FEC Statistics	498
	Logger	510
	Summary	634
	Traffic - Ethernet	655
	Traffic - Flow Control	658
	Traffic - Graph	660
	Traffic - MPLS	518

Test Application	Page, Sub-Page, or Pop Up	Page
Traffic Gen & Mon	Alarms/Errors	489
	FEC Statistics	498
	Logger	510
	Streams - Customer Frame Throughput	552
	Streams - Frame Loss / Out-of-Sequence	550
	Streams - Jitter	550
	Streams - Latency	551
	Streams - MPLS	518
	Streams - Throughput	552
	Summary	636
	Traffic - Ethernet	655
	Traffic - Flow Control	658
	Traffic - Graph	660
	WIS	666

Sync

Test Application	Page or Pop Up	Page
1588 PTP	Alarms/Errors	489
	Logger	510
	PTP Stats ^a	528
	Quality Level ^a	530
	Summary - Client	557
	Summary - GM	560
	Traffic - Ethernet	655

Test Results

Test Application	Page or Pop Up	Page
SyncE	Alarms/Errors	489
	Logger	510
	Quality Level	533
	Summary	628
	Traffic - Ethernet	655
Time Error / Wander	Alarms/Errors	489
	Analysis - MTIE/TDEV	494
	Analysis - Time Error / Time Interval Error	496
	Logger	510
	PTP Stats	528
	Summary	640

a. Not available with GM emulation mode.

Fibre Channel

Test Application	Page or Pop Up	Page
FC BERT	Alarms/Errors	489
	Logger	510
	Summary	588

Wireless

Test Application	Page or Pop Up	Page
CPRI/OBSAI BERT	Alarms/Errors ^a	489
	Logger	510
	Messages (OBSAI)	516
	Summary	569
eCPRI BERT	Alarms/Errors	489
	Logger	510
	Messages ^a	516
	Summary	576
	Traffic - Ethernet ^a	663

a. Not available when the framing is unframed.

Test Results

Alarms/Errors Overview

Note: Refer to Alarms/Errors on page 909 for the complete list of alarms/errors and their availability.

Current and history alarms/errors are displayed using different background colors as defined in the following table.

Background color	Alarm/Error	Description
Gray	Current	No test result available or the results have no impact on the test verdict.
	History	
Green	Current	No alarm/error has occurred in the last second.
	History	No alarm/error has occurred during the test.
Red	Current	An alarm/error occurred in the last second.
	History	
Amber	History	At least one alarm/error has occurred during the test.

When an alarm/error label is dimmed, it indicates that the alarm/error is not monitored or not supported.

- **Seconds** gives the total number of seconds in which one or more alarm/error occurred.
- **Count** gives the number of occurrences of a specific error. The count is displayed using integer value; exponential value (for example: 1.00000E10) is used when the count is bigger than the field display capacity.
- **Rate** calculates and displays the error rate. The rate is expressed using the exponential format with two decimal digits (example: 1.23E-04).

Note: When an alarms/errors group displays a magnifying icon, tapping on it gives more information on alarm/error like Second, Count, and Rate.

Pass/Fail Verdict

Note: *The verdict is not displayed when disabled or unavailable.*

The Pass/Fail verdict is represented by the following icons:

Icon	Verdict	Description
	PASS	Result value meet the configured threshold criterion.
	FAIL	Result value does not meet the configured threshold criterion.

Statistic Values

- **Current** indicates the average measurements in the last second.
- **Last** indicates the result of the last measurement.
- **Minimum** indicates the minimum value recorded.
- **Maximum** indicates the maximum value recorded.
- **Average** indicates the average value.

Buttons / Selectors

- **<Port #>**, available with **Dual Port** topology, allows selecting the port to be displayed.
- **Global/<Port #>**, available with **Dual Port** topology, allows selecting to display a brief summary for both ports (**Global**) or for a specific port.
- **Client**, available with DCO BERT multiple link client (ex. 4 x 100GE), allows selecting the client to be displayed; only enabled clients are available.
- **Link**, available with EtherBERT multiple link interface (ex: 2 x 100GE), allows selecting the link to be displayed; only enabled links are available.
- **Channel**, available with **Multi-Channel OTN** for ODUk level, allows selecting the channel to be displayed.
- **Port**, available with FlexE BERT/FlexO BERT, allows selecting the physical port to be displayed.
- **FlexE PHY Number**, available with FlexE BERT, indicates the FlexE PHY number assigned to the port.
- **FlexO Instance ID**, available with FlexO BERT, indicates the FlexO instance identifier per port.
- **Client ID**, available with FlexE BERT, allows selecting the client identification to be displayed.
- **Client ID**, available with FlexO BERT, indicates the client identification.
- **Size (Gbit/s)**, available with FlexE BERT, indicates the size of the client ID.

Alarms/Errors

From the **Test** menu, tap **Results**, and the **Alarms/Errors** tab. Depending on the test structure, the Alarms/Errors page may be split in different tabs such as OTN, GFP-T/GFP-F, PHY, Group, Client, and Ethernet; tap on the desired tab when required.

Note: *Refer to Alarms/Errors on page 909 for the complete list of alarms/errors and their availability.*

Alarms/errors blocks containing the magnifier (+) icon in its title, opens a zoomed view giving more details like alarms/errors for each lane (parallel interface), errors in seconds, count, and rate.

When there is not enough room on the page to display the error in seconds, count, and rate, the error is displayed in **Seconds** per default. To select another unit, tap on the unit's button and select either **Seconds** (default), **Count**, or **Rate**.

Total, available with certain errors (parallel interface), indicates the total of all lanes when **Count** or **Rate** unit is selected.

Inject Button

Layer	
Port 1	BER

Type	Defect
Errors	Bit Error

Mode	Amount
Manual	1

Inject Bit Error (1)

Selected Alarm/Error and status

Open/Close pop-up button

- **Inject** generates the selected alarm/error.
The selected alarm/error details and status are displayed next to the **Inject** button.
The open/close pop-up button allows expanding (up arrow) or collapsing (down arrow) the pop-up for setting the alarm/error injection parameters.
- **Layer** allows selecting on which layer is the alarm/error to be generated. Choices depend on the test application and its interface. For Multi-Channel OTN using mix-mapping, **ODUk** and **OPUk** represent ODU and OPU levels of the selected channel(s).
For **Dual Port** topology, select the port used for alarm/error injection.
For multiple link EtherBERT interface, select the link used for alarm/error injection; only enabled links are available.
For multiple Ethernet clients, select the client used for alarm/error injection; only enabled clients are available.
- **Channel**, available with Multi-Channel OTN, allows selecting the channel number that will be used for injection. The **All** button allows selecting all defined channels.
- **Type** allows selecting the type of injection: **Alarms** or **Errors**.

- **Defect** allows selecting the alarm/error defect to be generated. Choices depend on the selected **Layer** and **Type**. Refer to *Alarms/Errors* on page 489 for more information.
- **Mode** allows selecting the injection mode for error type; injection mode is set to **Continuous** for alarm injection. Only **Manual** mode is available with **100GE - 4 Unframed CAUI-4** and **OTU4 - 4 Unframed Physical Lanes** on 88220NGE; the **Amount** is fixed to 1; **Pattern Loss** injection is not possible.
 - **Manual** generates the selected errors according to the defect and the amount selected.
 - **Rate** generates the selected error at the rate specified.
 - **Max Rate** generates the selected error at its theoretical maximum rate.
 - **Continuous** generates the selected alarm continuously.
- **Amount**, available with **Manual** mode, allows entering the amount of error to be generated: **1** (default) through **50** or **100** (depending on the selected error).
- **Rate**, available with **Rate** mode, allows selecting the error injection rate. The rate must be within the minimum and maximum values specified.
- **Max Rate**, available with **Max Rate** mode, allows generating the error to its theoretical maximum rate.
- **Period**, available with GFP layer, allows setting the alarm period associated with the client management frames: **10 ms** to **1200 ms** (default is **100 ms**).

Test Results

Alarms/Errors

- **User-Defined UPI**, available with GFP layer, allows entering the Client Management Frame UPI value when **GFP-User-Defined CMF** alarm is selected.

UPI	Description for PTI = 100
0000 0000 and 1111 1111	Reserved
0000 0001	Client Signal Fail (Loss of Client Signal)
0000 0010	Client Signal Fail (Loss of Client Character Synchronization)
0000 0011 through 1111 1110	Reserved for future use

- **Lane**, available with parallel interfaces, allows selecting the physical lane that will be used for injection. Available for **Interface**, **OTL**, **FEC** (FlexO), **FOICx.y**, and **PCS** layers only.

The following settings are available with **FlexE BERT**:

- **FlexE** allows selecting the **PHY**, **Group**, or **Client** level used for injection.
- **Client ID** allows selecting the client ID used for injection.
- **PHY/Instance** allows selecting the PHY/Instance number that will be used for injection.

The following settings are available with **FlexO BERT**:

- **Category** allows selecting either **PHY**, **FlexO**, **OTN**, or **Client Payload** level used for injection.
- **Port** available for FlexO PHY level allows selecting the physical port number.
- **Client ID** indicates the client ID used for injection.
- **Instance** available at FlexO level allows enabling the FlexO instance number(s) used for injection.
- **OTUC** available at OTN level allows enabling the OTUC number(s) used for injection.

The following settings are available with **Carrier Ethernet OAM**:

- **Address Type** defines the destination address type of the frame: **Unicast** or **Multicast** (default).
- **Priority** allows selecting the VLAN user priority: **0** (default) to **7**. Available when VLAN is enabled (refer to *VLAN* on page 357 for more information).
- **Drop Eligible** is set to **No** (no frames will be dropped when congestion occurs) and is not configurable. Available when VLAN is enabled (refer to *VLAN* on page 357).
- **MEG Level** (Y.1731 and MEF) is the Maintenance Entity Group Level configurable from **0** to **7** (default).
- **MD Level** (802.1ag) is the Maintenance Domain Level and is configurable from **0** to **7** (default).
- **Period** determines the transmission period of frames: **1 s** (default) and **1 min**. Not available with C-DCI.
- **Amount**, only available with C-DCI alarm, is set to **1**.

Note: The *RDI* alarm is available when the **CC Function** is enabled and is using the parameters from the *CC Function* (refer to page 399).

Test Results

Analysis - MTIE/TDEV

Analysis - MTIE/TDEV

From the test menu, tap **Results**, **Analysis**, and the **MTIE/TDEV** tab.

Note: With the G.8275.2 profile, the TE values are only available 200 seconds after the test is started as the calculation method requires a sample selection window of 200 seconds.

- **MTIE/TDEV (ns)** graphically displays the MTIE/TDEV values in function of the **Observation Interval (s)**. The MTIE and TDEV masks are also displayed when supported by the selected standard. MTIE values and mask are displayed in pink. TDEV values and mask are displayed in blue.
- **Mask** allows the selection of an ITU mask used to validate MTIE/TDEV statistics.

Mask	MTIE	TDEV
None (default)	-	-
G.811- Primary Reference Clock (PRC)	X	X
G.812- Type I Node Clock (SSU) - Constant Temperature	X	X
G.812- Type I Node Clock (SSU) - Variable Temperature	X	-
G.812- Type II and III Node Clock (SSU) - Constant Temperature	X	X
G.813- Option 1 SDH Equipment Clock (SEC) - Constant Temperature	X	X
G.813- Option 1 SDH Equipment Clock (SEC) - Variable Temperature	X	-
G.813- Option 2 SDH Equipment Clock (SEC) - Constant Temperature	X	X
G.823- Primary Reference Clock (PRC)	X	X
G.823- Synchronization Supply Unit (SSU)	X	X
G.823- SDH Equipment Clock (SEC)	X	X
G.823- PDH Synchronization Interface	X	X
G.824- 1544 kbit/s Reference Interface	X	X
G.824- 1544 kbit/s Reference Interface for Option 2 SEC	-	X
G.8261- CES Case 1 - 2048 kbit/s (MRTIE)	X	-
G.8261- CES Case 1 - 1544 kbit/s	X	-
G.8261- CES Case 2A - 2048 kbit/s (MRTIE)	X	-
G.8261- EEC Option 1 - SyncE Interface	X	X

Mask	MTIE	TDEV
G.8261- EEC Option 2 - SyncE Interface	-	X
G.8261.1- PEC-Slave Frequency Case 3	X	-
G.8262- EEC Option 1- SyncE - Constant Temperature	X	X
G.8262- EEC Option 1- SyncE - Variable Temperature	X	-
G.8262- EEC Option 2- SyncE - Constant Temperature	X	X
G.8263- PEC-Slave Frequency - Constant Temperature	X	-
G.8263- PEC-Slave Frequency - Variable Temperature	X	-
G.8271.1- Dynamic Time Error	X	-

- **Remove Offset** check box when selected, subtracts the estimated frequency offset from the Time Error/Time Interval Error data used to calculate the MTIE/TDEV. It is preferable to set this setting before starting the test since changing this setting while the test is running will require some time for MTIE/TDEV recalculation.
- **MTIE** check box when selected (default) reports MTIE values on the graph. The MTIE pass/fail verdict is displayed when enabled.
- **TDEV** check box when selected (default) reports TDEV values on the graph. The TDEV pass/fail verdict is displayed when enabled.
- **Cursor** check box when selected (default), allows the selection of a specific observation interval value and returns the MTIE/TDEV values and the corresponding mask when enabled. Use the left and/or right arrow buttons to move the cursor position on the graph.
 - **Obs. Interval (s)** indicates the observation interval value at the cursor position on the graph.
 - **MTIE (ns)** indicates the MTIE value and the corresponding mask at the cursor position on the graph.
 - **TDEV (ns)** indicates the TDEV value and the corresponding mask at the cursor position on the graph.

Test Results

Analysis - Time Error / Time Interval Error

Analysis - Time Error / Time Interval Error

From the test menu, tap **Results**, **Analysis**, and either the **Time Error** or **Time Interval Error** tab.

Note: *With the G.8275.2 profile, the TE values are only available 200 seconds after the test is started as the calculation method requires a sample selection window of 200 seconds.*

Time Error / Time Interval Error Graph

- **Time Error**, available with Time Error measurement mode, graphically displays the time error values as a function of time.
- **Time Interval Error**, available with Wander measurement mode, graphically displays the time interval error values as a function of time.

Note: *A refresh is required to update the graph (see Refresh below).*

Note: *It is possible to zoom/un-zoom on Time Error / Time Interval Error (Y axis): Using the touch screen, use the pinch-to-zoom to zoom/un-zoom. Using a mouse, click and drag (highest to lowest value to zoom and lowest to highest value to un-zoom).*

Offset

- **Remove Offset** check box when selected displays a second TE/TIE trace on which the frequency offset has been removed.
- **Freq. Offset (ppm)** indicates an estimated frequency offset of the signal under test since the beginning of the test.

Zoom

Allows zooming to a desired time region (X axis).

- **Time (Start/End)** allows selecting the starting and ending time for the zoom.
- **Display full range on Test Stop** check box when selected (default) displays the full test duration on the **Time** axis when the test stops.

Refresh

Refreshes the page with the latest setting and collected data.

Save TE Data / Save TIE Data

Saves the TE/TIE data into CSV file format.

- **Folder Path** allows the selection of the file destination drive and folder. Use the **Browse** button to change the file location. The default file location is:
For Wander measurement mode:
Users\<User>\Documents\<product>\Wander
For Time Error measurement mode:
Users\<User>\Documents\<product>\TimeError
- **File Name** allows the selection of the file name. The default file name is either **Wander** or **TimeError** followed by the date and time.

FEC Statistics

Note: Only available with 50G/200/400G interfaces.

From the test menu tap **Results** and the **FEC Statistics** tab.

<Port #> button, when available, allows selecting the port to be displayed.

Symbol Error per Correctable Codeword

- **Number of Symbols** indicates the number of symbols corrected in a codeword: 1 to 15.
- **Codeword Count:** corrected codeword count for each **Number of Symbols** category.
- **%:** the number of correctable codeword for each number of symbols category divided by the total count of correctable codeword. A bar graph is displayed in background as a relative way to compare the percentage of correctable codeword count per number of symbols category.

Other Statistics

- **Error-free Codeword** indicates error-free codeword count. The percentage value correspond to the number of error-free codeword count divided by the codeword count (all categories i.e. correctable, uncorrectable, and error-free).
- **Uncorrectable Codeword** indicates uncorrectable codeword count. The percentage value correspond to the number of uncorrectable codeword count divided by the codeword count (all categories i.e. correctable, uncorrectable, and error-free).

FTFL/PT / PT

For **OTN BERT** and **OTN-SONET/SDH BERT**: From the test menu tap **Results**, and the **FTFL/PT** tab.

For **Multi-Channel OTN**: From the test menu, tap **Results**, and the **PT** tab.
Channel, available with **Multi-Channel OTN** for ODUk level, allows selecting the channel to be displayed.

ODUx/ODUk Buttons

Tap on an **ODUx/ODUk** button to select the multiplexed level. For Multi-Channel OTN, the ODUk level displayed will be the one corresponding to the selected channel.

FTFL

Indicates the Forward and Backward ODU Fault Type Fault Location. Not available with Multi-Channel OTN.

- **Fault Indication** and **Code** respectively displays the FTFL fault indicator message and its code in hexadecimal format (byte 0 for forward, byte 128 for backward).

Fault Indication	Code
No fault	00 (default)
Signal fail	01
Signal Degrade	02
Reserved	03

- **Operator Identifier** displays the received operator identifier (bytes 1 to 9 for forward, byte 129 to 137 for backward).
- **Operator Specific** displays the received operator specific (bytes 10 to 127 for forward, byte 138 to 255 for backward).

PT

- **Payload Type** and **Code** displays the received payload signal type and its code in hexadecimal format. The expected payload signal type can be selected from the list or by entering its hexadecimal code. Refer to *PT / Global PT* on page 312 for the list.
- **OPU-PLM** check box when selected enables the OPU-PLM alarm analysis. For Multi-Channel OTN lower ODU layer, the OPU-PLM check box is only configurable from the test setup.
- **Copy RX / Global Copy RX**¹ uses the received payload type as the expected payload type. For **Multi-Channel OTN** lower ODU layer, use the arrow button next to the **Copy RX** or **Global Copy RX** to switch from one button to the other; **Global Copy RX** uses the current channel received payload type as the expected payload type for all channels while **Copy RX** only affects the selected channel.

1. Only available for Multi-Channel OTN lower ODU layer.

GFP-F/GFP-T

Note: This tab is only available with OTN BERT test application with **1GbE**, **10GbE**, or **Ethernet (flex/GFP-F)** client.

From the **Test** menu, tap **Results**, and the **GFP-F/GFP-T** tab.

Transport Layer

- **Bandwidth Usage (%)** indicates the transmitted/received transport layer bandwidth in the last second, excluding the Idle bytes.
- **Mapping Efficiency (%)** indicates the transmitted/received transport layer mapping efficiency (Client Payload Bytes divided by Client Data Bytes multiplied by 100) in the last second.

Frame Type

Note: For **Ethernet (flex/GFP-F)** client with **EXI** set to **Linear**, the RX count/rate is configurable to either **RX** (default) or **RX CID Filtered** by tapping on the table **RX** label. **RX CID Filtered** only includes frames that match the expected CID (refer to CID on page 315).

- **Client Data** indicates the transmitted/received client data frames without uncorrectable cHEC, tHEC, and eHEC errors. Possible rate units are **Frames** (default), **Bytes**, or **Payload Bytes** per second.
- **Client Management** indicates the transmitted/received client management frames without uncorrectable cHEC, tHEC, and eHEC, and pFCS errors. Possible rate units are **Frames** (default), or **Bytes** per second.
- **Idle** indicates the transmitted/received idle frames. Possible rate units are **Frames** (default), or **Bytes** per second.

Test Results

GFP-F/GFP-T

- **Reserved PTI** indicates the received client data and management frames with a payload type identifier different of 000 and 100 without uncorrectable cHEC, tHEC, and eHEC, and pFCS errors. Possible rate units are **Frames** (default), or **Bytes** per second.
- **Reserved PLI** indicates the number of reserved control frames (PLI=1, 2, or 3 while in Synchronization state) received.
- **Invalid** indicates the number of received frames corresponding to at least one of the following conditions:
 - EXI=0000 while PFI=1 and PLI <8
 - EXI=0001 while PFI=0 and PLI <8
 - EXI=0001 while PFI=1 and PLI<12
- **Discarded** indicates the number of received frames with uncorrectable tHEC, eHEC errors, or Invalid Frames.
- **Total** indicates the received frames including Idle, Client Data, Client Management, and frames with a reserved PTI. Possible rate units are **Frames** (default), or **Bytes** per second.

RX Mismatch

- **PFI** (Payload Frame Check Sequence Identifier) indicates the number of frames with PFI field not matching the expected PFI.
- **EXI** (Extension Header Identifier) indicates the number of frames with EXI field not matching the expected EXI.
- **UPI** (User Payload Identifier) indicates the number of frames UPI field not matching the expected UPI.
- **CID** (Channel Identifier), only available when EXI is set to **Linear**, indicates the number of frames CID field not matching the expected CID.

Note: *For expected values, refer to GFP-F/GFP-T on page 315 for more information.*

Superblock

Note: *Superblock is only available with GFP-T.*

- **Valid** indicates the transmitted/received superblocks without any uncorrectable error.
- **Invalid** indicates the transmitted/received superblocks with uncorrectable error.
- **Total** indicates the total transmitted/received valid and invalid superblocks.

Graph - RFC 2544

Displays the graph showing the **Throughput**, **Back-to-Back**, **Frame Loss**, and **Latency** measurements. For **Dual Test Set** the graph shows results from **Local to Remote** and **Remote to Local** using distinctive colors. For **Dual Port** topology the graph shows results of both port directions.

From the **Test** menu, tap **Results**, and the **Graphs** tab.

- **All** button allows viewing the graphs of all subtests simultaneously.
- **Throughput**, **Back-to-Back**, **Frame Loss**, and **Latency** buttons allow viewing an enlarged graph view of the selected subtest.
- **Displayed Results** allows selecting the displayed results mode, either **Minimum**, **Maximum** (default), **Average**, or **Current**.
- **Step**, available with Frame Loss, allows selecting the result step (100 percent by default) to be displayed.

The X axis shows the frame sizes while the Y axis shows the subtest results.

- **Frame Size (Bytes)** and **Step (%)**, available with Frame Loss, allows selecting either **Frame Size** (default) or **Step** as the X axis criterion.

Labels

From the test menu, tap **Results**, and **Labels**.

Labels

Note: *Check boxes are coupled with settings from Labels on page 333.*

- **STS Path (C2) / AU Path (C2):** The C2 byte is allocated to indicate the content of the STS SPE / VC, including the status of the mapped payloads.

Received displays the received C2 byte (refer to C2 on page 735).

- **PLM-P/UNEQ-P / HP-PLM/HP-UNEQ** check box when selected (cleared by default) enables the Payload Mismatch and STS/AU UNEQ monitoring.

Expected allows the selection of the expected C2 byte value (refer to C2 on page 735).

- **VT Path (V5) / TU Path (V5):** The V5 byte is allocated to indicate the content of the VT/TU path, including the status of the mapped payloads.

Received displays the received V5 byte (refer to V5 on page 738).

- **PLM-V/UNEQ-V / LP-PLM/LP-UNEQ** check box when selected (cleared by default) enables the Payload Mismatch and VT/TU UNEQ monitoring.

Expected allows the selection of the expected V5 byte value (refer to V5 on page 738).

Link OAM

From the **Test** menu, tap **Results**, and the **Link OAM** tab.

Remote MAC Address

Indicates the remote OAM link partner MAC address.

Remote OAM Information

- **OAM Version** indicates the protocol version supported by the DTE.
- **Revision** indicates the revision of the Information TLV.
- **Multiplexer Action** reports the Multiplexer Action:
 - Forward** indicates that the device is forwarding non-OAMPDUs to the lower sublayer.
 - Discard** indicates that the device is discarding non-OAMPDUs.
- **Parser Action** reports the Parser Action:
 - Forward** indicates that the device is forwarding non-OAMPDUs to the higher sublayer.
 - Loopback** indicates that the device is looping back non-OAMPDUs to the lower sublayer.
 - Discard** indicates that the device is discarding non-OAMPDUs.
- **OAM Mode** reports the OAM mode:
 - Active** indicates that the DTE is configured in **Active** mode.
 - Passive** indicates that the DTE is configured in **Passive** mode.
- **OUI** reports the 24-bit IEEE Organizationally Unique Identifier field identifying the vendor.
- **Maximum OAMPDU Size** reports the maximum OAMPDU size in bytes, supported by the DTE.

- **Vendor Specific Information** reports the 32-bit **Vendor Specific Information** field identifying the vendor's product model and version.
- **Unidirectional** reports unidirectional support capability:
 - Supported** indicates that the DTE is capable of sending OAMPDUs when the receive path is non-operational.
 - Unsupported** indicates that the DTE is not capable of sending OAMPDUs when the receive path is non-operational.
- **Remote Loopback** reports OAM remote loopback support capability:
 - Supported** indicates that the DTE is capable of OAM remote loopback mode.
 - Unsupported** indicates that the DTE is not capable of OAM remote loopback mode.
- **Variable Retrieval** reports variable retrieval capability:
 - Supported** indicates that the DTE supports sending Variable Response OAMPDUs.
 - Unsupported** indicates that the DTE does not support sending Variable Response OAMPDUs.
- **Link Events** reports link event capability:
 - Supported** indicates that the DTE supports interpreting Link Events.
 - Unsupported** indicates that the DTE does not support interpreting Link Events.

Remote Error Event Statistics

- **Date Stamp**¹ indicates the date the last Event Notification OAMPDU frame was received.
- **Time Stamp**¹ indicates the time the last Event Notification OAMPDU event was received by the test equipment.
- **Window**

Symbol Period	Errored symbol Window in second
Frame	Errored frame event Window in second
Frame Period	Errored frame period Window - duration period in number of 64 bytes frames
Frame Seconds	Errored frame seconds summary Window

- **Threshold**

Symbol Period	Errored symbol threshold in second
Frame	Errored frame event threshold in second
Frame Period	Errored frame period threshold in second
Frame Seconds	Errored frame seconds summary threshold in second

- **Error Count**

Symbol Period	The number of symbol errors in Window
Frame	The number of frame event errors in Window
Frame Period	The number of frame period errors in Window
Frame Seconds	The number of frame seconds summary errors in Window

1. **Date Stamp** and **Time Stamp** parameters differ from the 802.3 standard definitions.

➤ **Error Running Total**

Symbol Period	The number of symbol errors since the last reset
Frame	The number of frame event errors since the last reset
Frame Period	The number of frame period errors since the last reset
Frame Seconds	The number of frame seconds summary errors since the last reset

➤ **Event Running Total**

Symbol Period	The number of symbol events since the last reset
Frame	The number of frame events since the last reset
Frame Period	The number of frame period events since the last reset
Frame Seconds	The number of frame seconds events since the last reset

Inject Errored Frames

Generates 5 consecutive packets with FCS errors within a 1 second period.

Logger

The Logger page displays color-coded events and pass/fail verdict.

From the **Test** menu, tap **Results**, and the **Logger** tab.

Note: *For RFC 6349 the Logger is only available with operation modes **Dual Test Set** (local unit).*

Sort By

Select the sorting order of the event logger entries:

- **ID** (default) displays the event logger entries in numeric ascending order based on the **ID** column of the event logger table.
- **Event** displays the event Logger entries in alphanumeric ascending order based on the **Event** column of the event logger table.

Time Mode

- **Relative** displays the time/duration fields based on the time elapse since the beginning of the test or since the last test reset. The format of the time is Dd HH:MM:SS.
- **Absolute** (default) displays the time/duration fields based on the date and time the event occurred/ended. The time format depends on the platform time settings.

For 24 hours, the time format is MM/DD HH:MM:SS.

For 12 hours, the time format is MM/DD HH:MM:SS <AM or PM>.

Closure Format

- **Duration** (default): Indicates the number of seconds within which the event occurred. Test events like **Test Started** and **Test Stopped** will have no duration.
- **End Time**: Indicates at what time the event has been completed or cleared.

Save to CSV

Allows saving the logger content to a CSV file format.

Table

The logger table provides the following event logger information.

- **ID**: Indicates the event identification number. The events are sequentially numbered.
- **Start Time**: Indicates when the event has been started or detected.
- **Event**: Provides the event type and threshold crossing information.
- **Duration or End Time**, depending on the **Closure Format** selected, indicates either the duration or at what time the event has been completed or cleared.
- **Details**: Provides contextual information including the pass/fail verdict.

The following table displays the nature of information reported by type of event:

Type of Event	Nature of Information
Test Started	Start Date
Test Stopped	Pass/Fail Verdict
Alarm Events	Count value
Error Events	Current Count and Total Count

Test Results

Logger

Type of Event	Nature of Information
SDT Events	Service Disruption Time
Threshold Crossing Event	Value at the end of the test

Note: *The Logger table can display up to 5000 event entries. Once the Logger table reports 5000 event entries, a log full indicator appears and no further entries are possible. However, the events in the Pending state will be updated if the test is still running.*

The Event Logger information will be cleared when:

- the test is reset or started.
- stopping the current test and.
- the unit is restarted.

Note: *An entry event remains in the Pending state as long as the event is not completed and it is highlighted on a yellow background color.*

Note: *The Threshold Crossing events are displayed in red text color.*

Measurements - DCO BERT

From the test menu, tap **Results** and the **Measurements** tab.

Client, available with DCO BERT multiple link client (ex. 4 x 100GE), allows selecting the client to be displayed; only enabled clients are available.

RX Power

- **RX Power (dBm)** indicates the received optical power level of the transceiver. The **Current**, **Minimum**, and **Maximum** values are displayed. The **Current** field displays **LOS** when no optical power is received.

Green: Power level in range.

Yellow: Power level out-of-range.

Red: Loss of signal or power level is close to damage.

Gray: Invalid operational range value or not available/supplied by the transceiver.

- **Power Range (dBm)** indicates the transceiver operational RX power range.

Optical Metrics

When supported by the DCO transceiver, the **Current**, **Average**, **Minimum**, and **Maximum** optical metrics values are reported by the transceiver. The displayed **Average**, **Minimum**, and **Maximum** values are computed since the beginning of the test.

- **CD (ps/nm)**, the Chromatic Dispersion, indicates the difference in propagation time between the different wavelengths.
- **CFO (MHz)**, the Carrier Frequency Offset, indicates the frequency offset between the carrier and the local oscillator.
- **DGD (ps)**, the Differential Group Delay, indicates the difference in propagation time between two polarizations.

Test Results

Measurements - DCO BERT

- **OSNR (dB)**, the Optical Signal to Noise Ratio, indicates the ratio of service signal power to noise power within a valid bandwidth. It quantifies the degree of noise interference on the optical signal.
- **PDL (dB)**, the Polarization Dependent Loss, indicates the difference between the maximum and minimum values of the channel insertion loss or gain of the link due to a variation of the State of Polarization over all polarizations states.
- **SOPCR (krad/s)**, the State of Polarization Change Rate, indicates the rate of rotation of the two polarizations of the optical signal at the receiver.
- **SOPMD (ps²)**, the Second Order Polarization Mode Dispersion, indicates the derivative of the polarization dispersion vector with respect to the optical frequency.

Client RX Frequency

Note: The following frequency statistics are available for each lane.

- **Frequency (GHz)** indicates the received Ethernet client frequency (symbol rate).
- **Offset (ppm)** indicates the frequency offset between the nominal and the received Ethernet client frequencies.

Note: For both *Frequency* and *Offset* the following background colors are used.

Background color	Description
Green	The frequency is in range.
Red	The frequency is out-of-range or LOC Lane.
Gray	Pending state.

- **Max. Negative Offset (ppm)** indicates the maximum negative frequency offset between the nominal and the received Ethernet client frequencies.
- **Max. Positive Offset (ppm)** indicates the maximum positive frequency offset between the nominal and the received Ethernet client frequencies.

Note: *Refer to Interface on page 921 for more information on nominal frequencies.*

Test Results

Messages

Messages

From the **Test** menu, tap **Results**, and the **Messages** tab.

Note: For *Dual Port* topology select the port to be displayed.

Message Type

For OBSAI: The count of each OBSAI message type is reported.

Message Type	TX Count	RX Count
Control	-	X
Measurement	-	X
WCDMA/FDD	X	X
WCDMA/TDD	-	X
GSM/EDGE	X	X
TETRA	-	X
CDMA2000	-	X
WLAN	-	X
Loopback	-	X
Frame Clock Burst	X (BTS only)	X (RRH only)
Ethernet	-	X
RTT Message	X	X
802.16	X	X
Virtual HW Reset	-	X
LTE	X	X
Generic Packet	-	X
Multi-hop RTT Message	-	X
Others	-	X

For eCPRI: The count of each eCPRI message type is reported.

Message Type	TX Count	RX Count	Loss Count	OOS Count
IQ Data	X	X	X	X
Bit Sequence	X	X	X	X
Real-Time Control Data	X	X	X	X
Generic Data Transfer	X	X	X	X
Remote Memory Access	-	X	-	-
One-Way Delay Measurement	X	X	-	-
Remote Reset	-	X	-	-
Event Indication	-	X	-	-
Reserved	-	X	-	-
Vendor Specific	-	X	-	-
Total	X	X	X	X

RX Frame Clock Burst Details

When a valid Frame Clock Burst (FCB) message is received, its **SFN** and **c1** values are reported. Only available with OBSAI.

- **SFN** (System Frame Number): The master frame number received with an FCB message.
- **c1**: Arrival time of the FCB message Reference Point 1 (RP1) versus master frame start.

MPLS

For **Traffic Gen and Mon**, from the test menu, tap **Results**, **Streams**, and the **MPLS** tab.

For **Through Mode**, from the test menu, tap **Results**, **Traffic**, and the **MPLS** tab.

Note: For *Dual Port* topology select the port to be displayed.

Label 1 and Label 2

The number of MPLS frames transmitted (TX) and received (RX) are displayed for both **Label 1** and **Label 2** for each **Stream**. Not available for **Through Mode** test application.

Total TX/RX MPLS

- **Line Utilization** indicates the percentage of MPLS line rate utilization in TX and RX.
- **Ethernet BW (%)** (Ethernet Bandwidth) indicates the MPLS data rate in TX and RX.
- **Frame Rate (frames/s)** indicates the number of transmitted (TX) and received (RX) MPLS frames.
- **Frame Count** indicates the count of transmitted (TX) and received (RX) MPLS EtherType (0x8847 or 0x8848) frames regardless if FCS is good or not.

OTL-SDT

Note: Only available for parallel interfaces when an OTL defect, at the exception of LOL, is selected for Service Disruption Time (refer to Service Disruption on page 237).

From the test menu, tap **Results**, and the **OTL-SDT** tab.

Service Disruption

Note: Service Disruption results are only available when **Disruption Monitoring** is enabled (refer to BERT and Unframed BERT on page 234).

Service Disruption is the time during which there is a disruption of service due to the absence of traffic or to the detection of defects per lane.

Disruption Time

- **Defect** indicates on which layer and defect the service disruption time test is performed.
- **Lane** indicates the lane number.
- **Longest (ms)** indicates the longest measured disruption time per lane.
- **Shortest (ms)** indicates the shortest measured disruption time per lane.
- **Last (ms)** indicates the length of the last measured disruption time per lane.
- **Average (ms)** indicates the average duration of all measured disruption times per lane.
- **Total (ms)** indicates the total duration of all measured disruption times per lane.
- **Count** indicates the number of disruption events detected since the beginning of the SDT test per lane.

Test Results

OTL-SDT

- **Longest Disruption** indicates the longest measured disruption time.
- **Lanes with Disruption** indicates the number of lanes with service disruption.

Note: *When a disruption event is equal to or longer than the test period which is fixed to 5 minutes, then the measured disruption time is equal to the test period.*

Performance Monitoring

Note: This tab is only available with Transport test applications with Pattern client. Monitored performance parameters are reported, non-monitored values are left blank.

The Performance Monitoring tab gives error performance events and parameters for the circuit under test.

From the **Test** menu, tap **Results**, and the **Performance Monitoring** tab.

Each button on top of the window represents a level of the analyzed signal for which the Performance Monitoring (PM) is available. Each button also displays the PM standard(s) available for this level. Tap a signal level button to get its PM results.

Analyzed Signal	Standard's availability						
	G.821	G.826 ISM	G.828 ISM	G.829 ISM	M.2100 ISM	M.2100 OOSM	M.2101 ISM
DS3/DS1/E4/E3/E2/E1		X			X		
Section/RS				X			
Line/MS				X			X
VTn/STS-n/AU-n/ TU-n			X				X
BERT	X					X	

Note: G.821 and M.2100 OOSM are only available when **No Pattern Analysis (Live)** check box is cleared.

Near-End

- **EFS** (Error Free Second) (**G.821**, **G.826**, **G.828**, and **G.829**): Gives the number of seconds within which no error occurred.
- **EC** (Error Count) (**G.821** only): Gives the number of bit errors.
- **EB** (Errored Block) (**G.826**, **G.828**, and **G.829**): Gives the count of blocks in which one or more bits are in error.
- **ES** (Errored Second)

For **G.821**, and **M.2100 OOSM**: Gives the number of seconds within which one or more bit error occurred, or during which Loss Of Signal (LOS) or AIS is detected.

For **G.826**, **G.828**, **G.829**, **M.2100 ISM**, and **M.2101**: Gives the number of seconds within which one or more anomalies (FAS (DSn/PDH), EB, etc.) occurred, or at least one defect occurred.

- **SES** (Severely Errored Second)

For **G.821**, and **M.2100 OOSM**: Gives the number of seconds within which a bit error ratio is $\geq 10^{-3}$, or during which one defect (LOS/AIS) is detected.

For **G.826**, **G.828**, **G.829** and **M.2101**: Gives the number of seconds within which anomalies (FAS (DSn/PDH), EB, etc.) are $\geq X$ percent or at least one defect occurred. X=30 percent for DSn/PDH signals; see the following table for SONET/SDH signals SES threshold.

	OC-1 STS-1e STM-0 STM-0e	OC-3 STS-3e STM-1 STM-1e	OC-12 STM-4	OC-48 STM-16	OC-192 STM-64	OC-768 STM-256
Path	30 %	30 %	30 %	30 %	30 %	30 %
Line/MS	15 %	15 %	25 %	30 %	30 %	30 %
Section/RS	10 %	30 %	30 %	30 %	30 %	30 %

For **M.2100 ISM**: Gives the count of the seconds within which anomalies (frame bit errors, CRC block errors, etc.) are $\geq Y$ or at least one defect occurred. Y depends on the type of DS_n/PDH signal as described in the following table.


Signal	SES Threshold
DS1 (SF)	8 frame bit errors (Near-End)
DS1 (ESF)	320 CRC-6 block errors (Near-End) 320 CRC-6 block errors (Far-End, if FDL enabled)
E1 (Framed without CRC-4)	28 frame bit errors (Near-End)
E1 (Framed with CRC-4)	805 CRC-4 block errors (Near-End) 805 E-bit errors (Far-End)
DS3 (M13)	2444 P-bit errors (Near-End) or 5 F-bit errors (Near-End)
DS3 (C-bit Parity)	2444 P-bit errors (Near-End) or 5 F-bit errors (Near-End) 2444 FEBE errors (Far-End)
E2 (Framed)	41 frame bit errors (Near-End)
E3 (Framed)	52 frame bit errors (Near-End)
E4 (Framed)	69 frame bit errors (Near-End)

- **BBE (Background Block Error) (G.826, G.828, G.829, and M.2101)**: Gives the count of Errored Block not occurring as part of a SES.

Test Results

Performance Monitoring

- **UAS (Unavailable Second):** Gives the count of the seconds corresponding to the periods of unavailable time that begins at the onset of 10 consecutive SES events, including these 10 seconds. A period of available time shall begin at the onset of 10 consecutive non-SES events, including these 10 seconds.

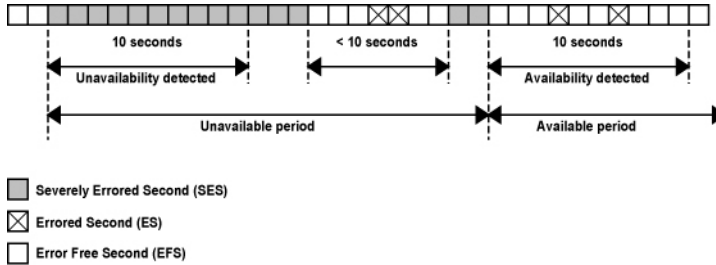

- **ESR (Errored Second Ratio) (G.821, G.826, G.828, and G.829):** Gives the ratio of the number of ES in available time (AS) during a fixed measurement interval.

$$\text{ESR} = \text{ES} \div \text{AS}$$

- **SESR (Severely Errored Second Ratio) (G.821, G.826, G.828, and G.829):** Gives the ratio of the number of SES in available time (AS) during a fixed measurement interval.

$$\text{SESR} = \text{SES} \div \text{AS}$$

- **BBER (Background Block Error Ratio) (G.826, G.828, G.829, and M.2101):** Gives the ratio of BBE in available time (AS) to total blocks in available time during a fixed measurement interval. The count of total blocks excludes all blocks during SESs.
- **DM (Degraded Minutes) (G.821 only):** A Degraded Minute is the number of minutes in which the estimated error rate exceeds 10^{-6} but does not exceed 10^{-3} . DM is determined by collecting all of the Available Seconds, removing any SES grouping the result in 60-second long groups and counting a 60-second long group as degraded if the cumulative errors during the seconds present in the group exceed 10^{-6} .

- **SEP** (Severely Errored Period) (**G.828** only): A sequence between 3 to 9 consecutive SES. The sequence is terminated by a second which is not a SES.
- **SEPI** (Severely Errored Period Intensity) (**G.828** only): Gives the count of SEP events in available time, divided by the total available time in seconds.

Far-End

- **EFS** (Error Free Second): Gives the count of the seconds within which no error occurred or when a defect is detected on the near-end.
- **EC** (Error Count) (**G.821** only): Gives the number of bit errors.
- **EB** (Errored Block) (**G.826**, **G.828**, and **G.829**): Gives the count of blocks in which one or more bits are in error.
- **ES** (Errored Second): For **G.826**, **G.828**, **G.829**, **M.2100 ISM**, and **M.2101**: Gives the count of the seconds within which one or more anomalies (FAS (DSn/PDH), EB, etc.) occurred or at least one defect occurred.
- **SES** (Severely Errored Second)

For G.826, G.828, G.829 and M.2101: Gives the number of seconds within which anomalies (FAS (DSn/PDH), EB, etc.) are $\geq X$ percent or at least one defect occurred. $X=30$ percent for DSn/PDH signals; see the following table for SONET/SDH signals SES threshold.

	OC-1 STS-1e STM-0 STM-0e	OC-3 STS-3e STM-1 STM-1e	OC-12 STM-4	OC-48 STM-16	OC-192 STM-64	OC-768 STM-256
Path	30 %	30 %	30 %	30 %	30 %	30 %
Line/MS	15 %	15 %	25 %	30 %	30 %	30 %
Section/RS	10 %	30 %	30 %	30 %	30 %	30 %

Test Results


Performance Monitoring

For M.2100 ISM: Gives the count of the seconds within which anomalies (frame bit errors, CRC block errors, etc.) are $\geq Y$ or at least one defect occurred. Y depends on the type of DS_n/PDH signal as described in the following table.

Signal	SES Threshold
DS1 (SF)	8 frame bit errors (Near-End)
DS1 (ESF)	320 CRC-6 block errors (Near-End) 320 CRC-6 block errors (Far-End, if FDL enabled)
E1 (Framed without CRC-4)	28 frame bit errors (Near-End)
E1 (Framed with CRC-4)	805 CRC-4 block errors (Near-End) 805 E-bit errors (Far-End)
DS3 (M13)	2444 P-bit errors (Near-End) or 5 F-bit errors (Near-End)
DS3 (C-bit Parity)	2444 P-bit errors (Near-End) or 5 F-bit errors (Near-End) 2444 FEBE errors (Far-End)
E2 (Framed)	41 frame bit errors (Near-End)
E3 (Framed)	52 frame bit errors (Near-End)
E4 (Framed)	69 frame bit errors (Near-End)

- **BBE** (Background Block Error) (G.828 and G.829 Line): Gives the count of Errored Blocks not occurring as part of an SES.

- **UAS (Unavailable Second):** Gives the count of the seconds corresponding to the period of unavailable time that begins at the onset of 10 consecutive SES events, including these 10 seconds. A period of available time shall begin at the onset of 10 consecutive non-SES events, including these 10 seconds.

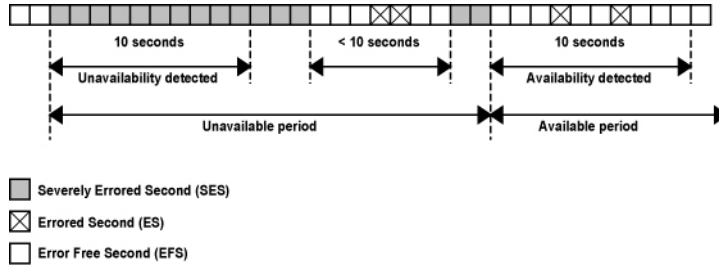

- **ESR (Errored Second Ratio):** Gives the ratio of the number of ES in available time to total seconds in available time during a fixed measurement interval.

$$\text{ESR} = \text{ES} \div \text{AS}$$

- **SESR (Severely Errored Second Ratio):** Gives the ratio of the number of SES in available time to total seconds in available time during a fixed measurement interval.

$$\text{SESR} = \text{SES} \div \text{AS}$$

- **BBER (Background Block Error Ratio):** Gives the ratio of BBE in available time to total blocks in available time during a fixed measurement interval. The count of total blocks excludes all blocks during SESs.

PTP Stats

Note: *Not available with GM emulation mode.*

From the test menu, tap **Results**, and the **PTP Stats** tab.

PDV

Note: *Available for Time Error measurement with 8275.1/8275.2 profile.*

PDV indicates the difference between the delay of a packet (difference between timestamp at receiving end and the original timestamp at the transmitter) and the minimum packet delay value for the specified interval. **Current, Average, Minimum, Maximum, and Standard Deviation** measurement values are displayed for both directions: **Forward (BC -> Client)** for **Sync** messages and **Reverse (Client -> BC)** for **Delay Req** messages. The **Standard Deviation** is the measure of the dispersion of messages from its mean. The pass/fail verdict is also displayed beside the maximum value when enabled.

Round-Trip Delay

Note: *Available for Time Error measurement with 8275.1/8275.2 profile.*

Delay (ns) indicates the time required for a bit to travel from the transmitter back to its receiver. **Current, Average, Minimum, and Maximum** values are displayed.

Count/Rate / Message Count/Rate

Gives the transmitted/received count and average rate for each PTP message, and the total count for all messages.

PTP Message:

TX	RX
Signaling Announce Req ^a	Signaling Announce Grant ^a
Signaling Sync Req ^a	Signaling Sync Grant ^a
Signaling Delay Resp Req ^a	Signaling Delay Resp Grant ^a
Delay Req	Delay Resp
	Sync
	Follow Up
	Announce

- a. The rate value corresponds to an average rate because these messages are only transmitted/received when negotiating or renewing the lease with the GM clock. If the connection with the GM Clock was already established when the test is started, the 0 value is displayed. However, the value becomes available with the next lease renewal which happens every 150 seconds. Available with G.8265.1 and G.8275.2 profiles.

Note: *In the case where messages are lost while the Receipt Timeout is set to a large value (slow communication), the last valid recorded rate value will be preceded with < to indicate that the reception rate is not stable. This applies to **Delay Resp**, **Announce**, **Sync**, and **Follow Up**.*

Note: *When the rate is above 150 messages/s, > 150 is displayed.*

IPDV

Note: *Available with 1588 PTP test application.*

IPDV (Inter Packet Delay Variation is available for **Sync** and **Delay Req** messages and is measured for all valid in-sequence messages (see *Delay Measurement* on page 559). **Current**, **Average**, **Minimum**, **Maximum**, and **Standard Deviation** measurement values are displayed. The **Standard Deviation** is the measure of the dispersion of messages from its mean. When a value is below 1μ second, < 1μs is displayed. The pass/fail verdict is also displayed beside the maximum value when enabled.

Quality Level - 1588 PTP

The quality level characterizes the clock quality in terms of network synchronization. Not available with GM emulation mode.

From the test menu, tap **Results**, and the **Quality Level** tab.

➤ **QL / PTP Clock Class / Count**

- **Count** gives the count for each QL code (PTP Clock Class) included in the announce message received.
- **Other** includes all clock class codes (0 to 255) included in the announce message received other than the QL codes (see table on page 531).
- **Total** indicates the total count of all QL code messages received.
- **Last QL Received** indicates the last Quality Level value received. The pass/fail verdict is also displayed when both **QL Mismatch Monitoring** and **Pass/Fail Verdict** check boxes are selected.

Last Change indicates the date and time of the **Last QL Received** has changed.

- **QL Mismatch Monitoring** check box when selected (default) enables the quality level mismatch monitoring.

- **Expected QL** allows the selection of the expected quality level value.
Available when the **QL Mismatch Monitoring** check box is selected.

Profile ITU	Quality Level value	PTP Clock Class	Description
G.8265.1	QL-PRS	80	Primary Reference Source Traceable (G.811)
	QL-STU/UNK	82	Synchronized - Traceability Unknown
	QL-PRC (default)	84	Primary Reference Clock Traceable (G.811)
	QL-ST2	86	Traceable to Stratum 2 (G.812 Type II)
	QL-INV3	88	Quality Level Invalid 3
	QL-SSU-A/TNC	90	Type I or V slave clock (G.812) Traceable to Transit Node Clock (G.812 Type V)
	QL-INV5	92	Quality Level Invalid 5
	QL-INV6	94	Quality Level Invalid 6
	QL-SSU-B	96	Type VI slave clock (G.812)
	QL-INV9	98	Quality Level Invalid 9
	QL-ST3E	100	Traceable to Stratum 3E (G.812 Type III)
	QL-EEC2/ST3	102	Ethernet Equipment Clock Option 2 Traceable to Stratum 3 (G.812 Type IV)
	QL-EEC1/SEC	104	Ethernet Equipment Clock Option 1 Synchronous Equipment Clock (G.813 or G.8262, Option 1)
	QL-SMC	106	Traceable to SONET Minimum Clock (G.813 or G.8262, Option 2)
	QL-PROV	108	Provisionable by the Network Operator (PNO)
	QL-DNU/DUS	110	Do Not Use Do Not Use for Synchronization

Test Results

Quality Level - 1588 PTP

Profile ITU	Quality Level value	PTP Clock Class	Description
G.8275.1 G.8275.2	QL-PRC/PRS (default)	6, 7, 135, 140	Primary Reference Clock Traceable (G.811)
	QL-SSU-A/ST2	150	Type I or V slave clock (G.812) Traceable to Stratum 2 (G.812 Type II)
	QL-SSU-B/ST3E	160	Type VI slave clock (G.812) Traceable to Stratum 3E (G.812 Type III)
	QL-SEC/EEC1/ST3/EEC2	165, 248, 255	Synchronous equipment clock (G.813 Option I) Ethernet equipment clock (G.8262 Option I) Traceable to Stratum 3 (G.812 Type IV or G.8262 Option II) Ethernet equipment clock (G.8262 Option II)

Quality Level - SyncE

The quality level characterizes the clock quality in terms of network synchronization.

From the test menu, tap **Results**, and the **Quality Level** tab.

- **Generated QL** indicates the Quality Level value that is generated.
Last Change indicates the date and time of the generated Quality Level message value has changed. Not available for 1GE Electrical interface using **Slave** as **Local Clock**.
- **Last QL Received** indicates the last Quality Level value received. The pass/fail verdict is also displayed when both **QL Mismatch Monitoring** and **Pass/Fail Verdict** check boxes are selected.
Last Change indicates the date and time of the **Last QL Received** has changed.
- **QL Mismatch Monitoring** check box when selected (default) enables the quality level mismatch monitoring.

Test Results

Quality Level - SyncE

- **Expected QL** allows the selection of the expected quality level value. Available when the **QL Mismatch Monitoring** check box is selected.

Quality Level value	SSM	Description
QL-STU/UNK	0	Synchronized - Traceability Unknown
QL-PRS	1	Primary Reference Source Traceable (G.811)
QL-PRC	2	Primary Reference Clock Traceable (G.811)
QL-INV3	3	Quality Level Invalid 3
QL-SSU-A/TNC	4	Type I or V slave clock (G.812) Traceable to Transit Node Clock (G.812 Type V)
QL-INV5	5	Quality Level Invalid 5
QL-INV6	6	Quality Level Invalid 6
QL-ST2	7	Traceable to Stratum 2 (G.812 Type II)
QL-SSU-B	8	Type VI slave clock (G.812)
QL-INV9	9	Quality Level Invalid 9
QL-EEC2/ST3 (default)	10	Ethernet Equipment Clock Option 2 Traceable to Stratum 3 (G.812 Type IV)
QL-EEC1/SEC	11	Ethernet Equipment Clock Option 1 Synchronous Equipment Clock (G.813 or G.8262, Option 1)
QL-SMC	12	Traceable to SONET Minimum Clock (G.813 or G.8262, Option 2)
QL-ST3E	13	Traceable to Stratum 3E (G.812 Type III)
QL-PROV	14	Provisionable by the Network Operator (PNO)
QL-DNU/DUS	15	Do Not Use Do Not Use for Synchronization

- **QL Mismatch Frame Count** gives the total count of information and/or event frames received not matching the **Expected QL**. Only available when the **QL Mismatch Monitoring** check box is selected.

QL

TX

- **Information** gives the count of information frames generated for each **QL** as well as the total of all **QL** values. For 1GE Electrical interface using **Slave** as **Master-Slave Clock**, only the count for **QL-DNU/DUS** is reported.
- **Event** gives the count of event frames generated for each **QL** as well as the total of all **QL** values. Not available with 1GE Electrical using **Slave** as **Master-Slave Clock**.

RX

- **Information** gives the count of information frames received for each **QL** as well as the total of all **QL** values.
- **Event** gives the count of event frames received for each **QL** as well as the total of all **QL** values.

S-OAM and MPLS-TP OAM

From the **Test** menu, tap **Results**, and the **S-OAM** or **MPLS-TP OAM** tab.

Loopback

- **Status** displays the status of the test function (refer to page 626).
- **TX LBM** indicates the count of transmitted LBM frames.
- **RX LBR** indicates the count of valid LBR frames received. A valid frame for S-OAM has its source MAC address matching the Peer MEP MAC address, destination MAC address matching the unit port MAC address, and VLANs matching the unit port VLANs. A valid frame for MPLS-TP OAM has its destination MAC address matching either the unit MAC address, FF:FF:FF:FF:FF:FF, or 01:00:5E:90:00:00; VLANs matching the unit port VLANs; and MPLS Labels matching the local MPLS Label Stack configuration.

- **LBR Timeout**

For connectivity verification (Continuous check box cleared), indicates the count of LBR Timeout event which occurs if a reply (LBR frame with matching Transaction ID) to a transmitted LBM frame is not received within 5 seconds.

For diagnostic test (Continuous check box selected), indicates the difference between the transmitted LBM frames and the received LBR frames.

- **Invalid LBR**

For connectivity verification (Continuous check box cleared), indicates the count of LBR frames received from the peer MEP with incorrect MEG/MD Level or with an unexpected Transaction ID.

For diagnostic test (Continuous check box is selected), indicates the count of LBR frames received from the peer MEP with incorrect MEG/MD Level.

- **Invalid Payload** indicates the count of received LBR frames having either a TLV type different than the one transmitted, Bit error or wrong data value detected in the data payload of a Data TLV, Bit error, Pattern Loss, or Pattern Type mismatch of a Test TLV.
- **Successful** indicates the count of received LBR frames having no errors.
- **Failed** indicates the count of LBR frames declared as invalid.

Test

- **Status** displays the status of the test function (refer to page 626).
- **TX TST** indicates the count of transmitted TST frames.
- **RX TST** indicates the count of valid TST frames received. A valid frame for S-OAM has its source MAC address matching the Peer MEP MAC address; destination MAC address matching either the unit port Unicast MAC address or a Multicast class 1 address¹; and VLANs matching the unit port VLANs. A valid frame for MPLS-TP OAM has its destination MAC address matching either the unit MAC address, FF:FF:FF:FF:FF:FF, or 01:00:5E:90:00:00; VLANs matching the unit port VLANs; and MPLS Labels matching the local MPLS Label Stack configuration.
- **Invalid TST** indicates the count of TST frames received from the peer MEP with incorrect MEG/MD level.
- **Invalid Payload** indicates the count of received TST frames having either an unsupported pattern type, or bit error / pattern loss detected in the payload.
- **Successful** indicates the count of received TST frames having no errors.
- **Failed** indicates the count of TST frames declared as invalid.

1. Refer to *Unicast/Multicast Addresses for Ethernet OAM* on page 907 for more information.

Test Results

S-OAM and MPLS-TP OAM

Frame Delay

- **Status** displays the status of the test function (refer to page 626).
- **TX DMM** indicates the count of transmitted DMM frames.
- **RX DMR** indicates the count of valid DMR frames received. A valid frame for S-OAM has its source MAC address matching the Peer MEP MAC address; destination MAC address matching the unit port MAC address; and VLANs matching the unit port VLANs. A valid frame for MPLS-TP OAM has its destination MAC address matching either the unit MAC address, FF:FF:FF:FF:FF:FF, or 01:00:5E:90:00:00; VLANs matching the unit port VLANs; and MPLS Labels matching the local MPLS Label Stack configuration..
- **Invalid DMR** indicates the count of received DMR frames from the peer MEP having an incorrect MEG/MD Level, an incorrect Test ID (when applicable), or with a valid MEG/MD Level and valid Test ID (when applicable) but with a Frame Delay outside the 0.001 to 8000.000 ms range.
- **Delay (ms): Current** indicates the average of frame delay measured in the last second. **Minimum**, **Maximum**, and **Average** indicates respectively the minimum, maximum, and average frame delays measured since the beginning of the test.
- **Successful** indicates the count of received DMR frames having no errors.
- **Failed** indicates the count of DMR frames declared as invalid.

Frame Loss

- **Status** displays the status of the test function (refer to page 626).
- **TX LMM** indicates the count of transmitted LMM frames.
- **RX LMR** indicates the count of valid LMR frames received. A valid frame for S-OAM has its source MAC address matching the Peer MEP MAC address; destination MAC address matching the unit port MAC address; and VLANs matching the unit port VLANs. A valid frame for MPLS-TP OAM has its destination MAC address matching either the unit MAC address, FF:FF:FF:FF:FF:FF, or 01:00:5E:90:00:00; VLANs matching the unit port VLANs; and MPLS Labels matching the local MPLS Label Stack configuration.
- **Invalid LMR** indicates the count of LMR frames received from the peer MEP with incorrect MEG/MD level.
- **Frame Loss** is calculated (count and %) for both Near-End and Far-End over all valid LMR frames received.
- **Successful** indicates the count of received LMR frames having no errors.
- **Failed** indicates the count of LMR frames declared as invalid.

Synthetic Loss

Note: *Only available with Ethernet OAM.*

- **Status** displays the status of the test function (refer to page 626).
- **TX SLM** indicates the count of transmitted SLM frames.
- **RX SLR** indicates the count of valid SLR frames received. A valid frame has its source MAC address matching the Peer MEP MAC address; destination MAC address matching the unit port MAC address; and VLANs matching the unit port VLANs.
- **Invalid SLR** indicates the count of SLR frames received from the peer MEP with incorrect MEG/MD level, incorrect source MEP ID, or incorrect Test ID.
- **Synthetic Loss** is calculated (count and %) for both Near-End and Far-End over all frames received and is updated after each Synthetic Loss measurement period (after receiving the defined **Frame Count**, refer to page 404).
- **Successful** indicates the count of received SLR frames having no errors.
- **Failed** indicates the count of SLR frames declared as invalid.

SDT - Multi-Channel OTN

From the **Test** menu, tap **Results** and the **SDT** tab.

Note: *The SDT tab is only available when **Disruption Monitoring** is enabled (refer to ODU Channels - Global on page 368).*

Service Disruption is the time during which there is a disruption of service due to the absence of traffic or to the detection of defects per channel.

- **Channels with Disruption** indicates the number of channels with service disruption.
- **Channels Monitored** indicates the number of channels monitored.
- **Channels Above Threshold**, available when pass/fail verdict is enabled, indicates the number of channels with a disruption time above the defined threshold.
- **Longest Disruption** indicates the duration of the longest measured disruption time and the channel number on which it occurred. The Pass/Fail verdict when enabled, is displayed next to duration value.
- **Last Disruption** indicates the duration of the last measured disruption time and the channel number on which it occurred.
- **SDT Threshold (ms)**, available when pass/fail verdict is enabled, allows entering the SDT threshold value that will be used to declare the pass/fail verdict: **0.001** to **299999.999 ms** (default is **50 ms**).

The following statistics are presented per channel:

- **Channel** indicates the channel number.
- **Longest (ms)** indicates the longest measured disruption time.
- **Shortest (ms)** indicates the shortest measured disruption time.
- **Last (ms)** indicates the duration of the last measured disruption time.
- **Average (ms)** indicates the average duration of all measured disruption times.

Test Results

SDT - Multi-Channel OTN

- **Total (ms)** indicates the total duration of all measured disruption times.
- **Count** indicates the number of disruption events detected since the beginning of the test.
- **PASS FAIL**, available when pass/fail verdict is enabled, indicates the SDT pass/fail verdict.

- **Time Mode** selects the format used to display the disruption time.
 - Relative** displays SDT events based on the time elapsed since the beginning of the test.
 - Absolute** (default) displays SDT events based on date and time.
- **Units** selects the unit used to display SDT statistics: μ s, ms (default), s, or min.
- **Time Stamp** displays the time or date/time for each SDT channel; this apply to **Longest** and **Last** disruption time statistics. Choices are **None** (default), **Time**, and **Date/Time**. An extra line is added for each channel to display the time, and two lines to display the time and date.

Note: *When a disruption event is equal to or longer than the test period which is fixed to 5 minutes, then the measured disruption time is equal to the test period.*

Service Configuration - Burst

From the **Test** menu, tap **Results**, **Service Configuration**, and the **Burst** tab.

Service Name and Selection

Service Name indicates the name of the selected service.

Select the service to be displayed by either using the left/right arrow or by tapping over the service numbers area then tapping on a specific service number. An orange background indicates the selected service while a green background indicates the services that are enabled.

Committed/Excess

- **Committed - Burst test** is the **CBS** subtest.
- **Excess - Burst test** is the **EBS** subtest.
- **Direction**, available with **Dual Test Set** or **Dual Port** topology, indicates respectively results for local (**L**) and remote (**R**) directions, or for both port directions.
- **Burst Size** indicates the size in bytes of the burst used for each subtest.
- **SLA Verified** indicates the committed SLA parameters that are used to declare the pass/fail verdict. See *Summary - EtherSAM* on page 585 for more information on **Frame Loss**, **Max Jitter**, **Round-Trip Latency**, **Max Latency**, and **Max RX Rate**.
- **Informational** parameters are for information purpose only, they are not included in the test pass/fail verdict. See *Summary - EtherSAM* on page 585 for more information on **Frame Loss Rate**, **Max Jitter**, **Max Latency**, and **Round-Trip Latency**.
- **Average RX Rate** indicates the measured average utilization throughput for the CBS subtest.

Service Configuration - L2CP

From the **Test** menu, tap **Results**, **Service Configuration**, and the **L2CP** tab.

Service Name and Selection

Service Name indicates the name of the selected service.

Select the service to be displayed by either using the left/right arrow or by tapping over the service numbers area then tapping on a specific service number. An orange background indicates the selected service while a green background indicates the services that are enabled.

L2CP Statistics per Service

- **Name** indicates the name of each L2CP frame.
- **Dest. MAC** indicates the L2CP frame destination MAC address.
- **Expected L2CP Handling** indicates the expected L2CP handling: **Pass Through** or **Discard/Peer**.
- **Direction** indicates respectively results for local (**L**) and remote (**R**) directions.
- **TX Frames** indicates the count of L2CP frames transmitted per direction.
- **RX Frames** indicates the count of L2CP frames received per direction.

The L2CP frame verdict is as follows per direction:

Verdict	Description
PASS	If the Expected L2CP Handling is Pass Through and the L2CP TX frames have been received at destination with a maximum of 1 frame lost.
	If the Expected L2CP Handling is Peer/Discard and none of the transmitted L2CP frames have been received at destination.
FAIL	If the Expected L2CP Handling is Pass Through and none or some but not all (more than 1 frame lost) of the transmitted L2CP frames have been received at destination.
	If the Expected L2CP Handling is Peer/Discard and at least one of the transmitted L2CP frames have been received at destination.

L2CP service verdict is as follows per direction:

Verdict	Description
PASS	All L2CP frame verdicts (same direction) are pass.
FAIL	At least one L2CP verdict (same direction) is fail.

L2CP global verdict is as follows:

Verdict	Description
PASS	All L2CP service verdicts are pass.
FAIL	At least one L2CP service verdict is fail.

Service Configuration - Ramp

From the **Test** menu, tap **Results**, **Service Configuration**, and the **Ramp** tab.

Service Name and Selection

Service Name indicates the name of the selected service. Select the service to be displayed by either using the left/right arrow or by tapping over the service numbers area then tapping on a specific service number. An orange background indicates the selected service while a green background indicates the services that are enabled.

Committed/Excess Steps

- **Committed Steps** indicate the pre CIR and CIR steps specified in the ramp configuration.
- **Excess Steps** indicate the **CIR+EIR** and **Traffic Policing** steps specified in the ramp configuration.
- **Direction**, available with **Dual Test Set** or **Dual Port** topology, indicates respectively results for local (**L**) and remote (**R**) directions, or for both port directions.
- **TX Rate** indicates the transmission rate.
- **SLA Verified** indicates the committed SLA parameters that are used to declare the pass/fail verdict. See *Summary - EtherSAM* on page 585 for more information on **Frame Loss Rate**, **Max Jitter**, **Round-Trip Latency**, and **Max RX Rate**.

- **Informational** parameters are for information purpose only, they are not included in the test pass/fail verdict. See *Summary - EtherSAM* on page 585 for more information on **Frame Loss**, **Max Jitter**, and **Round-Trip Latency**.
- **Average RX Rate** indicates the measured average utilization throughput for each step.

Service Performance

From the **Test** menu, tap **Results**, and the **Service Performance** tab.

Service Name and Selection

Service Name indicates the name of the selected service.

Select the service to be displayed by either using the left/right arrow or by tapping over the service numbers area then tapping on a specific service number. An orange background indicates the selected service while a green background indicates the services that are enabled.

SLA Parameters

The configured **CIR**, **Max Jitter**, **Frame Loss Rate** and **Max Latency/Max Round-Trip Latency** SLA parameters are displayed. Refer to *Services - Profile* on page 409 for more information. For **Dual Test Set** or **Dual Port** topology, parameters are displayed respectively for both local (**L**) and remote (**R**) directions, or for both port directions.

Metrics

Current, **Average**, **Minimum**, **Maximum**, and **Estimate (Jitter)** measured values for each metric are reported. **Direction**, available with **Dual Test Set** or **Dual Port** topology indicates respectively results for local (**L**) and remote (**R**) directions, both port directions, and Round-Trip for Latency when in Round-Trip Latency Measurement Mode (see *Global Options* on page 287). For **Dual Test Set**, results for remote to local are obtained at the end of each step.

- **RX Rate** indicates the measured utilization throughput.
- **Jitter** indicates the measured delay variation.
- **Latency** indicates the measured round-trip latency (delay).

Note: For the **Current** value, 0 is displayed when no RX rate has been measured in the last second.

Note: For the **Current** value, **Not measurable** is displayed when no delay has been measured in the last second.

Errors

For **Dual Test Set**, errors “” are reported for both local (**L**) and remote (**R**) directions. For **Dual Port** topology, errors are reported for both port directions.

- **Frame Loss** indicates that a sequence number is missing in the received frames. The pass/fail verdict when enabled reports only the verdict when it is fail. **Seconds**, **Count**, and **Rate** values are reported.
- **Out-of-Sequence** indicates that the received frame sequence number is either smaller than the expected frame sequence number or is a duplicate number. The Out-Of-Sequence will not be considered in the global verdict. **Seconds**, **Count**, and **Rate** values are reported.

RX Frame Count

The **RX Frame Count** indicates the number of frames received matching the selected service ID. For **Dual Test Set**, the count is reported for both local (**L**) and remote (**R**) directions. For **Dual Port** topology, the count is reported for both port directions.

Test Results

Streams - Frame Loss / Out-of-Sequence

Streams - Frame Loss / Out-of-Sequence

From the **Test** menu, tap **Results**, **Streams**, and the **Frame Loss / Out-Of-Sequence** tab.

Note: For *Dual Port* topology select the port to be displayed.

- **Stream** indicates the stream identification number.
- **Thresholds** button allows setting the pass/fail thresholds (refer to *QoS Metrics* on page 442).
- **Frame Loss:** See *QoS Metrics* on page 926.
- **Out-Of-Sequence:** See *QoS Metrics* on page 926.

Streams - Jitter

From the **Test** menu, tap **Results**, **Streams**, and the **Jitter** tab.

Note: For *Dual Port* topology select the port to be displayed.

- **Stream:** Indicates the stream identification number.
- **Jitter** is measured for each stream on all valid frames (in-sequence frames, valid Jitter tag, and no FCS error) received. **Current**, **Average**, **Minimum**, **Maximum**, and **Estimate** delay values are reported.

Note: For the **Current** value, **Not measurable** is displayed when no delay has been measured in the last second.

- **Thresholds** button allows setting the pass/fail thresholds (refer to *QoS Metrics* on page 442).

Streams - Latency

From the **Test** menu, tap **Results**, **Streams**, and the **Latency** tab.

Note: For **Dual Port** topology select the port to be displayed.

- **Stream:** Indicates the stream identification number.
- **Latency** is measured for each stream on all valid frames (valid Latency tag, expected originator identifier value, and no FCS error) received. **Current**, **Average**, **Minimum**, and **Maximum** round-trip latency (delay) are reported.

Note: *Latency statistics are only available in loopback test topology.*

Note: For the **Current** value, **Not measurable** is displayed when no delay has been measured in the last second.

- **Thresholds** button allows setting the pass/fail thresholds (refer to *QoS Metrics* on page 442).

Test Results

Streams - Throughput / Customer Frame Throughput

Streams - Throughput / Customer Frame Throughput

From the **Test** menu, tap **Results**, **Streams**, and the **Throughput** or the **Customer Frame Throughput** tab.

Note: For *Dual Port* topology select the port to be displayed.

- **Stream** indicates the stream identification number.
- **TX Rate** indicates the transmission rate.
- **RX Rate** is measured for each stream on all valid frames (valid Throughput tag with no FCS error). **Current**, **Average**, **Minimum**, and **Maximum** throughput results are reported.

Note: A **Current** value of **0** indicates that no RX rate has been measured in the last second.

- **Total** indicates the total TX and current measured RX throughput of all valid frames (valid Throughput tag with no FCS error).
- **Thresholds** button allows setting the pass/fail thresholds (refer to *QoS Metrics* on page 442). Not available on **Customer Frame Throughput** tab.

Summary - OTN/SONET/SDH/DSn/PDH

Note: Available with OTN BERT, SONET/SDH BERT, OTN-SONET/SDH BERT, DSn/PDH BERT, and SONET/SDH - DSn/PDH BERT.

From the **Test** menu, tap **Results**, and the **Summary** tab.

- **Global/<Port #>**, available with **Dual Port** topology, allows selecting to display a brief summary for both ports (**Global**) or for a specific port.
- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

Test Results

Summary - OTN/SONET/SDH/DSn/PDH

BER and Multi-Pattern BER

Note: See BER on page 914 for a description of each alarm/error.

Note: For Multi-Pattern, alarms/errors are available for each pattern. An arrow in front of a specific pattern indicates the pattern that is currently generated/analyzed. **All** represents the sum of alarms/errors as well as the consolidated rate for all patterns.

- **Receiving Live Traffic - RX Pattern Analysis Disabled** when displayed, indicates that the **No Pattern Analysis (Live)** check box is selected and in this case no other information/statistics are available.
- **BER Threshold** is available when **Pass/Fail Verdict** is enabled¹. For Multi-Channel OTN, this setting is global and applies to all Channels.
- **Restart Sequence** button, available with multi-pattern, clears results and restarts the multi-pattern sequence with the first enabled pattern in the list. This is the only way to restart the multi-pattern sequence and to allow synchronization between two test sets.

For back-to-back testing using two test sets, create a multi-pattern test on both units, tap the **Restart Sequence** button on each unit within 5 seconds apart. Once synchronized, start the test on each unit.

1. Refer to *BERT and Unframed BERT* on page 234 or *EtherBERT and Unframed BERT* on page 272.

- **Bit/Pattern Error Rate/Count** graphically displays a meter representing either the bit/pattern error rate or the bit/pattern error count depending on the Pass/Fail Verdict selection¹.

When the verdict is enabled¹, the values under the threshold are presented in green while the values above are in red.

When the verdict is disabled, the bit/pattern error rate is displayed in blue.

The arrow pointer indicates the current received bit/pattern error rate/count.

The Pass/Fail verdict is displayed just on top of the meter when enabled¹.

- **Bit/Pattern Error, Amount/Rate, and Inject:** The bit/pattern error injection and settings are coupled with the *Inject Button* on page 490. For Transport test applications, not available in Through modes or with Multi-Pattern.

Service Disruption

Note: *Service Disruption results are only available when **Disruption Monitoring** is enabled (refer to BERT and Unframed BERT on page 234). When Service Disruption is disabled, the message **Service disruption monitoring disabled** is displayed.*

Service Disruption is the time during which there is a disruption of service due to the detection of defects.

1. Refer to *BERT and Unframed BERT* on page 234 or *EtherBERT and Unframed BERT* on page 272.

Test Results

Summary - OTN/SONET/SDH/DSn/PDH

➤ Disruption Time

Note: *For OTL defects, at the exception of LOL, the disruption time is displayed for the lane having the longest disruption time. See OTL-SDT on page 519 for results per lanes.*

Longest indicates the longest measured disruption time.

Shortest indicates the shortest measured disruption time.

Last indicates the length of the last measured disruption time.

Average indicates the average duration of all measured disruption times.

Total indicates the total duration of all measured disruption times.

- **Defect** indicates on which layer and defect the service disruption time test is performed. For OTL defect (parallel interface) also indicates within parenthesis the lane number having the longest disruption time.
- **Disruption Count:** Indicates the number of disruption events detected since the beginning of the SDT test.

Note: *When a disruption event is equal to or longer than the test period which is fixed to 5 minutes, then the measured disruption time is equal to the test period.*

- **SDT Threshold (ms)** allows configuring the acceptable maximum service disruption time before failing the test: **0.001** to **299999.999 ms** (default is **50 ms**). Refer to *Service Disruption* on page 237.

GFP Frames

GFP Frames are available for OTN BERT with Ethernet 1 GbE, 10 GbE or Ethernet (flex/GFP-F) client (see *GFP-F/GFP-T* on page 501).

Summary - 1588 PTP (Client)

From the test menu, tap **Results**, and the **Summary** tab.

- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer.

- For G.8265.1 and G.8275.2: **[Message type] Request Denied, Session Canceled, or No Reply** is displayed next to **Aborted** when applicable.
- For G.8275.1: **Sync Message Rate Changed** is displayed next to **Aborted** when applicable.
- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

Test Results

Summary - 1588 PTP (Client)

- **Negotiation Status** is displayed during the Unicast negotiation process which is initiated when either the test is started or the **Connect** button is activated. Only available with **Unicast** mode.

Negotiation Status	Description	Background Color ^a
Request Granted	All the Signaling request types have been granted.	Green
[Message type] Request Denied	The Signaling grant message has not been granted.	Red
Session Canceled	The GM has canceled the Unicast session.	Red
No Reply	No message is received from the GM following transmission of 3 Signaling requests for a message type. Make sure that both IP address and Domain (refer to <i>1588 PTP (Client)</i> on page 221) of the GM Clock are valid as well as the IP address of the unit's port used to connect on the network (refer to <i>Network</i> on page 355).	Red
Pending	Unicast negotiation has started and no message has been received from the GM.	Gray
Inactive	The Unicast negotiation is not active.	Gray

a. The gray background color is also used for a Link Down.

- **GM Info / BC Info:** Refer to *Grandmaster Information / Boundary Clock Information* on page 995.

Delay Measurement

- **Sync IPDV** meter displays the average of the inter packet delay variation of consecutive Sync messages in the last second. The value and the pass/fail verdict is also displayed when enabled.
- **Delay Req IPDV** meter displays the average of the inter packet delay variation of consecutive Delay Req messages in the last second. The value and the pass/fail verdict is also displayed when enabled.

Note: *When a value is below 1 μ second, “< 1 μ s” is displayed.*

Note: *When the **Pass/Fail Verdict** is enabled, the green region is delimited from 0 to the IPDV Threshold (refer to Alarm Timeout/Threshold / Alarm Threshold on page 225) corresponding to a pass verdict. The red region beyond the threshold corresponds to a fail verdict. There is neither green nor red region when the Pass/Fail verdict is disabled.*

Quality Level

- **Last QL Received** indicates the last Quality Level value received. The pass/fail verdict is also displayed when both **QL Mismatch Monitoring** and **Pass/Fail Verdict** check boxes are selected.
- **Last Change** indicates the date and time of the **Last QL Received** has changed.

Total PTP Messages

Gives respectively the total count of transmitted (TX) and received (RX) PTP messages.

Test Results

Summary - 1588 PTP (GM)

Summary - 1588 PTP (GM)

From the test menu, tap **Results**, and the **Summary** tab.

- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer.

REF-FAULT is displayed next to **Aborted** when applicable.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

PTP Session

Note: *Refer to Status Bar on page 44 for PTP link status.*

- **Denied Session Count** indicates the number of times a session establishment is rejected by the GM. Available with G.8275.2.
- **Message Impairment** allows selecting the message to be interrupted once **Interrupt** is enabled: **Announce** (default), **Sync**, **Follow Up**, **Delay Resp.** **Follow Up** is not available when the **Clock Type** is **One Step**.
- **Interrupt**, available when the test is running, stops the generation of the selected **Message Impairment**.

Client Info

Reports the following information on the last valid PTP client:

- **MAC Address** (Multicast) or **IP Address** (Unicast)
- **Clock Identity**
- **Port Number**
- **Domain**
- **Mechanism**
- **Lease Duration** (Unicast)
- **Message Rate** (Unicast): **Announce**, **Sync**, **Delay Req.**

Test Results

Summary - 1588 PTP (GM)

PTP Stats

Gives the transmitted/received count and average rate for each PTP message, and the total count for all messages.

TX	RX
Signaling Announce Grant ^a Signaling Sync Grant ^a Signaling Delay Resp Grant ^a Delay Resp Sync Follow Up Announce	Signaling Announce Req ^a Signaling Sync Req ^a Signaling Delay Resp Req ^a Delay Req

- a. The rate value corresponds to an average rate because these messages are only transmitted/received when negotiating or renewing the lease with the Grand Master clock. If the connection with the Grand Master Clock was already established when the test is started, the 0 value is displayed. However, the value becomes available with the next lease renewal. Available with G.8275.2 profile.

Summary - Cable Test

From the **Test** menu, tap **Results**, and the **Summary** tab.

- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled. The Pass/Fail verdict is based on the following criteria: **The worst pair's Wire Map, Prop. Delay, Delay Skew, and Length.**

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed or manually stopped.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.

Cable

Note: When no value is available, "--" is displayed.

- **Wire Map** indicates the Wire Map result for the pair having the worst Wire Map. The distance to fault is also displayed when a fault is identified. The Pass/Fail verdict is also displayed, when enabled.
- **Prop. Delay (ns)** indicates the propagation delay value for the pair having the longest propagation delay. The Pass/Fail verdict is also displayed when enabled.

Test Results

Summary - Cable Test

- **Delay Skew (ns)** indicates the delay skew value for the pair having the worst delay skew. The Pass/Fail verdict is also displayed when enabled. The Delay Skew result is only available for 1000BASE-T interface when the link is up.
- **Length (m/ft)** indicates the length for the pair having the worst cable length value. The Pass/Fail verdict is also displayed when enabled.

Pairs

Note: When no value is available, "--" is displayed.

- **Pair** indicates the pair number.
- **Pins** indicates the pair's pin numbers and color of each wire corresponding to the selected wiring standard.

W-BL	White-Blue
BL	Blue
W-O	White-Orange
O	Orange
W-G	White-Green
G	Green
W-BR	White-Brown
BR	Brown

- **Wire Map Test Result** gives the wire map test result for each pair. When the link is up: The wire map result for each pair is given as seen by the module to get a link up. This means that the wire map result may not correspond to the type of cable tested depending on the cable(s) used and/or the configuration of the cable mode (MDI, MDIX, or auto-detection) on both the module and the far end equipment. For example, two crossed pair cables end to end used between the module and a far end equipment may give a straight pair (MDI) wire map result.

MDI	Straight pair.
MDIX	Crossed pair.
MDI (-)	For 1 Gbit/s, straight pair with swapped wires within pair.
MDIX (-)	For 1 Gbit/s, crossed pair with pair A swapped with pair B and/or pair C swapped with pair D.
Noise	Excessive noise on a pair most likely caused by a link partner running in 10/100 Mbit/s forced mode. In this case, no propagation delay or length is reported and there is no comparison with any threshold.

Note: For 1 Gbit/s, both MDI and MDIX can be reported simultaneously since crossed pairs detection is performed independently for pairs A-B and C-D.

Test Results

Summary - Cable Test

When the link is down:

Short	Short-circuit between Tip and Ring wires of a pair or Tip or ring wire of a pair is connected with an alien wire grounded.
Open	No cable plugged in, remote end open, or either one or two wires of a pair are not connected.
Short-between-pairs	Short between one or two wires of a pair with one or two wires of another pair. Short between more than two pairs, including one or two wires for each pair.
Noise	Excessive noise on a pair most likely caused by a link partner running in 10/100 Mbit/s forced mode. In this case, no distance is reported and there is no comparison with any threshold.
Unknown	No fault has been identified but the link is down. To maximize the cable test result, it is preferable to have the far end equipment powered up.

If the determined **Wire Map** is either **MDI**, **MDIX**, **MDI (-)**, **MDIX (-)**, or **Noise** (Link up), the test is declared as **PASS**. If the determined Wire Map is either **Short**, **Short-between-pair**, **Open**, **Noise** (Link down), or **Unknown**, the test is declared as **FAIL**.

Note: Refer to Ethernet Cables on page 858 for cable pinout.

- **Distance To Fault (m/ft)** gives the distance to fault from the near end for each pair, unless the problem is due to excessive noise. Noise may be due to electrical noise causing communication error.
- **Prop. Delay (ns)** indicates the propagation delay of a signal through each pair.
- **Length (m/ft)** indicates the cable length of each pair.

PoE

Note: Only available on 8870/8880 module up to revision B.

Detection/Classification

- **Power Presence** indicates on which cable pairs (refer to **Wiring Standard** on page 251) the power is received and the polarity of each pair. Result is presented as follows:

Power Presence	Description
Pos: <pair>; Neg: <pair>	PSE applies power on 2 pairs.
Pos: <pair>,<pair>; Neg: <pair>,<pair>	PSE applies power on all pairs.
No power detected	No power over Ethernet was detected.

- **PSE Type** indicates the detected PSE type.
- **Granted Power Class** indicates the power class provided by the PSE:

Granted power Class	Description
0	Class 0 (13.0W)
1	Class 1 (3.8W)
2	Class 2 (6.5W)
3	Class 3 (13.0W)
4	Class 4 (25.5W)
None	The PSE denied power.

The Pass/Fail verdict is also displayed when enabled.

Test Results

Summary - Cable Test

Operation

Note: *The following results are only reported when the classification succeeded.*

- **Unloaded Voltage (V)** indicates the measured voltage when no load is applied. A value less than 5 is reported as **<5.0** and a value greater than 59 is reported as **>59.0**.
- **Loaded Voltage (V)** indicates the measured voltage by applying a load corresponding to the configured power class. A value less than 5 is reported as **<5.0** and a value greater than 59 is reported as **>59.0**. The Pass/Fail verdict is also displayed when enabled.
- **Current (mA)** indicates the current which is calculated based on the measured **Loaded Voltage** and the applied load.
- **Power (W)** indicates the power in watt which is calculated based on the measured **Loaded Voltage** and **Current**.

Summary - CPRI/OBSAI BERT

From the test menu, tap **Results**, and the **Summary** tab.

- **Global/ <Port #>**, available with **Dual Port** topology, allows selecting to display a brief summary for both ports (**Global**) or for a specific port.
- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

Test Results

Summary - CPRI/OBSAI BERT

Interface

Note: *Only available with CPRI/OBSAI Unframed.*

➤ **Alarms**

LOS indicates that there is no input signal.

➤ **Errors**

CV (Code Violation) indicates that invalid 10B code word are received.

BER

Note: *See BER on page 914 for a description of each alarm/error. For Pass/Fail Verdict, refer to BERT and Unframed BERT - CPRI/OBSAI on page 240.*

- **Receiving Live Traffic - RX Pattern Analysis Disabled** when displayed, indicates that the **No Pattern Analysis (Live)** check box is selected and in this case no other information/statistics are available.

- **BER Threshold** is available when **Pass/Fail Verdict** is enabled.

- **Bit Error Rate/Count** graphically displays a meter representing either the bit error rate or the bit error count depending on the Pass/Fail Verdict selection.

When the verdict is enabled, the values under the threshold are presented in green while the values above are in red. The Pass/Fail verdict is displayed just on top of the meter when enabled. When the verdict is disabled, the bit/pattern error rate is displayed in blue.

The arrow pointer indicates the current received bit/pattern error rate/count.

- **Bit Error, Amount/Rate, and Inject:** The bit error injection and settings are coupled with the *Inject Button* on page 490.

Service Disruption

Note: *Service Disruption results are only available when **Disruption Monitoring** is enabled (refer to EtherBERT and Unframed BERT on page 272). When Service Disruption is disabled, the message **Service disruption monitoring disabled** is displayed.*

Service Disruption is the time during which there is a disruption of service due to the detection of defects.

➤ **Disruption Time**

Longest indicates the longest measured disruption time.

Shortest indicates the shortest measured disruption time.

Last indicates the length of the last measured disruption time.

Average indicates the average duration of all measured disruption times.

Total indicates the total duration of all measured disruption times.

- **Disruption Count:** Indicates the number of disruption events detected since the beginning of the SDT test.

Note: *When a disruption event is equal to or longer than the test period which is fixed to 5 minutes, then the measured disruption time is equal to the test period.*

- **SDT Threshold:** See *Service Disruption* on page 275.

Test Results

Summary - CPRI/OBSAI BERT

CPRI

Note: Available with CPRI Framed L2.

- **Sequence** indicates the last Sequence State parameter: **Standby (A)**, **L1 Sync (B)**, **Protocol (C)**, **L2 C&M (D)**, **Vendor (E)**, **Operation (F)**, and **Passive (G)**. The pass/fail verdict is also displayed when enabled.
- **Frame Sync** indicates that the startup sequence synchronization status as per L1 Sync Status parameter: active (green) or inactive (red).
- **Protocol** indicates either the last received (**Version 1** or **Version 2**) or negotiated (**Auto**) protocol version. A red background indicates a Protocol version mismatch.
- **C&M** indicates either the received (HDLC or Ethernet) or negotiated (Auto) C&M for Ethernet subchannel and HDLC rates in Mbit/s. A red background indicates either a C&M type mismatch or HDLC Rate/Ethernet subchannel mismatch. An arrow is displayed indicating which C&M Channel, Ethernet or HDLC, is selected following the negotiation process.
- **Code Word (CW)** for rates up to 9.8G indicates the transmitted and received Code Word count.
- **66B Block** for rate 10.1G indicates the transmitted and received 66B Block count.
- **Hyperframe** indicates the transmitted and received hyperframe count.
- **L1 Reset**, available when **Remote Radio Head** emulation mode is selected, indicates the number of times a request to reset the RRH interface was received.

OBSAI

Note: Available with OBSAI Framed L2.

- **Sync** indicates the RX State Machine status: green for FRAME_SYNC, red for other states, or gray for pending. The TX and RX State Machines are also displayed.

The pass/fail verdict is displayed when enabled.

- **Code Word** reports the count of code words transmitted and received.
- **Message Group** reports the count of message groups transmitted and received.
- **Frame** reports the count of frames transmitted and received.
- **RP3 Peer Target Address** indicates the RP3 Peer Target Address; indicates a mismatch when displayed in red.

Summary - DCO BERT

From the test menu, tap **Results**, and the **Summary** tab.

- **Client**, available with DCO BERT multiple link client (ex. 4 x 100GE), allows selecting the client to be displayed; only enabled clients are available.
- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

BER

Note: See BER on page 914 for a description of each alarm/error. For Pass/Fail Verdict, refer to BERT - Client - DCO BERT on page 247.

- **Receiving Live Traffic - RX Pattern Analysis Disabled** when displayed, indicates that the **No Pattern Analysis (Live)** check box is selected and in this case no other information/statistics are available.
- **BER Threshold** allows entering the maximum bit error count/rate allowed before declaring a fail verdict: **0** (default) to **999999** for count; **1.0E-14** to **1.9E-01** (default is **1.0E-12**) for rate. Only available when the **Pass/Fail Verdict** is enabled.

- **Bit Error Rate / Bit Error Count** graphically displays a meter representing either the bit error rate or the bit error count depending on the pass/fail verdict selection.

When the verdict is enabled, the values under the threshold are presented in green while the values above are in red.

When the verdict is disabled, the bit error is displayed in blue.

The arrow pointer indicates the current received bit error rate/count.

The Pass/Fail verdict icon is displayed just on top of the meter when enabled.

- **Bit Error, Amount/Rate, and Inject:** The bit error injection and settings are coupled with the *Inject Button* on page 490.

Test Results

Summary - eCPRI BERT

Summary - eCPRI BERT

From the test menu, tap **Results**, and the **Summary** tab.

Global/**<Port #>**, available with **Dual Port** topology, allows selecting to display a brief summary for both ports (**Global**) or for a specific port.

Test Status displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer.

LOPPS-L: For One-Way Latency mode, the test is interrupted due to a failure of synchronization with the 1PPS clock (LOPPS-L).

Not Ready-R: The test is interrupted because the Measurement Role of the peer is either Mismatch-R or Inactive-R. Check the eCPRI Flow at each end of the eCPRI circuit to determine the fault.

Start Time indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.

Test Recovery, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.

Logger Full, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

BER

Note: See BER on page 914 for a description of each alarm/error. For Pass/Fail Verdict, refer to BERT and Unframed BERT - eCPRI on page 244.

- **Receiving Live Traffic - RX Pattern Analysis Disabled** when displayed, indicates that the **No Pattern Analysis (Live)** check box is selected and in this case no other information/statistics are available.
- **BER Threshold** is available when **Pass/Fail Verdict** is enabled.
- **Bit Error Rate/Count** graphically displays a meter representing either the bit error rate or the bit error count depending on the Pass/Fail Verdict selection.

When the verdict is enabled, the values under the threshold are presented in green while the values above are in red.

When the verdict is disabled, the bit/pattern error rate is displayed in blue.

The arrow pointer indicates the current received bit/pattern error rate/count.

The Pass/Fail verdict is displayed just on top of the meter when enabled.

- **Bit Error, Amount/Rate, and Inject:** The bit error injection and settings are coupled with the *Inject Button* on page 490.

Service Disruption

Note: *Service disruption results are only available when **Disruption Monitoring** is enabled; when disabled the message **Service disruption monitoring disabled** is displayed. Refer to Service Disruption on page 245).*

Disruption Time is the time during which there is a disruption of service due to the absence of traffic. The service disruption event lasts until valid Ethernet frames are received for at least the **Debounce Time** without any service disruption event. The following measured disruption time values are reported: **Longest**, **Shortest**, **Last**, **Average**, and **Total**. **Total** indicates the total duration of all measured disruption times.

Disruption Count indicates the number of disruption events detected since the beginning of the SDT test.

When a disruption event is equal to or longer than the test period which is fixed to 5 minutes, then the measured disruption time is equal to the test period.

SDT Threshold allows configuring the acceptable maximum service disruption time before failing the test: **0.005** to **299999.999** ms (default is **50** ms). The threshold value cannot be less than the **No Traffic Time** value.

QoS Metrics

Note: *QoS Metrics results are only available when at least one **QoS Measurements** criterion is enabled (refer to QoS Measurements on page 269), otherwise the **QoS Metrics Monitoring Disabled** message is displayed.*

Displays a summary of the QoS metrics and verdict when enabled. When there is no mention of **Current** or **Maximum**, the values reported are the current ones.

The following detailed QoS Metrics are available by clicking on the QoS Metrics magnifying icon:

- Port direction buttons are available for dual port topology in **One-Way P<m> ↔ P<n>** measurement mode.
- Local/Remote direction buttons are available for single/dual port topology in **One-Way** measurement mode.

Note: *Throughput (including RX Frame Count, TX Rate, and TX Frame Count), Jitter, Latency, and Frame Loos/Out-of-Sequence are available when enabled (see QoS Thresholds) but their availability depend on the selected measurement mode, measurement role, and direction.*

- **Throughput, Jitter, and Latency** meters display respectively the measured Throughput, Jitter, and Latency.

Note: *The green region defined by the configured threshold corresponds to a **PASS** verdict while the red regions corresponds to a **FAIL** verdict. The Pass/Fail verdict is only displayed when enabled (see QoS Thresholds on page 271).*

- **Jitter** is the delay variation measured¹ on all valid frames² received. **Current, Average, Minimum, Maximum, and Estimate** delay values are reported in μs per direction when applicable.
- **Latency** is measured¹ on all valid frames² received. **Current, Average, Minimum, and Maximum** latency (delay) are reported.

For **One-Way** and **One-Way P<m> ↔ P<n>** measurement modes, indicates the measured one-way latency (delay) in μs per direction when applicable (available on the sender side).

For Round-Trip measurement mode, indicates the measured round-trip latency (delay) in μs (available on the sender side).

1. For the **Current** value, **Not measurable** is displayed when no delay has been measured in the last second.

2. Frames with One-Way Delay (OWD) messages and no FCS and UDP Checksum errors.

Test Results

Summary - eCPRI BERT

- **Throughput** is the RX rate value measured on all valid frames (no FCS and UDP Checksum errors). **Current, Average, Minimum,** and **Maximum** throughput results are reported. A **Current** value of **0** indicates that no throughput has been measured in the last second.
- **RX Frame Count** indicates the number of frame received matching the stream.
- **TX Rate** indicates the transmitted throughput rate.
- **TX Frame Count** indicates the number of transmitted frames matching the stream.
- **Thresholds** allows configuring the QoS thresholds:
 - **Latency** check box when selected (default) enables the latency pass/fail verdict and allows setting the maximum threshold delay per direction when applicable.
 - **Jitter** check box when selected (default) enables the jitter pass/fail verdict and allows setting the maximum threshold value per direction when applicable.
 - **Frame Loss** Rate check box when selected (default) enables the Frame Loss pass/fail verdict and allows setting the frame loss rate for the port: 0.0E-00 to 5.0E-02 (default is 1.0E-07). However entering a value of 0.0E-00 or below 1.0E-14 is treated as a pass/fail verdict based on loss count instead of rate.
 - **Throughput** check box when selected (default) enables the throughput pass/fail verdict and allows setting the minimum and maximum threshold values for the port.
- **Frame Loss:** See *QoS Metrics* on page 926. When testing with protection switching, it is recommended to use **Generic Data Transfer** as the **Message Type** (refer to *eCPRI* on page 354).
- **Out-of-Sequence:** See *QoS Metrics* on page 926.

Summary - EtherBERT

From the test menu, tap **Results**, and the **Summary** tab.

- **Global/ <Port #>**, available with **Dual Port** topology, allows selecting to display a brief summary for both ports (**Global**) or for a specific port.
- **Link**, available with EtherBERT multiple link interface (ex: 2 x 100GE), allows selecting the link to be displayed; only enabled links are available.
- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

Test Results

Summary - EtherBERT

BER

Note: See BER on page 914 for a description of each alarm/error. For Pass/Fail Verdict, refer to EtherBERT and Unframed BERT on page 272.

- **Receiving Live Traffic - RX Pattern Analysis Disabled** when displayed, indicates that the **No Pattern Analysis (Live)** check box is selected and in this case no other information/statistics are available.
- **BER Threshold** allows entering maximum bit/pattern error count allowed before declaring a fail verdict: **0** (default) to **999999** for count; **1.0E-14** to **1.9E-01** for rate (the default value is **1.0E-12**; **2.4E-4** for unframed 200/400/800G). Only available when the **Pass/Fail Verdict** is enabled.
- **Bit Error Rate / Pattern Error Rate / Bit Error Count / Pattern Error Count** graphically displays a meter representing either the bit/pattern error rate or the bit/pattern error count depending on the pass/fail verdict selection.

When the verdict is enabled, the values under the threshold are presented in green while the values above are in red.

When the verdict is disabled, the bit/pattern error rate is displayed in blue.

The arrow pointer indicates the current received bit/pattern error rate/count.

The Pass/Fail verdict icon is displayed just on top of the meter when enabled.

- **Bit Error / Pattern Error, Amount/Rate, and Inject:** The bit error injection and settings are coupled with the *Inject Button* on page 490.

Service Disruption

Note: *Service disruption results are only available when **Disruption Monitoring** is enabled; when disabled the message **Service disruption monitoring disabled** is displayed. Refer to Service Disruption on page 275.*

- **Disruption Time** is the time during which there is a disruption of service due to the absence of traffic. The service disruption event lasts until valid Ethernet frames are received for at least the **Debounce Time** without any service disruption event. The following measured disruption time values are reported: **Longest Shortest, Last, Average,** and **Total**. **Total** indicates the total duration of all measured disruption times.

Note: *When a disruption event is equal to or longer than the test period which is fixed to 5 minutes, then the measured disruption time is equal to the test period.*

- **Disruption Count** indicates the number of disruption events detected since the beginning of the SDT test.
- **SDT Threshold** allows configuring the acceptable maximum service disruption time before failing the test: **0.005** to **299999.999** ms (default is **50** ms). The threshold value cannot be less than the **No Traffic Time** value.

Latency

Note: *Latency results are only available when **Latency** is enabled (refer to Latency on page 277) with Framed Layer 2 and higher. When **Latency** is disabled, the message **Latency Measurement Disabled** is displayed. For Dual port topology, available for rates up to 10G, the measured latency and threshold configuration are available per port/direction. Not available with multiple link interface.*

- **Round-Trip** latency (delay) is measured on all valid frames received and the **Current**, **Average**, **Minimum**, and **Maximum** values are reported.

Round-Trip Threshold (ms) is configurable from **5 μ s** for 10Mbit/s, **1 μ s** for 100Mbit/s and 10G WAN, or **100 ns** for all other rates up to **2 s** (default is **75 ms**).

- **One-Way P<m> $\leftrightarrow$ P<n>** latency (delay) is measured on all valid frames received and the **Current**, **Average**, **Minimum**, and **Maximum** values are reported per port/direction:

P<m> -> P<n>: Latency measurement at P<m> RX port.

P<n> -> P<m>: Latency measurement at P<n> RX port.

One-Way P<m> -> P<n> Threshold is configurable at the current P<m> RX port: from **5 μ s** for 10Mbit/s, **1 μ s** for 100Mbit/s and 10G WAN, or **100 ns** for all other rates up to **2 s** (default is **75 ms**).

- **Unit** allows selecting the Latency unit: **ms** (default) or **μ s**.

Summary - EtherSAM

From the **Test** menu, tap **Results**, and the **Summary** tab.

Note: For *Dual Test Set*, only *Start Time* is displayed on the remote module.

- **Service Configuration/Performance Test** indicates the actual test status as follows:

Test Status	Description
--	Test has not started.
Disabled	Test/subtests is/are disabled.
Running	Test/subtest is currently running.
Data Transfer	Test/subtest is running but no test traffic is being transmitted.
Completed, <Verdict>	Test/subtest has completed with the test pass/fail verdict. A fail verdict is declared when a Link Down or LOS is detected, or when any SLA parameter fails.
Aborted, <reason>	Test/subtest has been aborted either manually (Stop) or automatically from an alarm and the reason why the test has been aborted is also displayed as follows: Link down alarm, LOS alarm, Timeout during execution, DTS connection failed, Loss of remote connection (DTS), LOPPS-L Alarm^a, LOPPS-R Alarm^a, LOPPS-L / LOPPS-R Alarm^a, Unresolved addresses, No test enabled, No L2CP Frame Enabled, Invalid Burst Configuration, CIR disabled for all services, Excessive Refill Time^b, Stopped, NAT detection failed

- a. Available for **Dual Test Set** in **One-Way Latency** measurement mode.
- b. An excessive refill occurs when the pre-burst and/or post-burst duration last for more than 2 seconds.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted.
- **Remote unit in Dual Test Set Mode** indicates that this unit is set as remote but the DTS Connection is not established.

Test Results

Summary - EtherSAM

- **Remote unit in use and locked for Dual Test Set** indicates that this unit is used for **Dual Test Set** as the remote unit.
- **Service Configuration/Performance Test**: Tap **Service Configuration Test** or **Service Performance Test** button to view the result summary of the corresponding test.
 - **Service** indicates the service's number and name. For **Service Configuration Test**, the number/name is highlighted in red per service when VLAN mismatch occurred; in **Dual Test Set** or **Dual Port** topology, the direction is also highlighted; in Dual Test Set, the **R -> L** direction label is gray when **VLAN Preservation** is not supported by the remote module.
 - **Direction**, available with **Dual Test Set** or **Dual Port** topology, indicates respectively results for both local (**L**) and remote (**R**) directions, or both port directions.
 - **L2CP**, available when both **L2CP Handling Test** and pass/fail verdict are enabled, indicates the L2CP handling test pass/fail verdict.
 - **Service Performance Test** column displays the pass/fail verdict icon indicating if the service complies to the configured SLA parameters.
 - **Service Configuration Test** column displays the pass/fail verdict icon indicating if the service complies to the configured SLA parameters.

Committed

- **Frame Loss Rate** indicates the rate of frames that are lost. The reported value is the maximum rate of Frame Loss from all burst sequences and ramp steps excluding the **CIR+EIR**, **EBS**, and **Traffic Policing** steps. Frame Loss is displayed as a percentage value when the remote module does not support exponential notation.
- **Max. Jitter** indicates the maximum measured delay variation.
- **Max Latency** indicates the maximum measured round-trip latency (delay). For Dual Test Set the local to remote and remote to local values are reported for One-Way Latency Measurement Mode while a single round-trip value is reported for Round-Trip Latency Measurement Mode (see *Global Options* on page 287).
- **Avg RX Rate**, for **Service Performance Test**, indicates the measured average utilization throughput.

Excess

- Max RX Rate**, for **Service Configuration Test**, indicates the measured maximum utilization throughput.
- **VLAN Preservation** indicates if any VLAN mismatch (including VLAN level, VLAN ID, Priority, and Drop Eligible) occurred during any step of a Ramp or Burst tests as follows:
 - Gray: Undefined
 - Green: No Mismatch detected
 - Red: Mismatch detected

Summary - FC BERT

From the test menu, tap **Results**, and the **Summary** tab.

- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled. The pass/fail verdict is only displayed once the test is stopped. The verdict is Pass when all verdicts are Pass, the verdict is Fail as soon as one of the verdict is Fail. Refer to *Bit Error* on page 241 and *Latency Tags Insertion* on page 299 for more information.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

BER

Note: See BER on page 914 for a description of each alarm/error.

- **BER Threshold** is available when **Pass/Fail Verdict** is enabled (refer to page 241).
- **Bit Error Rate/Count** graphically displays a meter representing either the bit error rate or the bit error count depending on the Pass/Fail Verdict selection (refer to page 241).

When the verdict is enabled, the values under the threshold are presented in green while the values above are in red.

When the verdict is disabled, the bit error rate is displayed in blue.

The arrow pointer indicates the current received bit error rate/count.

The Pass/Fail verdict is displayed just on top of the meter when enabled.

- **Bit Error and Rate/Amount**
 - **Manual** allows entering the amount of manual error to be generated: **1** (default) through **50**.
 - **Rate** allows the selection of the injection rate for the selected error.
 - **Max Rate** generates the selected error to its theoretical maximum rate.
- **Inject** generates, if the test is running, the amount of bit error configured.

Service Disruption

Note: Only available on the FTBx-88260 module. Service disruption results are only available when **Disruption Monitoring** is enabled; when disabled the message **Service disruption monitoring disabled** is displayed. Refer to Service Disruption on page 298).

- **Disruption Time** is the time during which there is a disruption of service due to the absence of traffic. The service disruption event lasts until valid FC frames are received for at least the **Debounce Time** without any service disruption event. The following measured disruption time values are reported: **Longest Shortest, Last, Average,** and **Total**. **Total** indicates the total duration of all measured disruption times.
- **Disruption Count** indicates the number of disruption events detected since the beginning of the SDT test.

Note: When a disruption event is equal to or longer than the test period which is fixed to 5 minutes, then the measured disruption time is equal to the test period.

- **SDT Threshold** allows configuring the acceptable maximum service disruption time before failing the test: **0.005** to **299999.999** ms (default is **50** ms). The threshold value cannot be less than the **No Traffic Time** value.

Round-Trip Latency

- **Round Trip Latency (ms)** is measured for each local and remote port.
Current, **Average**, **Minimum**, and **Maximum** indicates respectively the current, average, minimum, and the maximum round trip latency from the local to the remote port in the last one second. The pass/fail verdict is also displayed for the maximum round trip latency.
Samples indicates the number of samples used for the round trip latency.
- **Estimated BB_Credit** indicates the estimated number of packets that can be transmitted on the optical line at the same time.
- **Round-Trip Latency Threshold (ms)** allows the selection of the round trip latency threshold: **0.015** (default) to **8000 ms**. This setting is only available when both **Latency Tags** and **Pass/Fail Verdict** check boxes are selected (refer to *Latency Tags Insertion* on page 299).

Traffic

- **Line Utilization (%)** indicates the current percentage of the transmitting/receiving line rate utilization.
- **Frame Rate (frame/s)** indicates the current transmitted/received number of frames (including frame with error and aborted frames) in frame per second.
- **Byte Count** indicates the total number of transmitted/received bytes including the frame delimiters.
- **Frame Count** indicates the total number of transmitted/received frames including link service control frames.

Summary - FlexE BERT

From the test menu, tap **Results**, and the **Summary** tab.

- **Test Status** displays the current status of the test.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

FlexE Group

Indicates respectively for each PHY/Instance, its number, port number, link status and skew (available with multiple PHY; refer to page 705). For FlexE group global alarms, refer to FlexE Group on page 919.

FlexE Clients

Note: *The first row of the table reports statistics for the Pattern FlexE Clients while the subsequent rows report statistics for the other FlexE Clients.*

- The Pass/Fail verdict is displayed when enabled. For Pattern FlexE Client, a fail verdict is declared if any Bit Error, Pattern Loss, Ethernet alarm, or FCS error occurs. For FlexE Clients, a fail verdict is declared if any Ethernet alarm or FCS error occurs.
- **Client ID** indicates the client identification number and allows displaying the client's summary page for the Pattern FlexE Client (see *Summary - Client Summary - FlexE BERT* on page 595).
- **Size (Gbit/s)** indicates the size of the client.
- **Λιγκ Αλαρχμ** indicates respectively, from left to right, the history and current client link status (Link Down).
- **TX Rate** indicates the transmission rate.
- **RX Rate** indicates the received rate.
- **RX Frame Count** indicates the total number of received valid and invalid frames.
- **Bit Error Rate** indicates the bit error rate. Only available for the Pattern FlexE Client.
- **Bit Error Count** indicates the bit error count. Only available for the Pattern FlexE Client.

Test Results

Summary - FlexE BERT

Path OAM Client

- The Pass/Fail verdict is displayed when enabled. A fail verdict is declared when any of the following alarms/errors occurs excluding CRC4: FlexE Client Link Down error, Basic OAM alarms/errors, CV alarms, or CS Type alarms.
- **Client ID** indicates the client identification number and allows displaying the Path OAM for the client (see *Summary - Path OAM - FlexE BERT* on page 596).
- **CC Status** indicates the Basic OAM CC Status: Green - no alarm; Red - alarm active; Gray - pending state.
- **CV Status** indicates the Connectivity Verification Status: Green - no alarm; Red - alarm active; Gray - pending state.
- **CS Type Status** indicates the CS Type Status: Green - no alarm; Red - alarm active; Gray - pending state.
- **Max Delay** indicates the Delay Measurement maximum value.

Summary - Client Summary - FlexE BERT

Note: Available from Summary - FlexE BERT on page 592 - FlexE Clients. For **Test Status**, **Start Time**, **Test Recovery**, and **Logger Full** see Summary - FlexE BERT on page 592.

BER

Note: See BER on page 914 for a description of each alarm/error.

- **Receiving Live Traffic - RX Pattern Analysis Disabled** when displayed, indicates that the **No Pattern Analysis (Live)** check box is selected and in this case no other information/statistics are available.
- **BER Threshold** allows entering the maximum bit error count/rate allowed before declaring a fail verdict: **0** (default) to **999999** for count; **1.0E-14** to **1.9E-01** (default is **1.0E-12**) for rate.
- **Bit Error Rate / Bit Error Count** graphically displays a meter representing either the bit error rate or the bit error count depending on the pass/fail verdict selection.

When the verdict is enabled, the values under the threshold are presented in green while the values above are in red.

When the verdict is disabled, the bit error is displayed in blue.

The arrow pointer indicates the current received bit error rate/count.

The Pass/Fail verdict icon is displayed just on top of the meter when enabled.

- **Bit Error, Amount/Rate, and Inject:** The bit error injection and settings are coupled with the *Inject Button* on page 490.

Test Results

Summary - Path OAM - FlexE BERT

Summary - Path OAM - FlexE BERT

Note: *Available from Summary - FlexE BERT on page 592 - Path OAM Client. For **Test Status**, **Start Time**, **Test Recovery**, and **Logger Full** see Summary - FlexE BERT on page 592.*

Basic OAM

Note: *Only Basic OAM messages with valid CRC4 are monitored. For alarms/errors refer to Path OAM on page 925.*

- **CC Status**
 - --: No results; function disabled or did not run yet.
 - **Loss of Continuity:** Loss of Continuity alarm is active.
 - **Unexpected Period:** Unexpected Period alarm is active.
 - **Receiving BAS Messages:** Basic OAM messages are being received without alarms.
- **TX BAS** indicates the count of transmitted Basic OAM messages.
- **RX BAS** indicates the count of received Basic OAM messages.

CS Type

Note: Only CS Type messages with valid CRC4 are monitored.

- **Status**
 - --: CS Type Function is disabled or CS Type messages have either never been received or more than 1.5 minutes have elapsed since the last CS Type message received.
 - **CS Type Mismatch** indicates mismatch between the expected and received CS Type.
 - **Normal:** CS Type messages are being received without alarms.
- **TX CSM** indicates the count of transmitted client signal messages.
- **RX CSM** indicates the count of received client signal messages.
- **CS Type** displays the received CS Type message and allows selecting the expected CS Type message: **Channel Not Loaded**, **Ethernet** (default), **SDH**, **FC**, or **CPRI**. The received message is highlighted in red when there is a mismatch.

Test Results

Summary - Path OAM - FlexE BERT

Delay Measurement

Note: Available when the **2DM Function** check box is selected. Only frames with valid CRC4 and containing the ascending sequence 0 to 5 are monitored.

➤ Status

➤ --: No results; function is either disabled or did not run yet, or an alarm is preventing 2DMM messages to be transmitted.

➤ **In Progress:** Delay test is in progress; 2DMM frames are being transmitted and 2DMR frames are being monitored.

➤ **Completed:** Delay test is completed:

A Delay test with continuous transmission is manually stopped.

Delay test with continuous transmission is automatically stopped by a test timer.

All messages of a delay test with non-continuous transmission have been transmitted.

➤ **Aborted:** Delay test is aborted; this applies for non-continuous transmission when the test is stopped before all the frames are transmitted.

➤ **TX 2DMM** indicates the count of 2DMM messages transmitted.

➤ **RX 2DMR** indicates the count of 2DMR messages received.

➤ **Delay** indicates the delay measurement value in ms; **Last**, **Minimum**, **Maximum**, and **Average** values are reported.

The meter displays the currently measured delay in ms.

Connectivity Verification

Note: Only CV multi-block messages with valid CRC4 and containing the ascending sequence 0 to 7 are monitored.

➤ Status

- --: CV Function is disabled or CV messages have either never been received or more than 1.5 minutes have elapsed since the last CV message received.
- **SAPI Mismatch:** SAPI Mismatch alarm is active.
- **DAPI Mismatch:** DAPI Mismatch alarm is active.
- **SAPI/DAPI Mismatch:** SAPI Mismatch and DAPI Mismatch alarms are active.
- **Normal:** CV messages are being received without alarms.
- **TX CVM** indicates the count of transmitted CV Messages.
- **RX CVM** indicates the count of received CV Messages.
- **SAPI** displays the received SAPI message and allows configuring the expected message when the **Expected** check box is selected from setup: **EXFO SAPI** by default. A maximum of 16 characters is allowed. The default message contains a NULL (all 0's) character preceding it and NULL (all 0's) characters are automatically appended to the message for bytes that are not defined.
- **DAPI** displays the received DAPI message and allows configuring the expected message when the **Expected** check box is selected from setup: **EXFO DAPI** by default. A maximum of 16 characters is allowed. The default message contains a NULL (all 0's) character preceding it and NULL (all 0's) characters are automatically appended to the message for bytes that are not defined.

Test Results

Summary - FlexO BERT

Summary - FlexO BERT

From the test menu, tap **Results**, and the **Summary** tab.

- **Client ID** allows selecting the client identification number.
- **Type** indicates the ODUk container (client).
- **Test Status** displays the current status of the test.
 - **--**: Idle state, the test is not running or results are not available.
 - **In Progress**: The test is running.
 - **Completed**: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.
- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

FlexO Group

Displays for each instance, its number, port number, skew (available with multiple instances on multiple ports), FlexO alarms (see *FlexO Group* on page 919), and OTUCn alarms (see *OTUCn* on page 924).

BER

Note: See BER on page 914 for a description of each alarm/error.

- **Receiving Live Traffic - RX Pattern Analysis Disabled** when displayed, indicates that the **No Pattern Analysis (Live)** check box is selected and in this case no other information/statistics are available.
- **BER Threshold:** Refer to **Pass/Fail Verdict - BER Threshold** from setup.
- **Bit Error Rate / Bit Error Count** graphically displays a meter representing either the bit error rate or the bit error count depending on the pass/fail verdict selection.

When the verdict is enabled, the values under the threshold are presented in green while the values above are in red.

When the verdict is disabled, the bit error is displayed in blue.

The arrow pointer indicates the current received bit error rate/count.

The Pass/Fail verdict icon is displayed just on top of the meter when enabled.

- **Bit Error, Amount/Rate, and Inject:** The bit error injection and settings are coupled with the *Inject Button* on page 490.

Summary - iOptics

From the test menu, tap **Results**, and the **Summary** tab.

Start Time indicates the date and time the test was started. The date and time reset every time the test is restarted.

Calibrating: When necessary for power consumption monitoring, the **Calibrating** progress message is displayed. If at any point during this process or during a sub-test execution an unexpected condition is detected, an abort message is displayed as follows:

Test Status	Description
Aborted, <reason>	Sub-test sequence has been aborted and a reason is displayed: Missing Transceiver System, Invalid Transceiver System, Missing Device Under Test, Invalid Device Under Test, Link Down, Laser Off, LOS, Device under Test Ovrld (overload), Device Pulled, Failed, or User Stopped.

Sub-Test Sequence

The progress status and pass/fail verdict are displayed for each sub-test sequence as follows:

Test Status	Description
--	Sub-test is not running or results are not available.
Running <details>	Sub-test is running and progress details are displayed.
Completed, Pass/Fail	Sub-test is completed with Pass or Fail verdict.
Aborted, Fail	Sub-test sequence has been aborted with a fail verdict.

Note: Results of any test/sub-test, like a fail verdict, may affect the applicability of further test/sub-test in the sequence.

➤ I/O Interface Quick Check

- Validates the operation of the MDIO/I2C interface by sending specific commands to the transceiver.
- Validates the information provided by a status pin and stimulates a control pin of the transceiver when the **Control Pin Check** check box is selected.

- **Laser Tuning Test** reports the minimum and maximum tuned frequencies in THz (**Laser Tuning**) as well as the lowest and highest fine tuned offsets (**Fine Tuning**). The laser tuning verdict is reported as pass when the laser tuning completed successfully (Tuning process completed, wavelength is locked, and the current laser frequency equals the tuned frequency); the verdict is reported as fail when the tuning process timed out (after 90 s) or when the current laser frequency and the tuned frequency are not matching. Available when the **Laser Tuning Test** check box is selected.

- **Optical TX Power Test (dBm)** reports the minimum and maximum optical TX power values; in-range values are displayed in green while out-of-range are in red. For multiple lane interfaces, click on **Min.../Max...** to display values for each lane. When supported by the DCO transceiver, the test also validates the minimum and maximum programmable TX Power advertised by the transceiver but without exceeding the TX Power Range; The power tuning and accuracy verdicts are reported. Not available with an **AOC** and **Host/Media Loopback** mode.

- **Optical RX Power Test (dBm)** reports the minimum and maximum optical RX power values; in-range values are displayed in green while out-of-range are in red. For multiple lane interfaces, click on **Min.../Max...** to display values for each lane. When supported by the DCO transceiver, the test also validates the RX Power range using TX Power configuration; The power range check verdict is reported. Not available with **Host/Media Loopback** mode.

Test Results

Summary - iOptics

- **Bit Error Test** reports the bit error count and pattern loss status; a count value smaller or equal to the BER threshold is displayed in green while a bigger value is in red; a pattern loss (**P. Loss**) is reported in red. The test steps **Nominal**, **Min Power**, **Minimum Bit Rate**, **Maximum Bit Rate**, **Minimum Wavelength**, and **Maximum Wavelength** verdicts are also reported; only **Nominal** verdict is reported when the **Edge Testing** check box is cleared; **Min Power** verdict is reported when the **TX - Power Tuning** test succeeded (when applicable). **Minimum Wavelength**, and **Maximum Wavelength** verdicts are reported when the Laser Tuning check box is selected and the Laser Tuning Test succeeded.
- **Excessive Skew Test** reports the highest skew value monitored during the sub-test; a value smaller than the threshold is displayed in green while a value crossing the threshold is in red. Only available for parallel interfaces with the exception of transceivers using RS-FEC (100GBASE-SR4, 100GBASE-SR4 AOC, 100GE-CWDM4, 100GE-CLR4). Not available with DCO interfaces.

Monitoring

- **Power Consumption** graphically displays a meter representing the transceiver power consumption in Watt. Not available on 8870 and 8880 modules.

The **Current (A)** and **Power (W)** values (**Actual** and **Maximum**) for 3.3V source are displayed.
- **Temperature** graphically displays a meter representing the transceiver temperature in °C.

The current (**Actual**) and maximum temperature values are also displayed.

Note: *The green region is delimited from 0 to the Threshold corresponding to a **PASS** verdict. The red region beyond the threshold corresponds to a **FAIL** verdict.*

Summary - iSAM

From the test menu, tap **Results**, and the **Summary** tab.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted.

Service Configuration Test and Service Performance Test

- **RFC 6349 Results** button allows displaying summary results for **RFC 6349 Test** when results don't fit on one page.
- The actual test status is displayed as follows:

Test Status	Description
"--"	Test has not started.
Disabled	Test/subtests is/are disabled.
Running	Test/subtest is currently running.
Data Transfer	Test/subtest is running but no test traffic is being transmitted.
Completed, <Verdict>	Test/subtest has completed with the test pass/fail verdict. A fail verdict is declared when a Link Down or LOS is detected, or when any SLA parameter fails.
Aborted, <reason>	Test/subtest has been aborted either manually (Stop) or automatically from an alarm and the reason why the test has been aborted is also displayed as follows: Link down alarm, LOS alarm, Timeout during execution, DTS connection failed, Loss of remote connection (DTS), Unresolved addresses, Stopped, NAT detection failed

Test Results

Summary - iSAM

For **Dual Test Set** the following values are reported for both local to remote (**L->R**) and remote to local (**R->L**).

- **Service** indicates the service's number and name.
The pass/fail verdict icon is displayed next to the service name indicating if the service complies to the configured SLA parameters.
- **TX CIR** (Mbit/s) indicates the transmitted Committed Information Rate.
- **FD (ms) (RTT¹) (Latency)** indicates the maximum measured round-trip latency (Frame Delay). The pass/fail verdict is also displayed.
- **IFDV (ms) (Jitter)** indicates the maximum measured Inter Frame Delay Variation. The pass/fail verdict is also displayed.
- **FLR (%) (Frame Loss)** indicates the maximum percentage of frames that are lost (Frame Loss Ratio) from the CIR step. The pass/fail verdict is also displayed.
- **RX Rate (Mbit/s)** indicates either the measured maximum utilization throughput for **Service Configuration Test** or the measured average utilization throughput for **Service Performance Test**. The pass/fail verdict is also displayed.
- **Total RX Rate**, available for **Service Performance Test**, indicates the average utilization throughput for all services (both directions are displayed for **Dual Test Set**).

1. RTT is only displayed for Dual Test Set.

RFC 6349 Test

- **Configuration/Performance Results** button allows displaying summary results for **Service Configuration Test** and **Service Performance Test** when results don't fit on one page.
- **Test Status** indicates the actual test status as follows:

Test Status	Description
"--"	Test has not started.
In Progress	The test is running.
Completed, <Verdict>	Test has completed and the test pass/fail verdict is displayed when enabled. A fail verdict is declared if any of the following conditions occurs: Link Down, LOS, TCP Throughput verdict failed, or an abort condition (Timeout, DTS connection lost, unresolved address, user stopped, configuration synchronization error, invalid MTU).
Aborted, <reason>	Test has been aborted either manually (Stop) or automatically from an alarm and the reason is displayed as follows: Link down alarm, LOS alarm, Timeout during execution, DTS connection failed, Invalid Configuration, Unresolved addresses, Invalid MTU, User Stopped, TCP Timeout, TCP Connection failed, NAT detection failed

- **MTU (bytes)** is the validated Maximum Transfer Unit.
- **Minimum RTT (ms)** is the minimum time between the first bit of a segment sent and the last bit of the corresponding acknowledge.
- **TCP Throughput**
 - **Service** indicates the service's number and name. The pass/fail verdict icon is displayed next to the service name. A fail verdict is declared if any of the following conditions occurs: Link Down, LOS, TCP Throughput verdict failed, or an abort condition (Timeout, DTS connection lost, unresolved address, user stopped, configuration synchronization error, invalid MTU).
 - **L->R** and **R->L** indicates respectively the direction from local to remote and remote to local.

Test Results

Summary - iSAM

- **Window** indicates the total Max Window (1 KiB = 1024 bytes) followed by the number of connections and KiB per connection in parenthesis as follows: (n conn.@ n KiB).
- **Ideal L4** indicates the ideal TCP throughput metric.
- **Actual L4** indicates the average of actual TCP Throughput metric. The pass/fail verdict icon is displayed next to the this metric. A value greater or equal to the defined threshold gives a pass verdict.
- **TCP Efficiency (%)** indicates the TCP Efficiency metric based on transmitted and retransmitted bytes.
- **Buffer Delay (%)** indicates the Buffer Delay percentage metric which represents the increase in RTT during a TCP Throughput test versus the **Minimum RTT**.

Summary - Link OAM

From the **Test** menu, tap **Results**, and the **Summary** tab.

- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

Alarms

- **Link OAM** indicates that no OAM Information PDUs were received for 5 seconds.
- **Critical Event:** Indicates that the OAM link partner has sent a critical event notification (bit 2 of the Flags field is set to 1).

Test Results

Summary - Link OAM

- **Dying Gasp:** Indicates that the OAM link partner has sent an unrecoverable local failure notification (bit 1 of the Flags field is set to 1).
- **Link Fault:** Indicates that the OAM link partner has sent a link fault notification (bit 0 of the Flags field is set to 1).

Loopback

- **Local** indicates the **Status** of the local loopback (**Enabled** or **Disabled**) and allows enabling or disabling it.
- **Remote**¹ indicates the **Status** of the remote loopback (**Enabled** or **Disabled**), the number of **Successful** remote loopback requests, the number of **Fail** remote loopback requests, and allows enabling or disabling it.

OAMPDU Frame Count

- Indicates the number of transmitted and received OAMPDU frames of the following types:
 - **Information**
 - **Loopback Control**
 - **Event Notification** (received only)
- **Total** indicates the total number of transmitted and received OAMPDU frames.

1. Statistics are influenced by both the protocol (Parser Action is set to "01") and physical loopback. The Fail and Successful counters will be affected by successive enable/disable loopback requests when sending a loopback request to a remote module running Link OAM test since it does not provide physical loopback.

Summary - Multi-Channel OTN

From the test menu, tap **Results**, and the **Summary** tab.

- Τεστ Σταтус displays the current status of the test.
 - --: Idle state, the test is not running or results are not available.
 - **In Progress**: The test is running.
 - **Completed**: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.
- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

Alarms/Errors, Traces, and Payload Type

The results displayed are for the first channel by default. Tap on one of the button described on the next page to select the results to be displayed. The selected button has an amber background.

When a channel button is selected:

- The channel number is displayed indicating the selected channel.
- A channel selector becomes available when zooming a result block allowing to select a specific channel.

Test Results

Summary - Multi-Channel OTN

Interface / OTL / OTU4, ODU4, and Channel Buttons

Note: Refer to Alarms/Errors on page 489 for more information on alarms/errors and alarms/errors injection.

- **Interface / OTL / OTU4** displays alarms/errors for **Interface** (see page 921), **Clock** (see page 914), **OTL** (see page 924), and **OTU4** (see page 925) as well as the received **SM TTI Traces** (see page 647).
- **ODU4** displays alarms/error at **ODU4** (see page 923) and **OPU4** (see page 924) levels as well as the received **PM TTI Traces** (see page 647) and received **Payload Type** (see page 499).
- **1, 2, up to 80**, depending on the OTN multiplexing, displays alarms/error for a specific channel including: **ODUx** (see page 923), **OPUx** (see page 924), **ODTU4.1 - GMP** (see page 920), **BERT** (see page 554), **SDT** (see page 555), received **PM TTI Traces** (see page 647), and received **Payload Type** (see page 499).

Buttons use different background colors representing current and history alarms/errors. An orange background indicates the selected button.

Background color	Alarm/ Error ^a	Description
Gray	Current	No test result available.
	History	
Green	Current	No alarm/error has occurred in the last second.
	History	No alarm/error has occurred during the test.
Red	Current	An alarm/error occurred in the last second.
	History	
Amber	History	At least one alarm/error has occurred during the test.

- a. History background color is presented on the left side of the button while Current background color is covering the rest of the button.

Summary - NI/CSU Emulation

From the **Test** menu, tap **Results**, and the **Summary** tab.

- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled. The Pass/Fail verdict is based on the following criteria: The worst pair's **Wire Map**, **Prop. Delay**, **Delay Skew**, and **Length**.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.

Auto-Response/Manual Loopback Status

Indicates the status of the loopback:

- **Loopback Active**
- **No Loopback.**

Interface

See *Interface* on page 921 for more information on Interface alarms/errors.

DS1

See *DS1* on page 915 for more information on DS1 alarms/errors.

Summary - RFC 2544

From the **Test** menu, tap **Results**, and the **Summary** tab.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset. For **Dual Test Set**, this is the only information available on the remote unit.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.
- **Remote unit in Dual Test Set Mode** indicates that this unit is set as remote but the DTS Connection is not established.
- **Remote unit in use and locked for Dual Test Set** indicates that this unit is used for **Dual Test Set** as the remote unit.

Throughput, Back-to-Back, Frame Loss, and Latency Subtests

➤ Throughput, Back-to-Back, Frame Loss, and Latency

For each subtest, its status (-- (Idle), **In Progress**, **Completed**, or **Aborted** - (reason)) and duration are displayed.

- **TX Frames**¹ and **RX Frames**¹ display the transmitted and received frame counts of the subtest in progress. For **Dual Test Set**, frame counts are available for both local (**L**) and remote (**R**) directions. For Dual Port topology, frame counts are available for both port directions.
- **Trial #**¹ displays the current trial iteration of the subtest in progress when applicable.
- **Val. #**¹ displays the current validation iteration of the subtest in progress when applicable.
- **Step**¹ displays the current step of the subtest in progress when applicable.
- **Displayed Results:** Select the displayed result mode: **Current**, **Minimum** (default), **Maximum**, or **Average**.
- **Throughput/Back-to-Back/Frame Loss/Latency** table.

Each frame size used for the test is displayed with its subtest statistics. Statistics values are displayed based on the **Displayed Results** setting.

“--” indicates that the result is not available because the test has not run yet. While testing, one of the following messages is displayed for each frame size: **Initializing**, **Learning**, **Testing**, **Waiting**, **Not measurable**, **Aborted**, **Link is Down**, or **MAC not resolved**.

Dir. (Direction), available with **Dual Test Set** or **Dual Port** topology, indicates respectively results for both local (**L**) and remote (**R**) directions, or for both port directions.

1. Only displayed once the test is started.

Test Results

Summary - RFC 2544

- **Unit:** Select the subtest result unit:
For Throughput: **Mbit/s**, **Gbit/s**, **frame/s**, and %.
For Back-to-Back: **Mbit/s**, **Gbit/s**, **frame/burst**, and %.
Frame Loss: %.
Latency: **ms** and **μs**.
- **Layer:** For Throughput and Back-to-Back subtests, select the subtest layers used to calculate the throughput.
All (default): Layer 1,2,3 contains the Idle, Preamble, Start of Frame Delimiter, MAC address, IP address, and data.
Ethernet: Layer 2,3 contains the MAC layer, IP layer, and data.
IP: Layer 3 contains the IP layer, and data.
- **Step:** For Frame Loss subtest, selects the step (%) of the testing rate to be displayed.
- **Mode:** For Latency subtest, selects the propagation time mode.
Cut Through (default) allows the calculation of the propagation time of a bit (Bit Latency).
S. & F. (Store and Forward) allows the calculation of the propagation time of a frame (Frame Latency).

Summary - RFC 6349

From the test menu, tap **Results**, and the **Summary** tab.

Note: For *Dual Test Set* on the remote unit only the following are available: *Test Status, Start Time, Test Recovery, Remote unit in Dual Test Set Mode, and Remote unit in use and locked for Dual Test Set.*

Note: For *iPerf Compatible Server* operation mode only the following are available: *Test Status, Start Time, Test Recovery, Active Connections, and Connection Details.*

- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled. A fail verdict is declared if any of the following conditions occurs: Link Down, LOS, TCP Throughput verdict failed, or any abort condition.
- --: Idle state, the test is not running or results are not available.

For **RFC 6349 DTS** and **TCP Throughput DTS**:

- **In Progress:** The test is running.
- **Completed:** The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Test Results

Summary - RFC 6349

For **RFC 6349 DTS** and **TCP Throughput DTS** (local unit):

- **Data Transfer:** The test is running but no traffic is being transmitted because the local and remote units are exchanging data.
- **Aborted:** The test is interrupted; stopped before the set timer. An abort condition is reported: **Link Down Alarm, LOS Alarm, DTS Connection failed, No Communication with Remote, Remote is busy, Unexpected response from Remote, Timeout during execution, Invalid Configuration, Unresolved addresses, Invalid MTU, User stopped, TCP Timeout, TCP Connection failed, NAT detection failed**

For **iPerf Compatible Server**:

- **Listening:** The test is running but the server does not have any active connections.
- **Connected:** The test is running and the server has at least one active connection.
- **Completed:** The test is manually stopped.
- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset. This is the only information available on the remote unit.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.
- **Remote unit in Dual Test Set Mode** indicates that this unit is set as remote but the DTS Connection is not established.
- **Remote unit in use and locked for Dual Test Set** indicates that this unit is used for **Dual Test Set** as the remote unit.

- **MTU (bytes)** indicates the validated Maximum Transfer Unit.
- **Minimum RTT (ms)** indicates the minimum time between the first bit of a segment sent and the last bit of the corresponding acknowledge.
- **Active Connections**, available with iPerf Compatible Server, displays the number of active TCP connections reported by the iPerf compatible server.
- **Connection Details**, available for iPerf Compatible Server, displays the list of each client IP address and their number of TCP connections.

Window Sweep (RFC 6349 DTS)

- **L->R** and **R->L** indicates respectively the direction from local to remote and remote to local.
- **Actual L4** indicates for each step the average TCP throughput metric. **Boost** appearing next to the **BDP** step label indicates that **Window Boost** factor is applied.

TCP Throughput

- **L->R** and **R->L** indicates respectively the direction from local to remote and remote to local.

For **RFC 6349 DTS**:

- **Window** indicates the total maximum send window in KiB (1 KiB = 1024 bytes) followed by the number of connections and KiB per connection in parenthesis as follows: (n conn. @ n KiB). **Boost** appearing next to the **Window** label indicates that **Window Boost** factor is applied.
- **Ideal L4** indicates the ideal TCP throughput metric.
- **Actual L4** indicates the average of actual TCP Throughput metric. The pass/fail verdict icon is displayed next to the this metric when enabled. A value greater or equal to the defined **Threshold (% of ideal)** gives a pass verdict.

Test Results

Summary - RFC 6349

- **TCP Efficiency (%)** indicates the TCP Efficiency metric based on transmitted and retransmitted bytes.
- **Buffer Delay (%)** indicates the Buffer Delay percentage metric which represents the increase in RTT during a TCP Throughput test versus the **Minimum RTT**.
- **Recommended Window Boost** suggests the window boost factor value(s) to apply per direction when the **Actual L4** metric fails. The recommendation is provided when:
 - **Buffer Delay** percentage value is positive.
 - **Window Boost - Enable** check box is cleared (refer to page 393).
 - **TCP Efficiency** is acceptable.

Apply and Start applies the recommended window boost factor for direction(s) that failed and start the test. A boost factor of 1 is applied for a direction that didn't fail. The window boost factor values and the **Window Boost - Enable** check box are updated accordingly in test setup (refer to page 393).

- **Threshold (% of ideal)** allows entering the TCP Throughput as a percentage of the defined CIR that will be used to declare the pass/fail verdict for both directions: **0** to **100 %**; default is **95 %**. The calculated throughput based on the selected threshold is displayed for both directions. Available when the **Pass/Fail Verdict** check box is selected.

For **TCP Throughput DTS**:

- Current L4 meters indicate the current TCP Throughput metric for both directions.
- **Current CWND** indicates the sum of the current average congestion window of each connection.
- **Current RTT** indicates the current average Round-Trip Time; the time elapsed between the transmission of a Segment and the reception of the corresponding ACK.

- **Ideal L4** indicates the ideal TCP throughput metric. Available when the **Pass/Fail Verdict** is enabled; the pass/fail verdict icon is displayed next to this metric; a value greater or equal to the defined CIR threshold gives a pass verdict.
- **Actual L4** indicates the maximum average of actual TCP Throughput metric. The pass/fail verdict icon is displayed next to this metric when enabled. A value greater or equal to the defined **Threshold (% of ideal)** gives a pass verdict.
- **Threshold (% of ideal)** allows entering the TCP Throughput as a percentage of the defined CIR that will be used to declare the pass/fail verdict for both directions: **0** to **100** %; default is **95** %. The calculated throughput based on the selected threshold is displayed for both directions. Available when the **Pass/Fail Verdict** check box is selected.
- **Max CWND** indicates the sum of the maximum average congestion window for each connection. Only reported at the end of the test.
- **Min RTT** indicates the minimum Round-Trip Time; the time elapsed between the transmission of a Segment and the reception of the corresponding ACK. Only reported at the end of the test.
- **Max RTT** indicates the maximum Round-Trip Time; the time elapsed between the transmission of a Segment and the reception of the corresponding ACK. Only reported at the end of the test.
- **Average RTT** indicates the average Round-Trip Time; the time elapsed between the transmission of a Segment and the reception of the corresponding ACK. Only reported at the end of the test.
- **Nb of Connections** indicates the total number of TCP connections initiated during the test.
- **TCP Efficiency (%)** indicates the TCP Efficiency metric based on transmitted and retransmitted bytes.

Summary - Smart Loopback

From the **Test** menu, tap **Results**, and the **Summary** tab.

- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

Traffic

Note: See *Traffic - Ethernet* on page 655 for more information.

Summary - S-OAM and MPLS-TP OAM

From the **Test** menu, tap **Results**, and the **Summary** tab.

- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

Test Results

Summary - S-OAM and MPLS-TP OAM

Continuity Check (Peer MEP)

- **Status** displays the status of the continuity check with the peer MEP.

Status	Description
Loss Continuity	Loss of Continuity alarm is active.
Mismerge	Mismerge alarm is active.
Unexpected MEG Level	Unexpected MEG Level alarm is active.
Unexpected MEP	Unexpected MEP alarm is active.
Unexpected Period	Unexpected Period alarm is active.
Unexpected MD Level	Unexpected MD Level alarm is active.
Receiving CCMs	CCM frames from the peer MEP are received without alarms.

- **TX CCM** indicates the count of transmitted CCM frames.
- **RX CCM** indicates the count of valid CCM frames received. A valid frame for S-OAM has its source MAC address matching the Peer MEP MAC address; destination MAC address matching either the unit port Unicast MAC address or a Multicast class 1 address (refer to 907); and VLANs matching the unit port VLANs. A valid frame for MPLS-TP OAM has its destination MAC address matching either the unit MAC address, FF:FF:FF:FF:FF:FF, or 01:00:5E:90:00:00; VLANs matching the unit port VLANs; and MPL Labels matching the local MPLS Label Stack configuration.

- **CCM** indicates the content of the last received CCM frame including **MEG ID** (Y.1731 and G.8113.1), **Domain ID** (802.1ag and MEF), **MA Name** (802.1ag and MEF), **MEG Level** (Y.1731, MEF, and G.8113.1), **MD Level** (802.1ag), **MEP ID**, and **Period**.

For unsupported **Domain ID**, **MA Name**, and **MEG ID**, the **Unexpected Format** message is displayed.

	Supported Format
Domain ID	1 (No Maintenance Domain Name present) 4 (Character String)
MA Name	2 (Character String)
MEG ID	32 (ICC based format) 33 (CC and ICC based format)

Test Results

Summary - S-OAM and MPLS-TP OAM

Loopback / Test / Frame Delay / Frame Loss / Synthetic Loss

Note: *Either Loopback, Test, Frame Delay, Frame Loss, or Synthetic Loss (available with Ethernet OAM) statistics are displayed according with the selected test function (refer to Test Function on page 401).*

➤ **Status** displays the status of the test function.

For **Loopback, Frame Delay, Frame Loss, and Synthetic Loss** (available with Ethernet OAM) functions:

Status	Description
Idle	No Results (function did not run yet).
In Progress	Test is in progress. Frames are being transmitted and monitored.
Completed	Test is completed: The test with continuous transmission is manually stopped and replies have been received or timed out. The test with continuous transmission is automatically stopped by a test timer and replies have been received or timed out. All frames of the test with non-continuous transmission have been transmitted and replies have been received or timed out.
Aborted	Test is aborted. The test with non-continuous transmission is stopped before all the frames are transmitted.

For **Test** function:

Status	Description
Idle	No Results (function did not run yet).
In Progress	Test is in progress. RX TST frames are being monitored.
Completed	Test is completed. The test is stopped or function is disabled after being In Progress state.

- **RX Line Utilization** meter and value, available with **Loopback** function, indicate the line rate utilization percentage (only LBR frames are considered) received in the last second.
- **TST RX Rate** meter and value, available with **Test** function, indicate the quantity of TST frames received in the last second.
- **Frame Delay** meter and value, available with **Frame Delay** function, indicate the average of the measured frame delays in the last second.
- **Frame Loss Ratio** meter, available with **Frame Loss** function, indicates for both Near-End and Far-End the last measured frame loss ratio in the last second.
- **Synthetic Loss Ratio** meter, available with **Synthetic Loss** function which is available with Ethernet OAM, indicates for both Near-End and Far-End the last measured Synthetic Loss ratio in the last second.

Note: *Refer to S-OAM and MPLS-TP OAM on page 536 for more alarms/errors/statistics information.*

Summary

Refer to *S-OAM and MPLS-TP OAM* on page 536 for more information on alarms.

Thresholds

Refer to *Thresholds* on page 397 for more information.

Summary - SyncE

From the test menu, tap **Results**, and the **Summary** tab.

- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

ESMC

Indicates the current (meter and value), average, minimum, and maximum ESMC frame rate (including information and event frames) received in frame/s. A fail verdict is also displayed beside the minimum and/or maximum values when the ESMC frame rate is outside the range while the **Pass/Fail Verdict** is enabled.

ESMC RX Rate meter displays the current ESMC frame rate (including information and event frames) in frame/s averaged over the last 11 frames received. The pass/fail verdict is also displayed when enabled.

Note: *When the **Pass/Fail Verdict** and **ESMC Rate Threshold** check boxes are selected (see page 444), the green region is delimited from 0.8 to 10.2 frames/s corresponding to a pass verdict. The red regions above and beyond the threshold correspond to a fail verdict. There is neither green nor red region when the Pass/Fail verdict is disabled.*

Test Results

Summary - SyncE

RX

- **Last QL Received** indicates the last Quality Level value received. The pass/fail verdict is also displayed when both **QL Mismatch Monitoring** and **Pass/Fail Verdict** check boxes are selected.

Last Change indicates the date and time of the **Last QL Received** has changed.

- **Information/Event Count** gives respectively the count of information and event frames generated for all Quality Level values.
- **QL Mismatch Frame Count** gives the total count of information and/or event frames received not matching the **Expected QL**. Only available when the **QL Mismatch Monitoring** check box is selected.
- **Freq (GHz)/Offset (ppm)** indicates respectively the frequency and the offset between the standard rate specification and the rate of the input signal.
- **Max (-/+) Offset (ppm)** indicates respectively the minimum and maximum offset between the standard rate specification and the largest/smallest rate recorded from the received signal.

TX

- **QL Message** indicates the Quality Level value that is generated.

Last Change indicates the date and time of the generated Quality Level message value has changed. Not available for 1GE Electrical interface using **Slave** as **Local Clock**.
- **Information/Event Count** gives respectively the count of information and event frames generated for all Quality Level values. **Event Count** is not available with 1GE Electrical interface using remote local clock.

Summary - TCP Throughput

From the test menu, tap **Results**, and the **Summary** tab.

- **Test Status** displays the current status of the test.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer. An abort condition is reported: **TCP Session Closed** or **Remote IP Not Found**.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

Test Results

Summary - TCP Throughput

TCP Throughput

- **TCP Connection Status** indicates the actual TCP connection status.

Test Status	Description
--	The test is not running or results are not available.
In Progress	The TCP initialization algorithm is in progress.
Waiting	Indicates on the remote unit that the test is started but the TCP initialization algorithm is not initiated by the local unit.
Established	The TCP session has been successfully established between the local and remote units.
Closed	The session is closed. Either no TCP initialization algorithm has been received, the remote unit has received and completed the request to close the TCP session, or no data has been received at the remote unit for 30 seconds.
Closing	The TCP protocol is closing down the connection.
Remote IP not found	The local unit didn't received an answer to the ARP request sent to the IP address of the remote unit.

- **Transmitted Frames** indicates the total of frames transmitted by the local unit excluding the re-transmitted frames.
- **Re-transmitted Frames** indicates the total of frames that have been re-transmitted by the local unit.
- **Efficiency (%)** indicates the percentage of bytes that were not retransmitted.
- **Window Size Unit** allows selecting the unit used for **Window Size**: **Bytes**, **KBytes**, or **MBytes** (default).
- **Throughput Threshold** allows setting the pass/fail verdict threshold value: **0** to **100 %** (default). This setting is available when the **Throughput Pass/Fail Verdict** check box is selected (refer to *TCP Throughput* on page 457).
- **Throughput** meter displays the last second TCP Throughput measurement.

- **TCP Throughput** displays respectively the last, minimum, maximum, and average TCP Throughput measurement.
- **Window Size** displays respectively the last, minimum, and maximum TCP window size.
- **Round Trip Latency (ms)** displays respectively the last, minimum, maximum, and average round trip time gathered from the TCP Throughput test.

Ethernet Traffic

Note: See Traffic - Ethernet on page 655 for more information.

Summary - Through Mode

From the **Test** menu, tap **Results**, and the **Summary** tab.

- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

Traffic / Traffic Ethernet

Note: See *Traffic - Ethernet* on page 655 for more information.

RX Frequency

Note: *RX Frequency is available on both ports for rates up to 10G LAN. Not available for a port using an active copper SFP.*

- **Frequency (GHz)** indicates the frequency of the input signal.
- **Offset (ppm)** indicates the frequency offset between the standard rate specification and the rate at the input signal.

Note: *For both **Frequency** and **Offset** the following background colors are used.*

Background color	Description
Green	The frequency is in range.
Red	The frequency is out-of-range or LOC Lane. LOC is also displayed.
Gray	Pending state.

Summary - Traffic Gen & Mon

From the **Test** menu, tap **Results**, and the **Summary** tab.

- **<Port #>**, available with **Dual Port** topology, allows selecting the port to be displayed.
- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test is interrupted; stopped before the set timer.

- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

Stream

- **Stream** indicates the stream number and provides stream detailed statistics when tapping on its button (see *Summary - Stream - Traffic Gen & Mon* on page 638).

The following statistics are available for each stream.

- **Current Throughput:** See *Streams - Throughput / Customer Frame Throughput* on page 552.
- **Frame Loss Rate:** See *Streams - Frame Loss / Out-of-Sequence* on page 550.
- **Jitter:** See *Streams - Jitter* on page 550.
- **Latency:** See *Streams - Latency* on page 551.
- **Out-of-Sequence:** See *Streams - Frame Loss / Out-of-Sequence* on page 550.

Test Results

Summary - Stream - Traffic Gen & Mon

Summary - Stream - Traffic Gen & Mon

Note: *Available from Summary - Traffic Gen & Mon - Stream. For **Test Status**, **Start Time**, **Test Recovery**, and **Logger Full** see Summary - Traffic Gen & Mon on page 636 .*

- **Latency Unit** allows selecting either **ms** (default) or **μs** as the reference unit for **Latency** and **Jitter**.
- **Stream Selection:** Select a stream by either using the left/right arrow or by tapping over the stream numbers area then tapping on a specific stream number. An orange background indicates the selected stream.
- **Throughput, Jitter, and Latency** meters display respectively the measured Throughput, Jitter, and Latency for the selected stream.

Note: *The green region defined by the configured threshold corresponds to a **PASS** verdict while the red regions corresponds to a **FAIL** verdict. The verdict is only displayed when enabled (see QoS Metrics on page 442).*

- **Jitter:** See *Streams - Jitter* on page 550.
- **Latency:** See *Streams - Latency* on page 551.
- **RX Rate:** See *Streams - Throughput / Customer Frame Throughput* on page 552.
- **RX Frame Count** indicates the number of frame received matching the selected stream.
- **TX Rate:** See *Streams - Throughput / Customer Frame Throughput* on page 552.
- **TX Frame Count** indicates the number of transmitted frames matching the selected stream.

- **Frame Loss** and **Out-of-Sequence**: See *Streams - Frame Loss / Out-of-Sequence* on page 550.
- **Thresholds**, refer to *QoS Metrics on page 442*.

Test Results

Summary - Time Error / Wander

Summary - Time Error / Wander

From the test menu, tap **Results**, and the **Summary** tab.

Note: *With the G.8275.2 profile, the TE values are only available 200 seconds after the test is started as the calculation method requires a sample selection window of 200 seconds.*

- **Test Status** displays the current status of the test. The global test pass/fail verdict is displayed next to the **Test Status** field when enabled.

--: Idle state, the test is not running or results are not available.

In Progress: The test is running.

Completed: The test is completed, stopped at the planned time, or manually stopped when there is no set timer.

Aborted: The test has been aborted either manually (Stop) or automatically from an alarm/error:

- Any signal/interface alarm.
- **REF-FAULT** (reference signal alarm)
- For G.8275.1 profile: **Domain Mismatch, Loss Sync, Loss Announce**
- **Start Time** indicates the date and time the test was started. The date and time reset every time the test is restarted or reset.
- **Test Recovery**, when displayed, indicates that the test has automatically recovered from a power failure. The number of occurrences is also displayed next to the **Test Recovery** field. Refer to *Power Failure Recovery* on page 807.
- **Logger Full**, when displayed, indicates that the logger is full. Refer to *Logger* on page 510.

Time Error / Time Interval Error Metrics

- **MTIE** label and the pass/fail verdict icon are displayed when enabled and the test is running.
- **TDEV** label and the pass/fail verdict icon are displayed when enabled and the test is running.

For Time Error measurement with either G.8275.1 profile or 1PPS interface:

Note: *The following metrics are collected using 0.1 Hz Low-Pass filtering.*

- **TE (ns)** indicates the last time error value collected in the last second.
- **Max TE (ns)** indicates the maximum time error value collected since the beginning of the test.
- **Min TE (ns)** indicates the minimum time error value collected since the beginning of the test.
- **Max Absolute TE (ns)** indicates the maximum absolute time error value collected since the beginning of the test. The pass/fail verdict is also displayed when enabled.
- **dTE_H pk-pk (ns)** indicates the dynamic time error peak-to-peak over a defined observation period (refer to **dTE_H Observation Period** on page 462). The first value is only available after the initial observation period has elapsed, the value is then updated every second.
- **Max dTE_H pk-pk (ns)** indicates maximum dynamic time error peak-to-peak since the beginning of the test. The pass/fail verdict is also displayed when enabled.

Test Results

Summary - Time Error / Wander

Note: *The following metrics are collected without any filtering.*

- **cTE (ns)** indicates the constant time error which is an average value of time error over the defined period as follows (refer to **cTE Averaging Period** on page 462):
 - since the beginning of the test when the **cTE Averaging Period** is set to **Elapsed Time**.
 - for the averaging period defined when the **cTE Averaging Period** is set to a value other than the **Elapsed Time**. The first value is only available after the initial average period has elapsed, the value is then updated every second.

Note: *When **cTE Averaging Period (s)** is set to **Elapsed time**, the **Last cTE (ns)** value is displayed, otherwise **Max cTE (ns)** is displayed.*

- **Last cTE (ns)** indicates the last cTE value collected. The pass/fail verdict is also displayed when enabled.
- **Max cTE (ns)** indicates the maximum cTE value collected since the beginning of the test. The pass/fail verdict is also displayed when enabled.

For Time Error measurement with G.8275.2 profile:

Note: *The following metrics are collected using 0.1 Hz Low-Pass filtering.*

- **Pkt sel TE (ns)** indicates the last packet selected time error value collected in the last second.
- **Max pkt sel TE (ns)** indicates the maximum packet selected time error value collected since the beginning of the test.
- **Min pkt sel TE (ns)** indicates the minimum packet selected time error value collected since the beginning of the test.

- **Max Abs TE (ns)** the maximum absolute packet selected time error value collected since the beginning of the test. The pass/fail verdict is also displayed when enabled.

Pk-pk pkt sel TE (ns) indicates the peak-to-peak packet selected time error value collected since the beginning of the test (the difference between **Min pkt sel TE** and **Max pkt sel TE** values).

Note: *The following metrics are collected without any filtering.*

- **Pkt sel cTE (ns)** indicates the packet selected constant time error which is an average value of time error over the defined period as follows (refer to **Pkt cTE Averaging Period** on page 461):
 - since the beginning of the test when the **Pkt cTE Averaging Period** is set to **EIapse Time**.
 - for the averaging period defined when the **Pkt cTE Averaging Period** is set to a value other than the **EIapse Time**. The first value is only available after the initial average period has elapsed (in addition to the sample selection window of 200 seconds), the value is then updated every x second based on the selected **Window Step Size**.
- **Max pkt sel cTE (ns)** indicates the maximum packet selected constant time error value collected since the beginning of the test. The pass/fail verdict is also displayed when enabled.

For Time Error measurement with either G.8275.1 or G.8275.2 profile:

- **PDV** indicates the difference between the delay of a packet (difference between timestamp at receiving end and the original timestamp at the transmitter) and the minimum packet delay value for the specified interval. **PDV (ns)** and **PDV Max (ns)** values are reported for both **Forward (BC -> Client)** and **Reverse (Client -> BC)** directions.

Test Results

Summary - Time Error / Wander

Time Interval Error Metrics

The following metrics are available for Wander measurement.

- **TIE (ns)** indicates the Time Interval Error value collected in the last second.
- **Max TIE (ns)** indicates the Maximum Time Interval Error value collected since the beginning of the test.
- **Min TIE (ns)** indicates the Minimum Time Interval Error value collected since the beginning of the test.
- **Max TIE pk-pk (ns)** indicates the maximum Time Interval Error peak-to-peak since the beginning of the test.

Time Error / Time Interval Error Graph

Dynamically displays the graph of either TE or TIE values as a function of time. The dynamic view is a sliding window displaying the last 27000 samples collected.

Zooming the graph:

- Using the touch screen: Tap two points on the graph and drag them to enlarge the view.
- Using a mouse: click and drag the region to be zoomed.

Note: *When the graph is zoomed, a magnifying glass button is displayed at its top-right corner for un-zooming it.*

Settings

- **Sampling Rate** indicates the sampling rate value.
- **Samples** indicates the number of samples collected since the beginning of the test.
- **TE Scale / TIE Scale** allows the selection of the Y-axis scale: **Auto** (default), **800 μ s**, **200 μ s**, **2 μ s**, **400 ns**, **100 ns**.
- **Time Scale** allows the selection of the X-axis scale: **Seconds** (default), **dd HH:MM:SS**.

Test Results

TCP Throughput

TCP Throughput

Dynamically displays the graph of throughput as a function of time. The dynamic view is a 2h sliding window. Available with **TCP Throughput DTS** operation mode.

From the **Test** menu, tap **Results**, and the **TCP Throughput** tab.

Traces - OTN

From the test menu, tap **Results**, **Traces**, and if available the **OTN** sub-tab.

Channel, available with **Multi-Channel OTN** for ODUk level, allows selecting the channel to be displayed.

Note: *Configuration is coupled with settings from Traces - OTN on page 467.*

OTUx, ODUx, ODUk, and TCMx Buttons

Tap on either OTUx or an ODUx button. For ODUx when TCM is enabled (see Modify TCM on page 428), tap on a TCMx button to select a TCM level. TCM is not available with Multi-Channel OTN.

SM TTI Traces / PM TTI Traces / ODUx TCM TTI Traces

Note: *The TTI Traces are available for SM (OTUx), PM (ODUx), and TCM (ODUx when TCM is enabled; see Config TCM on page 428).*

Test Results

Traces - OTN

- **SAPI** (Source Access Point Identifier) indicates the received SAPI message (TTI bytes 0 to 15). The expected SAPI message is available when the **SAPI OTU-TIM** / **SAPI ODU-TIM** check box is selected. A maximum of 16¹ characters is allowed.

TTI Traces	Default Message ^a
SM	EXFO OTU SAPI
PM	EXFO ODU SAPI ^b
TCM ^c	EXFO TCMi SAPI

- a. The default message contains a NULL (all 0's) character preceding it. NULL (all 0's) characters are automatically appended to the message for bytes that are not defined.
- b. The channel number is automatically appended to the message.
- c. Not available with Multi-Channel OTN.

- **DAPI** (Destination Access point Identifier) indicates the received DAPI message (TTI bytes 16 to 31). The expected DAPI message is available when the **DAPI OTU-TIM** / **DAPI ODU-TIM** check box is selected. A maximum of 16¹ characters is allowed.

TTI Traces	Default Message ^a
SM	EXFO OTU DAPI
PM	EXFO ODU DAPI ^b
TCM ^c	EXFO TCMi DAPI

- a. The default message contains a NULL (all 0's) character preceding it. NULL (all 0's) characters are automatically appended to the message for bytes that are not defined.
- b. The channel number is automatically appended to the message.
- c. Not available with Multi-Channel OTN.

1. For Multi-Channel OTN lower ODU layer, a maximum of 13 characters are allowed since the channel number is automatically appended to the message.

- **Operator Specific** indicates the received Operator Specific message (TTI bytes 32 to 63).
- **SAPI OTU-TIM / SAPI ODU-TIM / SAPI TCM-TIM** check box, when selected (cleared by default), allows editing the expected Source Access Point Identifier and also enables OTU/ODU/TCM-TIM alarm monitoring. For Multi-Channel OTN lower ODU layer, these check boxes are only available from the test setup.
- **DAPI OTU-TIM / DAPI ODU-TIM / DAPI TCM-TIM** check box, when selected (cleared by default), allows editing the expected Destination Access Point Identifier and also enables the OTU/ODU-TIM alarm monitoring. For Multi-Channel OTN lower ODU layer, these check boxes are only available from the test setup.
- **Copy RX / Global Copy RX**¹ allows using the received SAPI/DAPI message as the expected one. For Multi-Channel OTN lower ODU layer, use the arrow button next to the **Copy RX** or **Global Copy RX** to switch from one button to the other. **Global Copy RX** allows using the current channel received SAPI/DAPI message as the expected one for all channels while **Copy RX** only affects the selected channel.

1. Only available for the lower ODU layer for Multi-Channel OTN and FlexO BERT.

Traces - SONET/SDH

From the test menu, tap **Results**, **Traces**, and if available the **SONET/SDH** sub-tab.

Note: *Selecting a Trace byte to be generated will automatically update the corresponding OH byte. Refer to OH - SONET/SDH on page 727 for more information. Configuration is coupled with settings from Traces - SONET/SDH on page 470.*

Traces

- **Section (J0) / RS (J0), STS Path (J1) / AU Path (J1) / TU-3 Path (J1), VT Path (J2) / TU Path (J2)** displays the received J0/J1/J2 value in 16 or 64-bytes format. The <crc7> represents the CRC-7 for a 16-bytes format. The last two bytes of a 64-bytes format, <C_R> and <L_F>, represent respectively a carriage return and a line feed.
- **TIM-S / RS-TIM, TIM-P / HP-TIM, TIM-V / LP-TIM** check box when selected (cleared by default) enables the corresponding Trace Identifier Mismatch for the expected message defined.

Format allows the selection of the expected format:

16 Bytes (default), or **64 Bytes**.

Expected allows entering the expected J0 trace message.

Copy RX allows using the received SAPI/DAPI message as the expected one.

TCM Access Point Identifier

Note: *Available when **TCM** is enabled (refer to page 429).*

- **STS Path (N1) / AU Path (N1), and VT Path (Z6) / TU-Path (N2) / TU-Path (N1)** for (TU-3) displays the received N1/N2/Z6 value/message.
- **TC-TIM-P / HPTC-TIM / TC-TIM-V / LPTC-TIM** check box when selected (cleared by default) enables the corresponding TCM Access Point Identifier and allows the configuration of the expected message.

Copy RX allows using the received SAPI/DAPI message as the expected one.

Test Results

Traces/PT - FlexO

From the test menu, tap **Results**, and **Traces/PT**.

Client ID indicates the client ID for ODUk level.

OTUCn, ODUCn, and ODUk Buttons

Tap on either an OTU or ODU button.

SM TTI Traces / PM TTI Traces / Global PM TTI Traces

Note: *The TTI Traces are configurable for SM (OTUx), PM (ODUx), and PM (ODUk). The following settings are coupled with the Expected Message from Traces/PT - FlexO on page 472.*

SAPI (Source Access Point Identifier) indicates the received SAPI message (TTI bytes 0 to 15). The expected SAPI message is available when the **SAPI OTU-TIM / SAPI ODU-TIM** check box is selected. A maximum of 16 characters are allowed; 13 characters for lower ODU layer since the channel number is automatically appended to the message.

TTI Traces	Default Message ^a
SM	EXFO OTU SAPI
PM	XFO ODU SAPI ^b

- a. The default message contains a NULL (all 0's) character preceding it. NULL (all 0's) characters are automatically appended to the message for bytes that are not defined.
- b. For ODUk, the client ID is automatically appended to the generated/expected message.

DAPI (Destination Access point Identifier) indicates the received SAPI message (TTI bytes 16 to 31). The expected DAPI message is available when the **DAPI OTU-TIM / DAPI ODU-TIM** check box is selected. A maximum of 16 characters is allowed; 13 characters for lower ODU layer since the channel number is automatically appended to the message.

TTI Traces	Default Message ^a
SM	EXFO OTU DAPI
PM	XFO ODU DAPI ^b

- a. The default message contains a NULL (all 0's) character preceding it. NULL (all 0's) characters are automatically appended to the message for bytes that are not defined.
- b. For ODUk, the client ID is automatically appended to the message.

Operator Specific indicates the received Operator Specific message (TTI bytes 32 to 63).

- **SAPI OTU-TIM / SAPI ODU-TIM** check box, when selected (cleared by default), allows editing the expected Source Access Point Identifier and also enables OTU/ODU-TIM alarm monitoring. For the lower ODU layer these check boxes are only configurable from the test setup.
- **DAPI OTU-TIM / DAPI ODU-TIM** check box, when selected (cleared by default), allows editing the expected Destination Access Point Identifier and also enables the OTU/ODU-TIM alarm monitoring. For the lower ODU layer these check boxes are only configurable from the test setup.

Copy RX / Global Copy RX¹ allows using the received SAPI/DAPI message as the expected one. For lower ODU layer, use the arrow button next to the **Copy RX** or **Global Copy RX** to switch from one button to the other. However since there is only one client, both **Global Copy RX** and **Copy RX** use the received SAPI/DAPI message as the expected one.

1. **Global Copy RX** is only available for the lower ODU layer.

Test Results

Traces/PT - FlexO

PT

Payload Type and **Code** displays the received payload signal type and its code in hexadecimal format. The expected payload signal type can be selected from the list or by entering its hexadecimal code.

Note: *Refer to PT / Global PT on page 474 for the list.*

- **OPU-PLM** check box when selected enables the OPU-PLM alarm analysis. For the lower ODU layer these check boxes are only configurable from the test setup.

Copy RX allows using the received payload type as the expected one.

Traffic - Ethernet

From the test menu, tap **Results**, **Traffic**, and when applicable the **Ethernet** tab.

Note: *For **Through Mode** test application, the traffic statistics are displayed for both port directions.*

- **<Port #>**, available with **Dual Port** topology, allows selecting the port to be displayed.
- **Client**, available with DCO BERT multiple link client (ex. 4 x 100GE), allows selecting the client to be displayed.
- **Link**, available with EtherBERT multiple link interface (ex: 2 x 100GE), allows selecting the link to be displayed; only enabled links are available.
- **Client ID**, available with FlexE BERT, allows selecting the client identification to be displayed.
- **Size (Gbit/s)**, available with FlexE BERT, indicates the size of the client ID.

Traffic

- **Line Utilization (%)** indicates the current percentage of the transmitting/receiving line rate utilization.
- **Ethernet BW (Mbit/s)** indicates the current transmitting/receiving data rate expressed in Mbit/s.
- **Frame Rate (frame/s)** indicates the current transmitted/received number of frames (including bad frames, Broadcast frames and Multicast frames) in frame per second.
- **Frame Count** indicates the total number of transmitted/received valid and invalid frames.

Frame Type

Displays the TX and RX count of the following frame types.

- **Multicast** indicates the number of multicast frames transmitted/received without FCS errors. Broadcast frames are not counted as multicast frames.
- **Broadcast** indicates the number of broadcast frames transmitted/received without FCS errors.
- **Unicast** indicates the number of unicast frames transmitted/received without FCS errors.
- **Non-Unicast** indicates the number of multicast and broadcast frames transmitted/received without FCS errors.
- **Total** indicates the total number of all frames transmitted/received without FCS error.

Frame Size

Displays the RX count of each received frame size (valid and invalid), and the percentage (%) ratio of each received frame size based on the total count of frames. The percentage (%) ratio is not available for Through Mode test application.

- **< 64/80/82**: frames with less than 64 bytes; 80 bytes for EoE; 82 bytes for PBB-TE.
- **64/80/82**: frames equal to 64 bytes; 80 bytes for EoE; 82 bytes for PBB-TE.
- **65/81/83 - 127**: frames from 65 to 127 bytes; 81 to 127 bytes for EoE; 83 to 127 bytes for PBB-TE.
- **128 - 255**: frames from 128 to 255 bytes.
- **256 - 511**: frames from 256 to 511 bytes.
- **512 - 1023**: frames from 512 to 1023 bytes.

- **1024 - 1518/1534/1536:**
 - **1024 - 1518:** frames from 1024 to 1518 bytes.
 - **1024 - 1534:** for EoE, frames from 1024 to 1534; add 4 bytes to 1534 for each VLAN layer enabled in the encapsulated Ethernet payload and 4 bytes for EoE VLAN when enabled.
 - **1024 - 1536:** for PBB-TE, frames from 1024 to 1536; add 4 bytes to 1536 for each VLAN layer enabled in the encapsulated Ethernet payload and 4 bytes for B-VLAN when enabled.
- **> 1518/1534/1536:**
 - **> 1518:** frames with more than 1518 bytes.
 - **> 1534:** for EoE: frame with more than 1534; add 4 bytes to 1534 for each VLAN layer enabled in the encapsulated Ethernet payload and 4 bytes for EoE VLAN when enabled.
 - **> 1536:** for PBB-TE, frame with more than 1536; add 4 bytes to 1536 for each VLAN layer enabled in the encapsulated Ethernet payload and 4 bytes for B-VLAN when enabled.
- **Total** indicates the total count of all received frames (valid and invalid).

Test Results

Traffic - Flow Control

Traffic - Flow Control

Note: *Not available with 200/400GE.*

From the test menu, tap **Results**, **Traffic**, and the **Flow Control** tab.

Note: *For **Dual Port** topology select the port to be displayed.*

Frame Count - RX

- **Pause Frames** indicates the number of received valid flow-control frames. Frames that have a type/length field equal to 0x8808 will be counted as a pause frame.
- **Abort Frame** indicates the number of received pause frames with a Quanta equal to zero; cancelling the pause frames.
- **Total Frame** indicates the total number of pause time received from the link partner.

Pause Time

Indicates respectively the total, last, maximum, and minimum pause time received from the link partner in **Quanta** (default) or **Microsecond** (μs).

Pause Injection

Note: *Pause injection is only available for Traffic Gen & Mon test application.*

- **Packet Pause Time:** Enter the pause time value to be transmitted in **Quanta** or **Microsecond** (default is **100 Quanta**).

Interface	Range	
	Quanta	μ s
10 Mbit/s	0 to 65535	0 to 3355392
100 Mbit/s	0 to 65535	0 to 335539.2
1000 Mbit/s	0 to 65535	0 to 33553.92
2.5 Gbit/s	0 to 65535	0 to 13421.568
5 Gbit/s	0 to 65535	0 to 6710.784
10 Gbit/s	0 to 65535	0 to 3355.392
25 Gbit/s	0 to 65535	0 to 1342.1568
40 Gbit/s	0 to 65535	0 to 838.848
100 Gbit/s	0 to 65535	0 to 335.5392

Note: *When entering a value in μ s it will be rounded to the closest multiple of 51.2 μ s for 10 Mbit/s, 5.12 μ s for 100 Mbit/s, 0.512 μ s for 1000 Mbit/s, 0.2048 μ s for 2.5 Gbit/s, 0.1024 μ s for 5 Gbit/s, 0.0512 μ s for 10 Gbit/s, 0.02048 μ s for 25 Gbit/s, 0.0128 μ s for 40 Gbit/s, and 0.00512 μ s for 100 Gbit/s.*

- **Inject** button allows generating the defined packet pause time.
- **Destination MAC Address** check box, when selected (cleared by default), enables and allows setting the destination MAC address. The default destination MAC address is the control protocol multicast address: **01:80:C2:00:00:01**.

Test Results

Traffic - Graph

Traffic - Graph

From the test menu, tap **Results**, **Traffic**, and the **Graph** tab.

Note: *For Dual Port topology select the port to be displayed.*

The graph displays the received line utilization. The X axis shows the time in seconds while the Y axis shows the percentage utilization.

Traffic - Path OAM

Note: Available when **Path OAM** is enabled, refer to Path OAM on page 371.

From the test menu, tap **Results**, **Traffic**, and the **Path OAM** tab.

Reports the counts of the following messages transmitted and received. Total count is reported for TX and RX.

- **2DMM** (Two-way Delay Measurement Message) reports 2DMM messages transmitted.
- **2DMR** (Two-way Delay Measurement Response) reports 2DMR messages received having a valid CRC4 and the multi-block containing the ascending sequence numbers 0 to 5.
- **APS** (Automatic Protection Switching) reports the APS messages having a valid CRC4. Only available when **Path OAM APS** is enabled (refer to *Path OAM APS* on page 747).
- **BAS** (Basic OAM Message) reports Basic OAM messages having a valid CRC4.
- **CSM** (Client Signal Message) reports the CSM messages having a valid CRC4.
- **CVM** (Connectivity Verification Multi-block) reports CVM messages having a valid CRC4 and the multi-block containing the ascending sequence numbers 0 to 7.

Responder

Note: Available when the **OAM Responder** check box is selected (refer to Path OAM on page 371).

Reports the counts of the following messages transmitted and received.

Test Results

Traffic - Path OAM

- **2DMM** (Two-way Delay Measurement Message) reports the count of 2DMM messages received having a valid CRC4 and the multi-block containing the ascending sequence numbers 0 to 1.
- **2DMR** (Two-way Delay Measurement Response) reports the count of 2DMR messages transmitted.

Traffic - OAM, S-OAM, and MPLS-TP OAM

From the test menu, tap **Results**, **Traffic**, and the **OAM**, **S-OAM**, or **MPLS-TP OAM** tab.

Traffic Monitoring

Note: Only available with *Carrier Ethernet OAM* test application.

- In TX, reports counts of CCM, LBM, LTM, DMM, LMM, SLM, TST, AIS, LCK, and CSF frames transmitted. LTM and SLM are only available with Ethernet OAM. Total count is reported as well as unicast and/or multicast frame counts when applicable.
- In RX, reports counts of CCM, LBR, LTR, DMR, LMR, SLR, TST AIS, LCK, and CSF frames (LTR and SLR are only available with Ethernet OAM) received regardless of the sender as long as the following criteria are met:
 - **S-OAM:** The destination MAC address matches either the local MEP Unicast MAC address or a Multicast class 1 or class 2 address; and the VLANs matches the unit port VLANs. Refer to *Unicast/Multicast Addresses for Ethernet OAM* on page 907 for more information.
 - **MPLS-TP OAM:** The destination MAC address matches either the unit MAC address, FF:FF:FF:FF:FF:FF, or 01:00:5E:90:00:00; the VLANs matches the unit port VLANs; and MPL Labels matches the local MPLS Label Stack configuration. For AIS, LCK, and CSF, valid messages must also have the MEG Level matching the Local MEG Level.

Total count is reported as well as unicast and/or multicast frame counts when applicable.

Test Results

Traffic - OAM, S-OAM, and MPLS-TP OAM

Responder

Note: Available when the **S-OAM Responder** or **MPLS-TP OAM Responder** check box is selected (refer to S-OAM and MPLS-TP OAM Responder on page 396).

For **Carrier Ethernet OAM** test application:

- In TX, reports counts of LBR, LTR, DMR, LMR, and SLR total frames transmitted. LTR and SLR are only available with Ethernet OAM.
- In RX, reports counts of valid LBM, LTM, DMM, LMM, and SLM unicast, multicast, and total frames received. LTM and SLM are only available with Ethernet OAM. A valid messages must have its:

S-OAM: source MAC address matching the Peer MEP MAC address; destination MAC address matching either the unit port Unicast MAC address or a Multicast class 1 or class 2 address; VLANs matching the unit port VLANs, and MEG/MD Level matching the local MEG/MD Level. Refer to *Unicast/Multicast Addresses for Ethernet OAM* on page 907 for more information.

MPLS-TP OAM: destination MAC address matching either the unit MAC address, FF:FF:FF:FF:FF:FF, or 01:00:5E:90:00:00; VLANs matching the unit port VLANs; and MPL Labels matching the local MPLS Label Stack configuration.

For **Smart Loopback** test application:

- In TX, reports counts of LBR, LTR, DMR, LMR, and SLR total frames transmitted.
- In RX, reports counts of valid LBM, LTM, DMM, LMM, and SLM total frames received. A valid messages must have its destination MAC address matching either the unit port Unicast MAC address or a Multicast class 1 or class 2 address. Refer to *Unicast/Multicast Addresses for Ethernet OAM* on page 907 for more information.

Window Sweep

Note: *Only available for RFC 6349 with operation modes **Dual Test Set** (local unit).*

Displays the graph showing the Ideal L4 and Actual L TCP Throughput measured for each Window Sweep step. The number of connections and KiB per connection is also displayed in parenthesis as follows:
(n conn.@ n KiB)

From the test menu, tap **Results**, and the **Window Sweep** tab.

WIS

From the **Test** menu, tap **Results**, and the **WIS** tab.

Traces/Label

- **J0 Trace** displays the **J0 Trace** value in 16-bytes format.
- **J1 Trace** displays the **J1 Trace** value in 16-bytes format.
- **Path Signal Label (C2)** displays the content of the STS SPE including the status of the mapped payload.

10 Test Functions

The Test Functions menu offers the following structure:

Transport

Test Application	Page, Sub-Page, or Pop Up	Page
DCO BERT	Advanced - <transceiver> Control	673
	Advanced - Pre-Emphasis/RX EQ	680
	Advanced - PAM-4 Histogram	683
DSn/PDH BERT	FDL - Bit-Oriented Message	692
	FDL - Performance Report Message	696
	FEAC	699
	RTD	765
	Signaling Bits	773
	Spare Bits	775
FlexO BERT	-	-
Multi-Channel OTN	<rate> Advanced - <transceiver> Control	673
	GMP	707
NI/CSU Emulation	FDL - Bit-Oriented Message	692
	FDL - Performance Report Message	696
OTN BERT	<rate> Advanced - <transceiver> Control	673
	<rate> Advanced - Lanes Mapping & Skew	676
	Client Offset	689
	GMP	707
	OH BERT	708
	OH - GFP-F/GFP-T	716
	OH - OTN	721
	RTD	765

Test Functions

Test Application	Page, Sub-Page, or Pop Up	Page
OTN-SONET/SDH BERT	<rate> Advanced - <transceiver> Control	673
	<rate> Advanced - Lanes Mapping & Skew	676
	APS	684
	GMP	707
	OH BERT	708
	OH - OTN	721
	OH - SONET/SDH	727
	Pointer Adjustment	755
	RTD	765
SONET/SDH BERT	APS	684
	OH	727
	Pointer Adjustment	755
	RTD	765
SONET/SDH - DS _n /PDH BERT	APS	684
	OH	727
	Pointer Adjustment	755
	RTD	765
	Signaling Bits	773
	Spare Bits	775

Ethernet

Test Application	Page, Sub-Page, or Pop Up	Page
Cable Test	Ping & Trace Route	750
Carrier Ethernet OAM	Filters	703
	Packet Capture	741
	Ping & Trace Route	750
	S-OAM Link Trace	771
EtherBERT	<rate> Advanced - <transceiver> Control	673
	<rate> Advanced - Lanes Mapping & Skew	676
	<rate> Advanced - Pre-Emphasis/RX EQ	680
	<rate> Advanced - PAM-4 Histogram	683
	Filters	703
	Packet Capture	741
	Ping & Trace Route	750
EtherSAM (Y.1564)	<rate> Advanced - <transceiver> Control	673
	<rate> Advanced - Lanes Mapping & Skew	676
	<rate> Advanced - Pre-Emphasis/RX EQ	680
	<rate> Advanced - PAM-4 Histogram	683
	Ping & Trace Route	750
FlexE BERT	<rate> Advanced - <transceiver> Control	673
	<rate> Advanced - Pre-Emphasis/RX EQ	680
	<rate> Advanced - PAM-4 Histogram	683
	FlexE Advanced	705
	OH	711
	Path OAM APS	747

Test Functions

Test Application	Page, Sub-Page, or Pop Up	Page
RFC 2544	<rate> Advanced - <transceiver> Control	673
	<rate> Advanced - Lanes Mapping & Skew	676
	<rate> Advanced - Pre-Emphasis/RX EQ	680
	<rate> Advanced - PAM-4 Histogram	683
	Ping & Trace Route	750
RFC 6349	<rate> Advanced - <transceiver> Control	673
	<rate> Advanced - Lanes Mapping & Skew	676
	Ping & Trace Route	750
Smart Loopback	<rate> Advanced - <transceiver> Control	673
	<rate> Advanced - Lanes Mapping & Skew	676
	<rate> Advanced - Pre-Emphasis/RX EQ	680
	<rate> Advanced - PAM-4 Histogram	683
	Ping & Trace Route	750
TCP Throughput	Ping & Trace Route	750
Through Mode	Filters	703
	Packet Capture	741
Traffic Gen & Mon	<rate> Advanced - <transceiver> Control	673
	<rate> Advanced - Lanes Mapping & Skew	676
	<rate> Advanced - Pre-Emphasis/RX EQ	680
	<rate> Advanced - PAM-4 Histogram	683
	BFD	687
	Filters	703
	Packet Capture	741
	Ping & Trace Route	750
	Traffic Scan	777

Sync

Test Application	Page or Pop Up	Page
1588 PTP	Filters ^a	703
	Packet Capture	741
	Ping & Trace Route ^a	750
SyncE	Filters	703
	Packet Capture	741
	Ping & Trace Route	750
Time Error / Wander	-	-

- a. Not available with GM emulation mode.

Fibre Channel

Test Application	Page or Pop Up	Page
FC BERT	<rate> Advanced - <transceiver> Control ^a	703

- a. Only available with 64X.

Wireless

Test Application	Page or Pop Up	Page
CPRI/OBSAI BERT	<rate> Advanced - <transceiver> Control ^a	673
	RTD (Unframed)	765
	RTD (Framed L2) ^a	768
	RTT ^b	768
eCPRI BERT	<rate> Advanced - <transceiver> Control	673
	Filters ^{c, d}	703
	Packet Capture ^{c, d}	741
	Ping & Trace Route ^c	750

- a. Only available with CPRI BERT.
- b. Only available with OBSAI BERT.
- c. Only available with Framed Layer 2/3/4.
- d. Only supported in single port topology.

<rate> Advanced - <transceiver> Control

Note: Where <rate>, when displayed, is the rate selected for the test and <transceiver> is the selected connector.

From the **Test** menu, tap **Functions**, <rate> **Advanced**, and the <transceiver> **Control** tab.

- **Port**, available with FlexE BERT, allows selecting the physical port to be displayed.
- **FlexE PHY Number**, available with FlexE BERT, indicates the FlexE PHY number assigned to the port.
- <transceiver> **Reference Clock (MHz)** allows selecting the reference clock that will be used by the transceiver. Available with CFP4/CFP8 transceiver.

Interface/Rate	1/160 Host Lane Rate (default - recommended)	1/40 Host Lane Rate
OTU4	174.7031 MHz	698.8123 MHz
100GE	161.1328 MHz	644.5313 MHz
400GE	156.25 MHz	625.0 MHz

- <transceiver> **Power Class** indicates the power class of the inserted transceiver module. Not available with SFP transceivers.

<transceiver> Control Pins

Allows the following transceiver control pin settings. Refer to the MSA standards for more information. Not available with SFP transceivers.

Note: To apply any control, first select its check box then clear it; the control is applied only when the selected check box is cleared.

- **TX Disable** (CFP2/4/8) check box (cleared by default).

Test Functions

<rate> Advanced - <transceiver> Control

- **Module Low Power Mode**¹ check box (cleared by default).
- **Module Reset** check box (cleared by default).
- **Module Power Shutdown** check box (cleared by default).

<transceiver> Status Pins

Gives the following transceiver’s pin status (refer to the MSA standards for more information). Not available with SFP transceivers.

Transceiver	Pin status
CFP2	Hi Power On, Module Ready, Module Fault, Module Absent, RX Loss of Signal, Global Alarm
CFP4 CFP8	Module Absent, RX Loss of Signal, Global Alarm
OSFP QSFP+ QSFP112 QSFP28 QSFP-DD QSFP56	Module Absent

<transceiver> MDIO/I2C Access Interface

Available with MDIO transceivers (CFPx) and I2C transceivers. For SFP28/SFP+/SFP, availability is only with EtherBERT on 88260/88460.

- **MDIO/I2C - Bulk Read**
 - **Device Address**, available with SFP28/SFP+/SFP, allows selecting the 2-wire serial interface address: **0xA0** (default) and **0xA2**.
 - **Page Select**, available with I2C, allows selecting the I2C address page: **0x00** (default) to **0xFF**. Not available when the **Device Address** selection is **0xA0**.

1. Not supported with QSFP-DD.

- **MDIO/I2C Start Address** allows selecting the MDIO/I2C start address: **0x0000** (default) to **0xFFFF** (MDIO) / **0x00FF** (I2C).
- **MDIO/I2C End Address** allows selecting the MDIO/I2C end address: **0x0000** to **0xFFFF**; default is **0x00FF**.
- **Bulk Read** button (refer to *Bulk Read* on page 983)
- **MDIO/I2C - Bulk Write** button (refer to *Bulk Write* on page 983)
- **MDIO/I2C - Read/Write**
 - **MDIO/I2C Address** allows selecting the MDIO/I2C address: **0x0000** (default) to **0xFFFF** (MDIO) / **0x00FF** (I2C).
 - **MDIO/I2C Data** allows either selecting (write) or reading the MDIO/I2C data: **0x0000** (default) to **0xFFFF** (MDIO) / **0x00FF** (I2C).

Read button reads the data of the specified **MDIO/I2C Address**.

Write button writes the specified **MDIO/I2C DATA** value to the specified **MDIO/I2C Address**.

<transceiver> TX Status

Indicates the transceiver transmission status for each optical lane.
Available with CFP2/CFP4/CFP8 transceiver.

Test Functions

<rate> Advanced - Lanes Mapping & Skew

<rate> Advanced - Lanes Mapping & Skew

Note: Where <rate>, when displayed, is the rate selected for the test. Only available with parallel interfaces. Not available: at 100G when the **RS-FEC** check box is selected; with multiple link interface.

From the test menu, tap **Functions, 40/100/200/400/800G Advanced**, and the **Lanes Mapping & Skew** tab.

TX

- **PCS/Logical Lane**, for Ethernet test applications, indicates the PCS (Ethernet test applications) or Logical (Transport Test applications) lane markers. To change the PCS/Logical lane order, see *Default/Random/Manual Mapping* on page 678.
- **Skew (Bits)** indicates the TX relative delay in bit time for each PCS/Logical lane. To change the skew values, see *Reset / Manual Skew* on page 679.

Lane / Physical Lane

Indicates the lane numbers as follows:

Rate	Lane Number
400GE (8 Lanes)	400GAUI-8 400GAUI-16
400GE (4 Lanes)	400GAUI-8 400GAUI-4
200GE (4 Lanes)	200GAUI-4
100GE (4 Lanes)	CAUI-4
OTU4 (4 Lanes)	OTL4.4

RX

- **Skew (bits)** indicates the delay in bit time between the earliest PCS/Logical lane and the current lane for the one to zero transition of the alignment marker sync bits. The received skew accuracy is ± 100 bits.
- **PCS/Logical Lane** indicates received PCS/Logical Lane markers.

Note: *If a PCS/Logical Lane marker is detected more than once, a red background is used to highlight all occurrences of this PCS/Logical Lane marker. **Duplicate** is also displayed on a red background.*

PCS/Logical Lane

Allows ordering the PCS/Logical Lane markers in either **Ascending** (1,2,3...) or **Coupled to RX**.

Alarms

For a description of each alarm, refer to **OTL on page 924** for Transport and *Ethernet - PCS Lanes* on page 918 for Ethernet.

Errors

For a description of each error, refer to **OTL on page 924** for Transport and *Ethernet - PCS Lanes* on page 918 for Ethernet.

The error values are displayed in seconds by default. Tapping on the unit allows selecting either **Seconds**, **Count**, or **Rate**.

Total indicates the total of all lanes when **Count** or **Rate** unit is selected.

Default/Random/Manual Mapping

Allows changing the lane mapping that will be used for the test. Not available with: 100 GbE client in OTU4; 800GE interface.

- **Default Mapping** sets the TX mapping to the default numerical order value which corresponds to the ascending lane order.
- **Random Mapping** sets the TX mapping in a random order. Each time the button is tapped, random alignment markers are assigned to each lane.
- **Manual Mapping** allows setting the TX mapping manually.
 - **Lane Marker and Assigned Status:**

The **Lane Marker** buttons allow assigning the corresponding lane marker to the selected PCS/Logical or xGAUI-y/CAUI/XLAUI/Physical Lane mapping (the one pointed by the arrow). Lane marker buttons are numbered from **0** to **15** for 400G, **0** to **7** for 200G, **0** to **19** for OTU4/100G, and **0** to **3** for OTU3/OTU3e1/OTU3e2/40G.

The **Assigned Status** column displays a check mark when the lane marker is assigned.
 - **PCS/Logical Lane** and **xGAUI-y/CAUI/XLAUI/Physical Lane** columns indicate the target PCS/Logical to xGAUI-y/CAUI/XLAUI/Physical mapping.
 - **Clear All** clears the lane assignments.
 - **OK** accepts the new lane mapping. The **OK** button is only available when all target PCS/Logical Lane fields are assigned including duplicates.

Note: A lane marker can be assigned more than once. If this is the case, a red background is used to highlight all occurrences of this lane marker.

Reset / Manual Skew

Allows the selection of a relative delay in bit time that will be introduced for each PCS/Logical lane.

Note: *Not available with 100 GbE client in OTU4.*

- **Reset Skew** sets all TX skew values to 0 bit time.
- **Manual Skew** allows setting the skew value for each PCS/Logical lane manually. Refer to *Manual Skew (PCS/Logical Lane)* on page 1004.

Laser ON/OFF

Allows activating the laser control per optical lane or for all lanes. Refer to *Laser ON/OFF* on page 1001.

Skew Alarm Threshold (bits)

Allows setting the threshold value that will be used to declare the **Exc. Skew** alarm (refer to *Ethernet - PCS Lanes* on page 918).

Default button restores the default alarm threshold value.

Test Functions

<rate> Advanced - Pre-Emphasis/RX EQ

<rate> Advanced - Pre-Emphasis/RX EQ

Note: Where <rate>, when displayed, is the rate selected for the test. Only available on 88460/88480/88481/88482/88800/88801 when PAM-4 electrical lanes are used either with 200GE/400GE/multiple link interface or DCO interfaces.

From the test menu, tap **Functions**, <rate> **Advanced**, and the **Pre-Emphasis** or **Pre-Emphasis/RX EQ** tab.

TX

For 88480/88481/88482/88800/88801:

- **PAM-4 Lane** indicates the lane numbers.
- **Pre Cursor 3** is selectable from -7.09 to 0 dB (25 predefined values).
- **Pre Cursor 2** is selectable from -7.09 to 0 dB (25 predefined values).
- **Pre Cursor 1** is selectable from -18.69 to 0 dB (39 predefined values).
- **Main Cursor** is selectable from 507 to 998 mVpp (45 predefined values).
- **Post Cursor** is selectable from -18.69 to 0 dB (39 predefined values).
- **Restore TX Defaults:** Reverts the TX pre-emphasis to their default values.

For 88460:

- **PAM-4 Lane** indicates the lane numbers.
- **Pre Cursor** is configurable from -1000 to 1000.
- **Main Cursor** is configurable from -1000 to 1000.
- **Post Cursor** is configurable from -1000 to 1000.
- **Lower Eye** is configurable from 500 to 1500.
- **Upper Eye** is configurable from 1500 to 2500.

- **Swing** is configurable from 60% to 120% in step of 10%.
- **Restore TX Defaults:** Reverts the TX pre-emphasis to their default values.

RX

For 88460:

- **CTLE** allows selecting the continuous time linear equalization: **0** to **9.0** dB (64 possible values).
- **DSP Mode** allows selecting the digital signal processor mode:

DSP Mode	Description
FFE+SLC	Feed-Forward Equalizer + PAM-4 Slicer
FFE+DFE	Feed-Forward Equalizer + Decision Feedback Equalizer
FFE+DFE+RC	Feed-Forward Equalizer + Decision Feedback Equalizer + PAM-4 Reflection Cancellor
FFE+SLC+LDEQ	Feed-Forward Equalizer + PAM-4 Slicer + PAM-4 Level Dependent Equalizer
FFE+SLC+RC	Feed-Forward Equalizer + PAM-4 Slicer + PAM-4 Reflection Cancellor
FFE+SLC+RC+LDEQ	Feed-Forward Equalizer + PAM-4 Slicer + PAM-4 Reflection Cancellor + PAM-4 Level Dependent Equalizer

Test Functions

<rate> Advanced - Pre-Emphasis/RX EQ

- **VGA Tracking** check box when selected (default) enables the tracking of the voltage gain amplifier.
- **Restore RX Defaults** reverts the RX CTLE, DSP Mode, and VGA Tracking to their default values.

TX/RX

- **Gray Encoding** is enabled when the check box is selected (default).

<rate> Advanced - PAM-4 Histogram

Note: Where <rate>, when displayed, is the rate selected for the test. Only available on 88460 when PAM-4 electrical lanes are used either with 200/400GE/multiple link interface (2 x 200GE, 4 x 100GE, 8 x 50GE), or 100ZR+ interface (100GAUI-2 client).

From the **Test** menu, tap **Functions**, <rate> **Advanced**, and the **PAM-4 Histogram** tab.

The PAM-4 Histogram graph displays for the selected lane the number of hits at each 160 amplitude levels (PAM-4 Symbol 0 to PAM-4 Symbol 3) once the acquire process is completed.

➤ **Scale**

Allows selecting the scale for the histogram hits (Y-axis): **Linear** (default) or **Log** (logarithmic).

➤ **PAM-4 Lane**

Allows selecting the PAM-4 lane that will be used for the histogram acquisition. The lane displayed on an amber background indicates the selected lane while the ones on a green background indicate that valid histograms have been acquired.

➤ **Acquire**

Enables the PAM-4 histogram acquisition process for the selected lane. The green LED is on when the acquisition is enabled.

To acquire the PAM-4 histogram for other lane(s), select another lane either by tapping on its number or using the arrow while the acquisition is still enabled. Repeat for all required lanes.

Note: Reactivating the acquisition clears all previously acquired histograms.

Test Functions

APS

APS

From the **Test** menu, tap **Functions**, and the **APS** tab.

TX/RX

- **Switching Mode**, available for both TX and RX, selects the switching mode: **Linear** (default) or **Ring**.
- **K1**

Request: Bits 1 through 4 of the K1 byte.

Bits 1 to 4	Request	
	Linear mode	Ring mode
0000	No Request ^a	No Request (default) ^a
0001	Do Not Revert	Reverse Request - Ring
0010	Reverse Request	Reverse Request - Span
0011	Unused	Exerciser - Ring
0100	Exerciser	Exerciser - Span
0101	Unused	Wait-to-Restore
0110	Wait-to-Restore	Manual Switch - Ring
0111	Unused	Manual Switch - Span
1000	Manual Switch	Signal Degrade - Ring
1001	Unused	Signal Degrade - Span
1010	Signal Degrade - Low Priority	Signal Degrade (Protection)
1011	Signal Degrade - High Priority	Signal Fail - Ring
1100	Signal Fail - Low Priority	Signal Fail - Span
1101	Signal Fail - High Priority	Force Switch - Ring
1110	Force Switch	Force Switch -Span
1111	Lockout of Protection	Lockout of Protection - Span/SF - P

a. Default value.

**Channel (Linear switching mode) or
Destination Node ID (Ring switching mode):**
Bits 5 through 8 of the K1 byte.

Bits 5 to 8	Channel ID (Linear mode)	Destination Node ID (Ring mode)	Bits 5 to 8	Channel ID (Linear mode)	Destination Node ID (Ring mode)
0000	0 - Null ^a	0 ^a	1000	8	8
0001	1	1	1001	9	9
0010	2	2	1010	10	10
0011	3	3	1011	11	11
0100	4	4	1100	12	12
0101	5	5	1101	13	13
0110	6	6	1110	14	14
0111	7	7	1111	15 - Extra Traffic	15

a. Default value.

➤ K2

**Protected Channel (Linear switching mode) or
Source Node ID (Ring switching mode):**
Bits 1 through 4 of the K2 byte.

Bits 1 to 4	Protected Channel (Linear mode)	Source Node ID (Ring mode)	Bits 1 to 4	Protected Channel (Linear mode)	Source Node ID (Ring mode)
0000	0 - Null ^a	0 ^a	1000	8	8
0001	1	1	1001	9	9
0010	2	2	1010	10	10
0011	3	3	1011	11	11
0100	4	4	1100	12	12
0101	5	5	1101	13	13
0110	6	6	1110	14	14
0111	7	7	1111	15 - Extra Traffic	15

a. Default value.

Test Functions

APS

Architecture (**Linear** switching mode) or **Bridge Request** (**Ring** switching mode):
Bit 5 of the K2 byte. The default setting is **1+1** for Linear switching mode and **Short Path Request** for Ring switching mode.

Bit 5	Architecture (Linear mode)	Bridge Request (Ring mode)
0	1+1 ^a	Short Path ^a
1	1:n	Long Path

a. Default value.

Operation Mode: Bits 6 through 8 of the K2 byte.

Bits 6 to 8	Linear mode	Ring mode
000	Reserved ^a	Idle ^a
001	Reserved	Bridged
010	Reserved	Bridged and Switched
011	Reserved	Extra Traffic - Protection
100	Unidirectional	Reserved
101	Bidirectional	Reserved
110	RDI-L ^b /MS-RDI ^c	RDI-L ^b /MS-RDI ^c
111	AIS-L ^b /MS-AIS ^c	AIS-L ^b /MS-AIS ^c

- a. Default value.
- b. Operation mode for SONET.
- c. Operation mode for SDH.

BFD (Bidirectional Forwarding Detection)

Note: Only available with IPv4 Network Layer (refer to IP on page 355) in single port topology for rates up to 100GE (excluding 25GE/50GE).

From the **Test** menu, tap **Functions**, and the **BFD** tab.

Bidirectional Forwarding Detection

- **Local IP Address** displays the configured interface **Source IP Address** (refer to IP on page 355).
- **Remote IP Address** allows configuring the destination IP Address.
- **IP TOS/DS** allows entering the type of service: **00** (default) to **FF**.
- **Desired Min TX Interval** defines the minimum interval the local module would like to use when transmitting BFD control packets: **100** ms (default) to **1** s.
- **Required Min RX Interval** defines the minimum interval between received BFD control packets the local module requires: **100** ms (default) to **1** s.
- **Detect Multiplier** is a value that is multiplied by the negotiated transmit interval giving the detection time for the receiving system. Choices are **1** to **255** (**3** by default).
- **Session State** indicates the local session state: **Down**, **Init**, **Up**.
- **Diagnostic** indicates the reason of the last local session state change.
- **Connect** starts/stops the BFD process.

Test Functions

BFD (Bidirectional Forwarding Detection)

Statistics

- **Packets Transmitted** indicates the number of sent BFD control packets.
- **Packets Received** indicates the number of received BFD control packets.

Neighbor Status

- **Session State** reports the remote session state: **Admin Down**, **Down**, **Init**, or **Up**.
- **Diagnostic** reports the reason of the remote last session state change.
- **Desired Min TX Interval** reports the remote desired minimum TX interval.
- **Required Min RX Interval** reports the remote required minimum RX interval.
- **Detect Multiplier** reports the remote **Detect Multiplier** value.

Client Offset

Note: Available with OTN BERT test application with **1GbE** client and **Pattern** client with **ODUflex** multiplexing.

From the **Test** menu, tap **Functions**, and the **Client Offset** tab.

TX Frequency

Note: TX Frequency is not available in **Through** / **Through Intrusive** topology.

- **Frequency (GHz)** indicates the frequency (nominal frequency + port frequency offset + client frequency offset) used for transmission.
- **Offset (ppm)** check box, when selected (cleared by default), allows setting the client frequency offset that will be generated. Use the “+” or “-” button to respectively increment or decrement the client frequency offset value based on the defined **Increment/Decrement Size**, or directly type the frequency offset value in the field.
- **Increment/Decrement Size (ppm)** allows setting the increment/decrement value (from 0.1 to either 115) that will be used when changing the frequency offset using the “+” or “-” button.

Client	Nominal Frequency	Offset ^a
1GbE	1250000000 bps	± 115 ppm
Pattern in ODUflex	Nominal bit rate configured (refer to <i>Nominal Bit Rate</i> on page 1015).	± 115 ppm ^b

- a. The Client frequency offset range is guaranteed for a clock source signal at 0 ppm offset. In the event that the clock source signal already has an offset, the output signal may exhibit an offset larger than the range specified. For example, if the clock source signal has an offset of +20 ppm (configured on the Signal interface), the Client frequency offset could be up to 135 ppm (115 ppm + 20 ppm).
- b. The Client offset function does not allow the generation of a signal with a rate above 100 % of the TX rate. For example, if the TX Rate is set to 100 %, the allowed offset range will be -115 ppm to 0 ppm.

Test Functions

Client Offset

RX Frequency

- **Frequency (GHz)** indicates the frequency of the input signal.

Client	Measurement range
1GbE	1250000000 $\pm$ 120 ppm
Pattern in ODUflex	Expected Frequency $\pm$ 120 ppm (see page 691)

- **Offset (ppm)** indicates the frequency offset between the standard rate specification and the rate at the input signal.

Note: For both **Frequency** and **Offset** a background color is used to indicate if the received client signal rate meets the standard rate specifications. Not available with Pattern in ODUflex when the **Frequency Offset Analysis** check box is cleared.

Background color	Description
Green	The frequency is in range.
Red	The frequency is out-of-range or there is a LOC Lane condition. LOC is also displayed.
Gray	Pending state.

Client	Standard Rate Specification
1GbE	1250000000 $\pm$ 12500 bps ($\pm$ 100 ppm)
Pattern in ODUflex	Expected Frequency $\pm$ 100 ppm (see page 691)

- **Max. Negative Offset (ppm)** indicates the maximum negative frequency offset between the standard rate specification and the rate from the received signal.

- **Max. Positive Offset (ppm)** indicates the maximum positive frequency offset between the standard rate specification and the rate from the received signal.

Note: *The following parameters are only available with ODUflex mapped to pattern.*

- **Frequency Offset Analysis** check box, when selected, enables the frequency offset measurements. This setting is enabled by default for **Coupled** topology, and disabled for **Through / Through Intrusive** topology.
- **Expected Frequency (GHz)** is available when the **Frequency Offset Analysis** check box is selected.

For **Coupled** topology, the frequency is set to the configured **TX Rate** (refer to either *EtherBERT and Unframed BERT* on page 272 or *BERT and Unframed BERT* on page 234).

For **Through / Through Intrusive** topology, enter the expected frequency in GHz.

Test Functions

FDL - Bit-Oriented Message

FDL - Bit-Oriented Message

Allows setting and configuring the Bit-Oriented Messages (BOM) of the Extended Super-Frame (ESF).

Note: *FDL is only available for DS1 interface with ESF framing. For Dual RX test, FDL is only available for the DS1 TX/RX port 1.*

From the **Test** menu, tap **Functions**, **FDL**, and the **Bit-Oriented Message** tab.

Generated Messages

► Priority

Codeword: The Bit-Oriented Message codewords are priority messages sent over the Data-Link. These messages are mostly used for networking operation and maintenance. A Bit-Oriented Message consists of 8 consecutive ones followed by a byte starting and ending by zeros.

Codeword	Pattern
RAI	00000000 11111111
Loopback Retention and Acknowledge	00101010 11111111
RAI-CI	00111110 11111111

Injects generates the selected codeword priority message.

► Command/Response

Amount allows the selection of the number of message to be generated. Choices are **1** to **15**. The default value is **10**.

Inject manually generates the selected amount of messages.

Codeword

Command/Response Codeword	Pattern	Command/Response Codeword	Pattern
Line Loopback Activate	00001110 11111111	Protection Switch Line 22	01101100 11111111
Line Loopback Deactivate	00111000 11111111	Protection Switch Line 23	01101110 11111111
Payload Loopback Activate	00010100 11111111	Protection Switch Line 24	01110000 11111111
Payload Loopback Deactivate	00110010 11111111	Protection Switch Line 25	01110010 11111111
Reserved for Network Use	00010010 11111111 ^a	Protection Switch Line 26	01110100 11111111
Universal Loopback (Deactivate)	00100100 11111111	Protection Switch Line 27	01110110 11111111
ISDN Line Loopback (NT2)	00101110 11111111	Protection Switch Acknowledge	00011000 11111111
CI/CSU Line Loopback (NT1)	00100000 11111111	Protection Switch Release	00100110 11111111
For network use	00011100 11111111 ^b	Do Not use for Synchronization	00110000 11111111
Protection Switch Line 1 b	01000010 11111111	Stratum 2 Traceable	00001100 11111111
Protection Switch Line 2	01000100 11111111	SONET Minimum Clock Traceable	00100010 11111111
Protection Switch Line 3	01000110 11111111	Stratum 4 Traceable	00101000 11111111
Protection Switch Line 4	01001000 11111111	Stratum 1 Traceable	00000100 11111111
Protection Switch Line 5	01001010 11111111	Synchronization Traceability Unknown	00001000 11111111
Protection Switch Line 6	01001100 11111111	Stratum 3 Traceable	00010000 11111111
Protection Switch Line 7	01001110 11111111	Reserved for Network Synchronization	01000000 11111111
Protection Switch Line 8	01010000 11111111	Transmit Node Clock (TNC)	01111000 11111111
Protection Switch Line 9	01010010 11111111	Stratum 3E Traceable	01111100 11111111
Protection Switch Line 10	01010100 11111111	Under study for maintenance	00101100 11111111
Protection Switch Line 11	01010110 11111111	Under study for maintenance	00110100 11111111
Protection Switch Line 12	01011000 11111111	Reserved for network use	00010110 11111111
Protection Switch Line 13	01011010 11111111	Reserved for network use	00011010 11111111
Protection Switch Line 14	01011100 11111111	Reserved for network use	00011110 11111111
Protection Switch Line 15	01011110 11111111	Reserved for network use	00111010 11111111
Protection Switch Line 16	01100000 11111111	Reserved for customer	00000110 11111111
Protection Switch Line 17	01100010 11111111	Reserved for customer	00001010 11111111
Protection Switch Line 18	01100100 11111111	Reserved for customer	00000010 11111111
Protection Switch Line 19	01100110 11111111	Reserved for customer	00110110 11111111
Protection Switch Line 20	01101000 11111111	Reserved for customer	00111100 11111111
Protection Switch Line 21	01101010 11111111	Reserved for customer	01111010 11111111

- a. Loopback Activate.
b. Indication of NT1 power off.

Receive Messages

- **Link Activity** indicates the activity of the following parameters during the last second of measurement.
 - **Idle** indicates that only idle codes have been detected in the last second.
 - **Priority** indicates that at least one valid priority message has been detected in the last second.
 - **C/R** (Command/Response) indicates that a least one valid command and response has been detected in the last second.
 - **Unassigned** indicates that at least one unassigned message has been detected in the last second. Therefore, since an unassigned message is part of a Command/Response codewords, the Command/Response LED will also be red.
 - **PRM** indicates that at least one PRM has been detected in the last second.
- **Priority:** The Bit-Oriented Messages are priority messages send over the Data-Link. These messages are mostly used for networking operation and maintenance. A Bit-Oriented Message consists of 8 consecutive 1s followed by a byte starting and ending by zeros.

Current indicates the priority message detected in the last second. If no priority message has been detected, "--" is displayed.

Previous indicates the last priority message detected excluding the current message. If no priority message has been detected since the beginning of the test, "--" is displayed.

Note: See *Priority on page 692* for the list of possible priority codeword messages.

➤ **Command/Response**

Current indicates the command/response message detected in the last second. If no priority message has been detected, "--" is displayed.

Previous indicates the last command/response message detected excluding the current message. If no command/response message has been detected since the beginning of the test, "--" is displayed.

Note: See *Command/Response on page 692* for the list of possible Command/Response codeword messages.

Test Functions

FDL - Performance Report Message

Note: FDL PRM is only available for DS1 interface with ESF framing. For Dual RX test, FDL is only available for the DS1 TX/RX port 1. For NI/CSU Emulation, only available in the RX direction.

From the **Test** menu, tap **Results**, tap the **FDL**, and **Performance Report Message** tab.

Generated Messages

- **Circuit** allows the selection of the circuit type: **CI to Network** (default) or **Network to CI**.
- **ANSI T1-403** check box when selected allows the generation of a compliant ANSI T1.403 PRM Message.
- **Injection**
Single sends the selected PRM Message(s) manually.
Continuous generates the selected PRM Message(s) continuously.
- **Event Count** indicates the number of PRM messages sent.
- **PRM Bit Events** allows the activation of the following PRM bit events. All PRM bit events are disabled by default.

G1: CRC = 1	FE: Frame sync. bit error ≥ 1
G2: 1 < CRC ≤ 5	LV: Line code violation event ≥ 1
G3: 5 < CRC ≤ 10	LB: Payload loopback activated
G4: 10 < CRC ≤ 100	SL: Slip ≥ 1
G5: 100 < CRC ≤ 319	R Bit (Reserved - Default value is 0)
G6: CRC ≥ 320	U1: Bit
SE: Severely errored framing ≥ 1	U2: Bit

Received Messages

- **Event Counts** lists received PRM bit event counts. See **PRM Bit Events** below.
- **Report Content** lists received performance information. See **Performance Information** below.
- **Circuit** indicates the selected circuit type: **CI to Network** or **Network to CI**.
- **Valid Event Count** indicates the number of valid PRM messages received.
- **Link Activity**, see page 694 for more information.
- **PRM Bit Events** table, available when the **Event Counts** button is selected, reports the count of the detected valid PRM bit events.

G1: CRC = 1 G2: $1 < \text{CRC} \leq 5$ G3: $5 < \text{CRC} \leq 10$ G4: $10 < \text{CRC} \leq 100$ G5: $100 < \text{CRC} \leq 319$ G6: $\text{CRC} \geq 320$	SE: Severely errored framing ≥ 1 FE: Frame sync. bit error ≥ 1 LV: Line Code Violation ≥ 1 LB: Payload loopback activated SL: Slip ≥ 1

Test Functions

FDL - Performance Report Message

- **Performance Information** table, available when the **Report Content** button is selected, reports the time t0, t0-1, t0-2, and t0-3 for each PRM.

Time

- **T0** represents the valid PRM message received in the last second of measurement (bytes 5 and 6).
- **T0-1** represents the message one PRM ago (bytes 7 and 8).
- **T0-2** represents the message two PRM ago (bytes 9 and 10).
- **T0-3** represents the message three PRM ago (bytes 11 and 12).

PRM

G3: $5 < \text{CRC Error Event} \leq 10$

LV: Line Code Violation Event ≥ 1

G4: $10 < \text{CRC Error Event} \leq 100$

U1: Under study for synchronization

U2: Under study for synchronization

G5: $100 < \text{CRC Error Event} \leq 319$

SL: Controlled Slip Event ≥ 1

G6: CRC Error Event ≥ 320

FE: Frame Sync. Bit Error Event ≥ 1

SE: Severely-Errored Framing Event ≥ 1

LB: Payload Loopback Activated

G1: CRC Error Event = 1

R: Reserved

G2: $1 < \text{CRC Error Event} \leq 5$

Nm and **Nl:** One-second report modulo 4 counter.

FEAC

The Far-End Alarm and Control signal (FEAC) provides Communication Channel capability over a DS3 in a network applications using C-bit Parity configuration (see page 423).

From the test menu, tap **Functions**, and the **FEAC** tab.

Generated Messages

Allows configuring and sending alarms/status information and control signals (loopback commands) to other network elements.

➤ Alarm/Status and Unassigned

- **Codeword** allows the selection of the codeword alarm/status to be generated either manually or continuously.

The FEAC message format is a 16 bit codeword (0xxxxxx0 11111111) with the rightmost bit transmitted first. The 0xxxxxx0 represents the message codeword.

Codeword		
DS3 Equipment Failure SA (00110010)	Single DS1 LOS (00111100)	User Defined (00100000)
DS3 Loss of Signal (LOS) (00011100)	DS1 Equipment Failure NSA (00000110)	User Defined (00100010)
DS3 Out-of-Frame (00000000)	User Defined (00000010)	User Defined (00101000)
DS3 AIS Received (00101100)	User Defined (00000100)	User Defined (00101110)
DS3 Idle Signal Received (00110100)	User Defined (00001000)	User Defined (00110000)
DS3 Equipment Failure NSA (00011110)	User Defined (00001100)	User Defined (00111110)
DS3 NUI Loop Up (00010010)	User Defined (00010000)	User Defined (01000000)
DS3 NUI Loop Down (00100100)	User Defined (00010100)	User Defined (01111010)
Common Equipment Failure NSA (00111010)	User Defined (00010110)	User Defined (01111100)
Multiple DS1 LOS (00101010)	User Defined (00011000)	User Defined (01111110)
DS1 Equipment Failure SA (00001010)	User Defined (00011010)	

- **Mode** is the alarm/status injection mode: **Manual** or **Continuous**.

Test Functions

FEAC

- **Amount** is the amount of codeword to be generated: **1 to 15** (default is **10**).
- **Inject** generates error(s) according to the Codeword and mode selected.
- **Loopback Commands**
 - **Control**

Codeword is the loopback control codeword to be generated: **Line Loopback Activate (00001110)** - (Default) or **Line Loopback Deactivate (00111000)**.

Amount is the number of **Control Codeword** to be generated: **1 to 15** (default is **10**).
 - **Channel**

Codeword is the channel codeword to be generated.

Channel Codeword		
DS3 Line (00110110)	DS1 Line-No10 (01010100)	DS1 Line-No20 (01101000)
DS1 Line-No1 (01000010)	DS1 Line-No11 (01010110)	DS1 Line-No21 (01101010)
DS1 Line-No2 (01000100)	DS1 Line-No12 (01011000)	DS1 Line-No22 (01101100)
DS1 Line-No3 (01000110)	DS1 Line-No13 (01011010)	DS1 Line-No23 (01101110)
DS1 Line-No4 (01001000)	DS1 Line-No14 (01011100)	DS1 Line-No24 (01110000)
DS1 Line-No5 (01001010)	DS1 Line-No15 (01011110)	DS1 Line-No25 (01110010)
DS1 Line-No6 (01001100)	DS1 Line-No16 (01100000)	DS1 Line-No26 (01110100)
DS1 Line-No7 (01001110)	DS1 Line-No17 (01100010)	DS1 Line-No27 (01110110)
DS1 Line-No8 (01010000)	DS1 Line-No18 (01100100)	DS1 Line-No28 (01111000)
DS1 Line-No9 (01010010)	DS1 Line-No19 (01100110)	DS1 Line-All (00100110)

- Amount** is the number of Channel Codeword to be generated: **1 to 15** (Default is **10**).
- **Inject** generates the defined loopback command.

Received Messages

Displays current and previous alarms/status and loopback commands as well as the link activity for the received DS3 signal.

➤ Link Activity

- **None (All 1's):** An all ones pattern (11111111 11111111) has been detected in the last second.
- **Alarm/Status:** An Alarm/Status codeword has been detected in the last second. An Alarm/Status is only detected when receiving at least 10 consecutive occurrences of a specific codeword.
- **Loopback:** A Loopback command message has been detected in the last second. A valid loopback command is detected only when receiving 10 consecutive occurrences of a specific **Loopback Command** immediately followed by 10 occurrences of a specific **Channel Codeword**.
- **Unassigned:** An unassigned message has been detected in the last second. An Unassigned message is only detected when receiving at least 10 consecutive occurrences of a specific unassigned codeword. An **Alarm/Status** codeword is also reported since **Unassigned** is part of the **Alarm/Status** group.
- **Alarm/Status and Unassigned** displays the current and previously received **Codeword** messages.
 - **Current** indicates the last valid message, if any, received in the last second of measurement.
 - **Previous** indicates the message, if any, that was received just before the current measurement.

Test Functions

FEAC

➤ Loopback Commands

- **Current** displays the valid message received in the last second of measurement. A valid message is detected only when receiving 10 consecutive occurrences of a specific **Loopback Command** immediately followed by 10 occurrences of a specific **Channel Codeword**.
- **Previous** displays the last valid message received excluding the actual **Current** message.

Filters

Filters allows gathering statistics according to the programmed filters. Filters provide the capability to analyze a specific stream's behavior in order to monitor a single protocol's behavior, perform SLA verification, or precisely troubleshoot unwanted behavior. Up to 10 filters having up to four operands each can be defined and enabled.

Note: *Not available with: eCPRI dual port topology; multiple link interface; Through Mode 400GE.*

Note: *Not available with and eCPRI dual port topology.*

From the test menu, tap **Functions**, and the **Filters** tab.

- **<Port #>** button, when available, allows selecting the port to be displayed. For **Dual Port** topology both ports are available. For the **Through Mode** test application, filters apply only to the **Primary Port**.
- **Filter** allows the selection of the filter number (1 to 10). The filter criteria, if defined, will be displayed. A filter used (enabled) for data capture will not be configurable and the message **Filter in use for data capture** is displayed.
- **Enable** check box when selected enables the currently selected filter. The filter has to be configured first before enabling it. If the filter configuration contains errors, it will not be possible to enable it. A filter can be enabled or disabled even when the test is running. It is not possible to modify or disable a filter that is already in use for capture until either another filter or **Interface** (see *Capture Source* on page 741) is assigned to capture.
- **Enabled Time** indicates the time during which the filter is enabled.
- **Assign to Capture** assigns the selected filter for packet capture (see *Packet Capture* on page 741).

Filter Configuration

The filter configuration section allows configuring the filter criteria for the selected filter. The configuration is only possible when the **Enable** check box is cleared. Refer to *Filter Configuration* on page 991.

Filter Statistics

Indicates throughput statistics of the frame matching the configured filter's criteria.

- **Line Utilization** indicates the percentage of line rate utilization.
- **Ethernet BW** (Bandwidth) indicates the receiving data rate expressed in Mbit/s.
- **Frame Rate** indicates the receiving number of frames (including bad frames) in frame/s.
- **Frame Count** indicates the number of frame matching the configured filter's criteria.
- **Error Count** indicates respectively the number of frames matching the configured filter's criteria having **IP Checksum**, **UDP Checksum**, **TCP Checksum**, **FCS**, **Jabber**, **Oversize**, **Runt**, or **Undersize** errors. Refer to *Ethernet* on page 916 and **IP/UDP/TCP on page 921** for more information on errors.

FlexE Advanced

From the test menu, tap **Functions**, and the **FlexE Advanced** tab.

TX

- **PHY** indicates the TX PHY number assigned to the port.
- **Skew (ns)** indicates the TX relative delay in nanoseconds for each PHY. To change the skew values, see *Manual Skew (PHY)* on page 1005.

Port

Port indicates the module's port number.

RX

- **Skew (ns)** indicates the delay in nanoseconds between the earliest PHY and the current PHY for the one to zero transition of the alignment marker sync bits. The received skew accuracy is ± 100 bits.
- **PHY** indicates the received PHY number.

Alarms / Errors

For a description of each alarm/error, refer to *PHY* on page 926.

The error values are displayed in seconds by default. Tapping on the unit allows selecting either **Seconds**, **Count**, or **Rate**.

Reset Skew / Manual Skew

Allows the selection of a relative delay in nanoseconds that will be introduced for each PHY.

- **Reset Skew** sets all TX skew values to 0 ns.
- **Manual Skew** allows setting the skew value for each PHY manually. Refer to *Manual Skew (PHY)* on page 1005.

PHY Skew Alarm Threshold (ns)

- **PHY Skew Alarm Threshold (ns)** allows setting the threshold value that will be used to declare the **Excessive PHY Skew** alarm: **50** ns to **1000** ns (default is **300** ns).
- **Default** restores the default alarm threshold value.

GMP

Note: Available with Transport test applications with either payload type 21 (PT21) or one of the following clients: **1GbE**, **40GbE**, **100GbE**, **Ethernet (flex/GFP-F)**, or **SONET/SDH (through ODU0)**.

From the **Test** menu, tap **Functions**, and the **GMP** tab.

- **Channel** available with Multi-Channel OTN allows the selection of the channel number.

Generic Mapping Procedure

- **TX Cm** indicates the minimum and maximum Cm value transmitted during the test.
- **TX CnD** indicates the minimum and maximum CnD value transmitted during the test.
- **RX Cm** indicates the minimum and maximum Cm value captured during the test.
- **RX CnD** indicates the minimum and maximum CnD value captured during the test.

OH BERT

The OH BERT validates the integrity of some overhead bytes on the top layer of an OTN test signal. The OH bytes are bundled as group for test purposes.

From the **Test** menu, tap **Functions**, and the **OH BERT** tab.

Note: *Only supported with Coupled topology.*

OH BERT

The **OH BERT** check box when selected (cleared by default), enabled the OH BERT/SYNC generation and monitoring.

Mode

Allows selecting the test operating mode:

- **BERT** (default) is a typical BER test that is executed on the selected group of OH bytes, a PRBS15 test pattern is mapped in each individual OH group for BER evaluation.
- **SYNC** is a special test which validates that the content of each selected OH group is carried by the same OTUk frame throughout its transfer over the network.

Invert PRBS15 Pattern

Invert PRBS15 Pattern check box, when selected (cleared by default), inverts the test pattern meaning that every 0 will be changed for 1 and every 1 for 0. For example, the pattern 1100 will be sent as 0011. Available with BERT mode only.

OTUx and ODUx

Overhead group check boxes:

Layer	Overhead Group	Number of Bytes	OH Bytes Coordinate	
			Row	Column
OTU	GCC0	2	1	11,12
	RES	2	1	13,14
ODU	GCC1	2	4	1, 2
	GCC2	2	4	3, 4
	APS/PCC	4	4	5-8
	PM&TCM	1	2	3
	TCM ACT	1	2	4
	FTFL ^a	1	2	14
	EXP	2	3	13, 14
	RES	8	2 4	1,2 9-14
	TCM1 ^b	3	3	7, 8, 9
	TCM2 ^b	3	3	4, 5, 6
	TCM3 ^b	3	3	1, 2, 3
	TCM4 ^b	3	2	11, 12, 13
	TCM5 ^b	3	2	8, 9, 10
	TCM6 ^b	3	2	5, 6, 7

- a. Only configurable when the test is not running. Once enabled, the FTFL configuration and alarm generation and monitoring in the main test are not available for the top ODU layer.
- b. Only configurable when not enabled in the test and when the test is not running.

Test Functions

OH BERT

The current and history status for enabled overhead group is as follows:

Status	Mode	
	BERT	SYNC
Green	No alarms/errors.	Overhead group bytes are synchronized.
Red	Alarms/errors condition detected.	Un-synchronized overhead group bytes condition detected.
Gray	Pending state	

BERT

- Overhead group selector: Allows selection of the overhead group on which Pattern Loss condition and the Bit error statistics will be reported. Only enabled overhead group from OTUx/ODUx are listed.
- **Pattern Loss** indicates that the PRBS15 sequence synchronization is lost.
- **Bit Error** indicates that bit errors are detected on the selected overhead group bytes.

Bit Error

- Overhead group selector: Allows selection of the overhead group on which bit error will be injected. Only enabled overhead group from OTUx/ODUx are listed; All selects all enabled overhead group.
- **Inject** generates bit errors on the selected overhead group bytes.

Reset

Clears all OTUx/ODUx status as well as **Pattern Loss** and **Bit Error** statistics.

OH - FlexE

Allows respectively modifying the FlexE overhead information to be transmitted (**TX**) or viewing (**RX**) the overhead information received.

From the test menu, tap **Functions**, **OH**, then either the **TX** or **RX** tab.

- **FlexE PHY Number** allows selecting the FlexE PHY to be displayed.
- **FlexE PHY / Instance Number** allows selecting for which FlexE PHY/Instance the information is displayed.
- **Frame** allows selecting for which frame the OH bytes is displayed: **0** to **31** for 100G instance; **0** to **15** for 50G interface.
- **Default FlexE OH** returns all TX overhead bytes to their factory default values.

FlexE OH Frame Summary

Block 1

- **SH** (Sync Header), bit 0-1, is set to **10**.
- **Type**, bit 0-7, is set to **0x4B**.

Note: *Bits 8-11 (**C**, **OMF**, **RPF/Res**, and **SC/Res**) are reserved bits (**Res**) set to **0** for unequipped instances.*

- **C** (Calendar), bit 8, indicates the calendar in use: **A** or **B**. The calendar can be changed from the setup **FlexE Group** page.
- **OMF** (Overhead Multiframe Indicator), bit 9, is set to **0** for the first sixteen overhead frames of the overhead multiframe and to **1** for the remaining sixteen frames.
- **RPF/Res** (Remote PHY Fault / Reserved), bit 10 for the first instance of the PHY, informs the far-end shim of a locally detected failure of the PHY. The bit value can be changed by injecting the **Remote PHY Fault** alarm from the results **Alarms/Errors** page. For other instances RPF is replaced by a reserved bit.

Test Functions

OH - FlexE

- **SC/Res** (Synchronization Configuration / Reserved), bit 11 for the first instance of the PHY, indicates when set to **1** (default is **0**) that the group supports a synchronization messaging channel. For other instances SC is replaced by a reserved bit set to **0** (default) and can be overwritten.
- **Group** (FlexE Group), bit 12-31, indicates the FlexE Group number. The group number can be changed from the setup **FlexE Group** page for equipped instances. For an unequipped instance the FlexE Group number is 0 and is not configurable.
- **O** (O Code), bits 32-35, is set to **05** identifying a FlexE overhead.
- **0 00 00 00** (000_0000 Code), bit 36-63, indicates the 000_0000 Code.

Note: *Block 2 to 8 are replaced by **Unequipped** when the selected instance is unequipped.*

Block 2

- **SH** (Sync Header), bit 0-1, is set to **01**.
- **C** (Calendar), bit 0, indicates the calendar in use: **A** or **B**. The calendar can be changed from the setup **FlexE Group** page.
- **FlexE Map** reports the FlexE Map bits over the frames. For 100G instance there are 256 bits over 32 frames; bits 1 to 254 contain the mapping information; bits 0 and 255 are reserved. For 50G instance there are 128 bits over 16 frames; bits 1 to 126 contain the mapping information; bits 0 and 127 are reserved.

The table on the left displays the FlexE Map hexadecimal and binary values for each frame. Select a frame to display its bit mapping on the **FlexE Map [frame#]** table.

The **FlexE Map [frame#]** table displays the FlexE PHY/Instance Map bit mapping for the selected frame. The first row indicates the position of the bits which are 1 to 8; the second row the binary value of each bit; the third row the PHY/Instance Map bit numbers for the selected frame.

- **Instance Number**, bit 9-16, indicates the FlexE PHY/Instance number.
- **Reserved**, bit 17-63, are for future FlexE implementation and are configurable: **00** to **7F** for the first 7 bits; **00** to **FF** for the remaining bytes.

Block 3

- **SH** (Sync Header), bit 0-1, is set to **01**.
- **C** (Calendar), bit 0, indicates the calendar in use: **A** or **B**. The calendar can be changed from the setup **FlexE Group** page.
- **Client Calendar / Reserved**

Client Calendar, bit 1-32 available for frame 0 to 19 for 100G instance and 0 to 9 for 50G instance, indicates the client ID associated to both calendar A (bit 1-16) and calendar B (bit 17-32) for each frame. **U** indicates an unassigned calendar.

Reserved, bit 1-32 available for frame 20 to 31 for 100G instance and 10 to 15 for 50G instance, are for future FlexE implementation and are configurable per byte: **00** (default) to **FF**.
- **CR** (Calendar Switch Request), bit 33, is configurable as **A** or **B** calendar. The default value corresponds to the selected calendar (**C** bit).
- **CA** (Calendar Switch Acknowledge), bit 34, is configurable as **A** or **B** calendar. The default value corresponds to the selected calendar (**C** bit).
- **Reserved**, bit 35-47, are for future FlexE implementation and are configurable: **00** to **1F** for the first 5 bits; **00** to **FF** for the remaining bytes.
- **CRC-16** (Cyclic Redundancy Check-16), bits 48-63, indicates the calculated CRC over D1, D2, and D3 bytes of the ordered set in overhead block 1, all eight octets after the sync header of overhead block 2, and the first six octets after the sync header of overhead block 3.

Test Functions

OH - FlexE

Block 4/5

- **SH** (Sync Header), bit 0-1, is configurable as **01** or **10** (default).
- **Management Channel - Section**, bit 0-63, are configurable per byte from **00** to **FF** (default is **1E** for the first byte and **00** for the remaining bytes). Available with the first instance.

Note: *The combination of the **SH** and **Management Channel - Section** byte default values corresponds to an Idle Control Block.*

- **Reserved**, bit 0-63, are configurable per byte: **00** (default) to **FF**. Available with the second and subsequent instances.

Block 6

- **SH** (Sync Header), bit 0-1, is configurable as **01** or **10** (default).
- **Management Channel - Shim To Shim**, bit 0-63, are configurable per byte: **00** to **FF** (default is **1E** for the first byte and **00** for the remaining bytes). Available with the first instance when SC bit is set to 0.
- **Management Channel - Synchronization Channel**, bit 0-63, are configurable per byte from **00** to **FF** (default is **1E** for the first byte and **00** for the remaining bytes). Available with the first instance when SC bit is set to 1.

Note: *The combination of the **SH** and **Management Channel - Shim To Shim / Management Channel - Synchronizaton Channel** byte default values corresponds to an Idle Control Block.*

- **Reserved**, bit 0-63, are configurable per byte: **00** (default) to **FF**. Available with the second and subsequent instances.

Block 7/8

- **SH** (Sync Header), bit 0-1, is configurable as **01** or **10** (default).
- **Management Channel - Shim To Shim**, bit 0-63, are configurable per byte: **00** to **FF** (default is **1E** for the first byte and **00** for the remaining bytes). Available with the first instance when SC bit is set to 0.

Note: *The combination of the **SH** and **Management Channel - Shim To Shim** byte default values corresponds to an Idle Control Block.*

- **Reserved**, bit 0-63, are configurable per byte: **00** (default) to **FF**. Available with the second and subsequent instances.

OH - GFP-F/GFP-T

Note: Available with OTN BERT test application with **1GbE (GFP-T)**, **10GbE (GFP-F)**, or **Ethernet (flex/GFP-F)** client.

From the **Test** menu, tap **Functions**, **OH** tab, and **GFP-F/GFP-T** sub tab.

➤ **Core Header**

PLI and **cHEC** are not configurable.

➤ **Type Header**

The following settings are available for **Client Data** and **Client Management** frame types.

- **PTI** (Payload Type Identifier) allows overwriting the Payload Type Identifier.

PTI	Description
000	Client Data Frame
100	Client Management Frame
001, 010, 011, 101, 110, and 111	Reserved

- **PFI** (Payload Frame Check Sequence Identifier) allows overwriting the Payload FCS Indicator.

PFI	Description
0	FCS Absent
1	FCS Present

- **EXI** (Extension Header Identifier) allows overwriting the Extension Header Identifier.

EXI	Description
0000	Null Extension Header
0001	Linear Frame
0010	Ring Frame
0011 to 1111	Reserved

- **UPI** (User Payload Identifier) allows overwriting the User Payload Identifier.

UPI	Description for PTI = 000	Description for PTI = 100
0000 0000 1111 1111	Reserved and not available	Reserved
0000 0001	Frame-Mapped Ethernet	Client Signal Fail (Loss of Client Signal)
0000 0010	Mapped PPP Frame	Client Signal Fail (Loss of Character Synchronization)
0000 0011	Transparent Fibre Channel	Client Defect Clear Indication (DCI)
0000 0100	Transparent FICON	Client Forward Defect Indication (FDI)
0000 0101	Transparent ESCON	Client Reverse Defect Indication (RDI)
0000 0110	Transparent GbE	
0000 0111	Reserved for future use	
0000 1000	Frame-Mapped Multiple Access Protocol over SDH (MAPOS)	
0000 1001	Transparent DVB ASI	
0000 1010	Framed-Mapped IEEE 802.17 Resilient Packet Ring	
0000 1011	Frame-Mapped Fibre Channel FC-BBW	
0000 1100	Asynchronous Transparent Fibre Channel	
0000 1101	Framed MPLS Unicast	
0000 1110	Framed MPLS Multicast	
0000 1111	Framed IS-IS	
0001 0000	Framed IPv4	
0001 0001	Framed IPv6	

Test Functions

OH - GFP-F/GFP-T

UPI	Description for PTI = 000	Description for PTI = 100
0001 0010	Framed DVD-ASI	
0001 0011	Framed 64B/66B Ethernet	
0001 0100	Framed 64B/66B Ethernet Ordered Set	
0001 0101 through 1110 1111	Reserved for future standardization	
1111 0000 through 1111 1110	Reserved for proprietary use	
0000 0110 through 1101 1111		Reserved for future use
1110 0000 through 1111 1110		Reserved for proprietary use

- **Extension Header: CID** and **Spare** are only available when EXI is set to **Linear** (refer to **EXI** on page 315) and are available for **Client Data** and **Client Management** frame types.
 - **CID** (Channel IDentifier) allows overwriting the communication channel used for the signal transmission set from CID on page 315. Choices are from **00000000** through **11111111** (0 to 255). The default setting is 00000000.
 - **Spare** allows setting the extension header Spare field. Choices are from **00000000** through **11111111** (0 to 255).

Default all OH

Returns all TX overhead bytes to their factory default values.

RX

Note: The following **Core Header**, **Type Header**, and **Extension Header** parameters are available for **Client Data**, **Client Management**, and **Reserved PTI** frames. The details of the selected OH field is displayed in the **OH Details** section on the bottom-right of the screen.

➤ **Core Header**

- **PLI** (Payload Length Indicator) indicates the number of octets in the GFP payload area.
- **cHEC** (Core Header Error Control) indicates the CRC-16 error control code that protects the integrity of the contents of the core header by enabling both single-bit error correction and Multi-bit error detection.
- **Type Header:** See **Type Header on page 716** for **PTI**, **PFI**, **EXI**, and **UPI** possible values.
 - **PTI** (Payload Type Identifier) indicates the type of GFP client frame.
 - **PFI** (Payload Frame Check Sequence Indicator) displays the Payload FCS Indicator.
 - **EXI** (Extension Header Identifier) indicates the Extension Header Identifier.
 - **UPI** (User Payload Identifier) indicates the User Payload Identifier.
 - **tHEC** (Type Header Error Control) indicates the CRC-16 error control code that protects the integrity of the contents of the type field by enabling both single-bit error correction and multi-bit error detection.

Test Functions

OH - GFP-F/GFP-T

- **Extension Header: CID, Spare, and eHEC** are only available when EXI is set to **Linear** (refer to EXI on page 315).
- **CID** (Channel IDentifier) indicates the communication channel used by the signal. Possible values are 00000000 through 11111111 (0 to 255).
- **Spare** indicates the extension header Spare field. Possible values are 00000000 through 11111111 (0 to 255).
- **eHEC** (Type Header Error Control) indicates the CRC-16 error control code that protects the integrity of the contents of the extension header by enabling both single-bit error correction (optional) and multi-bit error detection.

OH Details

Displays the details of the selected OH byte. The first column indicates the selected OH byte. The second column indicates respectively from top to bottom the bit numbers used, the byte value in binary, and the interpretation of the byte when applicable.

OH - OTN

For **OTN BERT**, from the **Test** menu, tap **Functions**, and the **OH** tab.

For **OTN-SONET/SDH BERT**, from the **Test** menu, tap **Functions**, **OH**, and the **OTN** sub tab.

Allows respectively modifying the overhead information to be transmitted or viewing the overhead information received.

OTUx/ODUx and ODUx Buttons

Tap on either the **OTUx/ODUx** or the **ODUx** button to select the OH level.

Default OTN OH

Returns all TX overhead bytes to their factory default values.

TX/RX

Overhead bytes are organized using rows and columns structure as per G.709 standard.

Row 1

- **OA1** and **OA2**, columns 1-6, OTU FAS: All the Frame Alignment Signal **OA1** bytes and **OA2** bytes are individually configurable from **00** to **FF**. The default values are **F6** for all **OA1** bytes and **28** for all **OA2** bytes.
- **MFAS**, column 7, OTU MFAS: The Multi-Frame Alignment Signal byte is not configurable.
- **SM**, columns 8-10, OTU OH: The Section Monitoring contains the following bytes.

The first SM byte (column 8) contains the TTI multiframe byte that is only configurable from *Traces - OTN* on page 467.

The second SM byte (column 9) contains the BIP-8 byte that is automatically generated for each frame. This byte is not configurable.

Test Functions

OH - OTN

The third SM byte (column 10) contains the following sub-fields. This byte is configurable from **00** (default) to **FF**.

Bit 1-4	Bit 5	Bit 6	Bit 7-8
BEI/BIAE	BDI	IAE	RES

- **GCC0**, columns 11-12, OTU OH: The two General Communication Channel-0 bytes are configurable from **00** (default) to **FF**. Not configurable when GCC0 check box is selected from *OH BERT* on page 708.

- **RES**, columns 13-14, OTU OH: The two Reserved (RES) bytes are configurable from **00** (default) to **FF**.

- **JC4** or **RES**¹

JC4, column 15, OPU OH: Bits 1-3 set to all-0s, and bits 4-8 are controlled by GMP function. This byte is not configurable.

RES, column 15, OPU OH: The Reserved (RES) byte is configurable from **00** (default) to **FF**.

- **JC1** or **JC**¹

JC1, column 16, OPU OH: Controlled by GMP function. This byte is not configurable.

JC, column 16, OPU OH:

Bits 1-6, Reserved (RES), are configurable from binary **000000** (default) to **111111**.

Bits 7-8, Justification Control (JC), are configurable from binary **00** (default) to **11**. Not available with ODU mux. Changing the JC value will corrupt the payload.

1. Depending on the test MUX/Mapping.

Row 2

- **RES**, columns 1-2, ODU OH: The two Reserved (RES) bytes are configurable from **00** (default for each byte) to **FF**.
- **PM & TCM**, column 3, ODU OH: The Path Monitoring and Tandem Connection Monitoring byte is configurable from **00** (default) to **FF**.
- **TCM ACT**, column 4, ODU OH: The Tandem Connection Monitoring Activation is configurable from **00** (default) to **FF**.
- **TCM6/TCM5/TCM4**, column 5-13, ODU OH: The Tandem Connection Monitoring overhead contains the following bytes.

The first TCMi byte contains the TTI multiframe byte and is only configurable from *Traces - OTN* on page 467.

The second TCMi byte contains the BIP-8 byte and is automatically generated for each frame. This byte is not configurable.

The third TCMi byte contains the following sub-fields. This byte is configurable from **00** to **FF**. The default value is **00** when TCMi is disabled, and **01** when enabled.

Bit 1-4	Bit 5	Bit 6-8
BEI/BIAE	BDI	STAT

- **FTFL**, column 14, ODU OH: The Fault Type Fault Location multiframe byte is only configurable from *FTFL/PT / PT* on page 311.
- **JC5** or **RES**¹

JC5, column 15, OPU OH: Bits 1-3 set to all-0s, and bits 4-8 are controlled by GMP function. This byte is not configurable.

RES, column 15, OPU OH: The Reserved (RES) byte is configurable from **00** (default) to **FF**.

1. Depending on the test MUX/Mapping.

Test Functions

OH - OTN

- **JC2 or JC¹**
JC2, column 16, OPU OH: Controlled by GMP function. This byte is not configurable.
JC, column 16, OPU OH:
Bits 1-6, Reserved (RES), are configurable from binary **000000** (default) to **111111**.
Bits 7-8, Justification Control (JC), are configurable from binary **00** (default) to **11**. Not available with ODU mux. Changing the JC value will corrupt the payload.

Row 3

- **TCM3/TCM2/TCM1**, columns 1-9, ODU OH: See *TCM6/TCM5/TCM4* on page 723 for more information.
- **PM**, column 10-12, ODU OH: The Path Monitoring overhead contains the following bytes.

The first PM byte (column 10) contains the TTI byte that is not configurable.

The second PM byte (column 11) contains the BIP-8 byte and is automatically generated for each frame. This byte is not configurable.

The third PM byte (column 12) contains the following sub-fields. This byte is configurable from **00** to **FF**. The default value is **01**.

Bit 1-4	Bit 5	Bit 6-8
BEI	BDI	STAT

- **EXP**, column 13-14, ODU OH: The two Experimental overhead bytes are configurable form **00** (default for each byte) to **FF**.

1. Depending on the test MUX/Mapping.

➤ **JC6 or RES¹**

JC6, column 15, OPU OH: Bits 1-3 set to all-0s, and bits 4-8 are controlled by GMP function. This byte is not configurable.

RES, column 15, ODU OH: The Reserved (RES) bytes are configurable from **00** (default) to **FF**.

➤ **JC3 or JC¹**

JC3, column 16, OPU OH: Controlled by GMP function. This byte is not configurable.

JC, column 16, OPU OH:

Bits 1-6, Reserved (RES), are configurable from binary **000000** (default) to **111111**.

Bits 7-8, Justification Control (JC), are configurable from binary **00** (default) to **11**. Not available with ODU mux. Changing the JC value will corrupt the payload.

Row 4

➤ **GCC1**, column 1-2, ODU OH: The two General Communication Channel-1 bytes are configurable from **00** (default for each byte) to **FF**. Not configurable when GCC1 check box is selected from *OH BERT* on page 708.

➤ **GCC2**, column 3-4, ODU OH: The two General Communication Channel-2 bytes are configurable from **00** (default for each byte) to **FF**. Not configurable when GCC2 check box is selected from *OH BERT* on page 708.

➤ **APS/PCC**, column 5-8, ODU OH: The Automatic Protection Switching / Protection Communication Channel overhead bytes are defined in the ITU-T G.709 standard. These bytes are configurable from **00** (default) to **FF**.

➤ **RES**, column 9-14, ODU OH: The six Reserved (RES) bytes are configurable from **00** (default for each byte) to **FF**.

1. Depending on the test MUX/Mapping.

Test Functions

OH - OTN

- **PSI**, column 15, OPU/ODU OH: Tap the PSI field to configure (TX) or display (RX) the Payload Structure Identifier.
 - TX: Select any TX byte from the list and its content is displayed below the list. Tap the **Edit** button to change its value.
 - RX: Select any RX byte from the list and its content is displayed below the list.
 - **Foreground Signal Label**: This is a legend representing the status of the MSI for each PSI#, either **MSI TX** (black), **Expected MSI RX** (green), or **MSI Mismatch** (red).
 - The **Link TX/RX Scrolling** check box when selected (cleared by default), allows synchronizing both TX and RX table allowing to see the same TX and RX PSI byte numbers when scrolling from either TX or RX table.
- **OMFI or NJO**

OMFI, column 16, OPU OH: OPU Multi-Frame Identifier is only available for OPU4 of a mapped signal. This byte is not configurable.

NJO, column 16, ODU OH: The Negative Justification Opportunity byte is not configurable. Available either for non-concatenated signal or on the LO of a concatenated signal.

RX

- **RX OH Byte Details** displays the content of the selected OH RX byte. Tap on any OH RX byte to see its content
- **Legend TX/RX** indicates the path level for all OH bytes.

OH - SONET/SDH

The SONET/SDH OH page allows modifying (TX) the overhead information to be transmitted and viewing (RX) the overhead information received.

For **SONET/SDH BERT**, from the **Test** menu, tap **Functions**, and the **OH** tab.

For **OTN-SONET/SDH BERT**, from the **Test** menu, tap **Functions**, **OH**, and the **SONET/SDH** sub tab.

Tap on any overhead byte in TX to modify its value.

Tap on any overhead byte in RX to see its detailed content/value.

Note: *A byte in TX that has no value displayed or is grayed out, is not configurable from the OH tab.*

TX and RX Buttons (SDH)

Tap on the TX or RX button to respectively access the overhead bytes in transmission or receive mode.

STS-1 Timeslot/STM-1 Channel

Allows selecting the timeslot number for the Transport OH bytes. The STS/AU/TU-3 overhead bytes are always for the timeslot selected in the test configuration. Furthermore when modifying the Transport OH bytes H1 SS bits, the modification applies to all timeslots when the test topology is **Coupled**. Choices are **1** (default) to **192** (SONET) / **64** (SDH) depending on the OC-N/STM-N interface selected.

Transport OH - Section/RS

- **A1 and A2:** Framing. The value should be hexadecimal **F6** for A1 and **28** for A2. They must appear in every STS-1/STM-1 frame of a composite signal.

SONET: Provide frame alignment of each STS-1 frame within a composite signal (STS-1 to STS-n).

SDH: Indicate the beginning of the STM-N frame.

- **J0/Z0**

- **J0:** The J0 (Trace) byte is used to trace the origin of an STS-1/STM-1 frame as it travels across the SONET/SDH network. This byte is only defined for the first STS-1/STM-1 frame of a composite signal.

Available when the Trace format is set to 1 Byte (refer to *Traces - SONET/SDH* on page 470).

- **Z0:** Growth.

SONET: The Z0 byte was used to uniquely identify the STS in question. This byte has to be defined in every STS-1 to STS-n frame of a composite signal. This byte is only defined for the STS-1 #2 to STS-1 #N of a OC-N signal.

SDH: These bytes are reserved for future international standardization. They are located at positions $S[1,6N+2]$ to $S[1,7N]$ of an STM-N signal ($N > 1$).

- **B1:** BIP-8 (Bit-Interleaved Parity) byte provides section error monitoring. This byte is only defined for the first STS-1/STM-1 frame of a composite signal. The byte is calculated by performing a routine even-parity check over all bits of the previous STS-N/STM-N frame of a composite signal.
- **E1:** Orderwire. Provides a 64 Kbit/s voice channel for communication between two STEs (Section Terminating Equipment). This byte is only defined for the first STS-1/STM-1 frame of a composite signal.

- **F1:** User/User Channel. This byte is reserved for user purposes. This byte is only defined for the first STS-1/STM-1 frame of a composite signal.
- **D1, D2, and D3:** Data Communications Channel (DCC). Provides a 192 Kbit/s data communication between two STEs for operation functions such as OAM&P. These bytes are only defined for the first STS-1/STM-1 frame of a composite signal.

Transport OH - Line/MS

- **H1 and H2:** Pointer.

SONET: H1 and H2 bytes are combined to form a pointer indicating where the path overhead begins within each SPE.

SDH: H1 and H2 bytes are combined to form a pointer indicating where the VC (Virtual Container) frame begins within each SPE.

Bits 5 and 6 of the H1 byte represent the SS bits and are configurable as follows:

SS Bits	Description
00	SONET
01	Undefined
10	SDH
11	Undefined

- **H3:** Pointer Action. H3 is an extra byte used to compensate for the SPE timing variation. The H1 and H2 pointer tell the receiver when the H3 pointer is used.

SONET: This byte must be defined in every STS-1 to STS-n frame of a composite signal.

SDH: This byte must be defined in every STM-1 of an STM-N signal in the event of negative justification, otherwise it is not defined.

Test Functions

OH - SONET/SDH

➤ **B2: BIP-8**

SONET: The BIP-8 (Bit-Interleaved Parity) byte provides line error monitoring. This byte is only defined for the first STS-1/STM-1 frame of a composite signal. The byte is calculated by performing a routine even-parity check over all bits of the LOH and the STS-1 frame capacity of the previous frame of a composite signal (STS-1 to STS-n). Note that the SOH is not used to calculate the parity check.

SDH: The MS BIP-N*24 (Bit-Interleaved Parity) byte provides line error monitoring. The byte is calculated by performing a routine even-parity check over all bits of the MSOH and the STM-N frame of the previous STM-N frame. Note that the RSOH is not used to calculate the parity check.

➤ **K1 and K2: Automatic Protection Switching (APS):** The K1 and K2 bytes communicate APS between two LTE. These bytes are only defined for the first STS-1/STM-1 frame of a composite signal.

➤ **D4 through D12: Data Communications Channel (DCC):** The D4 through D12 bytes provide a 576 Kbit/s data communications channel between two LTEs for administration, monitoring and other communications. These bytes are only defined for the first STS-1/STM-1 frame of a composite signal.

➤ **S1/Z1 (SONET)**

S1: Synchronization Status: The S1 byte is used to carry the synchronization status of the SONET device. This byte is only defined for the first STS-1/STM-1 frame of a composite signal.

Z1: Growth. This byte is located in the second STS-1 through STS-n frame of a composite signal (STS-1 #2, STS-1 #3, up to STS-1 #N of a OC-N (N>3) signal).

➤ **S1 (SDH): Synchronization Status.** Bits 5 to 8 of the S1 byte are used to carry the synchronization messages of the SDH device. This byte is only defined for the first STS-1/STM-1 frame of a composite signal.

➤ **M0 or M1/Z2 (SONET)**

M0: REI-L: The M1 byte is used for line Remote Error Indication (REI-L)

- For STS-1e and OC-1: The M0 byte located in the STS-1 indicates BIP violations.

M0, bits 234 5678	Indicates
000 0000	0 BIP violation
000 0001	1 BIP violation
:	:
000 1000	8 BIP violations
000 1001 to 1111 1111	0 BIP violation

- For OC-192: The M0 bytes located in the STS-1 #4 indicates BIP violations when combined with the M1 byte (see M1 byte below for more information).

M1: REI-L. The M1 byte is used for line Remote Error Indication (REI-L).

- For STS-3e and OC-3: The M1 byte located in the STS-1 #3 indicates BIP violations.

M1, bits 234 5678	Indicates
000 0000	0 BIP violation
000 0001	1 BIP violation
:	:
001 1000	24 BIP violations
001 1001 to 1111 1111	0 BIP violation

Test Functions

OH - SONET/SDH

- For OC-12: The M1 byte located in the STS-1 #7 indicates BIP violations.

M1, bits 234 5678	Indicates
000 0000	0 BIP violation
000 0001	1 BIP violation
:	:
110 0000	96 BIP violations
110 0001 to 1111 1111	0 BIP violation

- For OC-48: The M1 byte located in the STS-1 #7 indicates BIP violations.

M1	Indicates
0000 0000	0 BIP violation
0000 0001	1 BIP violation
:	:
1111 1111	255 BIP violations

- For OC-192: Either the M1 byte located in the STS-1 #7, or the combination of the M0 and M1 bytes indicates BIP violations (refer to *REI-L Computation Method* on page 430).

For **M1 Only** computation method:

M1	Indicates
0000 0000	0 BIP violation
0000 0001	1 BIP violation
:	:
1111 1111	255 BIP violations

For **M0** and **M1** computation method:

M0 Located in STS-1 #4	M1 Located in STS-1 #7	Indicates
0000 0000	0000 0000	0 BIP violation
0000 0000	0000 0001	1 BIP violation
:	:	:
0000 0110	0000 0000	1536 BIP violations
0000 0110 to 1111 1111	0000 0001 to 1111 1111	0 BIP violation

Z2: Growth. Available with OC-3, OC-12, and OC-48 signal, this byte is located in STS-1 #1 up to STS-1 #48 except for timeslots used by M0 and M1.

Undefined “--” for all other timeslots not covered by M0, M1, and Z2.

➤ **M0 or M1 (SDH)**

M0: MS-REI. STM-1 channel #1 of a STM-0e and STM-0 signal;
channel #2 of an STM-64 signal.

M1:MS-REI. STM-1 channel #1 of a STM-1e and STM-1 signal;
channel #3 of an STM-N signal (N>1).

Undefined “--” for all other channels not covered by M0, and M1.

➤ **E2:** Orderwire. Provides a 64 Kbit/s voice channel for communication between LTEs. This byte is only defined for the first STS-1/STM-1 frame of a composite signal.

STS/AU/TU-3

- **J1:** Trace. Available when the Trace format is set to 1 Byte (refer to *Traces - SONET/SDH* on page 470).

SONET: The J1 Trace byte provides a 16 or 64 byte fixed string to verify connection between path transmitting equipment and path receiving equipment.

SDH: The higher-order (AU)/low-order (TU) VC-N path trace byte provides a 64 byte fixed string to verify connection between path transmitting equipment and path receiving equipment.

- **B3:** BIP-8. The BIP-8 (Bit-Interleaved Parity) byte provides path error monitoring. The byte is calculated by performing a even-parity check over all bits of the previous SPE.

- **C2: Signal Label.** Entering a C2 byte value will automatically update the Path Signal Label (C2) selection and vice versa. Refer to *STS/AU Path (C2)* on page 333 for more information.


C2 (Hex.)	Description	
	SONET	SDH
00 ^a	Unequipped	UNEQ or supervisory-UNEQ
01	Equipped - Non-Specific	RES (Equipped - Non-Specific)
02	Floating VT Mode (Default)	TUG Structure
03	Locked VT Mode	Locked TU-n
04	Async Mapping for DS3	Async Mapping of 34M/45M in C-3
05	Mapping under development	Experimental Mapping
12	Async Mapping for 140M (DS4NA)	Async Mapping of 140M in C-4
13	Mapping for ATM	ATM Mapping
14	Mapping for DQDB	MAN DQDB
15	Async Mapping for FDDI	FDDI [3]-[11] Mapping
16	Mapping of HDLC over SONET	Mapping of HDLC/PPP
17	SDL with self-sync scrambler	RES (SDL self-synch scrambler)
18	Mapping of HDLC/LAPS	Mapping of HDLC/LAPS
19	SDL with a set-reset scrambler	RES (SDL set-reset scrambler)
1A	10 Gbit/s Ethernet (IEEE 802.3)	10 Gbit/s Ethernet (IEEE 802.3)
1B	GFP	GFP
1C	Not supported	Mapping 10 Gbit/s FC
20	Not supported	Async Mapping of ODUk
CF	RES (Obsolete HDLC/PPP framed)	RES (obsolete HDLC/PPP framed)
E1 ^a to FC ^a	STS-1 w/1 VTx PD, STS-1 w/2 VTx PD, ... STS-1 w/28 VTx or STS-n/nc PD	Not supported
FE	Test Signal, ITU-T 0.181	Test Signal, ITU-T 0.181
FF ^a	STS SPE AIS (TCM)	VC-AIS (TCM)

- a. These values cannot be selected as Expected Path Signal Label.

Test Functions

OH - SONET/SDH

 - **G1:** Path Status. The G1 byte provides a method to communicate the far-end path status back to the path originating equipment.



REI:

Bits 1 to 4 of G1	Description
0000	No error
0001	1 error
0010	2 errors
:	:
1000	8 errors
1001 to 1111	No error

RDI/ERDI:

Bits 5, 6, 7 of G1	Description
000, 001, 011	No defect
100, 111	RDI
010	ERDI-PD
101	ERDI-SD
110	ERDI-CD

- **F2:** User Channel. The User Channel provides a 64 Kbit/s channel for communication between two PTEs. This byte is only defined for the first STS-1/STM-1 frame of a composite signal.
- **H4:** Multiframe Indicator. The H4 byte provides a multiframe phase indication of a VT/TU payload.

 
- **Z3 and Z4:**
SONET only: Growth.
- **F3:**
SDH only: User Channel. The Path User Channel provides a channel for communication purposes between path elements and is payload dependent.
- **K3:**
SDH only: Automatic Protection Switching (APS). Bits 1 to 4 of the K3 byte are used for APS signaling. K3 bits 5 to 8 are reserved for future use.
- **N1:**
SONET: The N1 byte (formerly referred to as the Z5 byte) is allocated for Tandem Connection Maintenance (TCM) and the Path Data Channel.

SDH: (Network operator byte) The N1 byte is allocated to provide a Higher-Order Tandem Connection Monitoring (HO-TCM) function.

VT/TU

➤ V5 VT/TU Path Overhead

The V5 byte is allocated to indicate the content of the VT/TU path, including the status of the mapped payloads. It provides the same functions for VT/VC paths that the B3, C2, and G1 bytes provide for STS/STM paths.



- **BIP-2** is not configurable.
- **REI, RFI, and RDI:** Choices are **0** (disabled), and **1** (enabled).
- Signal Label

Bits 5, 6, 7 of V5	Description	
	SONET	SDH
000 ^a	Unequipped	Unequipped or supervisory-unequipped
001	Reserved (Equipped - Non-specific)	
010	Asynchronous	
011	Bit Synchronous	
100	Byte Synchronous	
101	Extended Signal Label	
110	Test Signal, ITU-T 0.181 specific mapping	
111 ^a	VT SPE AIS (TCM)	VC-AIS (TCM)

a. These bytes cannot be selected in receive mode.

If the signal label in V5 (bits 5, 6, and 7) is 101 the contents of the extended signal label is valid and contains in a 32 bit multiframe as shown below. See Z7/K4 Structure shown below.

Z7/K4 Structure

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	
Multiframe Alignment Signal												Extended Signal Label								0	R	R	R	R	R	R	R	R	R	R	R	
Frame Count					Sequence Indicator																											

R = Reserved

- **J2 Trace.** Available when the Trace format is set to 1 Byte (refer to *Traces - SONET/SDH* on page 470).

SONET: VT Path Trace: The J2 Trace byte provides a 16 or 64 bytes fixed string allowing the receiving VT PTE to verify its continued connection to the intended transmitting VT PTE.

SDH: Path Trace: The J2 byte is used to repetitively transmit a Lower-Order Access Path Identifier so that a path receiving terminal can verify its continued connection to the intended transmitter.

- **Z6/N2**


Z6 (SONET): VT Tandem Connection Monitoring or VT Path Growth. The Z6 byte is allocated for future growth.

N2 (SDH): (Network operator byte) Tandem Connection Monitoring for the VC2, VC-12, and VC-11 level.

Test Functions

OH - SONET/SDH

➤ Z7 /K4 : Extended signal label

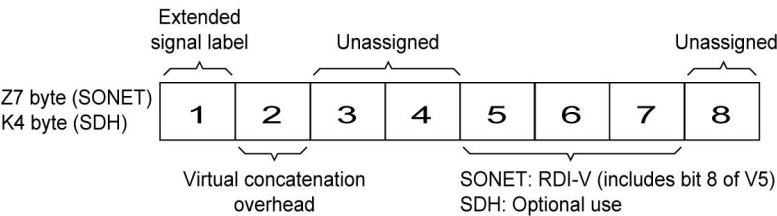

Bits	Description	
	Z7 (SONET)	K4 (SDH)
1	Extended signal label. Bits 12 to 19 of the 32 bit frame multiframe (see Z7/K4 Structure on page 739) contain the extended signal label.	
2	Virtual concatenation. Bits 1 to 5 of the 32 bit frame multiframe (see Z7/K4 Structure on page 739) contain the LO virtual concatenation frame count while bits 6 to 11 contain the LO virtual concatenation sequence indicator.	
3 - 4	unassigned and reserved for APS signaling for protection at the lower order path level.	
5 - 7	These bits in combination with bit 8 of V5 are allocated for RDI -V/ERDI-V signal	Optional use.
8	unassigned and reserved for a lower order path data link.	

Default all OH

Returns all TX overhead bytes to their factory default values.

Packet Capture

Capture is used to analyze all or filtered data traffic and save complete or truncated frames into a buffer. It allows observing network truncated data precisely, or understanding errors and unwanted behavior.

Note: *Not available with 200/400G and eCPRI dual port topology.*

From the test menu, tap **Functions**, and the **Packet Capture** tab.

- <Port #> button, when available, allows selecting the port to be displayed. For **Dual Port** topology both ports are available. For the **Through Mode** test application, packet capture applies only to the **Primary Port**.

Capture Source

Specifies what kind of data to be captured.

- **Interface** captures all received frames and saves them in the capture buffer.
- **Filter #** captures only frames that match the selected filter and saves them in the capture buffer. Select the filter number from the list. Only enabled filters are available, see *Filters* on page 703. The selected filter will be reserved for data capture and will not be available for filter configuration.

Frame Length

Specifies the length of the frame that will be saved in the capture buffer.

- **Complete** captures the entire frames.
- **Truncated** captures only the first specified number of bytes per frame. Use either the Bytes field to manually enter the number of bytes per frame or tap on the **Truncation Calculator** button for automatic bytes per frame calculation.

Bytes allows the selection of the number of bytes that will be saved in the capture buffer for each frame captured: 14 (default) to 1536 bytes.

Truncation Calculator allows determining easily at what byte to truncate the frame captured by selecting the desired frame header components.

- **Header Layer** specifies the header layer level: **Layer 2 (Ethernet)**, **Layer 3 (IP)**, or **Layer 4 (TCP/UDP)**.
- **IP Version** specifies the IP version: **IPv4** or **IPv6**.
- **Encapsulation** parameters are optional and not selected by default.

VLAN check box when selected enables VLAN and allows selecting the number of VLANs: 1, 2, or 3.

MPLS check box when selected enables MPLS and allows selecting the number of labels: 1 or 2.

EoE check box, when selected, enables EoE.

PBB-TE check box, when selected, enables PBB-TE.

- **Additional Payload (bytes)** allows selecting optionally the number of additional payload bytes (1 to 1400 bytes).
- **Total Number of Bytes** indicates the number of bytes for the selected frame parameters. This value will be used as the truncated frame length (**Truncated** field).

Trigger

- **Trigger Type** defines the trigger source criterion that will be used to automatically start/stop the capture when a received frame matches the filter and trigger criteria.
 - **Manual** automatically starts the frame capture when the Capture button is on (green LED) and the test is started (refer to *Start/Stop | TX Button* on page 805).
 - **On Error** starts the frame capture when the selected error occurs.
 - FCS**
 - Jabber**
 - Oversize** (available when **Oversize Monitoring** is enabled)
 - Runt**
 - Undersize**
 - IP Checksum**
 - UDP Checksum**
 - TCP Checksum**
 - Any Type** (any of the above errors).
 - **Field Match** starts the frame capture when the configured field match is encountered. Use the **Configuration** button to select the field match criteria (see **Filter Configuration** from the **Filters** tab).
 - Cfg. Status** indicates the status of the configured field match configuration: **Valid** or **Invalid**. A valid status is required to be able to start the capture.

Test Functions

Packet Capture

- **Trigger Position** selects the triggered frame position within the buffer.
 - **Post-Trigger** for a trigger frame located at the beginning of the buffer. The buffer will contain the triggered frame with the following frames.
 - **Mid-Trigger** for a trigger frame located at the middle of the buffer. The buffer will contain the triggered frame with the preceding and following frames.
 - **Pre-Trigger** for a trigger frame located at the end of the buffer. The buffer will contain the triggered frame with the preceding frames.

Status and Controls

- **Capture Status** indicates the status of the data capture:
 - “--” indicates that the capture is not started and has not run yet.
 - Armed...** indicates the the capture is started but waiting for the trigger event.
 - Capturing...** indicates that the capture is in progress. For Post-Trigger and Mid-Trigger mode, the trigger event has been captured and the buffer is filling up.
 - Completed** indicates that the capture is completed.
- **Frame Count** indicates the number of frames captured that matches the selected filter criteria. However, for Mid-trigger and Pre-Trigger, the frame counter will only be available when the capture is completed.
- **Buffer Usage** indicates the percentage of the buffer capacity used.
- **Triggered Error** is available when trigger on error is selected and indicates the error that activated the trigger.
- **Triggered Frame - Details** gives details on the triggered frame. Refer to *Triggered Frame Details* on page 1038.

- **Capture** button allows starting/stopping the data capture. The test must be running (refer to *Start/Stop | TX Button* on page 805) in order to start capturing and recording data into the buffer. The Capture button is not available when the trigger on field match is selected while its trigger parameters are not valid.

No data will be recorded in the buffer if no frame matches the filter and the trigger criteria during the data capture.

The data capture stops automatically once the buffer is full. The maximum buffer capacity is 64 KBytes or a maximum of 2078 frames for rates up to 10GE and 512 KBytes or a maximum of 8192 frames for rate 40GE/100GE.

When the capture stops or is manually stopped, the following message is displayed: **Capture completed. Press Export to save captured data (the test must be stopped)**. To avoid losing the captured data, the data must be exported and saved into a file before restarting the test or creating a new test.

- **Export**, available when the test application is stopped, allows exporting the data captured into a .pcap file format and viewing the file using Wireshark.
 - **Save In** allows selecting the folder to save the capture file (by default:
Users\<User>\Documents\<product>\CaptureData).
 - **View File After Generation** check box when selected (cleared by default) allows displaying the report once it is generated using the Wireshark application.

Test Functions

Packet Capture

- **Generate & Save** allows generating and saving the capture data. The name of the captured file is automatically selected and contains the date and time of the capture. Capture file bigger than 100Mbytes will be split into multiple files. Tapping on the **Cancel** button stops the capture generation. The captured data already processed will be saved.

Note: *The export process may take several minutes.*

Once generated, the capture file will be automatically opened in Wireshark when the **View File After Generation** check box is selected. The capture file report may also be manually opened within Wireshark typically using Windows Explorer.

Path OAM APS

Note: Available when **Path OAM** is enabled, refer to Path OAM on page 371.

From the test menu, tap **Functions** and the **Path OAM APS** tab.

- **Path OAM APS** check box when selected (cleared by default) enables the generation and monitoring of APS messages when the test is running.
- **Request/State Interpretation** allows selecting the standard used for request/state interpretation: **G.873.1** (default) or **G8331**.
- **Path OAM on Client ID** indicates on which client ID the path OAM applies.

TX/RX

- **Request/State:** Bits 1 to 4 of the APS data byte 0. Reserved request/state values are not available for transmission.

Bits 1 to 4	Request/State	
	G.873.1	G8331
1111	Lockout of protection (LoP)	Lockout of protection (LO)
1110	Forced switch (FS)	Signal Fail on Protection (SF-P)
1101	Reserved	Forced Switch (FS)
1100	Signal fail (SF)	Reserved
1011	Reserved	Signal Fail on Working (SF-W)
1010	Signal degrade (SD)	Reserved
1001	Reserved	Signal Degrade (SD)
1000	Manual switch (MS)	Reserved
0111	Reserved	Manual Switch (MS)
0110	Wait-to-restore (WTR)	Reserved
0101	Reserved	Wait-to-Restore (WTR)

Test Functions

Path OAM APS

Bits 1 to 4	Request/State	
	G.873.1	G8331
0100	Exercise (EXER)	Exercise (EXER)
0011	Reserved	Reserved
0010	Reverse request (RR)	Reverse Request (RR)
0001	Do not revert (DNR)	Do Not Revert (DNR)
0000	No request (NR) (Default)	No Request (NR) (Default)

- **Requested Signal:** Bits 1 to 8 of the APS data byte 1: **0 Null Signal** (Default), **1, 2, ..., 254, 255 Extra Traffic Signal**.
- **Bridged Signal:** Bits 1 to 8 of the APS data byte 2: **0 Null Signal** (Default), **1, 2, ..., 254, 255 Extra Traffic Signal**.
- **Reserved:** Bits 1 to 8 of the APS data byte 3: **0** (default) to **255**.
- **Protection Type:** Bits 5 to 8 of the APS data byte 0.

Protection Type	Bit		Description
	#	Value	
A	5	0	No APS Channel (Default)
		1	APS Channel
B	6	0	1 + 1 (permanent bridge) (Default)
		1	1:n (no permanent bridge)
D	7	0	Unidirectional switching (Default)
		1	Bidirectional switching
R	8	0	Non-revertive operation (Default)
		1	Revertive operation

RX

➤ **APS**

- **TX Count** reports the count of transmitted APS messages.
- **RX Count** report the count of received APS messages having a valid CRC4.

Apply Changes

Use the **Apply Changes** button to apply any changes made to the APS TX configuration once the test is started/running, otherwise all changes apply automatically when the test is started. Only available when **Path OAM APS** is enabled and the test is started.

Ping & Trace Route

From the **Test** menu, tap **Functions**, and the **Ping & Trace Route** tab.

Note: For **Dual Port** topology select the port to be displayed.

Link, available with EtherBERT multiple link interface (ex: 2 x 100GE), allows selecting the link to be displayed.

Source IP Address

Displays or allows the selection of either the interface source IP address or a stream IP address depending on the test and its configuration. Refer to *Network* on page 355, *MAC/IP/UDP* on page 342, or *Smart Loopback* on page 433.

Destination IP Address

Enter the **Destination IP Address** of the network device to be detected. The destination IP address is configurable only with **IPv4 Network Layer** (refer to *Modify Structure* on page 144). The accepted range for IPv4 is **0.0.0.0** (default) to **255.255.255.255**.

The default setting for IPv6 is **2001:0000:0000:0000:0000:0000:0000:0000** or is set automatically to the IP address of the target module from the Remote Loopback mode. The destination IP address is configured only when **Ethernet/IPv6/UDP** is selected. The **IPv6 Address** can either be the **Link-Local IPv6 Address** or the **Global IPv6 Address**. The acceptable range for IPv6 is from **000:0000:0000:0000:0000:0000:0000:0001** to **FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF:FFFF**.

Stream

Stream, available with EtherSAM and Traffic Gen & Mon, allows selecting a stream/service to use its source and destination IP addresses for the Ping and Trace Route tests.

Use Stream

Use Stream, available with test application using stream/services, allows using the source and destination IP of the defined or selected stream/services.

Ping

- **Data Size (Bytes)**: Enter the data size that will be sent to the network device to be detected. Choices are **0** to **1452 bytes**; **32 bytes** by default.
- **TTL** for IPv4 and **Hop Limit (TTL)** for IPv6: Enter the maximum number of hops the packet can go through. Choices are **1** to **255**; **128** by default.
- **IP TOS/DS** for IPv4 and **Traffic Class (TOS/DS)** for IPv6: Enter the type of service. Choices are **00** (default) to **FF**.
- **Flow Label** (IPv6) value acceptable range is from **0** (default) to **1048575**.
- **Timeout (ms)**: Enter the maximum time allowed between an ICMP echo and response. Choices are **200 ms** to **10000 s**; **4000 ms** by default.
- **Delay (ms)**: Enter the delay between each attempt (PING). Choices are **100** to **10000 ms**; **1000 ms** by default.
- **Attempts**: Select **n-Attempts** to specify the number of ping requests to send following a ping activation or select **Continuous** to ping continuously until manually stopped. If **n-Attempts** is selected, enter the number of ping attempts from **1** to **1000**. The default setting is **n-Attempts** with **4** attempts.
- **Ping** button starts the ping tool with the specified settings.

Test Functions

Ping & Trace Route

Trace Route

- **Max Hop Count:** Enter the maximum network device the packet is allowed to go through. Choices are **1** to **255**; **128** by default.
- **Timeout (ms):** Enter the maximum time allowed between an ICMP echo and response at each hop. Choices are **200 ms** to **10000 ms**; **4000 ms** by default.
- **Trace Route** button starts the trace route tool with the specified settings.

Results

To succeed, a ping command shall be acknowledged by the network device within a given delay (**Timeout**). Typically a ping command can fail for the following reasons:

- The IP address is unavailable or unknown.
- The time allowed to perform the ping command is too short.
- The remote device is not supporting ICMP messaging.

To succeed, a trace route command shall be acknowledged by the network device within a given delay (Timeout). Typically a trace route command can fail for the following reasons:

- The IP address is unavailable or unknown.
- The time allowed to perform the trace route command is too short.
- The remote device is not supporting ICMP messaging.

The ping and trace route results are displayed with the following columns:

- **No.:** Indicates the attempt number.

➤ **Status:** Indicates the status of the attempt as follows:

Status	Description
Successful	Valid ICMP echo reply received.
User Aborted	When a user has manually stopped the ping/trace route function before the end of attempts.
Time Out	When an ICMP echo reply was not received within the defined timeout.
Destination Invalid	With reserved IP addresses: For IPv4: 0.0.0.0, 127.0.0.0, and all addresses above 240.0.0.0 (Class E and above). For IPv6: 0::/8 (reserved/unspecified), 0::1/128 (Loopback), FF00::/8 (Multicast).
TTL Expired (ping test)	When the number of TTL was insufficient to reach the destination host.
Hop Reached (trace route test)	When a Time Exceeded message is received from a host while executing the trace route function.
Destination Unreachable	For IPv4: When the IP address is unreachable (no default gateway for an IP address, not in the same subnet, or an ICMP Unreachable message is received). For IPv6: When the IP address is unreachable (no default gateway for an IP address, not in the same subnet, or address resolution failed or an ICMP Destination Unreachable message is received).
Data Corrupted	Parameter problem message is received or data corruption is found for IPv4.
Discarded	Congestion has been detected and the request cannot be transmitted.
Packet Too Big	Packet Too Big message is received in response to a packet that the router cannot forward because the packet is larger than the MTU of the outgoing link. It is only applicable for the IPv6 version .
Undefined	For any other errors in ping/trace route that do not fall into one of the above description.

Test Functions

Ping & Trace Route

➤ **Replied Details**

For ping, indicates the IP address of the replier, the buffer size of the ICMP echo response, the time of response in milliseconds, and the TTL of the ICMP echo response.

For trace route, indicates the IP address of the replier, and the time of response in milliseconds.

Statistics

➤ **Packets Transmitted** indicates the number of sent packets.

➤ **Packets Received** indicates the number of received packets.

The following statistics are only available for the ping test.

➤ **Percentage Lost (%)** indicates the percentage of packets lost.

➤ **Min Round Trip Time (ms)** indicates the minimum time recorded for a ping request to be answered.

➤ **Max Round Trip Time (ms)** indicates the maximum time recorded for a ping request to be answered.

➤ **Avg. Round Trip Time (ms)** indicates the average time required for a ping request to be answered.

Pointer Adjustment

From the **Test** menu, tap **Functions**, and the **Pointer Adjustment** tab.

TX Pointer Adjustment

Note: *Only available in **Coupled** topology.*

The pointer adjustment supports two modes of operation: **Manual** and **Sequence**. Both modes offer the generation of pointer events even when the test is not started.

TX Pointer Adjustment - Manual Button

Step

➤ Value

For STS/AU: Select the number of positive (Increment) or negative (Decrement) pointer adjustments to include into the STS-n (SONET) or AU-n (SDH): **1** (default) to **1000**. For multiple pointer adjustments, the pointer adjustment rate is 1 adjustment at every 4 frames.

For VT/TU: Select the number of positive (Increment) or negative (Decrement) pointer adjustment to include into the VTn (SONET) or TU-n (SDH): **1** (default) to **1000**. For multiple pointer adjustments, the pointer adjustment rate is 1 adjustment at every 4 multiframes.

- **Increment** button sends the positive pointer adjustment defined.
- **Decrement** button sends the negative pointer adjustment defined.
- **Pointer Value** indicates the current pointer value.

Test Functions

Pointer Adjustment

Jump

- **New Pointer** allows selecting a new pointer value:

For STS/AU: **0** (default) to **782**

For VT/TU:

Path	Range
VT1.5	0 to 103
VT2	0 to 139
TU-3	0 to 764
TU-11	0 to 103
TU-12	0 to 139

- **Inject** button sends the new pointer value.
- **New Data Flag** (NDF) check box when selected inserts a New Data Flag with the pointer adjustment when the Inject button is tapped.

For STS/AU: When NDF is enabled, bits 1 to 4 of the pointer word (H1 and H2 bytes) are set to **1001** when executing a pointer jump.

For VT/TU: When NDF is enabled, bits 1 to 4 of the pointer word (V1 and V2 bytes) are set to **1001** when executing a pointer jump.

TX Pointer Adjustment - Sequence Button

Note: *The pointer sequence is only supported on one test layer; either on VT/TU layer or on STS/AU when the test doesn't contain VT/TU mapping. The field next to the **Sequence** operation mode button indicates the path level used for the sequence pointer adjustment.*


- **Sequence: T.105-03/GR-253** allows the selection of the pointer sequence pattern based on the **T.105-03/GR-253** standard.

Pointer Sequence Pattern	Available with
Single pointers of opposite polarity	AU-x, TU-3, TU-11, TU-12
Regular pointers plus one double pointer	AU-x, TU-3, TU-11, TU-12
Regular pointers with one missing pointer	AU-x, TU-3, TU-11, TU-12
Double pointers of opposite polarity	AU-x, TU-3, TU-11, TU-12
Single pointer adjustment	STS-x, VT1.5, VT2, AU-x, TU-3, TU-11, TU-12
Burst pointer adjustment	STS-x, VT1.5, VT2, AU-x, TU-3, TU-11, TU-12
Phase transient	STS-x, VT1.5, VT2, AU-x, TU-3, TU-11, TU-12
Periodic pointer adjustment 87-3 pattern	STS-x, AU-x, TU-3
Periodic 87-3 with Add	STS-x, AU-x, TU-3
Periodic 87-3 with Cancel	STS-x, AU-x, TU-3
Periodic pointer adjustment continuous	STS-x, VT1.5, VT2, AU-x, TU-3, TU-11, TU-12
Periodic pointer adjustment continuous with Add	STS-x, VT1.5, VT2, AU-x, TU-3, TU-11, TU-12
Periodic pointer adjustment continuous with Cancel	STS-x, VT1.5, VT2, AU-x, TU-3, TU-11, TU-12
Periodic pointer adjustment 26-1 pattern	VT1.5, TU-11
Periodic 26-1 with Add	VT1.5, TU-11
Periodic 26-1 with Cancel	VT1.5, TU-11

► Initialization / Cool Down / Sequence

The following time line examples show the initialization, cool down, and the pointer sequence according to the selected sequence and parameters.

Example 1: **Periodic 87-3 with Cancel**

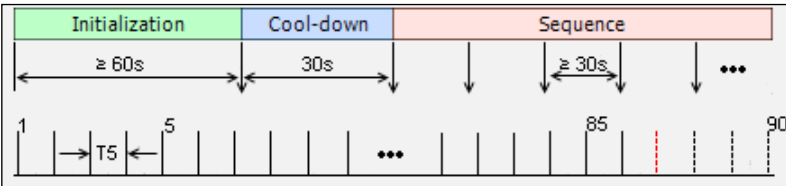

Example 2: **Regular pointers plus one double pointer**



Legend:

	Description
	When located at the end (right) of the sequence, indicates a continuous repetition of the pointer sequence. When located within the sequence, indicates a repetition of pointers.
	Regular pointer event or sequence.
	Cancel event.
	Special event like an extra cancel event (for example in Periodic 87-3 with Cancel) or a missing event from the Regular pointers with one missing pointer sequence.
	Special event like add, double pointer, etc.
	Indicates that the sequence is periodic with special event.

- **T1 to T6** are configurable duration parameters. The range of the duration parameters as well as their availability versus pointer sequence are described in the following table.


Pointer Sequence Pattern	Parameter	Duration range
Single pointers of opposite polarity	T1	10 to 30 s (default 10 s)
Regular pointers plus one double pointer	T2	AU/TU-3: 7.5 ms to 30 s (default 0.333 s) TU-11/12: 0.2 s to 30 s (default 0.75 s)
	T3	AU/TU-3: 0.5 ms TU-11/12: 2 ms
Regular pointers with one missing pointer	T2	AU/TU-3: 7.5 ms to 30 s (default 0.333 s) TU-11/12: 0.2 s to 30 s (default 0.75 s)
Double pointers of opposite polarity	T1	10 to 30 s (default 10 s)
	T3	STS-x/AU-x/TU-3: 0.5 ms to 1 s (default 0.5 ms) VT-x/TU-11/12: 2 ms to 1 s (default 2 ms)
Single pointer adjustment	T6	30 to 60 s (default 30 s)
Burst pointer adjustment	T4	STS-x/AU-x/TU-3: 0.5 ms VT-x/TU-11/12: 2ms
	T6	30 to 60 s (default 30 s)
Phase transient	T6	30 to 60 s (default 30 s)
Periodic pointer adjustment 87-3 pattern	T5	7.5 ms to 10 s (default 0.333 s)
Periodic 87-3 with Add	T4	0.5 ms
	T5	7.5 ms to 10 s (default 0.333 s)
Periodic 87-3 with Cancel	T5	7.5 ms to 10 s (default 0.333 s)
Periodic pointer adjustment continuous	T5	STS-x/AU-x/TU-3: 7.5 ms to 10 s (default 0.333 s) VT-x/TU-11/12: 0.2 s to 10s (default 1 s)
Periodic pointer adjustment continuous with Add	T4	STS-x/AU-x/TU-3: 0.5 ms VT-x/TU-11/12: 2 ms
	T5	STS-x/AU-x/TU-3: 7.5 ms to 10 s (default 0.333 s) VT-x/TU-11/12: 0.2 s to 10 s (default 1 s)
Periodic pointer adjustment continuous with Cancel	T5	STS-x/AU-x/TU-3: 7.5 ms to 10 s (default 0.333 s) VT-x/TU-11/12: 0.2 s to 10 s (default 1 s)
Periodic pointer adjustment 26-1 pattern	T5	0.2 s to 10 s (default 1 s)
Periodic 26-1 with Add	T4	2 ms
	T5	0.2 s to 10 s (default 1 s)
Periodic 26-1 with Cancel	T5	0.2 s to 10 s (default 1 s)

Test Functions

Pointer Adjustment


- **T1 (s)** represents the interval between two pointer events.

Example of **Single pointer of opposite polarity** sequence.

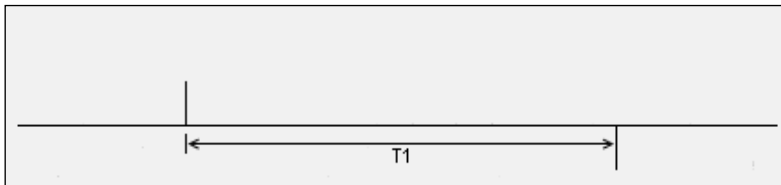

- **T2 (s)** represents the interval between successions of pointer events.

Example of **Regular pointers with one missing pointer** sequence.

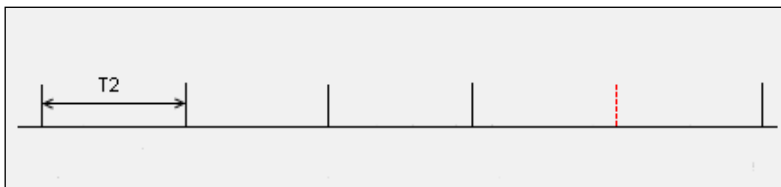


- **T3 (ms)** represents the interval between back to back pointer events.

Example of **Regular pointers plus one double pointer** sequence.




- **T4 (ms)** represents the interval between back to back pointer events in periodic pointer sequence.

Example of **Burst pointer adjustment** sequence.

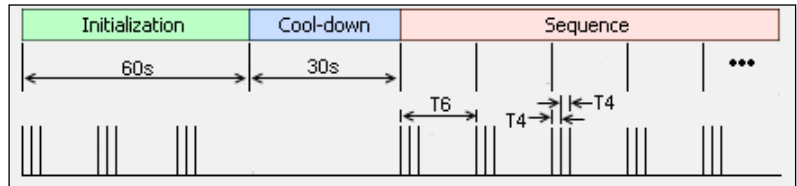


- **T5 (s)** represents the interval between successions of pointer events in a Periodic pointer sequence.

Example of **Periodic 87-3 with Cancel** sequence.

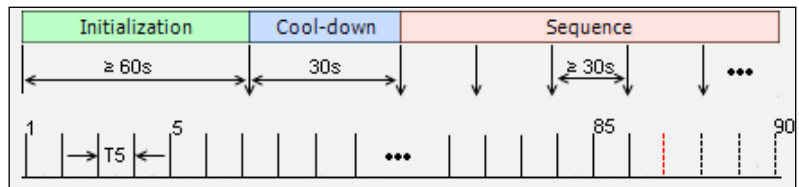

- **T6 (s)** represents the interval between successions of pointer events.

Example of **Phase transient** sequence.

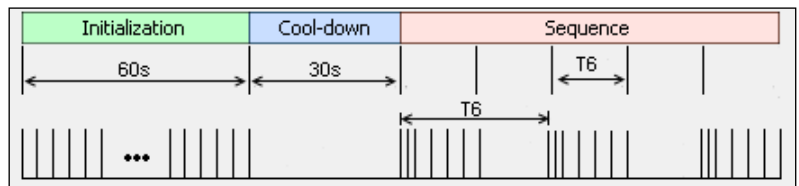

Test Functions

Pointer Adjustment

- **Increment/Decrement** allows determining if the pointer sequence will increment (positive) or decrement (negative) the pointer values.
- **Periodic** check box when selected, generates the pointer sequence continuously. The pointer sequence is generated only once when the **Periodic** check box is cleared. The capability to clear the **Periodic** check box is only available for the following pointer sequences:
 - Single pointers of opposite polarity
 - Regular pointers plus one double pointer
 - Regular pointers with one missing pointer
 - Double pointers of opposite polarity
- **Init-Cool** check box when selected, generates pointer action with three phases: initialization, Cool-down, and pointer sequence. Only the pointer sequence is generated when the **Init-Cool** check box is cleared.
- **Status** indicates the pointer event activity status.
 - **Initialization** indicates that the pointer sequence test is started and is running the initialization phase.
 - **Cool-down** indicates that the pointer sequence test is started and is running the cool down phase.
 - **Sequence** indicates that the pointer sequence test is started and is running the sequence phase; this phase runs until the Sequence is turn off.
 - **Static pointer** indicates that the pointer sequence is not started. The signal generator transmits a fix pointer value.
- **Pointer Value** indicates the current pointer value. Available even if the test is not started or if the sequence is not enabled.

- **Sequence** button when enabled, generates pointer events on a regular basis. The initialization and cool down sequence are described below for each pointer sequence pattern.

Pointer Sequence Pattern	Initialization	Cool down
Single pointers of opposite polarity	Basic sequence ^{ab} Duration ≥ 60 sec	Basic sequence ^{ab} Duration = 30 sec
Regular pointers plus one double pointer	Add sequence Duration ≥ 60 sec	Add sequence Duration = 30 sec
Regular pointers with one missing pointer	Cancel sequence Duration ≥ 60 sec	Cancel sequence Duration = 30 sec
Double pointers of opposite polarity	Basic sequence ^{ab} Duration ≥ 60 sec	Basic sequence ^{ab} Duration = 30 sec
Single pointer adjustment	One pointer event per second Duration = 60 sec	No pointer event Duration = 30 sec
Burst pointer adjustment		
Phase transient		
Periodic pointer adjustment 87-3 pattern	Basic sequence ^a Duration ≥ 60 sec	Basic sequence ^a Duration = 30 sec
Periodic 87-3 with Add		Add sequence Duration = 30 sec
Periodic 87-3 with Cancel		Cancel sequence Duration = 30 sec
Periodic pointer adjustment continuous	Basic sequence ^a Duration = 60 sec	Basic sequence ^a Duration = 30 sec
Periodic pointer adjustment continuous with Add		Add sequence Duration = 30 sec
Periodic pointer adjustment continuous with Cancel		Cancel sequence Duration = 30 sec
Periodic pointer adjustment 26-1 pattern	Basic sequence ^a Duration ≥ 60 sec	Basic sequence ^a Duration = 30 sec
Periodic 26-1 with Add		Add sequence Duration = 30 sec
Periodic 26-1 with Cancel		Cancel sequence Duration = 30 sec

- a. The basic sequence corresponds to the pointer event pattern defined in the standard without any Add or extra Cancel event.
- b. Only available when the **Periodic** check box is selected.

RX Pointer Adjustment

➤ Pointer Value

For STS/AU: Displays the value for the pointer, H1 and H2, indicating the offset in bytes between the pointer and the first byte of the STS-n (SONET) or AU-n (SDH).

For VT/TU: Displays the value of the pointer, V1 and V2, indicating the offset in bytes between the pointer and the first byte of the VTn (SONET) or TU-n (SDH) of the high order path. However, TU-3 considered a low order path, uses the H1, H2, H3 bytes for its location.

- **Cumulative Offset** indicates the difference between the pointer increment and the pointer decrement. A pointer jump will reset this value to **0**.
- **Ptr. Incr.** (Pointer Increment) gives statistics on positive pointer adjustment detected.
- **Ptr. Decr.** (Pointer Decrement) gives statistics on negative pointer adjustment detected.
- **NDF** (New Data Flag) gives statistics on pointer jumps containing a New Data Flag.

For STS/AU: Bits 1 to 4 of the pointer word (H1 and H2) detected are **1001**.

For VT/TU: Bits 1 to 4 of the pointer word (V1 and V2) detected are **1001**.

- **No NDF** (No New Data Flag) gives statistics on normal pointer jumps containing no NDF.

For STS/AU: Bit 1 to 4 of the pointer word (H1 and H2) detected are **0110**.

For VT/TU: Bit 1 to 4 of the pointer word (V1 and V2) detected are **0110**.

RTD

Note: *Available with Pattern client. Not available in Decoupled, Through, or Through Intrusive mode.*

Round Trip Delay (RTD) measurements are needed to quantify the time it takes for a signal to cross the network and come back. Usually, transport delay is due to two factors: long configured paths and transit times through the network elements along the path. Therefore, RTD measurements are significant in systems that require two-way interactive communication, such as voice telephony, or data systems where the round-trip time directly affects the throughput rate.

From the **Test** menu, tap **Functions**, and the **RTD** tab.

Note: *To do a Round Trip Delay test, the remote NE should be configured to provide a loopback.*

Note: *Be aware that RTD requires error free operation conditions to provide reliable results. Therefore, RTD results could be affected by error injection or error introduced by the network.*

Mode

Allows the selection of the round trip delay test mode. Choices are **Single** (default) and **Continuous**.

- **Single** allows testing the round trip delay once.
- **Continuous** allows testing the round trip delay continuously in a repetitive manner (one RTD measurement every 2 seconds).

Measure Delay Button

Allows enabling the round trip delay measurement.

For **Single** mode, the test is performed once and stops (the **Measure Delay** button turns off by itself). The **Measure Delay** button is only available when the test is running.

For **Continuous** mode, the test is performed continuously until the RTD test or the test case itself is stopped. However, the measurement will only start if the test is running or when it will be started. The **Measure Delay** button turns off by itself when the auto-calibration fails.

Note: *The Round Trip Delay (RTD) auto-calibration generates some bit errors when turning on the RTD measurement while the test is running or when starting the test while the **Measure Delay** button is enabled. A far end testing equipment will detect those bit errors.*

Status

Indicates the test status of the RTD test. The status is only available when the test case is running.

- **Ready** indicates that the last calibration sequence has been successful and the test is now ready to perform RTD measurement.
- **Running** indicates that the RTD test is running.
- **Cancelled** indicates that the RTD test has been stopped before its completion.
- **Calibration Failed** indicates that the test calibration failed due to at least one of the following conditions:
 - Internal errors.
 - Presence of high number of bit errors.

Therefore the RTD statistics becomes unavailable since the test does not allow RTD testing.

- **Disabled:** Indicates that the RTD feature is disabled.
- **--:** Indicates that the RTD measurement is not ready.

Reset

Resets the RTD results and measurement counts.

Delay

Indicates the time required for a bit to travel from the transmitter back to its receiver after crossing a far-end loopback.

- **Last** indicates the result of the last Round Trip Delay measurement.
- **Minimum** indicates the minimum Round Trip Delay recorded.
- **Maximum** indicates the maximum Round Trip Delay recorded.
- **Average** indicates the average Round Trip Delay value.
- **Unit** measurement selections are **ms** (default) and **μs**.

Count

Indicates the total number of successful and failed measurements.

Successful: A measurement is declared successful when the RTD is smaller or equal to 2 seconds.

Failed: A measurement is declared failed when the RTD is > 2 seconds.

Test Functions

RTD/RTT (CPRI/OBSAI Framed L2)


RTD/RTT (CPRI/OBSAI Framed L2)

Note: Only available with CPRI/OBSAI Framed L2 in **Base Station** emulation mode.

Round Trip Delay (RTD for CPRI) and Round Trip Time (RTT for OBSAI) measurements are needed to quantify the time it takes for a signal to cross the remote radio head and come back.

Note: Be aware that RTD/RTT requires error free operation conditions to provide reliable results. Therefore, RTD/RTT results could be affected by error injection or error introduced by the network.

From the **Test** menu, tap **Functions**, and the **RTD/RTT** tab.

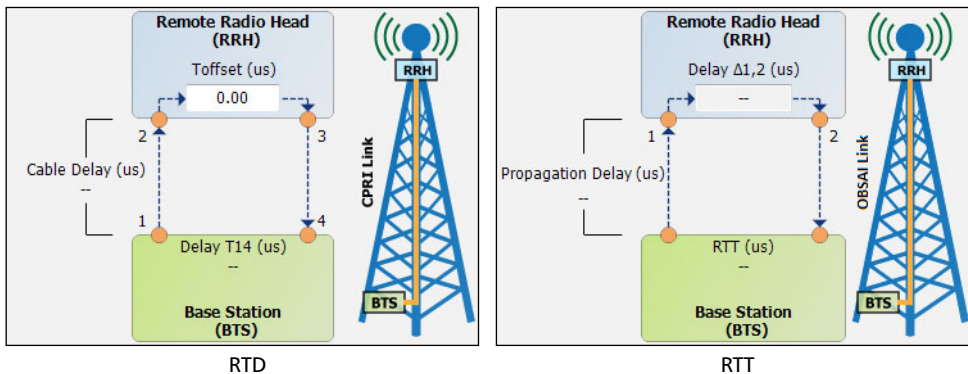

Note: For **Dual Port** topology select the port to be displayed.

Round Trip Delay (CPRI)

Indicates the time required for a bit to travel from one point to another.

- **Delay T14** indicates the round trip delay measurement from the Base Station going through the Remote Radio Head (including **Toffset**) and back to the Base Station. The **Delay T14** appearing on the diagram corresponds to the average value.
- **Cable Delay** indicates the cable delay measured from the Base Station to the Remote Radio Head (RRH) or vice-versa assuming that the cabling in both directions are the same. The **Cable Delay** appearing on the diagram corresponds to the average value.
- **Last** indicates the result of the last delay measurement.
- **Minimum** indicates the minimum delay recorded.
- **Maximum** indicates the maximum delay recorded.
- **Average** indicates the average delay value.
- **Unit** measurement selections are **μs** (default) and **ns**.
- **Toffset** allows the configuration of the internal delay introduced by the electronic components in the Radio Equipment (RE): 0 μs (default) to 66.67 μs.

Note: *A warning icon appears next to the **Toffset** value when this value is larger than the **Delay T14** value measured indicating that the **Toffset** configured value maybe invalid thus corrupting the **Cable Delay** values reported.*

Test Functions

RTD/RTT (CPRI/OBSAI Framed L2)

Round Trip Time (OBSAI)

Indicates the time required for a bit to travel from one point to another.

- **RTT** indicates the round trip time measurement from the Base Station going through the Remote Radio Head (including **Delay $\Delta 1,2$**) and back to the Base Station. The **RTT** appearing on the diagram corresponds to the average value.
- **Propagation Delay** indicates the propagation delay measured from the Base Station to the Remote Radio Head (RRH) or vice-versa assuming that the cabling in both directions are in the same cable bundle. The **Propagation Delay** appearing on the diagram corresponds to the average value.
- **Last** indicates the result of the last time/delay measurement.
- **Minimum** indicates the minimum time/delay recorded.
- **Maximum** indicates the maximum time/delay recorded.
- **Average** indicates the average time/delay value.
- **Unit** measurement selections are **μs** (default) and **ns**.
- **Delay $\Delta 1,2$** reports the internal delay introduced by the electronic components in the Remote Radio Head (RRH).

S-OAM Link Trace

From the **Test** menu, tap **Functions**, and the **S-OAM Link Trace** tab.

Link Trace

- **Priority**¹ allows selecting the VLAN user priority: **0** (default) to **7**. Refer to *VLAN* on page 357 for more information.
- **Drop Eligible**¹ is set to **No** (no frames will be dropped when congestion occurs) and is not configurable.
- **TTL** sets the Time To Live value: **1** to **255** (default is **128**).
- **Link Trace** button when ON (OFF by default) starts the link trace process. The **Link Trace** button turn OFF automatically once the link trace process is completed.

Result

The table reports the following information for each valid LTR frames received in response to the last LTM frame sent: **TTL**, **MEP/MIP MAC Address**, **Forward**, and **Term MEP**.

- **Last Link Trace Status** displays the last link trace status.

Status	Description
Pending	No Results
Successful	Last Link Trace was successful
Failed – LTR Timeout	Last Link Trace failed due to a LTR Timeout
Failed – Invalid LTR	Last Link Trace failed due to an Invalid LTR

- **TX LTM** indicates the count of transmitted LTM frames.

1. Available when VLAN is enabled (see *VLAN* on page 357).

Test Functions

S-OAM Link Trace

- **RX LTR** indicates the count of received LTR frames having their destination MAC address matching the unit port MAC address, and VLANs matching the unit port VLANs.
- **LTR Timeout** indicates the count of LTR Timeout event which occurs if a reply (LTR) from the Peer MEP is not received within 5 seconds.
- **Invalid LTR** indicates the count of LTR frames received with incorrect MEG/MD Level or Transaction ID.

Signaling Bits

Allows generation and monitoring of the signaling bits. Only available for DSn/PDH BERT framed test with DS0/E0 enabled.

From the **Test** menu, tap **Functions** and the **Signaling Bits** tab.

Note: *Two signaling bits (**AB**) are available for SF or SLC-96 framing while four signaling bits (**ABCD**) are available for ESF.*

TX Signaling

Note: *Only available when **TX Signaling** is enabled (refer to **TX Signaling check box** when selected (cleared by default) allows generation of the signaling bits for either the 24 - DS0 channels or 30 - E0 channels (PCM-30 and PCM30 CRC-4). Only available when the DS0/E0 check box is selected. on page 423). For E0 the TX signaling always displays the ABCD bits.*

- **Signaling Mode**, available with DS0, is configurable to **2/4/16 States** for ESF or **2/4 States** for SF/ SLC-96; default is **4 States**.

Signaling Mode Framing	2-States		4-States		16-States
	SF/SLC-96	ESF	SF/SLC-96	ESF	ESF
Signaling Bits	00 11 ^a	0000 1111 ^a	00 to 11 ^a	0000 0101 1010 1111 ^a	0000 to 1111 ^a

a. Default value.

Test Functions

Signaling Bits

- **Channel/AB/ABCD** table: Allows the configuration of signaling bits of either the 24 - DS0 channels or 30 - E0 channels.

Note: *Channel numbers for E0 refer to telephone channel numbers. Timeslots 1 to 15 and 17 to 31 are assigned to telephone channels numbered from 1 to 30 as per G.704.*

RX Signaling

Channel/AB/ABCD table: The monitoring of signaling bits of either the 24 - DS0 channels or 30 - E0 channels is performed when the test is running.

Spare Bits

Note: *Spare Bits are not available when the framing is set to **Unframed**.*

From the **Test** menu, tap **Functions**, tap the **Spare Bits** tab.

TX

Tap a spare bits field to set its value.

Note: *All spare bits are reserved for national use and should be set to 1 when not used.*

➤ E4

G.751 Bit 14, 15, 16: Choices are **000** to **111** (default).

➤ E3

G.751 Bit 12: Choices are **0** and **1** (default).

➤ E1

- **S_{i0}** is located in the bit 1 of the frame containing the frame alignment signal (FAS). Choices are **0** and **1** (default).
- **S_{i1}** is located in the bit 1 of the frame not containing the frame alignment signal (FAS). Choices are **0** and **1** (default).
- **S_{a4}** to **S_{a8}** are located in bit 4 to 8 of frame number 1, 3, 5, and 7 of sub-multiframe 1 and 2. Choices are **0** and **1** (default) or **0000** to **1111** (default) depending on the selected framing.
- **TS16 Frame 0 Bit 5, 7, 8** are located in bit 5, 7, and 8 from Timeslot 16 of frame 0 of a E1 signal. Choices are **000** to **111** (default).

Test Functions

Spare Bits

RX

➤ E4

G.751 Bit 14, 15, 16 are reserved for national use.

➤ E3

G.751 Bit 12 is reserved for national use.

➤ E2

G.742 Bit 12 represents Bit 12 from Timeslot 1, 2, 3, and 4 respectively.

➤ E1

➤ **S_{i0}** is located in the bit 1 of the frame containing the frame alignment signal (FAS).

➤ **S_{i1}** is located in the bit 1 of the frame not containing the frame alignment signal (FAS).

➤ **S_{a4} to S_{a8}** are located in bit 4 to 8 of frame number 1, 3, 5, and 7 of sub-multiframe 1 and 2. Possible values are either **0** and **1** or **0000** to **1111** depending on the framing.

➤ **TS16 Frame 0 Bit 5, 7, 8** are located in bit 5, 7, and 8 from Timeslot 16 of frame 0 of a E1 signal.

Traffic Scan

The traffic scan tool provides the capability to discover and monitor VLAN traffic flows on the network.

Note: *Not available with dual port test and when **Provider Encapsulation** is used. Not available with 50GE.*

From the **Test** menu, tap **Functions**, and the **Traffic Scan** tab.

Level

Allows the selection of the criteria that will be used to filter the incoming VLAN traffic flows. The default setting is **All**. Choices are:

Level	Description
All	Monitors untagged frames and up to 3 levels of stacked VLAN frames
Untagged	Monitors untagged frames only (no VLAN)
C-VLAN	Discovers/monitors only frames where the outer VLAN is a C-VLAN (TPID of 0x8100)
S-VLAN	Discovers/monitors only frames where the outer VLAN is a S-VLAN (TPID of 0x8100, 0x88A8, 0x9100, 0x9200, or 0x9300)
E-VLAN	Discovers/monitors only frames where the outer VLAN is a E-VLAN (TPID of 0x8100, 0x88A8, 0x9100, 0x9200, or 0x9300)

Test Functions

Traffic Scan

Rate Layer

Allows the selection of the rate unit used for **Link Rate** and **Rate** statistics.

- **Line Utilization** is used to express the real line rate including the Preamble, SFD, and IFG.
- **Ethernet BW** (Bandwidth) is used to express the Ethernet bandwidth rate excluding the Preamble, SFD, and IFG.

Discovered

Indicates the number of different traffic flows monitored based on the scan criteria.

Link Rate (Mbit/s)

Indicates the network link rate based on the received frames with a valid FCS regardless if the frame matches or not the traffic flows, and regardless if the traffic flow was ignored due to the limit reached (see *Limit Reached*). The rate is expressed either in **Line Utilization** or **Ethernet Bandwidth** depending on the **Rate Layer** selected.

Limit Reached

Up to 128 different traffic flows can be monitored, the **Limit Reached** text appears with a red background next to the **Discovered** field when the limit is reached.

Scan

Starts/stops the traffic scan test.

Monitored Frames Table

Statistics are gathered for each different traffic flow matching the scan criteria. Each different monitored traffic flow creates a separate entry in the scan table. When the limit is reached, new traffic flows are not considered in the table but the existing traffic flows are still monitored.

The level of VLAN (untagged, E-VLAN, S-VLAN, C-VLAN), and values of VLAN ID, Priority, and TPID are used to identify a traffic flow. Any difference in one of these values will create a separated entry in the table. PBB-TE frames are ignored.

Note: *Scan statistics are cleared when restarting the scan.*

➤ **E-VLAN / S-VLAN / C-VLAN**

- **ID** indicates the VLAN ID of the received traffic flow.
- **Priority** indicates the VLAN Priority of the received traffic flow.

Note: *The TPID indicating the Tag Protocol Identifier of the received traffic flow is reported in the test report.*

➤ **Statistics**

- **Frame Count** indicates for each traffic flow, the number of frames matching the selected scan criteria.

Total indicates the total number of frames matching the selected scan criteria.

- **Rate (Mbit/s)** indicates for each traffic flow, the rate of frames matching the selected scan criteria. The rate is expressed either in **Line Utilization** or **Ethernet Bandwidth** (see *Rate Layer*).

Total indicates the total rate of frames matching the selected scan criteria.

11 Test Control

This chapter describes the test control buttons available on the right navigation bar of the application.

Button	For more information, see:
Discover Remote	Discover Remote <i>on page 782</i>
Inject	Inject Button <i>on page 787</i>
Laser	Laser Button <i>on page 787</i>
Lpbk Tool	Lpbk Tool Button (Loopback Tool) <i>on page 788</i>
Report	Report Button <i>on page 795</i>
Reset	Reset Button <i>on page 800</i>
Save/Load	Save/Load Button <i>on page 801</i>
Start/Stop TX	Start/Stop TX Button <i>on page 805</i>

More/Less Button

The **More/Less** button appears when there is not enough room to display all available test control buttons. The **More** button expands the control buttons area to display all control buttons while the **Less** button closes the expanded area. The pin button can be used to keep open the expanded area.

Discover Remote

The Discover Remote function allows performing Ethernet tests in conjunction with a second test set (unit) by either scanning and connecting to any available EXFO Datacom remote unit or connecting to a third party remote device in loopback mode. The remote unit is used to loop back the traffic; for an EXFO unit it could be via Smart Loopback or **Dual Test Set (DTS)** for simultaneous bidirectional RFC 2544, RFC 6349, or EtherSAM results.

Note: *Only available with single-port **EtherSAM**, **EtherBERT**, **RFC 2544**, **RFC 6349**, and **Traffic Gen & Mon** test applications for rates up to 100GE. Not available with host/media loopback. Not available with multiple link interface.*

Remote Module Type

Allows selecting the loopback type for EtherSAM, EtherBERT, RFC 2544, and Traffic Gen & Mon test applications. For other test applications, this setting is forced to **EXFO**.

- **EXFO** (default), see *Remote Modules Discovery (EXFO)*
- **Third-Party Loopback**, see *Remote Modules Discovery (3rd Party Loopback)* on page 785

Remote Modules Discovery (EXFO)

- **Target** defines how to perform the scan to discover remote units.
 - **Subnet** indicates to perform the scan based on the current subnet.
 - **Specific IP** indicates to perform the scan for a specific remote unit IP address. Enter the IP address of the target unit.

Quick Ping tests if the destination IP address can be reached. A message displays if the ping attempt is **Successful** or **Failed**.

- **Scan** button scans the subnet or a specific IP (see **Target**) to discover remote EXFO compatible unit(s).

The discovered units are listed in the table with their **IP Address**, **Remote ID**, **Capabilities**, and **Status** information. **Remote ID**, **Capabilities**, and **Status** are only available for remote 88000 Series, and 85100G units.

- **Capabilities** indicates the loopback capabilities of the remote unit using the following test application icons¹: Smart Loopback, RFC 2544, RFC 6349, and/or EtherSAM.
- **Status** indicates the status of the remote unit.

Status	Description
Idle-<test application> ^a	The specified test application is selected but not running.
Busy-<test application> ^b	The specified test application is running.
Not Responding	No response from the specified IP address (only possible when Target is set to Specific IP).

- Possible test applications: EtherSAM, RFC 2544, RFC 6349, EtherBERT, Traffic Gen & Mon, Smart Loopback, Through Mode, TCP Throughput, Carrier Ethernet OAM, Cable Test, 1588 PTP, SyncE or eCPRI.
- Possible test applications: EtherSAM, RFC 2544, RFC 6349, EtherBERT, Traffic Gen & Mon, Smart Loopback, TCP Throughput, Carrier Ethernet OAM, 1588 PTP, SyncE or eCPRI.

1. A yellow exclamation symbol on the application icon indicates that there is a software incompatibility between the local and remote units. In this case the connection with the remote is not possible, a software upgrade is required on the remote unit to fix the incompatibility.

Test Control

Discover Remote

- **Loop Up** and **Loop Down** buttons (Not available with RFC 6349 test application)
 - **Loop Up** establishes the connection with the selected remote unit and sets the remote unit into **Smart Loopback** test application.

If a remote unit is in any busy status, a user confirmation is required to proceed with the Loop Up command.

Following a successful loop up, the IP address of the remote unit will be used as the destination IP address for the test.

Once the connection is established with the remote unit, the local unit can be set for EtherSAM, RFC 2544, EtherBERT, or Traffic Gen & Mon testing.
 - **Loop Down** ends the connection between the local and the remote units.
- **Connect** and **Disconnect** buttons are only available with RFC 2544, RFC 6349, and EtherSAM test applications.
 - **Connect** establishes the connection with the selected remote unit and sets the remote unit into either RFC 2544 DTS, RFC 6349 DTS / TCP Throughput DTS, or EtherSAM DTS test application, depending on the active test on the local unit.

If a remote unit is in any busy status, a user confirmation is required to proceed with the Loop Up command.

If a remote unit is incompatible, indicated by a yellow exclamation symbol on the application icon, the connection is not established and a message is displayed indicating that a software upgrade is required on the remote unit.

Following a successful connection, the IP address of the remote unit will be used as the destination IP address for the test.
 - **Disconnect** ends the connection between the local and the remote units.

Remote Modules Discovery (3rd Party Loopback)

- **Use Stream Destination from Test Application** check box when selected (default), it uses the stream destination configuration parameters from the test application to communicate with the third-party loopback unit. Only available with single-stream test applications.
- **Loop Layer** allows selecting the layer of loop messages: **L2: Ethernet**, **L3: IP**, or **L4: UDP/TCP**.
- **Destination MAC Address** (L2) allows specifying the stream destination MAC address. Not configurable when the **Use Stream Destination from Test Application** check box is selected.
- **Destination IP Address** (L3/L4), allows specifying the stream destination IP address. Not configurable when the **Use Stream Destination from Test Application** check box is selected.
- **Quick Ping** tests if the destination IP address can be reached. A message displays if the ping attempt is **Successful** or **Failed**.
- **Destination Port** (L4) allows selecting the stream destination UDP port. Not configurable when the **Use Stream Destination from Test Application** check box is selected.
- **Remote Module ID** indicates the unit ID of the remote unit.
- **Remote Status** indicates the status of the remote unit.

➤ **Loop Up / Loop Down**

- **Loop Up** establishes the connection with the selected remote unit and the loopback mode is set and initiated on the remote unit.

The interface IP address is used as the source address for the test and the stream/service address has to be coupled with the interface (refer to **Couple with Interface** on page 342). For Layer 4, the UDP source port is using the one configured on the first stream/service. For EtherSAM, since the VLAN is not coupled, make sure to use the same VLAN configuration for the interface and all enabled services.

Following a successful loop up, the MAC and IP addresses of the remote unit will be used as the destination addresses for the test.

When the connection is established with the remote unit, the test should be started locally. A message is displayed if the remote unit cannot be reached.

- **Loop Down** ends the connection between the local and the remote units.

Local Module Identification

Module ID is used to easily identify this unit in case another unit is performing a discovery scan. Up to 16 alpha-numeric characters are allowed.

Inject Button

Injects alarms/errors based on settings from the *Inject Button* on page 490.

Laser Button

The **Laser** button enables or disables the laser for optical interfaces. For **Dual Port** topology, enables or disables the laser for both optical interfaces (ports). However, when an active copper SFP is used on a port, the laser is always on for this port.

Note: *Not available with host/media loopback.*

Laser Button	Border Color	Description
	Black	Laser is off.
	Red	Laser is on.

Lpbk Tool Button (Loopback Tool)

The Loopback Tool provides the capability of looping back the Ethernet frames/packets that are received on the loopback tool port.

Pressing the **Lpbk Tool** button opens the Loopback Tool pop-up and powers up the port unused by the main test application (it does not start looping back the frames yet). The Loopback Tool starts looping back the Ethernet frames/packets that are received when pressing on the **Loopback** button from the **Loopback Tool** tab.

Note: *The **Lpbk Tool** button is available when the main test application is any single port Ethernet test application (up to 10G rate) with the exception of Through mode. Not available on 88200NGE.*

Note: *The Loopback Tool is independent from the main test **Start/Stop**, **Reset** and **Test Timer**.*

Note: *Enabling/disabling the Laser control affects both the main test application and the Loopback Tool when applicable (if both test and tool are using an optical port).*

Loopback Tool tab

The **Loopback Tool** tab allows the configuration of the loopback parameters and displays the traffic statistics as well as the S-OAM Responder statistics.

Press the **Lpbk Tool** button and select the **Loopback Tool** tab.

- **Status:** The status field displays the current status of the Loopback test.
 - **-- (Idle):** Loopback Tool is not looping back frames and results are not available.
 - **In Progress:** Loopback Tool is looping back frames.
 - **Completed:** Loopback Tool is not looping back frames but results are available. The test **Status** indicates **Completed** when the loopback tool has been stopped.
- **Start Time:** The time when the Loopback Tool was started.
- **Transparent (Pseudo-Physical)** check box when selected (cleared by default), determines that the Loopback tool operates as a physical loopback by transmitting all received frames unaltered and without discrimination.

In transparent mode, the Network tab and the S-OAM Responder statistics are not available.

Note: *The **Transparent** mode is intended to be used for point-to-point topology, not for switched or routed networks. Use the **Transparent** mode with caution because all received frames are looped back without discrimination.*

Test Control

Lpbk Tool Button (Loopback Tool)

- **Loopback Mode** determines at which layer the address/port swapping is limited.
 - **Ethernet** swaps the MAC addresses of received packets having their **Destination MAC** address matching the MAC address of the loopback port.
 - **Ethernet (All Unicast)** swaps the MAC addresses of received packets having Unicast **Destination MAC** address.
 - **IP**, for Ethernet Layer 3 and 4, swaps the MAC and IP addresses of received packets having their **Destination IP** address matching the IP address of the loopback port. For Ethernet Layer 2, swaps the **MAC addresses** for packets having their **Destination MAC** address matching the MAC address of the loopback port.
 - **UDP/TCP** (default), for Ethernet Layer 4, swaps the UDP or TCP ports and the MAC and IP addresses of received packets having their **Destination IP** address matching the IP address of the loopback port. For Ethernet Layer 3, swaps the MAC and IP addresses for packets having their **Destination IP** address matching the IP address of the loopback port. For Ethernet Layer 2, swaps the **MAC addresses** for packets having their **Destination MAC** address matching the MAC address of the loopback port.
- **Traffic**
 - **Line Utilization (%)** indicates the current percentage of the transmitting/receiving line rate utilization.
 - **Ethernet BW (Mbit/s)** indicates the current transmitting/receiving data rate expressed in Mbit/s.
 - **Frame Rate (frame/s)** indicates the current transmitted/received number of frames (including bad frames, Broadcast frames and Multicast frames) in frame per second.
 - **Frame Count** indicates the total number of transmitted/received valid and invalid frames.

- **S-OAM Responder** check box when selected (default) allows responding to LBM, LTM, DMM, LMM, and SLM valid messages (**Lpbk Tool** must be started, see **Loopback** button below). Traffic statistics are also monitored (refer to *Responder* on page 664).

Responds to... message	Responds with... message
LBM	LBR
LTM	LTR
DMM	DMR
LMM	LMR
SLM	SLR

Responder - TX Count reports respectively the count of LBR, LTR, DMR, LMR, SLR, and the total of frames transmitted.

Responder - RX Count reports counts of valid LBM, LTM, DMM, LMM, SLM, and the total of frames received. A valid messages must have its destination MAC address matching either the unit port Unicast MAC address or a Multicast class 1 address¹.

- **Loopback** button starts/stops looping back the frames/packets that are received. The default value is disabled.

1. Refer to *Unicast/Multicast Addresses for Ethernet OAM* on page 907 for more information.

Interface Tab

Physical Interface

- **Interface/Rate** allows the selection of the loopback tool interface rate: **BASE-T Electrical** (default), **100M Optical**, **1GE Optical**, or **10GE LAN**.
- **Connector** displays the unused module's port (on the same transceiver system when applicable) for the selected interface/rate. BASE-T Electrical is supported on optical connector when using an active copper SFP.
- **Clock Mode**: Displays the clock mode
- **Internal**: Internal clock of the unit (STRATUM 3).
- **Recovered**: Line clock from the input port signal involved in the tool.
- **Wavelength (nm)** indicates, when supported, the detected wavelength.
- **RX Power (dBm)** indicates the current received power level of the optical laser in dBm.

Green: Power level in range.

Yellow: Power level out-of-range.

Red: Loss of signal or power level is close to damage.

Gray: Invalid operational range value or not available/supplied by the transceiver.

- **Power Range (dBm)** indicates, when supported, the received power level range of the optical laser in dBm.
- **RX Frequency (MHz/GHz)** indicates the frequency of the input signal. When no frequency reading is possible, "--" is displayed. Not available when using an active copper SFP.

LINK

- **Auto-Negotiation** check box when selected, enables the link auto-negotiation and allows setting the port **Speed**, **Duplex**, **Flow Control**, and **Local Clock** parameters. Those settings are not applied

immediately to the port, they are used only when the negotiation process is started and take effect only when the auto-negotiation succeeds. However current settings are applied immediately to the port when the **Auto-Negotiation** check box is cleared. For 1GE Electrical interface or when using an active copper SFP, the **Auto-Negotiation** check box is selected and dimmed. Available with **BASE-T Electrical** interface.

- **Speed**, available with **BASE-T Electrical** interface, allows the selection of the interface rate: **10M**, **100M**, **1GE** or **Auto**¹. The negotiated speed will be displayed next to the **Speed** field selection.
- **Duplex** choices for **10M** and **100M** electrical interfaces are **Full Duplex** (default), **Half Duplex**, and **Auto**¹. For other rates the Duplex is set to **Full Duplex**. The negotiated duplex will be displayed next to the **Duplex** field selection.
- **Flow Control** choices are **TX, RX, RX and TX**, **None** (default), and **Auto**¹. When the **Flow Control** is set to **None**, pause frames received are ignored.
- **Cable Mode** is available with **BASE-T Electrical** interface.
- **Manual** mode is selected when the **Auto-Negotiation** check box is cleared and allows selecting the type of cable: **MDI** (default) for straight through cable or **MDIX** for crossover cable.
- **Automatic** mode is selected when the **Auto-Negotiation** check box is selected and allows detecting automatically the MDI or MDIX cable type.
- **Local Clock** is only available with 1GE electrical interface and allows setting the provenance of the clock: **Master** (default), or **Slave**, or **Auto**².

1. **Auto** is only available when the **Auto-Negotiation** check box is selected.

2. **Auto** is only available when the **Auto-Negotiation** check box is selected.

Test Control

Lpbk Tool Button (Loopback Tool)

Network tab

Refer to *Network* on page 355 for more information.

SFP/SFP+ tab

Refer to *CFP/OSFP/QSFP/SFP* on page 253 for more information.

Report Button

The report contains all information about the current test including its setup and results.

Note: *Nothing prevents the configuration and alarm/error injection setup while the test has been stopped; thus, the report should be saved/printed before changing any test parameters to avoid printing discrepancy between the configuration and results.*

The **Report** button is available when the test is running or stopped, but the report generation is only possible when the test is stopped. It is possible to save, open, import, export, and delete test report(s).

File Location

➤ **Public Documents:**

Users\Public\Documents\<product>\Reports

➤ **My Documents:**

Users\<User>\Documents\<product>\Reports

➤ **Others**, use **Browse** to select a specific file location that will be displayed under **Others**.

➤ **Removable Drives** is only available when there is a removable disk/key connected to the platform USB port.

Config/Save Tab

The **Config/Save** tab allows configuring the report parameters and generating/saving the report.

Tap the **Report** button and the **Config/Save** tab.

- **Job Information** parameters, not mandatory, are used to identify the source of the report. Enter the following job information if required: **Job ID**, **Contractor Name**, **Customer Name**, **Operator Name**, **Circuit ID**, and **Comment**. Up to 30 characters are allowed for each parameter at the exception of **Comment** for which 256 characters are allowed.

Note: *When the **EXFO Connect Server** check box is selected in **EXFO Connect Client**, the **Opeator Name** is not editable but can be selected from the **EXFO Connect** operator list using the **Change** button.*

Restore Default reverts all **Job Information** parameters back to the default values.

- **Report Headlines and Content** parameters are used to identify the report and are not mandatory. Up to 30 characters are allowed for each parameter.
 - **Report Header** could be the company name.
 - **Report Title** could be the name of the product, name of test, test number, etc.

- **Optional Content** allows choosing the optional content that can be part of the report:

All (default) includes all optional content to the report. For JSON format, **All** is selected and dimmed.

None excluded all optional content from the report.

Custom allows selecting the optional content to be part of the report.
- **Choose Content**, available when the **Optional Content** is set to **Custom**, allows selecting what will be part of the custom content.
- **Save Report**
 - **Auto-Generate Report** check box, when selected (cleared by default), automatically generates the report once the test ends or is manually stopped. When enabled, the report is also automatically generated when controlling the unit remotely using SCPI commands but the module application (GUI) must be running on the platform in order to work.
 - **Auto-Generate File Name** check box, when selected (default), automatically generates the report file name which contains the name of the test, the date (YY.MM.DD), and time (HH.MM.SS). Clear the **Auto-Generate File Name** check box to enter a specific file name.

File Name is the name of the report to be generated.
 - **Save To** is the file location where the report file will be saved (see *File Location* on page 795).
 - **Display Report after Saving** check box when selected (default) automatically displays the report once it is generated.

Note: Once generated, the report can be opened from the Open Tab on page 798.

Test Control

Report Button

- **Turn on Report Generation Prompt** check box when selected (default) displays a pop-up every time a test case is stopped or completed to ask if a report generation is desired.
- **Format** is the file type generated for the report: **PDF** (default), **HTML** or **JSON** (available with iOptics, eCPRI, CPRI, RFC 2544, RFC 6349, EtherSAM, and EtherBERT). Regardless of the format selected, PDF and JSON (when supported) report files are automatically generated for availability within EXFO Exchange environment.
- **Logo** check box when selected (default) allows including a logo to the report. Select the logo picture that will be displayed on the report. Not supported with JSON report format.

To select another logo, first add a new logo by either copying the logo picture file to the following folder or by using the Import/Export (see page 799) then select the new logo from the list.

Documents\<product>\Reports\Images

Supported picture file formats are jpg, gif, bmp, and png.

- **Save Report** button generates and saves the report on the selected media (**Save to**).

Open Tab

Report files can be opened from this page.

Tap the **Report** button and the **Open** tab.

To open a saved report:

- 1.** Select the file location (see *File Location* on page 795).
- 2.** Select the report file from the list.
- 3.** Tap the **Open** button.

Import/Export Tab

Allows transferring and deleting report files from an external USB media. Also allows importing images that can be used as the Logo for reports.

Tap the **Report** button and select the **Import/Export** tab.

To import/export a report or image:

1. Select either **Report** or **Image** as **File Type**.
2. Select the file location (see *File Location* on page 795).
3. From the **Copy To** drop list, select where the file(s) will be copied.
4. Select the file(s) to be copied by selecting its corresponding check box or tap the **(Un)Select All** button to select or unselect all files in the list.
5. Tap the **Copy** button.
6. A confirmation is displayed, tap **OK**.

To delete a report or image:

1. Select either **Report** or **Image** as **File Type**.
2. Select the file location (see *File Location* on page 795).
3. Select the file(s) to be deleted by selecting its corresponding check box or tap the **(Un)Select All** button to select or unselect all files.
4. Tap the **Delete** button.
5. Tap **YES** to confirm the deletion.

Reset Button

Tap the **Reset** button to clear results, statistics, and logger content. The **Reset** button is only available when the test is running.

Note: *The **Reset** button is not available for EtherSAM, RFC 2544, RFC 6349, Cable Test, and Smart Loopback test applications.*

Save/Load Button

The **Save/Load** button allows saving, loading, importing, exporting, and deleting configuration file(s).

Note: *Save/Load is only possible when the test is stopped.*

File location

- **My Documents** offers two file locations: use **Favorites** for most commonly used configuration files or **Configurations** for others.

Users\<User>\Documents\<product>\Configuration
Users\<User>\Documents\<product>\Configuration\Favorites

- **Public Documents** offers two file locations: use **Favorites** for most commonly used configuration files or **Configurations** for others.

Users\Public\Documents\<product>\Configuration
Users\Public\Documents\<product>\Configuration\Favorites

- **Others** offers two file locations: use **Factory Defined** for factory defined configuration files or select **Browse** to create a user defined file location.

- **Removable Drives** is only available when there is a removable disk/key connected to the platform USB port.

Save/Load Tab

Tap the **Save/Load** button and the **Save/Load** tab.

The save function stores the configuration of the module including all test settings to a file.

To save a configuration:

1. Select the file location (see *File location* on page 801).
2. Tap on the **Save** button.
3. Type the name of the configuration file to be saved and a description (**Config Summary**) if needed.
4. Select the **Add to Favorites** check box to save the configuration file in the **Favorites** list.
5. Tap **OK**.

The load function opens and applies the test configuration from a previously saved configuration file.

To load a configuration:

1. Select the file location (see *File location* on page 801).
2. Select the file from the list.
3. Select or clear the **Overwrite report settings** check box as required. The **Overwrite report settings** check box when selected (default) replaces the current report settings by those from the configuration that is loaded.
4. Tap the **Load** button.

Note: *Configuration file has a limited backward compatibility. (Typically the backward compatibility period is one year or three software releases.)*

To rename a configuration file:

1. Select the file location (see *File location* on page 801).
2. Select the file from the list.
3. Tap the **Rename** button.
4. Change the name of the configuration file.
5. Select the **Add to Favorites** check box to save the configuration file in the **Favorites** list.
6. Tap **OK**.

To delete a configuration file:

1. Select the file location (see *File location* on page 801).
2. Select the file from the list.
3. Tap the **Delete** button.
4. Tap **Yes** to confirm the deletion.

To add a configuration file to the Favorites list:

1. Select **Configuration** from either **My Documents** or **Public Documents**.
2. Select the file from the list.
3. Tap the **Add to Favorites** button. The file will be moved into the **Configurations** folder of its corresponding location (either **My Documents** or **Public Documents**).

To remove a configuration file from the Favorites list:

1. Select **Favorites** from either **My Documents** or **Public Documents**.
2. Select the file from the list.
3. Tap the **Remove from Favorites** button. The file will be moved into the **Configurations** folder of its corresponding location (either **My Documents** or **Public Documents**).

Import/Export Tab

Configuration files can be transferred to and from an external USB media as well as deleted.

Tap the **Save/Load** button and the **Import/Export** tab.

To import/export a test configuration:

1. Select the source file location (see *File location* on page 801).
2. From the **Copy To** drop list, select a destination file location.
3. Select the file(s) to be copied by selecting its corresponding check box or tap the **(Un)Select All** button to select or unselect all files in the list.
4. Tap the **Copy** button.
5. A confirmation is displayed, tap **OK**.

To delete a test configuration:

1. Select the file location (see *File location* on page 801).
2. Select the file(s) to be deleted by selecting its corresponding check box or tap the **(Un)Select All** button to select or unselect all files in the list.
3. Tap the **Delete** button.
4. Tap **YES** to confirm the deletion.

Start/Stop | TX Button

The **Start/Stop | TX** button allows starting or stopping manually any test as well as enabling traffic generation.

To start the test:

Tap the **Start** button to start the test. **Start** is available when the test is not running.

To stop the test:

Tap the **Stop** button to stop the test; the traffic generation also stops if it was enabled (TX button). **Stop** is available when the test is running.

By default, a message is displayed when the test stops asking to generate a report. To disable this feature, see *Turn on Report Generation* on page 798. Nothing prevents the configuration and alarm/error injection setup while the test has been stopped; thus, if a report is required, it should be saved before changing any test parameters to avoid discrepancy between the configuration and results. See *Report Button* on page 795 to generate and save a report.

To enable traffic generation:

Tap the **TX** button to enable traffic generation; the test is also started if it was not running.

Test Application	Descripton
Traffic Gen & Mon	Enables traffic generation for all enabled streams. Some conditions, such as ARP not resolved, link down, etc., may prevent the stream to be transmitted.
FlexE BERT	Enables traffic generation for all enabled clients (refer to Enable TX from <i>Profile - FlexE BERT</i> on page 376).
eCPRI BERT	Enables traffic generation.

Note: While the test is running the **TX** button is available to enable/disable traffic generation.

12 **Power Failure Recovery**

The automatic power failure recovery is used to select, configure, and restart¹ the test that was running before the power failure; a test that was not running will be selected and configured but not started. To provide this level of protection, the configuration of the current test is automatically saved; the logger, injections, and configuration are periodically saved.

A power failure occurs when the AC power is down (LTB-8 and FTB) while the unit's battery (FTB) has not sufficient power to keep the unit running. Pressing the platform power button for 5 seconds performs a power down reset and is also considered as a power failure condition. The Windows **Hibernate** or **Sleep** mode is also considered as a power failure condition.

When the power returns, the automatic power failure recovery restarts the platform, the module application, then selects, configures, and starts the test if it was running before the power failure.

Note: *If the automatic power failure recovery is not used, restarting the module after a power failure automatically selects, configures, and starts the test if it was running before the power failure.*

1. Not applicable for iSAM, EtherSAM, RFC 2544, RFC 6349, TCP Throughput, and Cable Test applications; these tests must be started manually.

Enabling Power Failure Recovery

To enable the automatic power failure recovery:

- 1.** Enable launching the application when starting the platform (refer to the platform user guide for more information):

From ToolBox X, tap on the **System Settings** button, the **Startup Applications** button, and select the corresponding module's check box.
- 2.** moduleEnable the platform automatic power on feature (refer to the platform user guide for more information):
 - 2a.** From ToolBox X, tap on the **System Settings** button and the **ToolBox X** button.
 - 2b.** Select the **Power on the unit when AC outlet is connected or after power outage** check box.
- 3.** Make sure that Windows does not require a user name and password. The platform is set to require user name and password by default. To disable Windows user name and password:
 - 3a.** From ToolBox X, tap on the **System Settings** button and the **Automatic Logon** button.
 - 3b.** Clear the **User must enter a user name and password to use this computer** check box and enter the password to confirm.

Note: *The power failure recovery is not used when the application closes normally.*

When Using the Test Timer

Refer to *Timer* on page 465 for more information on test timer.

The test that was running will be re-created and started after a power failure if conditions described above are met in addition with the following test time conditions:

- The start time has not expired during the power failure.
- The stop time or the duration has not expired during the power failure.

13 *Maintenance*

To help ensure long, trouble-free operation:

- Always inspect fiber-optic connectors before using them and clean them if necessary.
- Keep the unit free of dust.
- Clean the unit casing and front panel with a cloth slightly dampened with water.
- Store unit at room temperature in a clean and dry area. Keep the unit out of direct sunlight.
- Avoid high humidity or significant temperature fluctuations.
- Avoid unnecessary shocks and vibrations.
- If any liquids are spilled on or into the unit, turn off the power immediately, disconnect from any external power source, remove the batteries and let the unit dry completely.



WARNING

The use of controls, adjustments and procedures, namely for operation and maintenance, other than those specified herein may result in hazardous radiation exposure or impair the protection provided by this unit.

Maintenance

Cleaning LC/MPO-n Connectors

Cleaning LC/MPO-n Connectors

Under normal circumstances the cleaning of the LC/MPO-n connector is not required. However if the connector shows signs of debris or contamination, cleaning may be required.

To clean a LC/MPO-n connector

1. Use a clean dry air (CDA) or a air gun to blow out the dust or contamination.
2. Re-inspect the connector. For MPO-n optical connector, re-inspect the connector under magnification to make sure that it is clean.
3. If the connector is still not clean, use a commercial cleaner recommended by the transceiver manufacturer.

Note: *Refer to the transceiver manufacturer for more detailed cleaning recommendations and instructions.*

Battery Safety Information

The TA/TA4-... transceiver systems contain a battery for the insertion counter. If the battery status is low, contact your nearest authorized EXFO service center for its replacement.



WARNING

Do not throw batteries into fire or water and do not short-circuit the batteries' electrical contacts. Do not disassemble.

Recalibrating the Unit

EXFO manufacturing and service center calibrations are based on the ISO/IEC 17025 standard (*General Requirements for the Competence of Testing and Calibration Laboratories*). This standard states that calibration documents must not contain a calibration interval and that the user is responsible for determining the re-calibration date according to the actual use of the instrument.

The validity of specifications depends on operating conditions. For example, the calibration validity period can be longer or shorter depending on the intensity of use, environmental conditions and unit maintenance, as well as the specific requirements for your application. All of these elements must be taken into consideration when determining the appropriate calibration interval of this particular EXFO unit.

Under normal use, the recommended interval for your module is: 2 years.

For newly delivered units, EXFO has determined that the storage of this product for up to six months between calibration and shipment does not affect its performance (EXFO Policy PL-03).

Maintenance

Recycling and Disposal

To help you with calibration follow-up, EXFO provides a special calibration label that complies with the ISO/IEC 17025 standard and indicates the unit calibration date and provides space to indicate the due date. Unless you have already established a specific calibration interval based on your own empirical data and requirements, EXFO would recommend that the next calibration date be established according to the following equation:

Next calibration date = Date of first usage (if less than six months after the calibration date) + Recommended calibration period (2 years)

To ensure that your unit conforms to the published specifications, calibration may be carried out at an EXFO service center or, depending on the product, at one of EXFO's certified service centers. Calibrations at EXFO are performed using standards traceable to national metrology institutes.

Note: *You may have purchased a FlexCare plan that covers calibrations. See the Service and Repairs section of this user documentation for more information on how to contact the service centers and to see if your plan qualifies.*

Recycling and Disposal



This symbol on the product means that you should recycle or dispose of your product (including electric and electronic accessories) properly, in accordance with local regulations. Do not dispose of it in ordinary garbage receptacles.

For complete recycling/disposal information, visit the EXFO Web site at www.exfo.com/recycle.

14 Troubleshooting

Solving Common Problems

Before calling EXFO's technical support, please read the following common problems that can occur and their respective solution.

Problem	Possible Cause	Solution
Optical Laser LED is off and the connector is not generating the signal.	The Laser On option is disabled.	Ensure that the Laser button is enabled (On).
	There is a configuration mismatch between the inserted transceiver and the rate selected for the test case.	Ensure that the transceiver is supporting the rate used for the test case.
	The transceiver is not compatible with the module.	Ensure to use a compatible transceiver. Refer to <i>Modify Structure</i> on page 144 and <i>Specifications</i> on page 823.
Unable to edit the Operator Name in Generate Report page.	This is the expected behavior when the EXFO Connect Server check box is selected in EXFO Connect Client , since the Operator Name is selected from the EXFO Connect operator name list.	To edit the Operator Name : - Clear the EXFO Connect Server check box from EXFO Connect Client . - Close and restart the module application.
Transceiver System (TA4) not detected.	TA4 is not inserted properly.	Remove the TA4 from the 88460 module, and carefully follow the insertion procedure described on page 16.
Unable to connect to a remote module in Dual Test Set with RFC 6349, there is a yellow exclamation symbol on the RFC 6349 application icon.	The local and remote units have incompatible software versions.	Upgrade the remote unit. Note that with the new software version, the EXFO Worx Interop operation mode is no longer supported.

Contacting the Technical Support Group

To obtain after-sales service or technical support for this product, contact EXFO at one of the following numbers. The Technical Support Group is available to take your calls from Monday to Friday, 8:00 a.m. to 7:00 p.m. (Eastern Time in North America).

Technical Support Group

400 Godin Avenue
Quebec (Quebec) G1M 2K2
CANADA

1 866 683-0155 (USA and Canada)
Tel.: 1 418 683-5498
Fax: 1 418 683-9224
support@exfo.com

For detailed information about technical support, and for a list of other worldwide locations, visit the EXFO Web site at www.exfo.com.

If you have comments or suggestions about this user documentation, you can send them to customer.feedback.manual@exfo.com.

To accelerate the process, please have information such as the name and the serial number (see the product identification label), as well as a description of your problem, close at hand.

Transportation

Maintain a temperature range within specifications when transporting the unit. Transportation damage can occur from improper handling. The following steps are recommended to minimize the possibility of damage:

- Pack the unit in its original packing material when shipping.
- Avoid high humidity or large temperature fluctuations.
- Keep the unit out of direct sunlight.
- Avoid unnecessary shocks and vibrations.

15 **Warranty**

General Information

EXFO Inc. (EXFO) warrants this equipment against defects in material and workmanship for a period of one year from the date of original shipment. EXFO also warrants that this equipment will meet applicable specifications under normal use.

During the warranty period, EXFO will, at its discretion, repair, replace, or issue credit for any defective product, as well as verify and adjust the product free of charge should the equipment need to be repaired or if the original calibration is erroneous. If the equipment is sent back for verification of calibration during the warranty period and found to meet all published specifications, EXFO will charge standard calibration fees.



IMPORTANT

The warranty can become null and void if:

- unit has been tampered with, repaired, or worked upon by unauthorized individuals or non-EXFO personnel.
- warranty sticker has been removed.
- case screws, other than those specified in this guide, have been removed.
- case has been opened, other than as explained in this guide.
- unit serial number has been altered, erased, or removed.
- unit has been misused, neglected, or damaged by accident.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL EXFO BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

Gray Market and Gray Market Products

Gray market is a market where products are traded through distribution channels that are legal but remain unofficial, unauthorized, or unintended by the original manufacturer. Intermediaries using such channels to distribute products are considered to be part of the gray market (hereafter unauthorized intermediary).

EXFO considers that a product originates from the gray market (hereafter gray market product) in the following situations:

- A product is sold by an unauthorized intermediary.
- A product is designed and destined for a particular market and sold on a second market.
- A product is resold, despite being reported lost or stolen.

When products are purchased on the gray market, rather than through an authorized EXFO distribution channel, EXFO is unable to guarantee the source and quality of those products nor the local safety regulations and certifications (CE, UL, etc.).

EXFO will not honor warranty, install, maintain, repair, calibrate, provide technical support nor make any support contracts available for gray market products.

For complete information, refer to EXFO's policy regarding gray market products at

www.exfo.com/en/how-to-buy/sales-terms-conditions/gray-market/

Liability

EXFO shall not be liable for damages resulting from the use of the product, nor shall be responsible for any failure in the performance of other items to which the product is connected or the operation of any system of which the product may be a part.

EXFO shall not be liable for damages resulting from improper usage or unauthorized modification of the product, its accompanying accessories and software.

Exclusions

EXFO reserves the right to make changes in the design or construction of any of its products at any time without incurring obligation to make any changes whatsoever on units purchased. Accessories, including but not limited to fuses, pilot lamps, batteries and universal interfaces (EUI) used with EXFO products are not covered by this warranty.

This warranty excludes failure resulting from: improper use or installation, normal wear and tear, accident, abuse, neglect, fire, water, lightning or other acts of nature, causes external to the product or other factors beyond the control of EXFO.



IMPORTANT

In the case of products equipped with optical connectors, EXFO will charge a fee for replacing connectors that were damaged due to misuse or bad cleaning.

Certification

EXFO certifies that this equipment met its published specifications at the time of shipment from the factory.

Service and Repairs

EXFO commits to providing product service and repair for five years following the date of purchase.

To send any equipment for service or repair:

- 1.** Call one of EXFO's authorized service centers (see *EXFO Service Centers Worldwide* on page 821). Support personnel will determine if the equipment requires service, repair, or calibration.
- 2.** If equipment must be returned to EXFO or an authorized service center, support personnel will issue a Return Merchandise Authorization (RMA) number and provide an address for return.
- 3.** If possible, back up your data before sending the unit for repair.
- 4.** Pack the equipment in its original shipping material. Be sure to include a statement or report fully detailing the defect and the conditions under which it was observed.
- 5.** Return the equipment, prepaid, to the address given to you by support personnel. Be sure to write the RMA number on the shipping slip. *EXFO will refuse and return any package that does not bear an RMA number.*

Note: *A test setup fee will apply to any returned unit that, after test, is found to meet the applicable specifications.*

After repair, the equipment will be returned with a repair report. If the equipment is not under warranty, you will be invoiced for the cost appearing on this report. EXFO will pay return-to-customer shipping costs for equipment under warranty. Shipping insurance is at your expense.

Routine recalibration is not included in any of the warranty plans. Since calibrations/verifications are not covered by the basic or extended warranties, you may elect to purchase FlexCare Calibration/Verification Packages for a definite period of time. Contact an authorized service center (see *EXFO Service Centers Worldwide* on page 821).

EXFO Service Centers Worldwide

If your product requires servicing, contact your nearest authorized service center.

EXFO Headquarters Service Center

400 Godin Avenue
Quebec (Quebec) G1M 2K2
CANADA

1 866 683-0155 (USA and Canada)
Tel.: 1 418 683-5498
Fax: 1 418 683-9224
support@exfo.com

EXFO Europe Service Center

Winchester House, School Lane
Chandlers Ford, Hampshire S053 4DG
ENGLAND

Tel.: +44 2380 246800
Fax: +44 2380 246801
support.europe@exfo.com

EXFO Telecom Equipment (Shenzhen) Ltd.

3rd Floor, Building C,
FuNing Hi-Tech Industrial Park, No. 71-3,
Xintian Avenue,
Fuhai, Bao'An District,
Shenzhen, China, 518103

Tel: +86 (755) 2955 3100
Fax: +86 (755) 2955 3101
support.asia@exfo.com

To view EXFO's network of partner-operated Certified Service Centers nearest you, please consult EXFO's corporate website for the complete list of service partners:

<http://www.exfo.com/support/services/instrument-services/exfo-service-centers>.

Warranty

EXFO Service Centers Worldwide

A *Specifications*



IMPORTANT

The following technical specifications can change without notice. The information presented in this section is provided as a reference only. To obtain this product's most recent technical specifications, visit the EXFO Web site at www.exfo.com.



CAUTION

The operation and storage temperatures, as well as the altitude, and humidity of some modules may differ from those specified for your platform. In this case, always ensure that you comply with the most restrictive conditions (either from this section or in the platform user guide).

Specifications

General Specifications

General Specifications

Specification	8870/8880/ 88200NGE	88260	88460	88480
Temperature	Operating: 0 °C to 40 °C (32 °F to 104 °F) ^a Storing: -40 °C to 70 °C (-40 °F to 158 °F)			
Relative humidity	0 % to 95 %, non-condensing			
Maximum operation altitude	5000 m (16000 ft)			
Pollution degree	3			
Measurement category	Not rated for measurement categories II, III, or IV			

- a. When testing 4 x 100GE EtherBERT Layer 2 on 88460, the maximum operation temperature is 35°C (95°F).

Transceiver System

Specification	TA-QSFP28	TA4-CFP8	TA4-QSFP-DD
Temperature	Operating: 0 °C to 40 °C (32 °F to 104 °F) Storing: -40 °C to 70 °C (-40 °F to 158 °F)		
Relative humidity	0 % to 95 %, non-condensing		
Maximum operation altitude	5000 m (16000 ft)		
Pollution degree	3		
Measurement category	Not rated for measurement categories II, III, or IV		

B *Glossary*

Acronym List

10B_ERR	10B_Error
200GAUI-4	200 Gbit/s Attachment Unit Interface - 4 physical lanes
2DM	Two-way Delay Measurement
2DMM	Two-way Delay Measurement Message
2DMR	Two-way Delay Measurement Response
400GAUI-16	400 Gbit/s Attachment Unit Interface - 16 physical lanes
400GAUI-4	400 Gbit/s Attachment Unit Interface - 4 physical lanes
400GAUI-8	400 Gbit/s Attachment Unit Interface - 8 physical lanes
?	Help

A

AC	Alternating Current
ACH	Associated Channel Header
ACT	Activity
AIS	Alarm Indication Signal
AMI	Alternate Mark Inversion
AOC	Active Optical Cable
APS	Automatic Protection Switching
ATM	Asynchronous Transfer Mode
AU-n	Administrative Unit-n
AUI	Attachment Unit Interface

B

B-VLAN	Backbone Virtual Local Area Network
B8ZS	Bipolar with 8 Zero Substitution

Glossary

Acronym List

BAS	Basic OAM
BB	Buffer to Buffer
BBE	Background Block Error
BBER	Background Block Error Ratio
BDI	Backward Defect Indication
BDP	Bandwidth Delay Product
BEI	Backward Error Indication
BER	Bit Error Rate
BERT	Bit Error Rate Test
BIAE	Backward Incoming Alignment Error
BIP	Bit-Interleaved Parity
bit/s	Bit per second
BSD	Backward Signal Degrade
BSF	Backward Signal Fail

C

C	Current
C-DCI	Client - Defect Clear Indication
C-FDI	Client - Forward Defect Indication
C-LOS	Client - Loss Of Signal
C-RDI	Client - Remote Defect Indication
C-VLAN	Client/Customer Virtual Local Area Network
CA	Calendar Switch Acknowledge
CAUI	100 Gbit/s Attachment Unit Interface
CAGE	Commerce And Government Entities
CBR	Constant Bit Rate
CBS	Committed Burst Size
CC	Continuity Check

CCM	Continuity Check Message
CD	Chromatic Dispersion
CE	Congestion Encountered
CD	Connectivity Defect
CDF	Client Data Frames
CE	European Conformity
CFO	Carrier Frequency Offset
cHEC	core Header Error Check
CID	Channel IDentifier
CIR	Committed Information Rate
CLK	Clock
CMF	Client Management Frames
CMIS	Common Management Interface Specification
CORR	Correctable
COS	Class Of Service
CPRI	Common Public Radio Interface
CR	Calendar Switch Request
CRC	Cyclic Redundancy Check
CRC-x	Cyclic Redundancy Check on x bits
CRITIC	Critical
CS	Client Signal
CS_LF	Client Signal Local Fault
CS_FPI	Client Signal Low Power Indication
CS_RF	Client Signal Remote Fault
CSF	Client Signal Fail
CSM	Client Signal Message
CSV	Comma Separated Value
cTE	constant Time Error

Glossary

Acronym List

CTLE	Continuous Time Linear Equalization
CV	Code Violation
CV	Connectivity Verification
CVM	Connectivity Verification Message
CW	Code Word

D

DA	Destination MAC Address
DAC	Direct Attached Copper
DAPI	Destination Access Point Identifier
dBm	Decibel - milliwatts
DCC	Data Communications Channel
DCI	Defect Clear Indication
DCO	Digital Coherent Optics
DfE	Decision Feedback Equalizer
DGD	Differential Group Delay
DM	Degraded Minutes
DMM	Delay Measurement Message
DMR	Delay Measurement Reply
DNR	Do not revert
DS0	Digital Signal-level 0 (64 Kbit/s)
DS1	Digital Signal-level 1 (1.544 Mbit/s)
DS3	Digital Signal-level 3 (44.736 Mbit/s)
DSn	Digital Signal-level n
DSP	Digital signal processor
DST	Destination
DTE	Data Terminal Equipment
dTE _H	dynamic Time Error High

DUS	Don't Use for Synchronization
DUT	Device Under Test

E

E-VLAN	Extended Virtual Local Area Network
E0	European standard for digital transmission-level 0 (64 Kbit/s).
E1	European standard for digital transmission-level 1 (2.048 Mbit/s).
E2	European standard for digital transmission-level 2 (8.448 Mbit/s).
E3	European standard for digital transmission-level 3 (34.368 Mbit/s).
E4	European standard for digital transmission-level 4 (139.264 Mbit/s).
EB	Errored Block
EBS	Excess Burst Size
EC	Error Count
ECN	Explicit Congestion Notification
ECT	ECN Capable Transport
EEC	Ethernet Equipment Clock
EFS	Error Free Second
eHEC	extension Header Error Check
EIR	Excess Information Rate
EoE	Ethernet over Ethernet
EoOTN	Ethernet over OTN
ERDI	Enhanced RDI
ES	Errored Second
ESMC	Ethernet Synchronization Message Channel
ESF	Extended Superframe
ESR	Errored Second Ratio
ETag	Extended Tag
EUI	EXFO Universal Interfaces

Glossary

Acronym List

EXER	Exercise
EXI	Extension Header Identifier
EXM	Extension Header Mismatch
EXT CLK	External Clock

F

FAS	Frame Alignment Signal
FC	Fibre Channel
FCC	Federal Communications Commission
FCB	Frame Clock Burst
FCS	Frame Check Sequence
FD	Frame Delay
FDD	FEC Detected Degrade
FDI	Forward Defect Indication
FEC	Forward Error Correction
FEC-COR-BITS	FEC Correctable Bits
FEC-COR-CW	FEC Correctable Codeword
FEC-SYMB	FEC Symbol
FEC-UNCOR-CW	FEC Uncorrectable Codeword
FEC-UNCOR-FR	FEC Uncorrectable Frames
FED	FEC Excessive Degrade
FFE	Feed-Forward Equalizer
FlexE	Flex Ethernet
FlexO	Flexible Optical Transport Network
FLOGI	Fabric Login
FLR	Frame Loss Ratio
FOIC	FlexO Interface
fps	Frame Per Second

FS	Forced switch
FSD	Forward Signal Degrade
FSF	Forward Signal Fail

G

GAL	Generic Associated Channel Label
GE	Gigabit Ethernet
Gbit/s	Gigabit per second
GCC	General Communication Channel
GFP	Generic Framing Procedure
GFP-F	GFP - Framed
GFP-T	GFP - Transparent
GHz	Giga Hertz
GIDM	Group ID Mismatch
GM	Grandmaster
GMP	Generic Mapping Procedure
GMP OOS	GMP Out of Synchronization
GNSS	Global Navigation Satellite System
GPS	Global Positioning System
GUA	Global IPv6 Address
GUI	Graphical User Interface

H

H	History
HDB3	High Density Bipolar 3 Code
HDMI	High Definition Multimedia Interface
HDTV	High Definition Television

Glossary

Acronym List

Hi-BER	High-Bit Error Ratio
Hi-BER1027B	High-Bit Error Ratio 1027 Blocks
HP-	High Order Path -
Hz	Hertz

I

IAE	Incoming Alignment Error
IAIS	Incoming Alarm Indication Signal
ID	Identification
IEC	International Electrotechnical Commission
IEC	Incoming Error Count
IEEE	Institute of Electrical & Electronics Engineers
IFDV	Inter-Frame Delay Variation
IIDM	Instance ID Mismatch
IN	Input
IP	Internet Protocol
IPDV	Inter Packet Delay Variation
IPTV	Internet Protocol Television
IPG	Interframe Gap
IPv4	Internet Protocol version 4
IPv6	Internet Protocol version 6
ISM	In-Service Monitoring

J

JC	Justification Control

K

KiB	Kibibyte (1024 Bytes)

L

-L	Line
L Deg SER Det	Local Degraded SER Detected
L Deg SER Rcd	Local Degraded SER Received
L2CP	Layer 2 Control Protocol
LAN	Local Area Network
LBM	Loopback Message
LBR	Loopback Reply
LCD	Loss of Code-Group Delineation
LCK	Locked
LED	Light-Emitting Diode
LER	Label Edge Router
lb	Pound
LBO	Line Build Out
LDEQ	PAM-4 Level Dependent Equalizer
LFD	Loss of Frame Delineation
LLA	Link-Local IPv6 Address
LLC	Logical Link Control
LLDP	Link Layer Discovery Protocol
LLM	Logical Lane Marker
LMM	Loss Measurement Message
LMR	Loss Measurement Reply
LOA	Loss Of Alignment
LOAML	Loss of Alignment Marker Lock
LOAML1027B	Loss of Alignment Marker Lock 1027 Blocks

Glossary

Acronym List

LOBL	Loss of Block Lock
LOBL1027B	Loss of Block Lock 1027 Blocks
LOC	Loss Of Clock
LOC Lane	Loss Of Clock Lane
LOCS CSF	Loss of Client Signal - Client Signal Fail
LOCCS CSF	Loss of Client Character Synchronization - Client Signal Fail
LOCWS	Loss of CW Synchronization
LOF	Loss Of Frame
LOFLOM	Loss of Frame Loss Of Multiframe
LOL	Loss of Lane Alignment
LOM	Loss Of Multiframe
LOOMFI	Loss of OPU Multi-Frame Identifier
LOP	Loss Of Pointer
LoP	Lockout of protection
LOPPS-L	Loss Of Pulse Per Second - Local
LOPPS-R	Loss Of Pulse Per Second - Remote
LOR	Loss Of Recovery
LOS	Loss Of Signal
LSB	Least-Significant Bit
LSP	Label Switch Path
LSR	Label Switching Router
LSS	Loss of Sequence Synchronization
LTC	Loss of Tandem Connection
LTM	Link Trace Message
LTR	Link Trace Reply

M

m	Minute
m	Meter
MA	Maintenance Association
MAC	Media Access Control
MAID	Maintenance Association Identification
MAPM	MAP Mismatch
Mbit/s	Megabit per second
MD	Maintenance Domain
MDI	Media Dependant Interface (straight through Ethernet cable)
MDIO	Management Data Input/Output
MDIX	Media Dependant Interface Crossover (crossover Ethernet cable)
ME	Maintenance Entity
MEG	ME Group
MEG ID	MEG Identification
MEP	MEG End Point
MFAS	Multiframe Alignment Signal
MHz	Megahertz
MIP	MEG Intermediate Point
MPD	Mean Path Delay
MPLS	Multiprotocol Label Switching
MS	Multiplex Section
MS	Manual switch
MSA	Multisource Agreement
MSB	Most-Significant Bit
MSEQV	Marker Sequence Violation
msg/s	Message per second
MSIM	Multiplex Structure Identifier Mismatch

Glossary

Acronym List

MTIE	Maximum Time Interval Error
MTU	Maximum Transfer Unit

N

NAT	Network Address Translation
NATO	North Atlantic Treaty Organization
nAUI	200GAUI-4, 400GAUI-4/8/16, CAUI, or XLAUI
NDF	New Data Flag
NE	Network Element
NID	Network Interface Device
NJO	Negative Justification Opportunity
nm	Nanometer
NR	No request
NTSC	National Time Service Center

O

OAM	Operation, Administration, and Maintenance
OBSAI	Open Base Station Architecture Initiative
OC-	Optical Carrier-
OCI	Open Connection Indication
ODI	Outgoing Defect Indication
ODU	Optical Data Unit
OEI	Outgoing Error Indication
OH	Overhead
OLA	Out-of-Lane-Alignment
OMF	Overhead Multiframe Indicator
OMFI	OPU Multi-Frame Identifier

OOMFI	Out of OPU Multi-Frame Identifier
OOF	Out-Of-Frame
OOM	Out-Of-Multiframe
OOR	Out-Of-Recovery
OOS	Generic Mapping Procedure Out Of Synchronization
OOS	Out-Of-Sequence
OOSM	Out-Of-Service Monitoring
OPU	Optical Payload Unit
OSNR	Optical Signal to Noise Ratio
OTL	Optical channel Transport Lane
OTN	Optical Transport Network
OTU	Optical Transport Unit
OUI	Organizationally Unique Identifier
OUT	OUTput

P

-P	Path
PBB-TE	Provider Backbone Bridges with Traffic Engineering
PC	Personal Computer
PCD	Path Connectivity Defect
PCP	Priority Code Point
PCS	Physical Coding Sublayer
PD	Payload Defect
PDI	Payload Defect Indication
PDL	Polarization Dependent Loss
PDU	Protocol Data Unit
PE	Provider Edge
pFCS	payload Frame Check Sequence

Glossary

Acronym List

PFI	Payload Frame Check Sequence Identifier
PHY	Physical Layer Device
PLI	Payload Length Indicator
PLM	Payload Label Mismatch
PLOGI	Port Login
PM	Performance Monitoring
PNO	Provisionable by the Network Operator
POS	Position Field
POSV	Position Field Violation
PPD	Path Payload Defect
ppm or PPM	parts per million
PRBS	Pseudo Random Bit Sequence
PRS	Primary Reference Source/Clock
PRC	Primary Reference Source/Clock
PSD	Path Server Defect
PSI	Payload Structure Identifier
PTI	Payload Type Identifier
PTP	Precision Time Protocol
Ptr. Incr.	Pointer Increment
Ptr. Decr.	Pointer Decrement
PTSF	Packet Timing Signal Fail
PW	Pseudo-Wire

Q

QL	Quality Level
QoS	Quality of Service
QSFP	Quad Small Form Factor Pluggable
QZSS	Quasi-Zenith Satellites System

R

R Deg SER	Remote Degraded SER
RC	PAM-4 Reflection Canceller
RDI	Reverse Defect Indication
RDI	Remote Defect Indication
REI	Remote Error Indicator
RES	Reserved
RFI	Remote Failure Indication
RMA	Return Merchandise Authorization
RPF	Remote PHY Fault
RPn	Reference Point n
RR	Reverse request
RS-	Regenerator Section
RTD	Round Trip Delay
RTT	Round Trip Time
RX	Receive
Rx LOF	Rx Loss Of Frame
Rx LOM	Rx Loss Of Multi frame
Rx Demod LOL	Rx Demodulator Loss Of Lock
Rx CDC LOL	Rx Chromatic Dispersion Compensation
Rx LOA	Rx Loss Of Alignment
Rx OOA	Rx Out Of Alignment
Rx Deskew LOL	Rx Deskew Loss Of Lock
Rx FIFO	Rx FIFO Error

S

s	second
-S	Section

Glossary

Acronym List

S-OAM	Service - OAM
S-VLAN	Service Virtual Local Area Network
SA	Source MAC Address
SAPI	Source Access Point Identifier
SB	Superblock
SC	Synchronization Configuration
SD	Server Defect
SD	Signal degrade
SDH	Synchronous Digital Hierarchy
SDT	Service Disruption Time
SDTV	Standard Digital Television
SEF	Severely Errored Framing
SEP	Severely Errored Period
SEQV	Sequence Violation
SES	Severely Errored Second
SESR	Severely Errored Second Ratio
SF	Superframe
SF	Signal fail
SFN	System Frame Number
SFP	Small Form Factor Pluggable
SH	Sync Header
SI	International System
SID	Service Instance Identifier
SLA	Service-Level Agreement
SLC	PAM-4 Slicer
SLM	Synthetic Loss Message
SLR	Synthetic Loss Reply
SM	Section Monitoring

SMA	Sub-Miniature A Connector
SMC	SONET Minimum Clock Traceable
SNAP	Sub Network Access Point
SOF	Start Of Frame
SONET	Synchronous Transport Signal
SOPCR	State of Polarization Change Rate
SOPMD	Second Order Polarization Mode Dispersion
SP	Service Provider
SPE	Synchronous Payload Envelope
SR4	Short Reach (4 Lanes)
SRC	Source
SSM	Synchronization Status Messaging
ST1	Stratum 1 Traceable
ST2	Stratum 2 Traceable
ST3	Stratum 3 Traceable
ST3E	Stratum 3E Traceable
STM	Synchronous Transport Module
STS	Synchronous Transport Signal
STU	Synchronized - Traceability Unknown
SU	Soviet Union
SYMB	Symbol
SW	Software

T

TAI	International Atomic Time
TC	Traffic Class
TCM	Tandem Connection Monitoring
TCP	Transport Control Protocol

Glossary

Acronym List

TDEV	Time Deviation
TE	Time Error
tHEC	type Header Error Check
THz	Terahertz
TIE	Time Interval Error
TIM	Trace Identifier Mismatch
TLV	Type, Length, and Value
TNC	Transit Node Clock Traceable
TOS	Type Of Service
TST	Test PDU
TTI	Trail Trace Identifier
TTL	Time To Live
TU	Tributary Unit
TUG	Tributary Unit Group
TX	Transmit
Tx CMU LOL	Tx Clock Monitor Unit Loss Of Lock
Tx Deskew LOL	Tx Deskew Loss Of Lock
Tx FIFO	Tx FIFO Error
Tx LOA	Tx Loss Of Alignment
Tx OOA	Tx Out Of Alignment
Tx RefClk LOL	Tx Reference Clock Loss Of Lock

U

UAS	Unavailable Second
UDP	User Data Protocol
UNCORR	Uncorrectable
UNEQ	Unequipped
UPI	User Payload Identifier

UPM	User Payload Mismatch
μ s	microsecond
USA	United States of America
USNO	United States Naval Observatory
UTC	Coordinated Universal Time
UTP	Unshielded Twisted Pairs

V

V	VT
VC	Virtual Container
VGA	Voltage Gain Amplifier
VIOL	Violation
VLAN	Virtual Local Area Network
VoIP	Voice over Internet Protocol
VT	Virtual Tributary
VTG	VT Group

W

WAN	Wide Area Network
WGS84	World Geodetic System 1984
WIS	WAN Interface Sublayer
WTR	Wait-to-restore
WWN	World Wide Name

X

XLAUI	40 Gbit/s Attachment Unit Interface

10G Ethernet Client

The OTN Overclocked technology provides the capability to transparently transport 10GBASE-R Ethernet signals into OPU2 as specified in ITU-T. Two optical rates are provided:

- 11.0957 Gbits/s, +/- 100 ppm, designated OTU2e
- 11.0491 Gbits/s, +/- 100 ppm, designated OTU1e

The OTU2e uses the mapping scheme of CBR10G into OPU2 as defined in G.709. The client signal, 10GE LAN and the OPU fixed stuff bytes are accommodated into an OPU-like signal designated OPU2e. This signal is then wrapped in an ODU2e and then in an OTU2e signal.


The OTU1e uses the mapping scheme of CBR2G5 into OPU1 as defined in G.709. The client signal, 10GE LAN is accommodated into an OPU-like signal designated OPU1e (note that the fixed stuff bytes are not left free) this is why the 10GE signal can be transported at a lower rate than OTU2e. This signal is then wrapped in an ODU1e and then in an OTU1e signal.

The transparent transport of the 10GBASE-R means that the full 10G Ethernet data rate i.e. 10.3125 Gbit/s is transported over OTN. This means that the following information is transported:

- PCS 64B/66B coded information
- IPG (inter-frame filler), MAC FCS, Preamble and SFD (start of frame delimiter) and Ordered Sets (Remote Fault indication)

The OTN clocking is derived from the Ethernet client signal which is +/- 100 ppm, this is outside the clock tolerance allocated by the G.709 standard which translates in unspecified jitter performance thus limiting the application to Point to Point data path.


The following figure presents a typical network application.

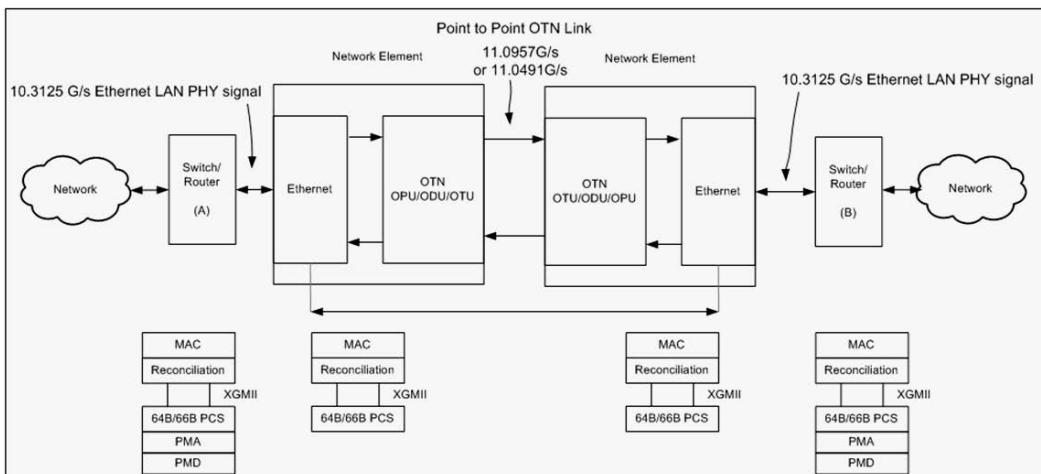

Glossary

10G Ethernet Client

The following figure presents a typical test application.

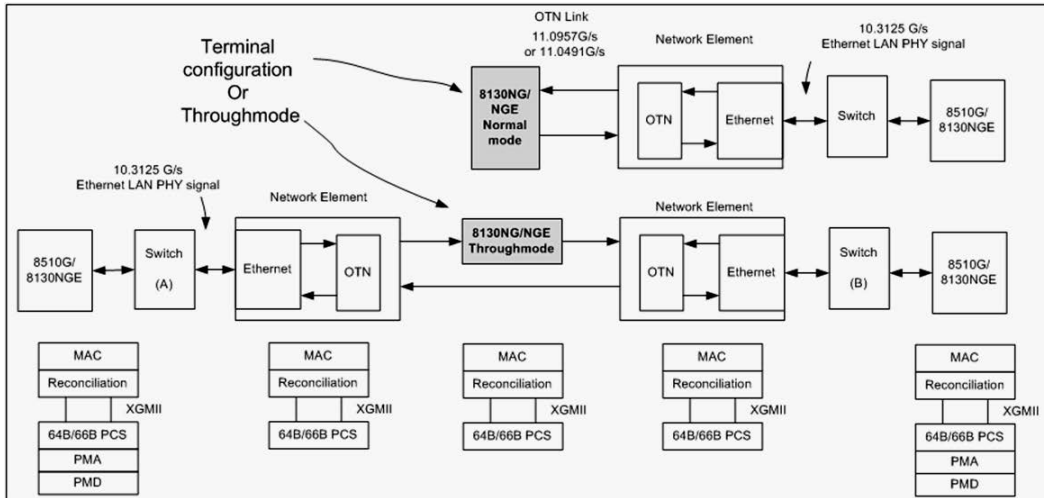

The Ethernet layer provides the equivalent functionality of the BERT Framed Layer 2 Test application supported on EXFO's Datacom product family with the particularity that there is no Ethernet Physical port as such. The Ethernet frame has its Ethertype field set to 0x88B7.


1588 PTP

The goal of the IEEE 1588 Precision Time Protocol (PTP) is to provide Network Synchronization using a packet based distribution mechanism.

Depending on the system application the Network Synchronization may require phase and frequency synchronization. 1588 PTP has the capability to deliver both by allowing a Client clock to track a Master clock in phase (time of day) and in frequency.

The protocol is based on exchange of time stamps between the Master clock and the Client clock. Two methods have been defined in the 1588 PTP standard:

- **Delay Request-Response** mechanism uses message Sync, Delay Request, Delay Response, and Follow Up (if required).

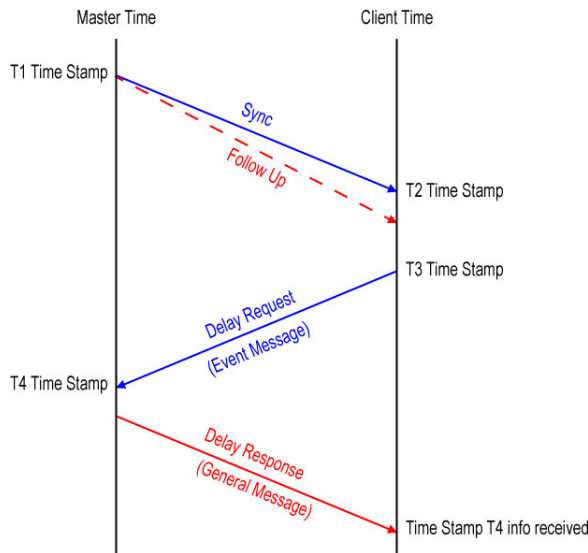

- **Peer Delay** mechanism uses message Pdelay Request, Pdelay Response, and if required Pdelay Response Follow Up. This mechanism is restricted to topologies where each peer-to-peer port communicates PTP messages with, at most, one other such port. Peer Delay is not supported by the Telecom Profile.

In order to minimize traffic on the network, PTP can operate in different modes:

- **Two-way** operation uses Sync/Follow Up, Delay Request, and Delay Response messages.
- **One-way** operation uses only the Sync/Follow Up messages. This mode of operation is used to synchronize a Client clock in frequency only. The Master clock and Client clock phases are not aligned.
- **Two-step** clock mode uses the optional Follow Up message to carry the T1 time stamp.
- **One-step** clock mode uses the Sync message to carry the T1 time stamp; no Follow Up message is transmitted by the Master clock, therefore less traffic on the network.

Client clock synchronization is achieved with a 2-part process:

- Part 1: Path delay measurement using bidirectional messages
$$\text{Mean path delay measurement (MPD)} = ((T2-T1) + (T4-T3)) / 2$$
- Part 2: Clock phase offset correction
$$\text{Offset} = (T2-T1) - \text{MPD}$$

The offset information is used by the Client clock to adjust the frequency of its oscillator in order to keep the phase offset close to zero.

The 1588 PTP supports the following Master/Client communication; however **Unicast** is used for the Telecom Profile.

- **Multicast:** A Master clock sends its Sync/Follow Up and Delay Response in a multicast mode. A Client can collect information from many Master clocks and select the Master clock that is best suited for its application.
- **Unicast:** A dedicated communication link is established between the Master and the Client clock. This mode of operation requires a negotiation which is initiated by the Client clock.

The 1588 PTP messages can be mapped on the following protocols; however UDP IPv4 is used for the Telecom Profile.

- UDP/IPv4
- UDP/IPv6
- Ethernet

1588 PTP Profiles

The purpose of a PTP profile is to allow organizations to specify particular selections of attribute values and optional features of PTP that, when using the same transport protocol, inter-work and achieve a performance that meets the requirements of a given application.

Telecom Profile G.8265.1

The Telecom Profile G.8265.1 is designed for frequency synchronization in Telecom network applications. The main attributes of this profile are:

- Unicast communication with the Grandmaster
- UDP/IPv4 or UDP/IPv6 network layer

With the Telecom Profile, the Client Clock initiates the communication to the Master Clock by making a request for service that consists of sending Signaling messages containing a REQUEST UNICAST TRANSMISSION TLV to the IP address of the Master Clock.

If the Master Clock has sufficient capacity to handle the Client Clock request, it responds with a signaling message containing a GRANT UNICAST TRANSMISSION TLV.

The REQUEST UNICAST TRANSMISSION TLV contains several parameters:

- **messageType** is the type of service being requested: Announce, Sync, or Delay Response.
- **durationField** is the duration of the requested service: 300 seconds by default and configurable from 60 to 1000 seconds.
- **logInterMessagePeriod**: transmission rate of the requested messages.

If the Master Clock denies the request, e.g. because it has no remaining capacity, it will send back a GRANT UNICAST TRANSMISSION TLV with the durationField set to zero.

In the event of being denied service by a Master Clock, or receiving no response to the service request, a Client Clock should wait a minimum of one second before issuing a new Unicast request to that Master Clock.

As Unicast service is only granted for a limited time, the Client Clock must re-request service periodically, before the expiration of the current grant. The Client Clock should reissue the request sufficiently far in advance of the expiration to allow the request to be repeated at least twice if no grant is received. This parameter is called Unicast renewal interval.

```

sequenceDiagram
    participant PC as Packet Client
    participant PM as Packet Master

    Note over PC, PM: Unicast renewal interval
    PC->>PM: Signaling (Announce-request)
    PM-->>PC: Signaling (Announce-grant)
    PC->>PM: Announce
    Note over PC, PM: Announce duration interval
    PC->>PM: Signaling (Sync-request)
    PM-->>PC: Signaling (Sync-grant)
    PC->>PM: Sync
    Note over PC, PM: Sync duration interval
    PM-->>PC: Announce
    PM-->>PC: Sync
    PC->>PM: Signaling (Announce-request)
    PM-->>PC: Signaling (Announce-grant)
    PC->>PM: Announce
    PC->>PM: Signaling (Sync-request)
    PM-->>PC: Signaling (Sync-grant)
    Note over PC, PM: ...
  
```

Telecom Profile G.8275.1

The Telecom Profile G.8275.1 is designed for time/phase synchronization in telecom network applications. The main attribute of this profile are:

- Full timing support from the network, i.e. all network nodes are boundary clocks
- Slave clocks synchronize with its respective upstream Boundary Clock
- 1588 messages are mapped on Ethernet Multicast

A very important distinction that has to be made compared with G.8265.1 is the mandatory use of Boundary Clocks with G.8275.1. With G.8265.1, network nodes such as Ethernet Switches or Routers were not required to be PTP aware. With G.8275.1, all network nodes needs to be PTP aware. This means that regular Ethernet Switches or Routers cannot be used. Switches/Routers are required to include the Boundary Clock functionality.

Telecom Profile G.8275.2

The Telecom Profile G.8275.2 is designed for time/phase synchronization in telecom network applications. The main attribute of this profile are:


- Partial timing support from the network, i.e. some network nodes are Boundary Clocks among PTP unaware network nodes
- Unicast communication with respective upstream Boundary Clock
- UDP/IPv4 or UDP/IPv6 network layer

The main difference compared with G.8275.1 is that the Boundary Clocks are positioned at strategic locations in the network. With G.8275.2, a mix of PTP Unaware and PTP Aware network nodes can be deployed on the transport path. This means that Switches/Routers with or without Boundary Clock functionality can be used. G.8275.2 mainly addresses for operators who don't want to swap out all their existing equipment by a Boundary Clock embedded in every network element to meet the stringent time error requirements for 4G/5G field deployment.

CPRI

Overview

Traditional mobile installations are bulky (use thick coaxial cables) and require a lot of power to operate (there is a huge power loss in the coaxial cabling which often requires the use of Tower Mounted Amplifiers) as outlined in the following figure.

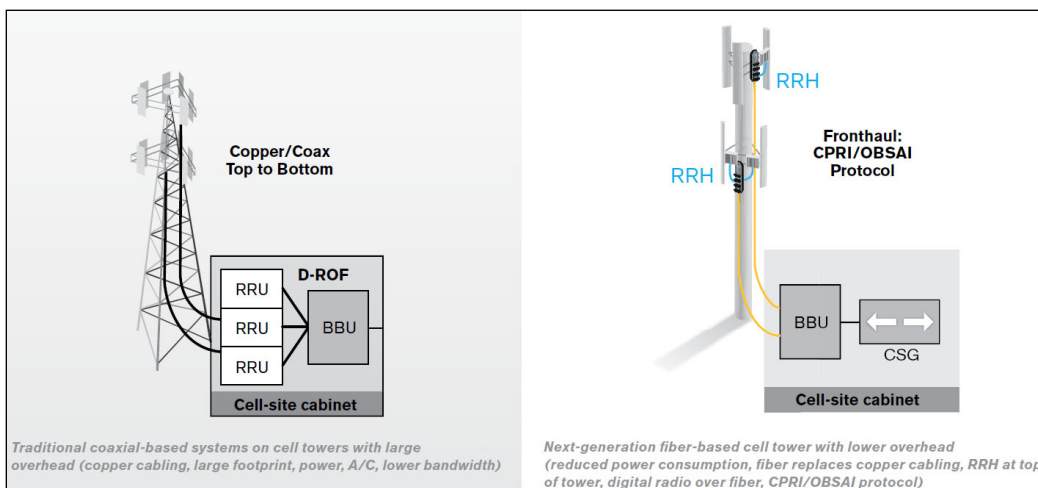

Pressures on the Mobile Network Operators (MNO) to reduce their capital, operational cost, and increase coverage are at the heart of a revolution in the mobile network. To address the situation, a concept of decomposition of the radio base station has been developed where the radio basic functions and its ability to transmit and receive radio modulated signals are separated. In such a distributed environment a protocol is required to maintain synchronization and management capabilities as well as transporting the user traffic between the simplified Base Transceiver Station (BTS) and its Remote Radio Head (RRH).


This protocol called Common Public Radio Interface (CPRI) separates a traditional radio base station configuration into two separate elements: Radio Equipment Control (REC) and the Radio Equipment (RE). The REC processes the baseband radio digital information and performs the control of the Radio Equipment. The RE converts the digital radio information into radio frequency signals transported over the air interface (antenna). The REC and RE are interconnected by a point-to-point link. This link carries the CPRI protocol and is known in the industry as the fronthaul as opposed to the backhaul that is the WAN bringing the network traffic to the base station.

The CPRI link can be extended over several kilometers as it uses fiber optics, in fact it can be deployed up to 40 km although most field installations at the moment of this writing are below 10 km.

The CPRI standard covers the physical and data link layers only. This specific focus provides additional development freedom to the various vendors to implement proprietary functions at upper layers.

Functional Description

As mentioned earlier, CPRI remotely locates the RE from the REC. This means that the RE must be controlled, managed and synchronized from the REC in addition to transporting the User information (Voice and user application data) and all that on the same digital link. As such, CPRI is composed of 3 communication flows multiplexed into a single serial signal transmitted in the same optical fiber as illustrated in the following figure.

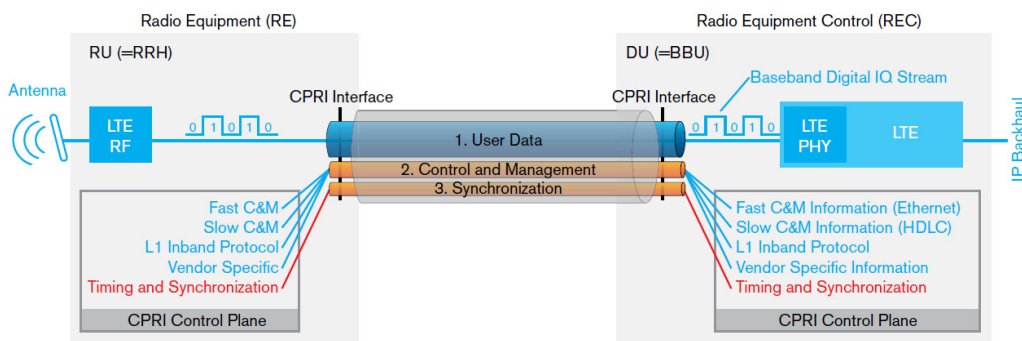


An electrical link is also available from CPRI but it is typically used for base station shelf interconnection. Since a state machine drives the link parameters (rates, protocol, and C&M channel) alignment, a BTS (defined as Master in the standard) and RRH (defined as Slave in the standard) interfaces are defined where the Master initiates the negotiation procedure necessary to achieve this alignment.

- **Synchronization:** Provides precise frequency and frame timing alignment from BTS to RRH to ensure accurate frequency and timing of the RF signal transmission and reception on the Air Interface. In essence, it provides the reference frequency for the RE.
- **Control & Management (C&M):** Management of the link between the REC and RE as well as control over radio functions such as alarms and power.
- **User:** Also known as IQ Data, represents the voice and data information that is exchanged by end-User Equipment (UE)

CPRI Model

The CPRI Model revolves around the 3 communication flows described above. CPRI defines only the Layer 1 and Layer 2 associated to these communication flows as outlined in the following figure.

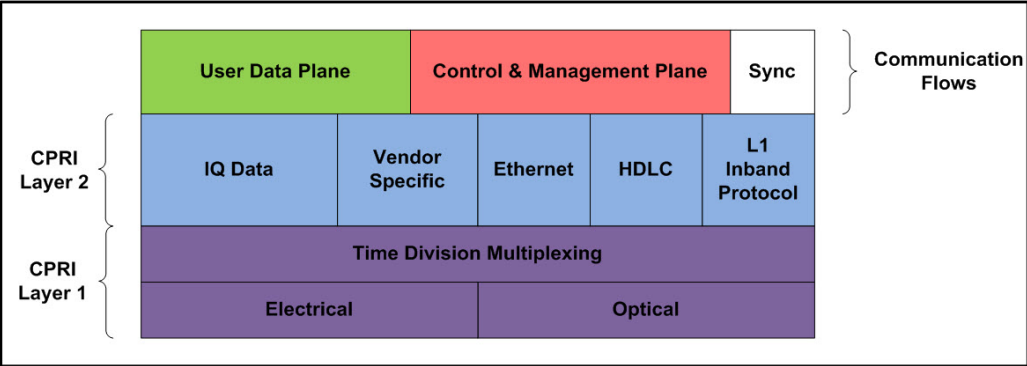

The User Data Plane contains mostly voice/data traffic in the form of IQ Data samples. IQ Data digitally encodes the change in amplitude/phase of a user device modulated signal sampled at the RE antenna.

The Control & Management Plane maintains the CPRI link itself and provides the facility to manage the operation of the RE radio functions. It is done through the L1 Inband Protocol which provides a bit oriented channel defined to support link specific alarms (R-LOS, R-LOF, ...). Also, the Ethernet/HDLC channel offer two OAM&P channel alternatives which are respectively high and low bandwidth with rates configurable based on the CPRI line interface rate. These carry proprietary information between the REC and RE. Some Vendor Specific overhead is also available.

Finally, the Synchronization flow ensures frequency stability and offers the overhead necessary for frame alignment between the REC and RE to ensure hitless channel or frequency hopping. All these flows are time division multiplexed onto one optical fiber for CPRI field deployments such as Distributed Antenna Systems (DAS).

Physical Interface

CPRI offers 10 options in terms of interface rates. Rates below 10G uses 8B/10B line coding as per CPRI V6.0 while rates above 10G use 64B/66B coding. Depending on the rates used, scrambling is optional. Depending on the CPRI signal structure (Framed or Unframed) the scrambling is either manually configured or negotiated.

Option	Rate	Line Coding	Protocol Version (Scrambling)
1	614.4 Mbit/s	8B/10B	Version 1: No scrambling
2	1.2288 Gbit/s		
3	2.4576 Gbit/s		
4	3.0720 Gbit/s		
5	4.9152 Gbit/s		Version 1: No scrambling Version 2: Scrambling (Scrambling is optional)
6	6.1444 Gbit/s		
7	9.8304 Gbit/s		
8	10.1376 Gbit/s	64B/66B	Version 1: Scrambling
9	12.16512 Gbit/s		
10	24.33024 Gbit/s		


Ethernet Cables

Minimum Category 3 cable is required for 10BASE-T connection while Category 5 cable is required for 100BASE-TX and 1000BASE-T connections.

Maximum cable length (between two nodes) for 10BASE-T, 100BASE-TX, or 1000BASE-T connection is 328 feet (100 meters).


➤ Straight Through Cable (10/100 Mbit/s)

An Unshielded Twisted Pair (UTP) straight through cable is required to connect a 10BASE-T/100BASE-TX module port to a layer 1 or 2 device (ex: HUB, switch).

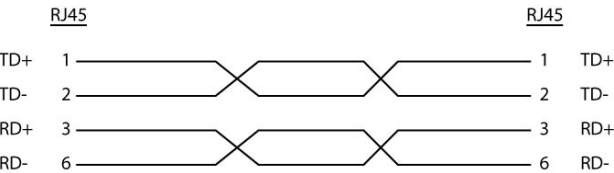


➤ Crossover Cable (10/100 Mbit/s)


An Unshielded Twisted Pair (UTP) crossover cable is required to connect the 10BASE-T/100BASE-TX module port to a layer 3 device (ex: router).

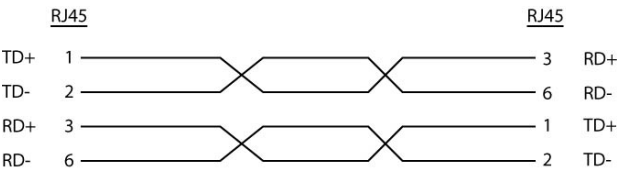

➤ **Straight Through Cable (1000 Mbit/s)**

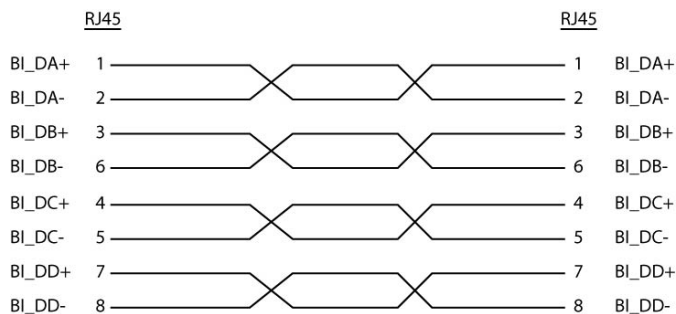

➤ **Crossover Cable (1000 Mbit/s)**

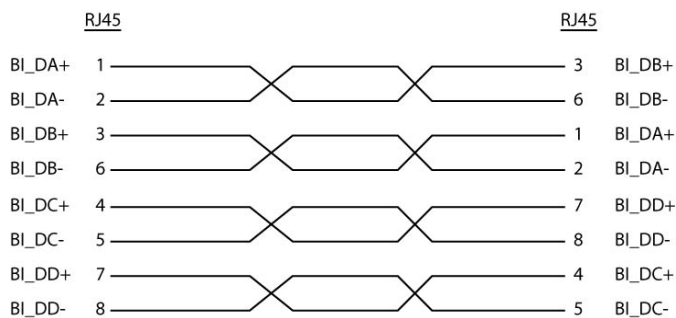

G.709 Optical Transport Network (OTN)


Overview

The optical transport network (OTN) combines the benefits of SONET/SDH technology with the bandwidth expansion capabilities offered by dense wavelength-division multiplexing (DWDM) technology.

The OTN consists of the following layers:

- Optical Transport Section (OTS)
- Optical Multiplex Section (OMS)
- Optical Channel (OCh)
- Optical channel Transport Lane (OTL)
- Optical Transport Unit (OTU)
- Optical Data Unit (ODU)
- Optical Channel Payload Unit (OPU)

Each of these layers and their functions are distributed along the network and activated when they reach their termination points, which are illustrated in the following figure.

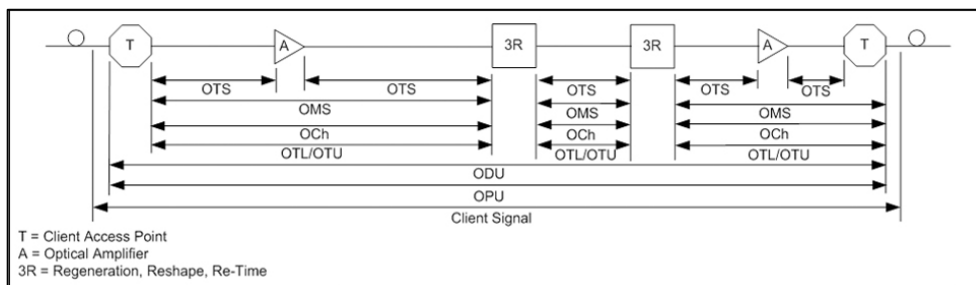

OTN Layer Termination Points

The termination of the OTS, OMS and OCh layers is performed at the optical level of the OTN. It is at the termination of the OTU layer that further functionality can be added. This layer is the digital layer—also known as the “digital wrapper”—and offers specific overhead to manage the OTN’s digital functions. The OTU also introduces a new dimension to optical networking by adding forward error correction (FEC) to the network elements, allowing operators to limit the number of required regenerators used in the network which, in turn, lowers its cost.

FEC allows an increase in the optical link budget by providing a new method to correct errors, thereby reducing the impact of network noise and other optical phenomena experienced by the client signal traveling through the network.

The OTU also encapsulates two additional layers—the ODU and the OPU—which provide access to the payload (SONET, SDH, etc.). These layers are normally terminated at the same location.

Glossary

G.709 Optical Transport Network (OTN)

The OTU, ODU (including the ODU tandem connection) and OPU layers can all be analyzed and monitored. As per ITU G.709, current test solutions offer these possibilities using the following line rates:

- OTU1 ($255/238 \times 2.488\,320 \text{ Gbit/s} \approx 2.666057143 \text{ Gbit/s}$) also referred to as 2.7 Gbit/s
- OTU2 ($255/237 \times 9.953280 \text{ Gbit/s} \approx 10.709225316 \text{ Gbit/s}$) also referred to as 10.7 Gbit/s
- OTU3 ($255/236 \times 39.813120 \text{ Gbit/s} \approx 43.018413559 \text{ Gbit/s}$) also referred to as 43 Gbit/s
- OTU4 ($255/227 \times 99.532\,800 \text{ Gbit/s} \approx 111.809973568 \text{ Gbit/s}$) also referred to as 112 Gbit/s.

The following non standard rates are also defined:

- OTU1e ($255/238 \times 10.3125 \text{ Gbit/s} \approx 11.0491071429 \text{ Gbit/s}$)
- OTU2e ($255/237 \times 10.3125 \text{ Gbit/s} \approx 11.0957278481 \text{ Gbit/s}$)
- OTU3e1 ($255/236 \times 4 \times 10.3125 \text{ Gbit/s} \approx 44.570974576 \text{ Gbit/s}$)
- OTU3e2 ($243/217 \times 16 \times 2.488320 \text{ Gbit/s} \approx 44.583355576 \text{ Gbit/s}$)


The following non standard rates are not covered by the ITU standard but they are the equivalent function associated to Fiber Channel rates:

- OTU1f ($255/238 \times 10.51875 \text{ Gbit/s} \approx 11.2700892857143 \text{ Gbit/s}$)
- OTU2f ($255/237 \times 10.51875 \text{ Gbit/s} \approx 11.3176424050633 \text{ Gbit/s}$)

Each line rate is adapted to service different client signals:

- OC-48/STM-16 is transported via OTU1
- OC-192/STM-64 is transported via OTU2
- OC-768/STM-256 is transported via OTU3
- Null Client (All 0s) is transported via OTUk ($k = 1, 2, 1e, 2e, 1f, 2f, 3, 3e1, 3e2, 4$)
- PRBS31 is transported via OTUk ($k = 1, 2, 1e, 2e, 1f, 2f, 3, 3e1, 3e2, 4$)

In order to map client signals via ITU G.709, they are encapsulated using the structure illustrated in the following figure.

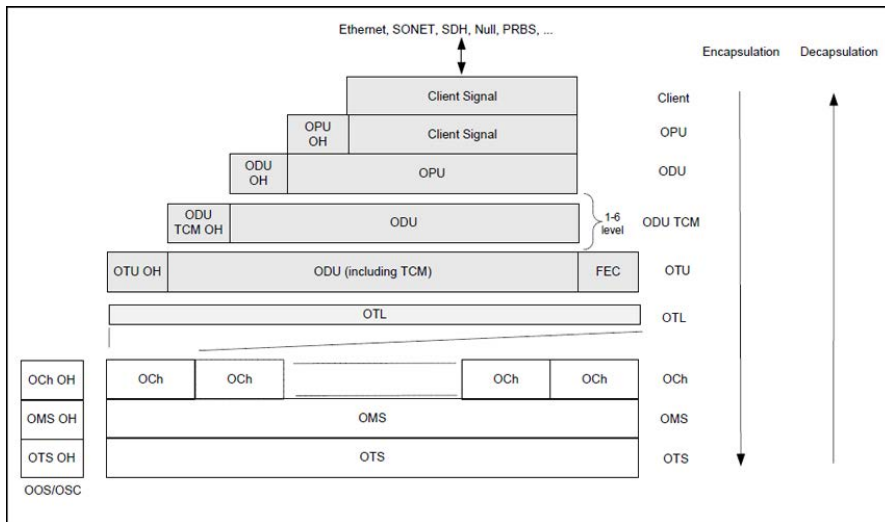

Basic OTN Transport Structure

Glossary

G.709 Optical Transport Network (OTN)

As depicted above, to create an OTU frame, a client signal rate is first adapted at the OPU layer. The adaptation consists of adjusting the client signal rate to the OPU rate. Its overhead contains information to support the adaptation of the client signal. Once adapted, the OPU is mapped into the ODU. The ODU maps the OPU and adds the overhead necessary to ensure end-to-end supervision and tandem connection monitoring (up to six levels). Finally, the ODU is mapped into an OTU, which provides framing as well as section monitoring and FEC.


Following the OTN structure presented in figure *Basic OTN Transport Structure* on page 863, OTUks ($k = 1, 2, 3$) are transported using the OCh; each unit is assigned a specific wavelength of the ITU grid. Several channels can be mapped into the OMS and then transported via the OTS layer. The OCh, OMS and OTS layers each have their own overhead for management purposes at the optical level. The overhead of these optical layers is transported outside of the ITU grid in an out-of-band channel called the optical supervisory channel (OSC).

When the OTU frame structure is complete (OPU, ODU and OTU), ITU G.709 provides OAM&P functions that are supported by the overhead.

OTU Frame Structure and Overhead

As shown in the figure below, the OTU frame is broken down into the following components:

- Framing
- OTL, OTU, ODU, OPU overhead
- OTU FEC

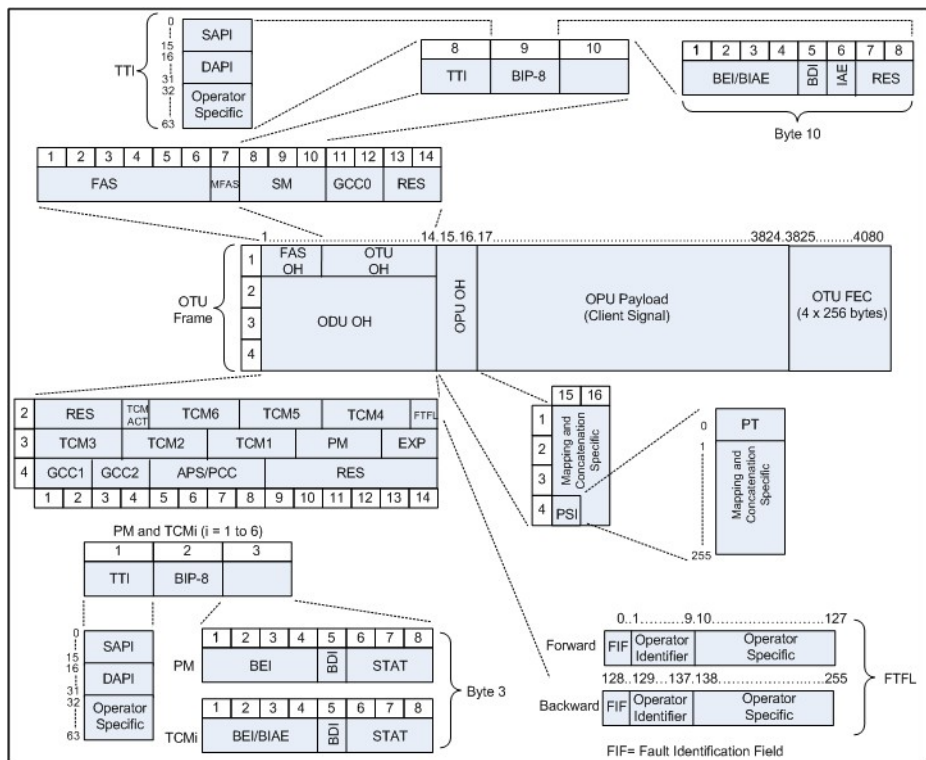

OTU Frame Description

➤ Framing

The OTU framing is divided into two portions: FAS and MFAS.

The frame alignment signal (FAS) uses the first six bytes and, similarly to SONET/SDH, it is used to provide framing for the entire signal. In order to provide enough 1/0 transitions for synchronization, scrambling is used over the entire OTU frame, except for the FAS bytes.

The multiframe alignment signal (MFAS) byte is used to extend command and management functions over several frames. The MFAS counts from 0 to 255, providing a 256 multiframe structure.

➤ Overhead

Each portion of the OTU frame has its own specific overhead functions. They are displayed in figure *OTU Frame Description* on page 865, and are briefly described below. Further details can be found about these overhead fields in the ITU G.709 standard.

➤ Optical channel Transport Lane (OTL)

The Optical channel Transport Lane (OTL) is an adaptation layer whose purpose is to re-use the modules developed for Ethernet 40GBASE-R and 100GBASE-LR4. These modules have a four-lane WDM interface to and from a transmit/receive pair of G.652 optical fibers, and connect to the host board via a 4-lane (OTL3.4) or 10-lane (OTL4.10) electrical interface.

The OTL layer is responsible for mapping the serial OTU signal onto a parallel path designated lanes. In the case of OTU4 the signal is distributed over 20 logical lanes and for OTU3 the signal is distributed over 4 logical lanes.

➤ **Optical Transport Unit (OTU)**

The OTU overhead is comprised of the SM, GCC0 and RES bytes.

The section monitoring (SM) bytes are used for the trail trace identifier (TTI), parity (BIP-8) and the backward error indicator (BEI), or backward incoming alignment error (BIAE), backward defect indicator (BDI), and incoming alignment error (IAE). The TTI is distributed over the multiframe and is 64 bytes in length. It is repeated four times over the multiframe.

General communication channel 0 (GCC0) is a clear channel used for transmission of information between OTU termination points.

The reserved (RES) bytes are currently undefined in the standard.

➤ **Optical Data Unit (ODU)**

The ODU overhead is broken into several fields: RES, PM, TCMi, TCM ACT, FTFL, EXP, GCC1/GCC2 and APS/PCC.

The reserved (RES) bytes are undefined and are set aside for future applications.

The path monitoring (PM) field is similar to the SM field described above. It contains the TTI, BIP-8, BEI, BDI and Status (STAT) field.

There are six tandem connection monitoring (TCMi) fields, which contain the BEI/BIAE, BDI and STAT fields. The STAT field is used in the PM and TCMi fields to provide an indication of the presence or absence of maintenance signals.

The tandem connection monitoring activation/deactivation (TCM ACT) field is currently undefined in the standards.

The fault type and fault location reporting communication channel (FTFL) is a message spread over a 256-byte multiframe that provides the ability to send forward and backward path-level fault indications.

The experimental (EXP) field is a field that is not subject to standards and is available for network operator applications.

General communication channels 1 and 2 (GCC1/GCC2) fields are very similar to the GCC0 field except that each channel is available in the ODU.

The automatic protection switching and protection communication channel (APS/PCC) supports up to eight levels of nested APS/PCC signals, which are associated to a dedicated-connection monitoring level depending on the value of the multiframe.


➤ **Optical Payload Unit (OPU)**

The primary overhead field associated to the OPU is the Payload Structure Identifier (PSI). This is a 256 bytes multi-frame where its first byte is defined as the Payload Type (PT). The remaining 255 bytes are currently reserved.

The other fields in the OPU overhead are dependent on the mapping and concatenation capabilities associated to the OPU. For an asynchronous mapping (the client signal and OPU clock are different) Justification Control (JC) bytes are available to compensate for clock rate differences, two methods are supported Asynchronous Mapping Procedure (AMP) and Generic Mapping Procedure (GMP). For a purely Bit-Synchronous Mapping Procedure (BMP) (client source and OPU clock are the same), the JC bytes become reserved (set to 0). Concatenation bytes are also available as described in ITU G.709.

Tandem Connection Monitoring (TCM)

TCM enables the user and its signal carriers to monitor the quality of the traffic that is transported between segments or connections in the network. SONET/SDH allowed a single level of TCM to be configured, while ITU G.709 allows six levels of tandem connection monitoring to be configured. The assignment of monitored connections is currently a manual process that involves an understanding between the different parties. There are various types of monitored connection topologies: cascaded, nested and overlapping. Examples of these topologies are provided in the following figure.

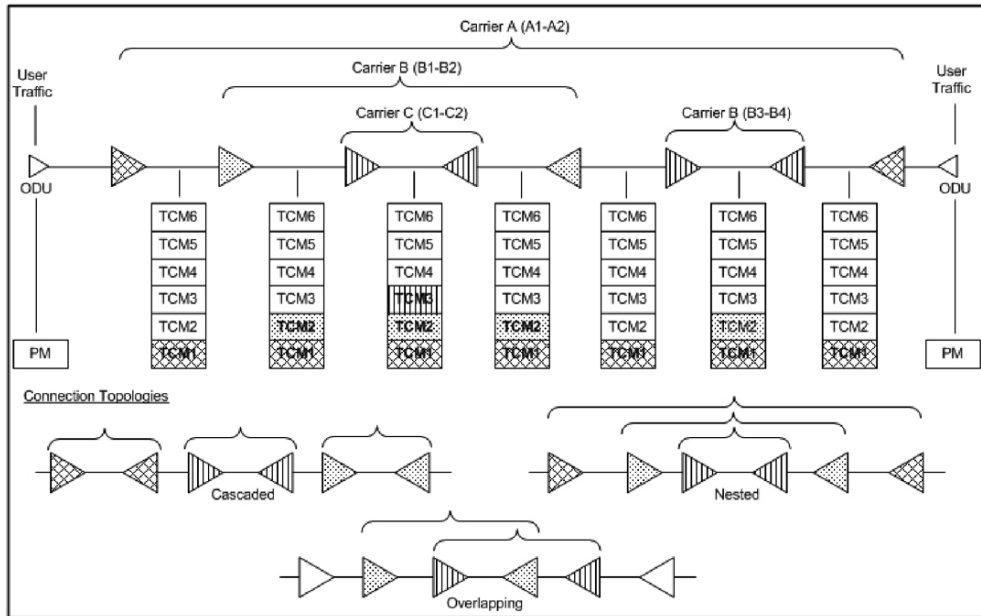

Each of the six TCMi fields in the ODU overhead is assigned to a monitored connection. There can be from zero to six connections that can be configured for each connection. In the figure *Tandem Connection Monitoring* on page 870, there are three different connections that are actually monitored. Carrier C, due to its location, can monitor three TCM levels as the ODU passes through its portion of the network.

In addition to monitoring maintenance signals, using the STAT field associated with each TCM level, the TCM connection also monitors the BIP-8 and BEI errors for each connection level. Maintenance signals are used to advertise upstream maintenance conditions affecting the traffic and errors provide an indication of the quality of service offered at each segment of the network, which provides a valuable tool for the user and carrier to isolate faulty sections of the network.

Forward Error Correction (FEC)


The ITU G.709 standard supports forward error correction (FEC) in the OTU frame and is the last part added to the frame before the frame is scrambled. FEC provides a method to significantly reduce the number of transmitted errors due to noise, as well as other optical phenomena that occur at high transmission speeds. This enables providers to support longer spans in between optical repeaters.

An OTU frame is divided into four rows. Each row is broken down into 16 sub-rows comprised of 255 bytes each, as shown in figure *Forward Error Correction* on page 872. A sub-row is composed of interleaved bytes. The interleave is executed so that the first sub-row contains the first overhead (OH) byte, the first payload byte and the first FEC byte, and so on for the remaining sub-rows of each row in the frame. The first FEC byte starts at position 240 for all sub-rows.

Glossary

G.709 Optical Transport Network (OTN)

The FEC uses a Reed-Solomon RS (255/239) coding technique. This means that 239 bytes are required to compute a 16-byte parity check. The FEC can correct up to eight (bytes) errors per sub-row (codeword) or detect up to 16 byte errors without correcting any. Combined with the byte interleave capability included in ITU G.709 implementation, the FEC is more resilient in regards to error burst, where up to 128 consecutive bytes can be corrected per OTU frame row.

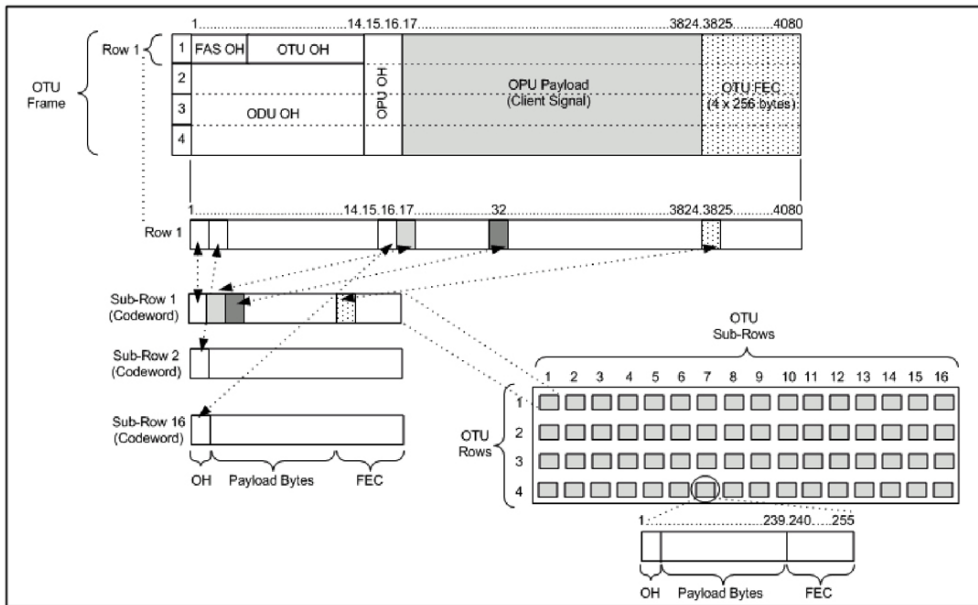

Forward Error Correction

ODU Multiplexing

The ODU multiplexer is a function that allows the multiplexing of ODU tributary signals into higher OTN signal rates. The G.709 standard supports 2 types of ODU multiplexer which can be classified as follows:

- Legacy architecture is based on multi-stage architecture to bring an ODUk client to a higher OTN interface rate. This multiplexer is identified by Payload Type 20 (PT 20).
- New architecture uses a single stage architecture to bring an ODUk client to any higher OTN interface rate. This method supports the ODUflex client signal. The multiplexer is identified by Payload Type 21 (PT 21).

Note: *Refer to the OTN BERT on page 70 or OTN-SONET/SDH BERT on page 73 for the ODU multiplexing capabilities.*

The multiplexing strategy is based on the concept of tributary slots, which is similar in concept to the SONET timeslot. The multiplexing of 4 ODU1 in one ODU2 is made by distributing the ODU1 structure in a repetitive sequence of 4 ODU2 Tributary slots, a similar strategy is used for ODU3 multiplexing where the repetitive sequence is made of 16 ODU3 tributary slots, refer to G.709 standard for detailed information.

Glossary

G.709 Optical Transport Network (OTN)

The main attributes of the ODU multiplexer functionality are as follows:

- The Asynchronous Mapping Procedure (AMP) is used for multiplexing the tributary signals; this method uses a modified Justification Control mechanism which has 2 positive Justification Control bytes and one negative Justification Control byte.
- The new multiplex method also supports the Generic Mapping Procedure as the Justification Control mechanism is still using the OPU OH JC bytes.
- The Multiplex Structure Identifier (MSI) provides information that is specific to each type of multiplexer provided.
- Can handle multiplex signals with frequency offset of +/- 20 ppm on every layer for the legacy architecture while the new architecture (using GMP) can handle frequency offset of +/-100 ppm.

ODUflex

ODUflex provides the capability to carry client payload of variable size with a container size of 1.244 Gbit/s granularity. An ODUflex (L) signal can be transported once multiplexed in an ODUk (H) signal, the multiplexer in this case handles tributary slots of 1.244 Gbit/s and has a Payload Type 21. The ODUflex function can be used to transport 2 signal categories mapped in ODTUk.ts using GMP:

➤ Ethernet in ODUflex over GFP-F signal

The Ethernet packets are mapped in GFP-F as specified in G.7041, the packets are processed as follows:

- The Start of Frame Delineation bytes are terminated
- Inter Frame Gaps bytes are terminated
- PCS coding is terminated
- GFP overhead bytes added

Since the PCS coding is terminated, it is not possible to transport the Ethernet Link status transparently but it is accommodated by the Forward Defect Indication (FDI) and Remote Defect Indication (RDI) alarms over GFP. The RDI is used to carry the Remote Fault alarm while the FDI is used to carry the Local Fault.

GFP-F provides rate adaptation between the incoming Ethernet signal and the outgoing OPUflex transport signal. This brings the fact that GMP is operated at a fixed Cm value close to the maximum server capacity.

➤ CBR over ODUflex signal


ODUflex can transport Constant Bit Rate signal (bulk filled Test pattern) as Client of the ODUflex CBR function. This CBR function needs a Pattern generator that can operate at a data rate specified by the user, the range of the available data rates is qualified by the Bandwidth management function.

OTN Signal Rates

Rate	Signal
2.666057143 Gbit/s	OTU1
10.709225316 Gbit/s	OTU2
11.0491 Gbit/s	OTU1e
11.0957 Gbit/s	OTU2e
11.2701 Gbit/s	OTU1f
11.3176 Gbit/s	OTU2f
43.018413559 Gbit/s	OTU3
44.571 Gbit/s	OTU3e1
44.583 Gbit/s	OTU3e2
111.81	OTU4

Generic Framing Procedure (GFP)

Generic framing procedure (GFP), defined in ITU recommendation G.7041/Y.1303, is a framing mechanism to transport packet-based client signals, such as Ethernet, Fibre Channel, ESCON, FICON, over fixed-data-rate optical channels. As such, GFP provides a single, flexible mechanism to map these client signals into SONET/SDH and OTN networks, as shown in figure below.

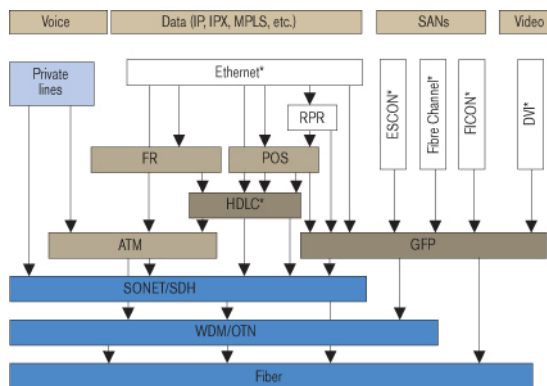

Client Signal Mapping over GFP

Prior to the introduction of GFP, several methods had been used to transport packet services over SONET/SDH networks. The first method was Asynchronous Transfer Mode (ATM) Adaptation Layer 5 (AAL 5) over SONET/SDH. ATM is a very efficient switching and multiplexing technology, whose transfer rates scale with SONET/SDH rates. However, ATM does not make the most efficient use of bandwidth because the payload data is separated into groups of 48 bytes, called cells, with an additional 5-byte header of software overhead. It became immediately apparent that almost 10 % of the bandwidth would be lost. In addition, certain types of data required even more ATM overhead.

Glossary

Generic Framing Procedure (GFP)

Other methods have focused on using point-to-point protocol (PPP). The IP traffic coming to an Ethernet port is encapsulated over a PPP link and multiple ports can be encapsulated over multilink PPP (ML-PPP) links. By using an HDLC framing, the PPP traffic is transported over the SONET/SDH payload. These methods have been standardized within the IETF through the following Requests for Comments (RFC): RFC 1662, RFC 1990 and RFC 2615. The ITU-T expanded this work by specifying the use of LAPS (very similar protocol to PPP/HDLC) and specifying IP over LAPS in X.85/Y.1321 and Ethernet over LAPS in X.86/Y.1323. All these methods for encapsulating traffic suffer from the weaknesses of HDLC framing; i.e., limited protection from frame corruption and the introduction of variable packet sizes because of its trailer.

GFP has been standardized to better optimize the transport of Ethernet and other data services over SONET/SDH networks, taking into account both the pros and cons of ATM and PPP/HDLC and leveraging two new emerging SONET/SDH capabilities, VCAT and LCAS, that will be discussed later in this document.

GFP Mapping


Two types of mapping are currently available for GFP: framed-mapped (GFP-F) and transparent-mapped (GFP-T), whose mappings keep the same basic frame structure, as will be shown in the next sections. The decision on which mode to use is dependent on the underlying service to be transported.

- **Frame-Mapped GFP (GFP-F):** mapping mechanism in which one client signal frame is received and mapped in its entirety into one GFP frame. Therefore, with this adaptation mode, the GFP-F frame size is variable as it is directly related to the incoming client payload. In fact, with GFP-F, the entire client frame must be buffered in order to determine its length. GFP-F is usually used to support Layer 2 frames like Ethernet MAC that are tolerant to some latency. The ITU G.7041 defines the following frame-mapped user payloads supported through GFP-F:
 - Frame-Mapped Ethernet
 - Frame-Mapped PPP
 - Frame-Mapped Multiple Access Protocol over SDH (MAPOS)
 - Frame-Mapped IEEE 802.17 Resilient Packet Ring
 - Frame-Mapped Fibre Channel FC-BBW
- **Transparent-Mapped GFP (GFP-T):** mapping mechanism that facilitates the transport of 8B/10B block-coded client signals like Gigabit Ethernet (GbE), Fibre Channel, ESCON, FICON, and DVB-ASI. With GFP-T, individual characters of a client signal are decoded from the client signal and then mapped into fixed-size GFP frames (64B/65B coded superblocks). This approach avoids the buffering of an entire client frame before it can be mapped into a GFP frame, which reduces latency and in turn makes it ideally suited for SAN applications that require very low transmission latency.

Glossary

Generic Framing Procedure (GFP)

The figure *GFP-T vs GFP-F Features* below provides a functional comparison between GFP-F and GFP-T, while figure *GFP-T vs. GFP-F Frames* below provides a comparison of the GFP frames for both modes.

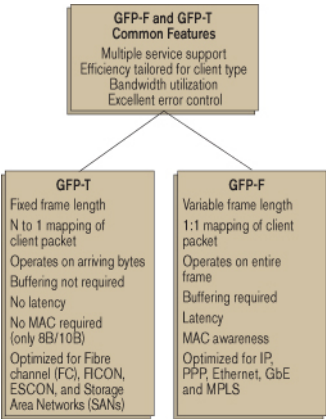

GFP-T vs GFP-F Features

Ethernet	IP/PPP	MAPOS	RPR	Fibre Channel	RICON	ESCON	Other client signals
GFP client-specific aspects (client-dependent)							
Frame mapped						Transparent mapped	
GFP common aspects (client-independent)							
SONET/SDH path				OTN ODUk path			


GFP-T vs. GFP-F Frames

Functionally, GFP consists of both common and client-specific aspects. Common GFP aspects apply to all GFP-adapted traffic (i.e., both GFP-F and GFP-T) and cover functions such as packet data unit (PDU) delineation, data link synchronization and scrambling, client PDU multiplexing, and client-independent performance monitoring. Client-specific aspects of GFP cover issues such as mapping of the client PDU into the GFP payload, client-specific performance monitoring, as well as operations, administration, and maintenance (OA&M). This is illustrated in figure *Client Signal Mapping over GFP* on page 877.

GFP Frame Structure

As illustrated in figure below, Two basic GFP frame types have been defined: GFP client frames and GFP control frames. GFP client frames are categorized into two types: client data frames (CDFs) and client management frames (CMFs). CDFs are used to transport the client data, while CMFs are used to transport information associated with the management of the client signal or GFP connection.


As for GFP control frames, at this time, only one category has been defined by the standard so far; i.e., GFP idle frames.

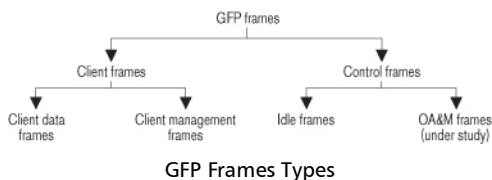

Glossary

Generic Framing Procedure (GFP)

The GFP generic frame structure is presented in figure below.

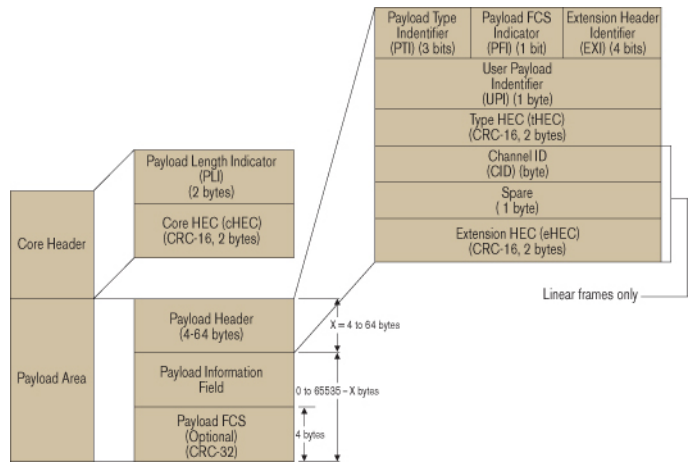

GFP Generic Frame Structure

Each GFP frame type consists of three main components: the core header, the payload header, and the payload information field.

The core and payload headers form the GFP header, whereas the payload information field represents the customer traffic carrying the data services. The payload header carries information about the payload type (i.e., Ethernet, Fibre Channel, etc.) that it is carrying, while the core header carries information about the size of the GFP frame itself.

Each header contains a header error correction (HEC) calculation, allowing for the correction of single errors; that is, any errors that occur in the core header or in the payload header can potentially be corrected by the HEC, through the network element. This creates a very robust mapping scheme, which ensures that GFP frames can get transported across a network without customer traffic loss.

➤ **Core Header**

The GFP core header consists of a two-octet length field, specifying the length of the GFP frame's payload area in octets, and a two-octet field containing a CRC-16 error-check code.

- **Payload Length Indicator (PLI):** The PLI is a two-byte field indicating the size in bytes of the GFP payload area. It indicates the beginning of the next GFP frame in the incoming bit-stream as an offset from the last byte in the current GFP core header. PLI values in the range of 0 to 3 are reserved for GFP internal use and are referred to as GFP control frames. All other frames are referred to as GFP client frames.
- **Core HEC (cHEC):** The cHEC is a two-byte field containing a cyclic redundancy check (CRC-16) sequence that protects the integrity of the core header. The cHEC sequence is computed over the core header bytes using standard CRC-16. The CRC-16 enables both single-bit error correction and multibit error detection.

➤ **Payload Header**

The payload header is a variable-length area, 4 to 64 octets long, intended to support data-link management procedures specific to the transported client signal. The payload header contains two mandatory fields, the Type field and Type Header Error Correction (tHEC) field. The payload header also supports an additional variable number of subfields referred to, as a group, as the extension header.

- **Payload Type Identifier (PTI):** A three-bit subfield that identifies the type of GFP client frame. The following table lists the currently defined user frames.

PTI	Description
000	Client Data Frame
100	Client Management Frame
Others	Reserved

Glossary

Generic Framing Procedure (GFP)

- **Payload FCS Indicator (PFI):** A one-bit subfield indicating the presence (1) or absence (0) of the payload FCS field. The following table lists the currently defined PFI values.

PFI	Description
0	FCS Absent
1	FCS Present

- **Extension Header Identifier (EXI):** A four-bit subfield identifying the type of GFP extension header. Three kinds of extension headers are currently defined:

EXI	Description	Function
0000	Null Extension Header	Indicates that no extension header is present.
0001	Linear Extension Header	A two-octet extension header that supports sharing of the GFP payload across multiple clients in a point-to-point configuration. The linear extension header consists of an eight-bit channel ID (CID) field, used to indicate one of 256 communication channels (i.e. clients) at a GFP termination point, and an eight-bit spare field reserved for future use.
0010	Ring Extension Header	The use of this field is under consideration. Similar to linear, the current proposal being considered is to allow the sharing of the GFP payload across multiple clients; however, this would only apply to ring configurations.
0011 to 1111	Reserved	

- **User Payload Identifier (UPI):** An eight-bit field identifying the type of payload conveyed in the GFP payload information field:

UPI	Client Data	Client Management
0000 0000 1111 1111	Reserved and not available	Reserved
0000 0001	Mapped Ethernet Frame	Client Signal Fail (Loss of Client Signal)


UPI	Client Data	Client Management
0000 0010	Mapped PPP Frame	Client Signal Fail (Loss of Character Synchronization)
0000 0011	Transparent Fibre Channel	Client Defect Clear Indication (DCI)
0000 0100	Transparent FICON	Client Forward Defect Indication (FDI)
0000 0101	Transparent ESCON	Client Reverse Defect Indication (RDI)
0000 0110	Transparent GbE	
0000 0111	Reserved for future use	
0000 1000	Frame-Mapped IEEE 802.17 Resilient Packet Ring	
0000 1011	Frame-Mapped Fibre Channel FC-BBW	
0000 1100	Asynchronous Transparent Fibre Channel	
0000 1101	Framed MPLS Unicast	
0000 1110	Framed MPLS Multicast	
0000 1111	Framed IS-IS	
0001 0000	Framed IPv4	
0001 0001	Framed IPv6	
0001 0010	Framed DVD-ASI	
0001 0011	Framed 64B/66B Ethernet	
0001 0100	Framed 64B/66B Ethernet Ordered Set	
0001 0101 through 1110 1111	Reserved for future standardization	
1111 0000 through 1111 1110	Reserved for proprietary use	
0000 0110 through 1101 1111		Reserved for future use
1110 0000 through 1111 1110		Reserved for proprietary use

Glossary

Generic Framing Procedure (GFP)

- **Type HEC (tHEC) Field:** A two-octet field that contains a CRC-16 sequence to protect the integrity of the type field. The tHEC sequence is computed over the core header bytes using standard CRC-16. As with the cHEC, CRC-16 enables both single-bit error correction and multibit error detection.
- **Channel Identifier (CID):** A one-byte field that is only available when the EXI field is configured to Linear. The CID byte is used to indicate one of 256 communication channels at a GFP termination point.
- **Spare:** A one-byte field that is only available when the EXI field is configured to Linear. This field is reserved for future use.
- **Extension HEC (eHEC):** A two-byte field that contains a CRC-16 check sequence that protects the integrity of the contents of the extension. CRC-16 enables both single-bit correction and multibit error detection.

The figure below explains how (in GFP-F) the transmitter encapsulates one entire frame of the client data.

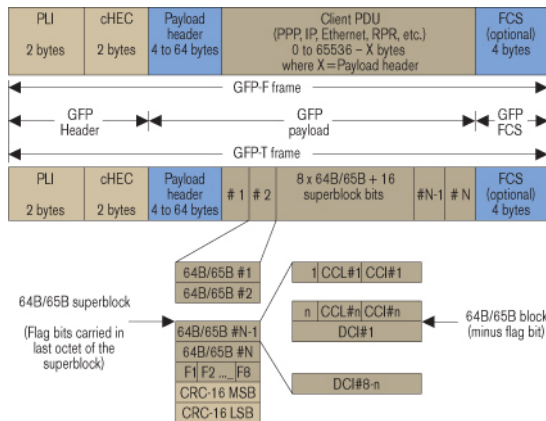

GFP-F vs. GFP-T Frame Structure

➤ **Payload Information Field**

The payload area (also referred to as payload information field) contains the framed client signal. This variable-length field may include from 0 to 65,535 – X octets, where X is the size of the payload header (including the extension header, if present) and the payload FCS field (if present).

Figure *GFP-T vs. GFP-F Frames* on page 880 shows the GFP-T and GFP-F frame structures. As shown, Both GFP-T and GFP-F frame types share a common core header, payload header, and payload FCS (optional), and they differ in the way in which the client is mapped into this payload area.

➤ **Payload FCS (pFCS)**

This is an optional four-octet-long frame-check sequence. It contains a CRC-32 check sequence that is designed to validate the entire content of the payload area. The FCS field presence is signalled by the PFI bit located in the Type field of the payload header. The FCS does not correct any errors; it just indicates the presence of error(s).

In GFP-F, the transmitter encapsulates one entire frame of the client data into one GFP frame. In this case, the basic frame structure of a GFP client frame is used, including the required payload header.


In GFP-T, however, rather than buffering an entire client-data frame, the individual characters of the client signal are demapped from the client block codes and then mapped into periodic fixed-length GFP frames. The transparent GFP client frame uses the same structure as the frame-mapped GFP, including the required payload header.

Glossary

Generic Framing Procedure (GFP)

GFP Summary

GFP has been standardized to better optimize the transport of Ethernet and other data services over SONET, taking into account both the pros and cons of ATM and PPP/HDLC framing mechanisms. As described in this section, GFP represents a robust mapping mechanism that allows for the mapping of multiple client-data types into SONET/SDH payload (SPEs). This technology has been embraced by network equipment and service providers as it provides an efficient way of providing interoperable data-services transport over the existing SONET/SDH install base. The versatility provided by GFP allows SONET/SDH networks to offer transport services for a multiple of services, as shown in figure below.

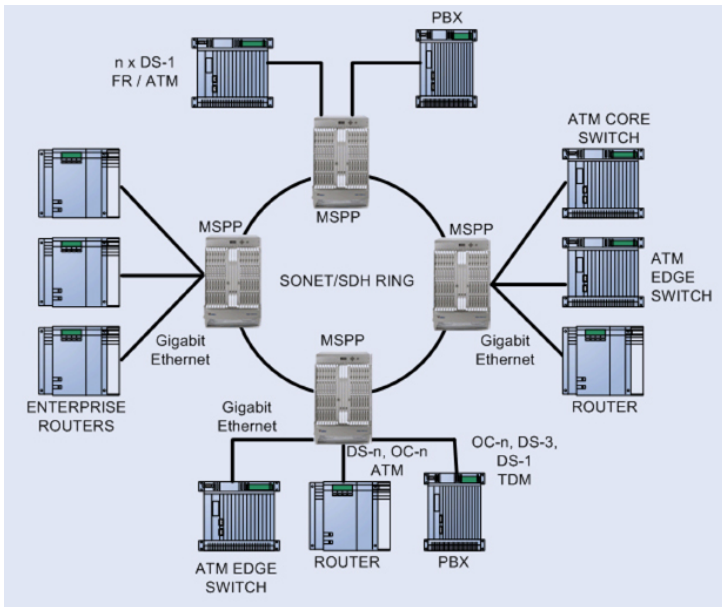

Multiservice SONET/SDH Network

MPLS Labels


The MPLS labels are listed in the following table.

Label	Description
0	IPv4 explicit null
1	Router alert
2	IPv6 explicit null
3	Implicit null
14	OAM alert
4 to 13, and 15	Unassigned
16 to 1048575	Label ID

OBSAI

Overview

Traditional mobile installations are bulky (use thick coaxial cables) and require a lot of power to operate (there is a huge power loss in the coaxial cabling which often requires the use of Tower Mounted Amplifiers) as outlined in the following figure.

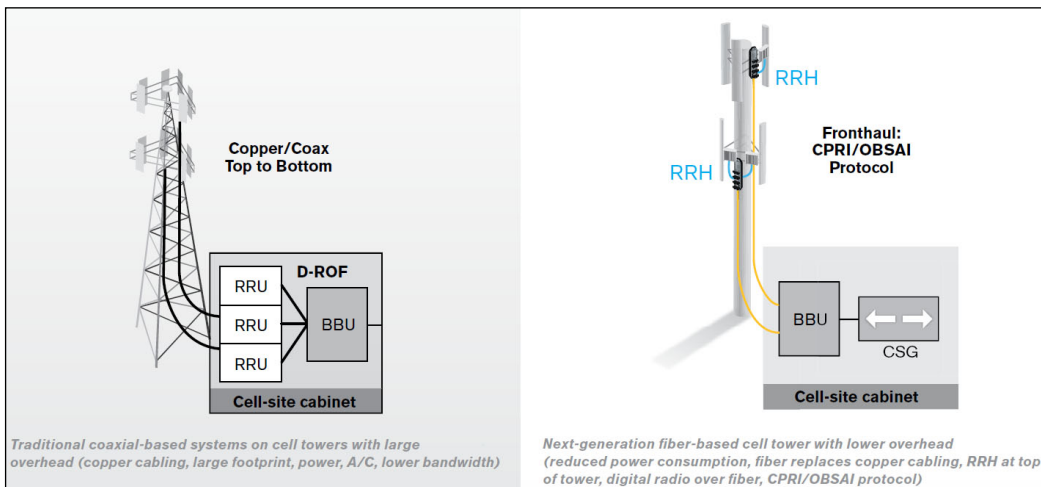

Pressures on the Mobile Network Operators (MNO) to reduce their capital, operational cost, and increase coverage are at the heart of a revolution in the mobile network. To address the situation, a concept of decomposition of the radio base station has been developed where the radio basic functions and its ability to transmit and receive radio modulated signals are separated. In such a distributed environment, a protocol is required to maintain synchronization and management capabilities as well as transporting the user traffic between the simplified Base Transceiver Station (BTS) and its Remote Radio Head (RRH).


This protocol called Open Base Station Architecture Initiative (OBSAI) separates a traditional radio base station configuration into two separate elements: Base Transceiver Station (BTS) and Remote Radio Head (RRH). The BTS processes the digital baseband radio information and performs the control of the RRH. The RRH converts the digital radio information into radio frequency signals transported over the air interface (antenna). The BTS and RRH are interconnected by a point-to-point link. This link carries the OBSAI protocol and is known in the industry as the fronthaul as opposed to the backhaul that is the WAN bringing the network traffic to the base station.

The OBSAI link can be extended over several kilometers as it uses fiber optics. In fact it can be deployed up to 40 km although most field installations at the moment of this writing are below 10 km.

The OBSAI BTS System Reference Document defines multiple Reference Points. The Reference Point 3 Specification mainly defines the physical to the application layers providing an opportunity for larger interoperability between vendors. However, field experience suggests that the interoperability is pretty much limited to the physical and data link layers.

OBSAI RP3-01 System Architecture

OBSAI remotely locates the RRH from the BTS. This means that the RRH must be controlled, managed and synchronized from the BTS in addition to transporting the User information (Voice and user application data) and all that on the same digital link, the RP3-01. As such, an OBSAI interface is composed of 3 communication flows sent in the same optical fiber in the form of continuous messages as illustrated in the following diagram.

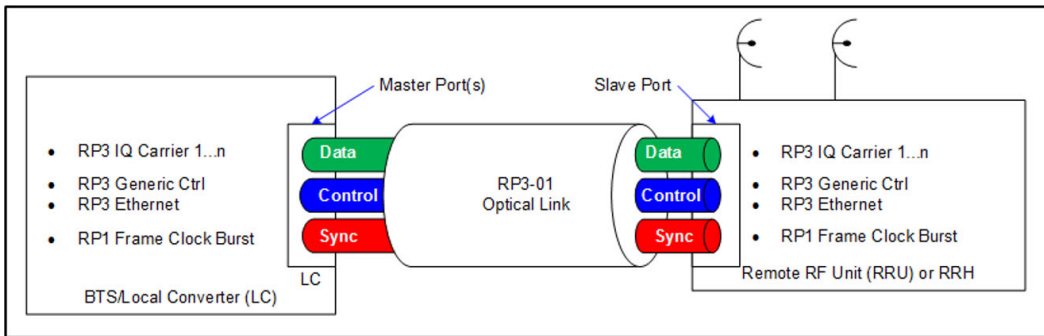


The OBSAI link parameter alignment setup is driven by two paired TX and RX state machines; one pair located on the BTS acts as a Master and the other located at the RRH acts as a Slave. The Master initiates the negotiation procedure necessary to achieve this alignment.

- **Data:** User Data Messages (IQ Data) which represents the voice and data information that is exchanged by End-User Equipment
- **Control:** Call Processing/OAM&P messages (Generic Ctrl and RP3 Ethernet messages)
- **Synchronization:** Frame synchronization messages

OBSAI Protocol Stack

The OBSAI RP3 Protocol Stack revolves around the 4 layers: Physical Layer, Data Link Layer, Transport Layer and Application Layer as outlined in the following diagram.

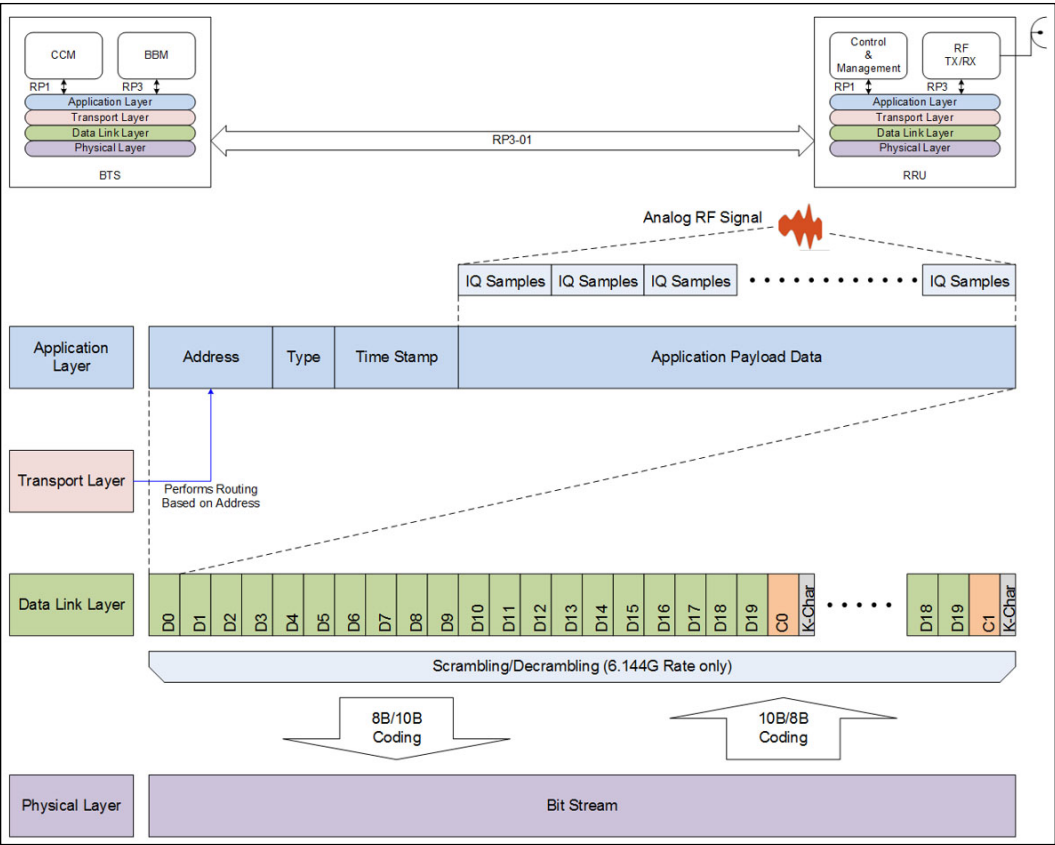

Glossary

OBSAI

- Application Layer: Provides message sampling and mapping based on payload type (ex: WCDMA/FDD, LTE, GSM/EDGE and 802.16 also known as Wi-Max).
- Transport Layer: End-to-End delivery message including routing based on RP3 Address defined in the messages.
- Data Link Layer:
 - Message framing and link synchronization.
 - Scrambling/Descrambling (6.144G only).
- Physical Layer:
 - 8B/10B Coding/Decoding (or 10B/8B Coding).
 - Create serial bit stream.
 - Transmit/Receive bit stream on the interface..

Physical Interface

OBSAI offers 4 rates based on a multiple of 768 Mbit/s. All OBSAI rates use 8B/10B line coding. Scrambling is mandatory for the 6.1Gbit/s rate. When using OBSAI with Framed L2, the line rate and scrambling are normally negotiated following the operation of the TX and RX state machines at the BTS and RRH nodes.

Multiple (i)	Rate	Line Coding	Scrambling
1x	768 Mbit/s	8B/10B	None
2x	1.536 Gbit/s		
4x	3.072 Gbit/s		
8x	6.144 Gbit/s		Configurable (enabled by default)

SONET/DSn/SDH/PDH

SONET/DSn/SDH/PDH Nomenclature

The GUI will use the International or European nomenclature based on the SONET and SDH software options installed on the module.

Software option	Nomenclature
SONET only	International
SDH only	European
SONET and SDH	International

Signal Rates

Rate	SONET/DSn	SDH/PDH	
		International	European
1.544 Mbit/s	DS1	-	1.5M
2.048 Mbit/s	-	E1	2M
8.448 Mbit/s	-	E2	8M
34.368 Mbit/s	-	E3	34M
44.736 Mbit/s	DS3	-	45M
51.84 Mbit/s	OC-1	STM-0	52M
139.264 Mbit/s	-	E4	140M
155.52 Mbit/s	OC-3	STM-1	STM-1
622.08 Mbit/s	OC-12	STM-4	STM-4
2.48832 Gbit/s	OC-48	STM-16	STM-16
9.95328 Gbit/s	OC-192	STM-64	STM-64
39.81312 Gbit/s	OC-768	STM-256	STM-256

SONET/SDH High and Low Order Path Nomenclature

Path Type	SDH	SONET
High Order	AU-3	STS-1
	AU-4	STS-3c
	AU-4-4c	STS-12c
	AU-4-16c	STS-48c
	AU-4-64c	STS-192c
	AU-4-256c	STS-768c
Low Order	TUG-3	-
	TUG-2	VTG
	TU-11	VT1.5
	TU-12	VT2
	TU-3	-

SONET/SDH Alarms and Errors Nomenclature

Layer	SONET	SDH
Physical	BPV/CV	CV
Section / Regenerator Section	LOF-S	RS-LOF
	SEF	RS-OOF
	TIM-S	RS-TIM
	FAS-S	RS-FAS
	B1	B1
Line / Multiplex Section	AIS-L	MS-AIS
	RDI-L	MS-RDI
	B2	B2
	REI-L	MS-REI
High Order Path	AIS-P	AU-AIS
	LOP-P	AU-LOP
	H4-LOM	H4-LOM
	PDI-P	-
	RDI-P	HP-RDI
	ERDI-PCD	ERDI-CD
	ERDI-PPD	ERDI-PD
	ERDI-PSD	ERDI-SD
	PLM-P	HP-PLM
	UNEQ-P	HP-UNEQ
	TIM-P	HP-TIM
	B3	B3
	REI-P	HP-REI

Glossary

SONET/DSn/SDH/PDH


Layer	SONET	SDH
Low Order Path	AIS-V	TU-AIS
	LOP-V	TU-LOP
	RDI-V	LP-RDI
	ERDI-VCD	ERDI-CD
	ERDI-VPD	ERDI-PD
	ERDI-VSD	ERDI-SD
	RFI-V	LP-RFI
	UNEQ-V	LP-UNEQ
	TIM-V	LP-TIM
	PLM-V	LP-PLM
	BIP-2	BIP-2
	REI-V	LP-REI

SONET Numbering Convention

The module supports the Timeslot (default) and hierarchical two-level numbering conventions as per GR-253.

Hierarchical Notation:


The module supports numbering SONET high order path STS-1s and STS-3c using the two-level “STS-3#,STS-1#” convention in an OC-N. For example: STS-1 [2,3].

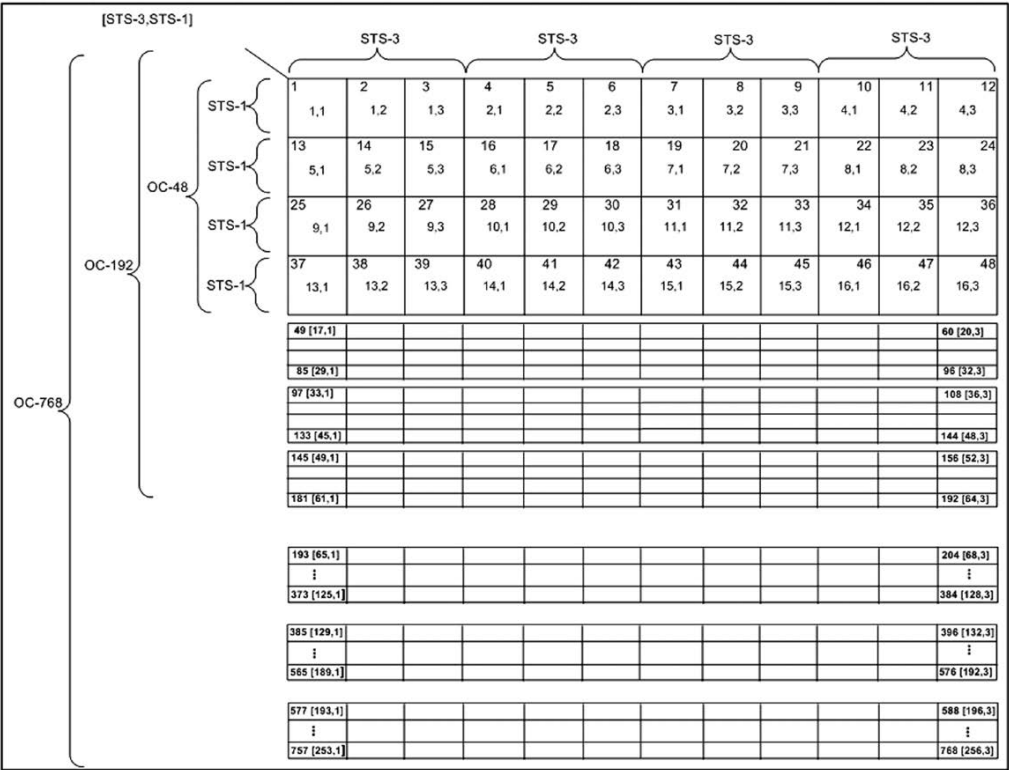

Glossary

SONET/DSn/SDH/PDH

The module supports numbering SONET low order path using the two-level “VTGroup#,VT#” convention for numbering VTs within an STS-1. For example: VT1.5 [1,3], VT2 [3,2], VT6 [6,1].

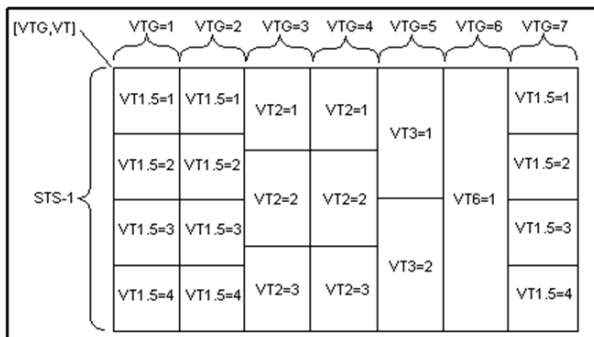

The module supports numbering SONET high order path STS-nc within an OC-N using the two-level “STS-3#,STS-1#”. For example: STS-12c [5,1].

SDH Numbering Convention

As per ITU G.707, the high order paths are defined using a 2 to 5 level convention E,D,C,B,A depending on the rate of the STM-n used.

- E: the AUG-64 are numbered 1 to 4
- D: the AUG-16 are numbered 1 to 4
- C: the AUG-4 are numbered 1 to 4
- B: the AUG-1 are numbered 1 to 4
- A: the AU-3 are numbered 1 to 3

Naming is as follows for each of the following rates:

- [E,D,C,B,A] for STM-256
- [D,C,B,A] for STM-64
- [C,B,A] for STM-16
- [B,A] for STM-4
- [0] for AU-4 in STM-1
- [A] for AU-3 in STM-1
- [A] for the AU-3 in STM-0e, A=0.

Glossary

SONET/DSn/SDH/PDH

The low order paths are defined using a 2 or 3 level convention K,L,M depending on the rate of the AU-4 or AU-3 used to multiplex the low order signals.

- K: the TUG-3 are numbered 1 to 3
- L: the TUG-2 are numbered within the TUG-3 0 or from 1 to 7
- M: the TU-2, TU-12, TU-11 are numbered within the TUG-2 1, 1 to 3, 1 to 4 respectively

Examples for AU-4 (3 level convention)

TU-3: [K,0,0]

TU-2: [K,L,0]

TU-12:[K,L,M] where M = 1 to 3

TU-11:[K,L,M] where M = 1 to 4


Example for AU-3 (2 level convention)

TU-2: [L,0]

TU-12: [L,M] M is numbered 1 to 3

TU-11: [L,M] M is numbered 1 to 4

The GUI Grid indicates the TUG-2 [x] and TUG-3 [x] values.

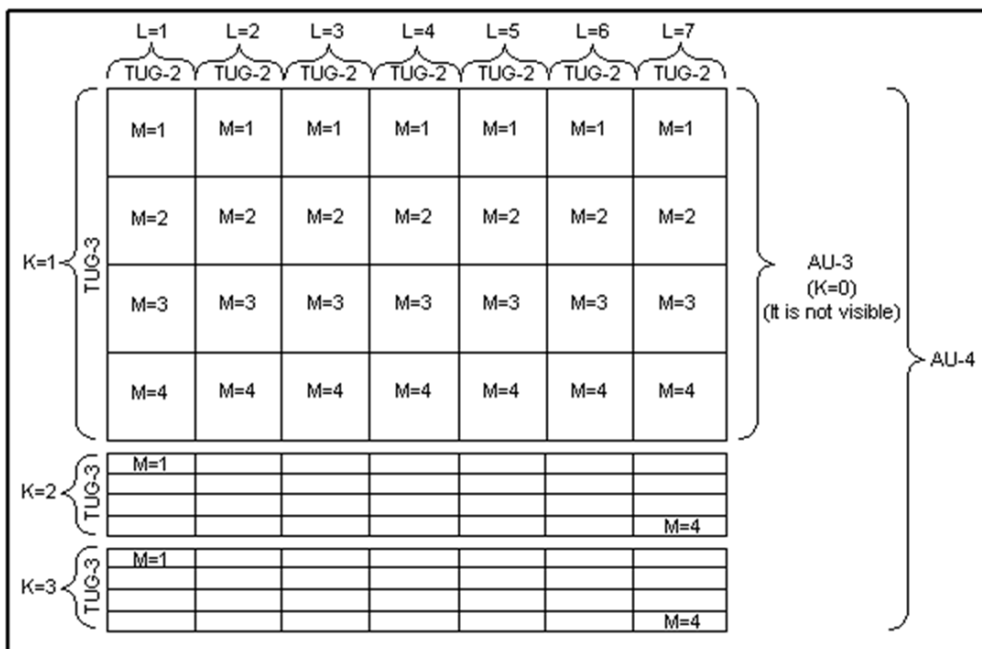

DSn/PDH Numbering Convention


The DS1 numbering in DS3 shall be numbered with respect to the DS2 muxing [DS2,DS1]. For example a DS3 has 7 DS2 and a DS2 has 4 DS1, so an example would be for a DS1 number [3,2]. The DS3 shall have a single number to represent its position. That is [1] all the time whether it is used in an STS-1 or it is the DS3 electrical interface.

The PDH do not have special grouping of the E1, E2, E3 or E4. This means that the PDH has a single number. For example E1 number 2 shall be number [2].

The E1 in DS3 via G.747 numbering uses the naming [DS2,E1]. However in the grid the label shall adapt itself to DS2 [x] or 6.3M [x] (where x = 1 to 7) with respect to the interface standard used: European or International.

SyncE

Synchronous Ethernet or SyncE enables a traceable network timing reference frequency to be distributed node-by-node across a chain of Ethernet devices (SyncE compliant devices only). The network timing reference is typically hierarchically traceable to a Primary Reference Source/Clock (PRS/PRC) in a unidirectional flow. Any node in the chain not compliant to SyncE automatically terminates the synchronization propagation but this does not impact the flow of traffic.

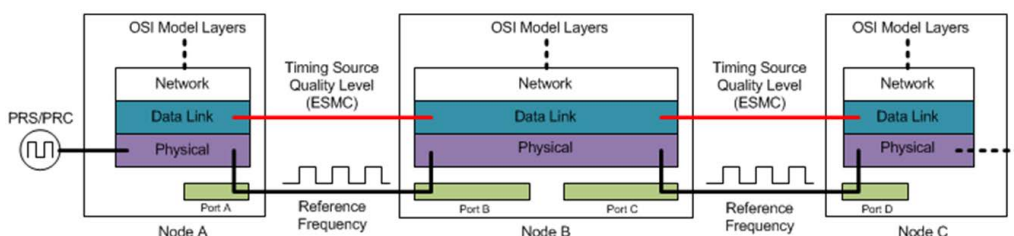


The Physical Layer carries the clock frequency and the Data Link layer carries the Quality Level (QL) associated to the transported frequency via Synchronization Status Messaging (SSM) embedded in the Ethernet Synchronization Message Channel (ESMC). The QL is transported via Information and Event PDUs typically transmitted at a rate of 1 frame per second but this rate can vary between 1 to 10 messages per second to respect the slow protocol rules. The Information PDU is used as heart-beat for the channel while one Event PDU is transmitted asynchronously to the Information PDU upon change of the QL value. Following this change, the Information PDU is also adjusted to match the new QL.

Glossary

SyncE

In order for an Ethernet interface to be considered Synchronous Ethernet compliant it needs to be upgraded as shown in the following diagram. In addition to supporting the ESMC channel, this upgrade consists in allowing the recovered clock from the CDR to be propagated to a function called the Ethernet Equipment Clock (EEC).

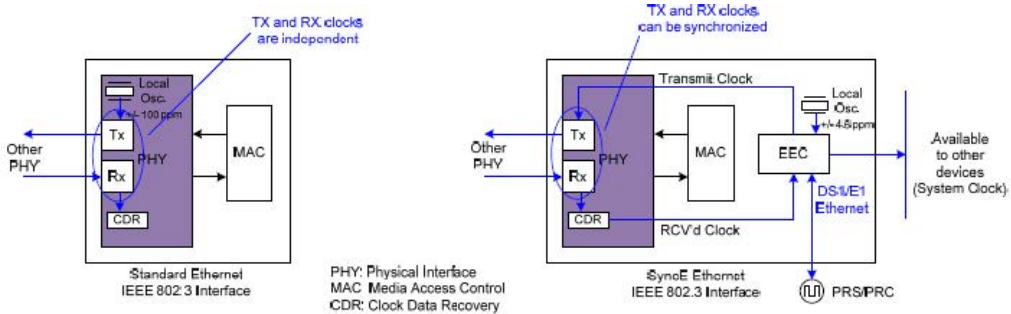

The EEC is present in a network element (NE) to determine which port should be used to distribute the frequency to other port(s) in the NE as well as what QL value to transmit over the ESMC to other network element in the network synchronization chain. The actual selection decision is based on the QL value received from the various port(s) in the NE. If none are valid the EEC is equipped with a better oscillator than a standard Ethernet interface to provide synchronization (Holdover mode). Typically the highest QL value is selected among the nominated sources within the network element.

Unicast/Multicast Addresses for Ethernet OAM

Unicast or multicast address can be used for most of S-OAM functions.

- Unicast addresses a unique destination address of the MEP.
- Multicast Class 1 addresses all MEPs in the MEG. The address value is 01-80-C2-00-00-3x, where x represents the MEG/MD Level.
- Multicast Class 2 addresses all MIPs and MEPs in the MEG. The address value is 01-80-C2-00-00-3y, where y represents the MEG/MD Level + 8.

The following table specifies which address type is used for each frame type.

Frame Type	Unicast	Multicast		Frame Type	Unicast	Multicast	
		Class 1	Class 2			Class 1	Class 2
CCM	X	X		LMM	X	X	
LBM	X	X		LMR	X		
LBR	X			SLM	X	X	
LTM			X	SLR	X		
LTR	X			AIS	X	X	
TST	X	X		CSF	X	X	
DMM	X	X		LCK	X	X	
DMR	X						

C Alarms/Errors

Note: For a complete list of alarms/errors per layer and their TX/RX availability see TX/RX Alarms/Errors per Layer on page 914.

Quick Access to Alarms/Errors per Layer

BER

Clock | CPRI

DCO - RX | DCO - TX | DS1 | DS3

E1 | E2/E3/E4 | Electrical Interface | Ethernet | Ethernet - PCS Lanes

FEC (FlexO) | FEC Lanes | Fibre Channel | FlexE Group | FlexO Group | FOIC/FOICx.y

GFP | GMP

*Interface | Interface (DCO) | **IP/UDP** | **IP/UDP/TCP***

Media RX FEC | MPLS-TP OAM

OBSAI | ODTU4.1-GMP | ODTUC4.80-GMP | ODUCn | ODUk | ODUx | ODUx-TCM | OPUCn | OPUk | OPUx | OTL | OTUC Frame | OTUCn | OTUx

Path OAM | PHY | PHYs/Instances | PTP

QoS Metrics

Reference Signal | RS-FEC (CPRI) | RS-FEC (Ethernet)

S-OAM | Section/Line / RS/MS | STS-x/AU-x | SyncE

TCM (SONET/SDH) | Transcoding

VT/TU

WIS

Alarms/Errors Layer per Test Application

The following table lists the alarm/error layers availability per test application and interface/rate.

► Transport

Test Application	Interface	Alarms/Errors Layer
DCO BERT	All	<i>BER DCO - RX DCO - TX Electrical Interface Ethernet Ethernet - PCS Lanes Interface (DCO) IP/UDP Media RX FEC</i>
	FOICn	<i>FEC (FlexO) FlexO Group FOIC/FOICx.y ODUcN ODUk OTUC Frame OTUCn</i>
FlexO BERT	100G	<i>BER FEC (FlexO) FEC Lanes FlexO Group OTUC Frame FOIC/FOICx.y Interface ODTUC4.80-GMP ODUcN ODUk OPUCn OPUk OTUC Frame OTUCn OTUx</i>
OTN BERT	All	<i>BER Clock Ethernet GFP GMP Interface ODUx ODUx-TCM OPUx OTUx</i>
	OTU3	<i>Transcoding OTL</i>
	OTU4	<i>OTL</i>
Multi-Channel OTN	OTU4	<i>BER Clock Interface ODUx OPUx OTL ODTU4.1-GMP OTUx</i>
SONET/SDH BERT	All	<i>BER Clock Interface Section/Line / RS/MS STS-x/AU-x TCM (SONET/SDH) VT/TU</i>
OTN-SONET/SDH BERT	All	<i>BER Clock GMP Interface ODUx ODUx-TCM OPUx OTUx Section/Line / RS/MS STS-x/AU-x</i>
	OTU3, OTU4	<i>OTL</i>
DSn/PDH BERT	All	<i>BER DS1 DS3 E1 E2/E3/E4 Interface</i>
SONET/SDH - DSn/PDH BERT	All	<i>BER DS1 DS3 E1 E2/E3/E4 Interface Section/Line / RS/MS STS-x/AU-x TCM (SONET/SDH) VT/TU</i>
NI/CSU Emulation	DS1	<i>Interface DS1 DS3</i>

➤ Ethernet

Test Application	Interface	Alarms/Errors Layer
Carrier Ethernet OAM	All	<i>Clock Ethernet Interface MPLS-TP OAM S-OAM</i>
	10GE WAN	<i>WIS</i>
EtherBERT	All	<i>BER Clock Ethernet Interface IP/UDP/TCP</i>
	10GE WAN	<i>WIS</i>
	25GE	<i>RS-FEC (Ethernet)</i>
	50GE, 100GE	<i>Ethernet - PCS Lanes FEC Lanes RS-FEC (Ethernet)</i>
	200GE, 400GE	<i>Ethernet - PCS Lanes</i>
EtherSAM (Y.1564)	All	<i>Clock Ethernet Interface IP/UDP/TCP</i>
	10GE WAN	<i>WIS</i>
	25GE	<i>RS-FEC (Ethernet)</i>
	100GE	<i>Ethernet - PCS Lanes FEC Lanes RS-FEC (Ethernet)</i>
	200GE, 400GE	<i>Ethernet - PCS Lanes</i>
FlexE BERT	100GE	<i>BER Ethernet Ethernet - PCS Lanes FEC Lanes FlexE Group Interface Path OAM PHY PHYs/Instances RS-FEC (Ethernet)</i>
RFC 2544	All	<i>Clock Ethernet Interface IP/UDP/TCP</i>
	10GE WAN	<i>WIS</i>
	25GE	<i>RS-FEC (Ethernet)</i>
	100GE	<i>Ethernet - PCS Lanes FEC Lanes RS-FEC (Ethernet)</i>
	200GE, 400GE	<i>Ethernet - PCS Lanes</i>
RFC 6349	All	<i>Clock Ethernet Interface IP/UDP/TCP</i>
	10GE WAN	<i>WIS</i>
	25GE	<i>RS-FEC (Ethernet)</i>
	100GE	<i>Ethernet - PCS Lanes FEC Lanes RS-FEC (Ethernet)</i>

Alarms/Errors

Test Application	Interface	Alarms/Errors Layer
Smart Loopback	All	Clock Ethernet Interface IP/UDP/TCP
	10GE WAN	WIS
	25GE	RS-FEC (Ethernet)
	100GE	Ethernet - PCS Lanes FEC Lanes RS-FEC (Ethernet)
	200GE, 400GE	Ethernet - PCS Lanes
TCP Throughput	All	Clock Ethernet Interface IP/UDP/TCP
Through Mode	All	Clock Ethernet Interface IP/UDP/TCP
	10GE WAN	WIS
	100GE	Ethernet - PCS Lanes FEC Lanes RS-FEC (Ethernet)
Traffic Gen & Mon	All	Clock Ethernet Interface IP/UDP/TCP QoS Metrics
	10GE WAN	WIS
	25GE	RS-FEC (Ethernet)
	100GE	Ethernet - PCS Lanes FEC Lanes RS-FEC (Ethernet)
	200GE, 400GE	Ethernet - PCS Lanes

➤ Sync

Test Application	Interface	Alarms/Errors Layer
1588 PTP	All	Clock Ethernet Interface IP/UDP/TCP PTP Reference Signal
SyncE	All	Ethernet Interface IP/UDP/TCP SyncE

Test Application	Interface	Alarms/Errors Layer
Time Error / Wander	All	<i>Interface Reference Signal</i>
	DS1	<i>DS1</i>
	E1	<i>E1</i>
	100M 1GE 10GE LAN	<i>Ethernet PTP (Time Error) SyncE</i>
	25GE	<i>Ethernet PTP (Time Error) RS-FEC (Ethernet) SyncE</i>
	100GE	<i>Ethernet Ethernet - PCS Lanes FEC Lanes PTP (Time Error) RS-FEC (Ethernet) SyncE</i>

➤ **Fibre Channel**

Test Application	Interface	Alarms/Errors Layer
FC BERT	All	<i>BER Clock Fibre Channel Interface</i>

➤ **Wireless**

Test Application	Interface	Alarms/Errors Layer
CPRI/OBSAI BERT	All	<i>BER Clock Interface</i>
	CPRI rates	<i>CPRI</i>
	CPRI 24.3G	<i>RS-FEC (CPRI)</i>
	OBSAI rates	<i>OBSAI</i>
eCPRI BERT	10G	<i>BER Clock Ethernet Interface QoS Metrics</i>
	25G	<i>RS-FEC (Ethernet)</i>

TX/RX Alarms/Errors per Layer

The following table lists the Injection (TX) and Reception (RX) alarms/errors availability per layer.

Layer	Alarms/Errors (A/E)	TX/RX	Comments	Page
BER	A No Traffic	RX		953
		TX/RX		954
		RX		935
	E Bit Error	TX/RX		968
		RX		976
		RX		977
		TX/RX		978
Clock	A LOC	TX ^a		947
		RX		950
CPRI	A Link Down	RX	Only available with Framed L2	945
		TX/RX		948
		TX/RX		956
		TX/RX		956
		TX/RX		956
		TX/RX		959
	E FAS	TX/RX		970
DCO - RX	A Rx CDC LOL	RX	Not available with CFP2	958
		RX		958
		RX		958
		RX		958
	A Rx LOA	RX	Not available with CFP2	958
		RX		958
	A Rx LOL	RX	Only available with CFP2	958
	A Rx LOM	RX	Not available with CFP2	959
	A Rx OOA	RX		959

Layer	Alarms/Errors (A/E)	TX/RX	Comments	Page
DCO - TX	A Tx CMU LOL	TX ^a	Not available with CFP2	961
		TX ^a		961
		TX ^a		961
		TX ^a		961
	Tx LOL	TX ^a	Only available with CFP2	961
	Tx OOA	TX ^a		961
	Tx RefClk LOL	TX ^a	Not available with CFP2	962
DS1	A AIS	TX/RX		931
		TX/RX		953
		TX/RX	Not available with Wander.	956
	E CRC-6	TX/RX	Not available with Wander.	969
		TX/RX		973
DS3	A AIS	TX/RX		931
		TX/RX		944
		TX/RX		953
		TX/RX		956
	E CP-Bit	TX/RX		969
		TX/RX		970
		TX/RX		971
		TX/RX		978
E1	A AIS	TX/RX		931
		TX/RX	Not available with Unframed .	948
		TX/RX	Not available with Unframed .	949
		TX/RX	Not available with Wander.	956
		TX/RX		956
		TX/RX		961
	E CRC-4	RX	Not available with Wander.	969
		RX		969
		TX/RX		970
E2/E3/E4	A AIS	TX/RX		931
		TX/RX	Not available with Unframed .	948
		TX/RX		956
	E FAS	TX/RX		970

Alarms/Errors

Layer	Alarms/Errors (A/E)	TX/RX	Comments	Page
Electrical Interface (DCO BERT)	A Frequency	RX		939
	LOC Lane	RX		947
Ethernet	A Hi-BER	RX	25/40/50/100GE and EoOTN 100 GbE client	943
	Hi-LFER	RX	2.5/5/10GE Electrical	943
	Client Frequency	RX	EoOTN 1GbE client	935
	L Deg SER Det	RX	200/400/800GE	944
	L Deg SER Rcd	TX/RX	200/400/800GE	944
	Link Down	TX/RX		945
	LOA	RX	200/400/800GE and FlexO (see <i>Ethernet - PCS Lanes</i> for 40/50/100GE)	946
	LOBL	RX	2.5/5/10GE Electrical	947
	Local Fault	TX	Optical 10GE and up	-
	Local Fault Det	RX		947
	Local Fault Rcd	RX		948
	No Traffic	RX	FlexE	953
	R Deg SER	RX	200/400/800GE	956
	Remote Fault	TX/RX	TX for optical 10GE and up	958

Layer	Alarms/Errors (A/E)	TX/RX	Comments	Page
Ethernet	E Alignment	RX	10/100 Mbit/s electrical	964
	65B Block	RX	2.5/5/10GE Electrical	964
	66B Block	TX/RX	50/200/400/800GE and FlexO	964
	Block	TX/RX	10G LAN/WAN	968
	Collision	RX	10/100 Mbit/s electrical in Half Duplex	968
	Exc. Coll.	RX		969
	False Carrier	RX	100/1000 Mbit/s and EoOTN 1GbE client	970
	FCS	TX/RX		970
	FEC-COR-BITS	RX	DCO BERT; not available with 100G Ethernet (CAUI-4 w/o FEC) client.	971
	FEC-COR-CW	TX/RX	200/400/800GE	971
	FEC-UNCOR-CW	TX/RX	200/400/800GE	972
	FEC-UNCOR-FR	RX	DCO BERT; not available with 100G Ethernet (CAUI-4 w/o FEC) client	973
	Idle	RX	10/100 Mbit/s electrical in Half Duplex	975
	Jabber	RX		976
	Late Coll.	RX	10/100 Mbit/s electrical in Half Duplex	976
	Oversize	RX		977
	Runt	RX		979
	Symbol	TX/RX	100/1000 Mbit/s and EoOTN 1GbE client	980
	Undersize	RX		981

Alarms/Errors

Layer		Alarms/Errors (A/E)	TX/RX	Comments	Page
Ethernet - PCS Lanes For Ethernet parallel interfaces and OTN with 40/100 GbE Ethernet client. (under the PCS sub tab for Through Mode test providing alarms/errors for both ports)	A	Exc. Skew	RX	Not available with 100GE (1 Lane)/ 100GE (2 Lanes)/4 x 100GE interface.	937
		Inv. Mapping	RX	40/100GE	944
		LOA	RX	40/50/100GE (see <i>Ethernet</i> for 200/400/800GE)	946
		LOAML	RX		946
		LOBL	RX	40/100GE	947
	E	Block	TX/RX	Ethernet interfaces and 100 GbE over OTU4	968
		FEC-SYMB	TX	200/400/800GE with RS-FEC (RX Only) enabled	-
		Inv. Marker	TX/RX		975
		PCS BIP-8	TX/RX		978
		Pre-FEC-Bit	RX	200/400/800GE with RS-FEC (RX Only) enabled	978
		Pre-FEC-SYMB	RX	200/400/800GE with RS-FEC (RX Only) enabled	978
FEC (FlexO)	A	FEC-COR-CW	TX/RX		971
		FEC-SYMB	TX	Only available with FlexO BERT	-
		FEC-UNCOR-CW	TX/RX		973
		Pre-FEC-SYMB	RX	Only available with FlexO BERT	979
FEC Lanes	A	FEC-LOAML	RX		939
		FEC Exc. Skew	RX	50GE	939
	E	Pre-FEC-SYMB	RX		978
		FEC Inv. Marker	TX/RX	50GE	972
		Pre-FEC-Bit	RX	50GE	978

Layer	Alarms/Errors (A/E)	TX/RX	Comments	Page
Fibre Channel (including RS-FEC)	A	Link Down		945
		Link Degrade	64X	945
		Local Fault Detected	10X	947
		Local Fault Received	10X	948
		LOAML	64X	946
		LOCWS	32X/64X	948
		RD	64X (Injection under RS-FEC layer)	956
		Remote Fault	10X	958
	E	Block	10X/16X	968
		66B Block	32X/64X	964
		FCS		970
		FEC-CORR-CW	32X/64X	971
		FEC-SYMB	TX	-
		FEC-UNCOR-CW	32X/64X	973
		Inv. Marker	64X	975
		Oversize		977
		Pre-FEC-SYMB	32X/64X	979
		Symbol	1X/2X/4X/8X	980
		Undersize		981
FlexE Group	A	Calendar Mismatch		935
		FlexE Group Down		939
		Illegal Client		944
		Inconsistent Calendar		944
FlexO Group	A	Excessive Instance Skew	Only available with FlexO BERT	938
		GIDM		942
		Group Down		942
		IIDM		944
		LOM		949
		MAPM		952
		OOM		953
		RPF		958
	E	MFAS		976
		OH CRC		977

Alarms/Errors

Layer	Alarms/Errors (A/E)	TX/RX	Comments	Page
FOIC/FOICx.y (FlexO)	A Exc. Skew	RX	Only available with FlexO BERT	938
		LOA		946
		LOAML	Only available with FlexO BERT	946
	E Inv. Marker	TX/RX	Only available with FlexO BERT	975
GFP	A GFP-DCI	TX/RX		941
		GFP-EXM	RX	941
		GFP-FDI	TX/RX	941
		GFP-LFD	TX/RX	941
		GFP-LOCCS	TX/RX	942
		GFP-LOCS	TX/RX	942
		GFP-RDI	TX/RX	942
		GFP-Reserved CMF	RX	942
		GFP-UPM	RX	942
		GFP-UserDefined CMF	TX/RX	942
	E GFP-10B_ER	TX/RX		973
		GFP-cHEC-CORR	TX/RX	973
		GFP-cHEC-UNCORR	TX/RX	973
		GFP-eHEC-CORR	TX/RX	974
		GFP-eHEC-UNCORR	TX/RX	974
		GFP-pFCS	TX/RX	974
		GFP-SB-CORR	RX	974
		GFP-SB-CORR (Post)	TX	974
		GFP-SB-CORR (Pre)	TX	974
		GFP-SB-UNCORR	TX/RX	975
		GFP-tHEC-CORR	TX/RX	975
		GFP-tHEC-UNCORR	TX/RX	975
GMP (OTN, displayed under ODUx)	A OOS	RX	For OTN with EoOTN client (ODU0 PT21)	954
	E Cm-CRC-8	RX		968
	CnD-CRC-5	RX		968

Layer	Alarms/Errors (A/E)	TX/RX	Comments	Page
Interface	A Frequency	RX		939
	LOC Lane	RX		947
	LOS	TX/RX		950
	E 66B Block	TX/RX	For CPRI	964
	BPV	TX/RX	For DS1/DS3/STS-1e	968
	CV	TX/RX	For E1/E3/E4/STM-0e/STM-1e/STS-3e and CPRI/OBSAI	969
	EXZ	TX/RX	For DS1 and DS3	969
	K30.7	TX/RX	For CPRI/OBSAI	976
	Sync Header	TX/RX	For CPRI	980
Interface (DCO)	A Local Degrade	TX/RX	Injection with 200/400GE client only. Not available with FOICn rates.	947
	LOS	TX/RX		950
	Remote Degrade	TX/RX	Injection with 200/400GE client only. Not available with FOICn rates.	958
	Remote PHY Fault	RX		958
IP/UDP (DCO)	E IP Chksum	RX		976
	UDP Chksum	RX		981
IP/UDP/TCP	E IP Chksum	RX		976
	TCP Chksum	RX		981
	UDP Chksum	RX		981
Media RX FEC (DCO)	A FDD	RX		938
	FED	RX		939
	E FEC-COR-BITS	RX		971
	FEC-UNCOR-FR	RX		973

Alarms/Errors

Layer		Alarms/Errors (A/E)	TX/RX	Comments	Page
MPLS-TP OAM	A	AIS	TX/RX		931
		C-DCI	TX		934
		C-FDI	TX/RX		934
		C-LOS	TX/RX		934
		C-RDI	TX/RX		935
		LCK	TX/RX		945
		Loss Continuity	RX	Available when CC Function is enabled	951
		Mismerge	RX		952
		RDI	TX/RX		957
		Unexp MEG/MD Lvl	RX		962
		Unexp MEP	RX		962
		Unexp Period	RX		963
		OBSAI	A	Link Down	RX
LOF	TX/RX			948	
RP3 Address Mismatch	RX			958	
E	CRC		RX	969	
	FAS		TX/RX	970	
ODTU4.1-GMP (Multi-Channel OTN, displayed under ODUx)	A	OOS	RX	For Multi-Channel OTN with ODU0 PT21 mapping	954
	E	Cm-CRC-8	RX		968
		CnD-CRC-5	RX		968
ODTUC4.80-GMP (FlexO, displayed under OTN - ODUk)	A	OOS	RX		954
	E	Cm-CRC-6	RX		968
		CnD-CRC-9	RX		968
ODUCn (FlexO)	A	AIS	TX/RX		931
		BDI	TX/RX		933
		LCK	TX/RX		945
		TIM	RX		960
	E	BEI	TX/RX		965
		BIP-8	TX/RX		967

Layer		Alarms/Errors (A/E)	TX/RX	Comments	Page
ODUk (ODUflex)	A	AIS	TX/RX		931
		BDI	TX/RX		933
		LCK	TX/RX		945
		LOFLOM	TX/RX		949
		OCI	TX/RX		953
		TIM	RX		960
	E	BEI	TX/RX		966
		BIP-8	TX/RX		967
ODUx	A	AIS	TX/RX		931
		BDI	TX/RX		933
		BSD	TX/RX		934
		BSF	TX/RX		934
		FSD	TX/RX		941
		FSF	TX/RX		941
		LCK	TX/RX		945
		LOFLOM	TX/RX		949
		OCI	TX/RX		953
		TIM	RX		960
	E	BEI	TX/RX		966
		BIP-8	TX/RX		967
ODUx-TCM	A	BDI	TX/RX		933
		BIAE	TX/RX		933
		IAE	TX/RX		943
		LTC	TX/RX		952
		TIM	RX		961
	E	BEI	TX/RX		966
		BIP-8	TX/RX		967
OPUCn (FlexO; displayed under ODUcN group)	A	LOOMFI	TX/RX		949
		MSIM	TX/RX		953
		OOMFI	TX/RX		954
		PLM	RX		955
	E	OMFI	TX/RX		977

Alarms/Errors

Layer	Alarms/Errors (A/E)	TX/RX	Comments	Page
OPUk (OPUflex; displayed under ODUk group)	A	AIS		932
		CSF		935
		PLM		955
	E	OMFI		977
OPUx (displayed under ODUx group)	A	AIS		932
		CSF		935
		LOOMFI		949
		MSIM		952
		OOMFI		954
		PLM		955
	E	OMFI		977
OTL	A	Exc. Skew		937
		LOF		948
		LOL		949
		LOR		950
		OOF		953
		OOR		954
	E	FAS		970
		Inv. Marker		976
OTUC Frame	A	LOFLOM		949
		OOF		953
	E	FAS		970
		MFAS		976
OTUCn	A	AIS		931
		BDI		933
		BIAE		933
		IAE		943
		TIM		960
	E	BEI		965
		BIP-8		967

Layer	Alarms/Errors (A/E)	TX/RX	Comments	Page
OTUx	A	AIS		932
		BDI		933
		BIAE		934
		IAE		943
		LOF		948
		LOM		949
		OOF		953
		OOM		954
		TIM		961
	E	BEI		967
		BIP-8		968
		FAS		970
		FEC-CORR	RX Any of FEC-CORR-BIT, FEC-CORR-CW, or FEC-CORR-SYM error	971
		FEC-CORR-BIT		971
		FEC-CORR-CW		972
		FEC-CORR-SYM		972
		FEC-STRESS		972
		FEC-UNCORR or FEC-UNCORR-CW		973
		MFAS		976
Path OAM	A	BAS Unexp. Period		932
		CS_LF		935
		CS_LPI		935
		CS_RF		935
		CS Type Mismatch		935
		DAPI Mismatch		935
		Loss Continuity		951
		RDI		957
		SAPI Mismatch		959
	E	BIP-8		968
		CRC4		969
		REI		979

Alarms/Errors

Layer	Alarms/Errors (A/E)	TX/RX	Comments	Page
PHY (FlexE - PHY tab)	A Hi-BER	RX		943
	Link Down	TX/RX		945
	LOA	RX	200GE/400GE	946
	L Deg SER Det	RX	200GE/400GE	944
	L Deg SER Rcd	TX/RX	200GE/400GE	944
	R Deg SER	TX/RX	200GE/400GE	956
	E FEC-COR-CW	TX/RX		971
	FEC-UNCOR-CW	TX/RX		972
PHYs/Instances (FlexE - Group tab)	A Excessive PHY Skew	RX		938
	FlexE Group Number Mismatch	RX		939
	Loss of OH Frame Lock	TX/RX		951
	Loss of OH MF Lock	TX/RX		951
	Loss of PHY Number Lock	RX		951
	Remote PHY Fault	TX/RX		958
	E OH CRC	TX/RX		977
PTP	A Domain Mismatch	RX	Client	936
	Loss Announce	RX	Client	950
	Loss Delay Req	RX	GM	951
	Loss Session	RX	GM	951
	Loss Sync	RX	Client	952
	QL Mismatch	RX	Client	955
	Unusable	RX	Client	963
QoS Metrics	E Frame Loss	RX	For Traffic Gen & Mon and eCPRI BERT	939
	Out-of-Seq.	RX		954
Reference Signal	A REF-FAULT	RX		957
RS-FEC (CPRI)	E FEC-COR-CW	TX/RX		971
	FEC-UNCOR-CW	TX/RX		972
	FEC-SYMB	TX		-
	Pre-FEC-SYMB	RX		978

Layer	Alarms/Errors (A/E)	TX/RX	Comments	Page
RS-FEC (Ethernet)	A	FEC-LOA	RX	938
		FEC-LOAML	RX	939
		FEC Degraded SER	RX For 50GE	939
	E	FEC-COR-BITS	RX For 100GE (1 Lane)	971
		FEC-COR-CW	RX For 100GE (4 Lanes)	971
			TX/RX For 25GE/50GE	
		FEC Inv. Marker	TX/RX For 50GE	972
		FEC-SYMB	TX For 25GE/50GE	-
		FEC-UNCOR-CW	RX For 100GE	972
			TX/RX For 25GE/50GE	
		Inv-CW-Marker	TX/RX For 25GE	975
		Pre-FEC-Bit	RX For 50GE	978
		Pre-FEC-SYMB	RX For 25GE/50GE	978
S-OAM	A	AIS	TX/RX Available with G.8113.1, Y.1731 and MEF modes	931
		C-DCI	TX	934
		C-FDI	TX/RX	934
		C-LOS	TX/RX	934
		C-RDI	TX/RX	935
		LCK	TX/RX	945
		Loss Continuity	RX Available when CC Function is enabled	951
		Mismerge	RX	952
		RDI	TX/RX	957
		Unexp MEG/MD Lvl	RX	962
		Unexp MEP	RX	962
		Unexp Period	RX	963
	E	B1	TX/RX	964
		B2	TX/RX	964
		FAS-S / RS-FAS	TX/RX	970
		REI-L / MS-REI	TX/RX	979
Section/Line / RS/MS	A	AIS-L / MS-AIS	TX/RX	932
		LOF-S / RS-LOF	TX/RX	948
		RDI-L / MS-RDI	TX/RX	957
		SEF / RS-OOF	TX/RX	959
		TIM-S / RS-TIM	RX	961
	E	B1	TX/RX	964
		B2	TX/RX	964
		FAS-S / RS-FAS	TX/RX	970

Alarms/Errors

Layer	Alarms/Errors (A/E)	TX/RX	Comments	Page
STS-x/AU-x	A AIS-P / AU-AIS	TX/RX		932
		ERDI-PCD / ERDI-CD	TX/RX	936
		ERDI-PPD / ERDI-PD	TX/RX	936
		ERDI-PSD / ERDI-SD	TX/RX	936
		H4-LOM	TX/RX	943
		LOP-P / AU-LOP	TX/RX	949
		PDI-P	TX/RX	954
		PLM-P / HP-PLM	RX	955
		RDI-P / HP-RDI	TX/RX	957
		TIM-P / HP-TIM	RX	961
		UNEQ-P / HP-UNEQ	TX/RX	962
	E B3	TX/RX		965
		REI-P / HP-REI	TX/RX	979
SyncE	A ESMC Loss	RX		937
		QL Mismatch	For SyncE test application	955
TCM (SONET/SDH) For rates up to OC-192 / STM-64; STS-x/AU-x or VT/TU tab; TCM must be enabled	A TC-IAIS-P / HPTC-IAIS	TX/RX		959
		TC-IAIS-V / LPTC-IAIS	TX/RX	959
		TC-LTC-P / TC-LTC-V / HPTC-LTC / LPTC-LTC	TX/RX	959
		TC-ODI-P / TC-ODI-V / HPTC-ODI / LPTC-ODI	TX/RX	959
		TC-RDI-P / TC-RDI-V / HPTC-RDI / LPTC-RDI	TX/RX	960
		TC-TIM-P / TC-TIM-V / HPTC-TIM / LPTC-TIM	RX	960
		TC-UNEQ-P / HPTC-UNEQ	TX/RX	960
		TC-UNEQ-V / LPTC-UNEQ	TX/RX	960
	E TC-IEC-P / HPTC-IEC	TX/RX		980
		TC-OEI-P / TC-OEI-V / HPTC-OEI / LPTC-OEI	TX/RX	980
		TC-REI-P / TC-REI-V / HPTC-REI / LPTC-REI	TX/RX	980
		TC-VIOL-P / HPTC-VIOL	RX	981
		TC-VIOL-V / LPTC-VIOL	RX	981

Layer	Alarms/Errors (A/E)	TX/RX	Comments	Page
Transcoding (OTU3 BERT with 40 GbE client)	A	Hi-BER1027B		943
		LOAML1027B		946
		LOBL1027B		947
	E	Inv. Flag		975
		MSEQV		977
		POSV		978
		SEQV		979
VT/TU	A	AIS-V / TU-AIS		932
		ERDI-VCD		936
		ERDI-VPD / LP-ERDI-PD		937
		ERDI-VSD / LP-ERDI-SD		937
		LOP-V / TU-LOP		950
		PLM-V / LP-PLM		955
		RDI-V / LP-RDI		957
		RFI-V / LP-RFI		958
		TIM-V / LP-TIM		961
		UNEQ-V / LP-UNEQ		962
	E	BIP-2		967
		REI-V / LP-REI		979

Alarms/Errors

Layer	Alarms/Errors (A/E)	TX/RX	Comments	Page
WIS	A	AIS-L		932
		AIS-P		932
		ERDI-PCD		936
		ERDI-PPD		936
		ERDI-PSD		936
		LCD-P		944
		LOF		948
		LOP-P		949
		PLM-P		955
		RDI-L		957
		RDI-P		957
		SEF		959
		UNEQ-P		962
		WIS Link Down		963
	E	B1		964
		B2		965
		B3		965
		REI-L		979
		REI-P		979

a. TX alarm, no injection.

Alarms

- **AIS** (Alarm Indication Signal) for DS1/E2/E3/E4, indicates that an unframed all-ones signal is received.
- **AIS** (Alarm Indication Signal) for DS3, indicates that the M-frame contains zeros (0) for C-bits, ones (1) for X-bits, 1010... repeating sequence with a one (1) immediately following any of the control bit positions for the information bits.
- **AIS** (Alarm Indication Signal) for E1, indicates that two or less ZEROs are received in each of two consecutive double frame periods (512 bits).
- **AIS** (Alarm Indication Signal) for FlexO, indicates that the STAT information in the PM byte 3, bits 6 to 8 of ODUc #1 is "111" for at least 15 consecutive frames. In TX, generates an all "1"s pattern in the entire ODUc signal, excluding the frame alignment overhead (FA OH), and OTUC overhead (OTUC OH).
- **AIS** (Alarm Indication Signal) for FlexO OTUCn, indicates that the STAT bits in the SM overhead field (byte 3, bits 6 to 8) of the OTUC #1 are "111" for at least 15 consecutive frames. In TX, generates all ones over each OTUC of the signal excluding the OH framing (FAS and MFAS).
- **AIS** (Alarm Indication Signal) for OAM with G.8113.1/Y.1731/MEF mode, indicates that a valid AIS frame is received. A valid frame has its destination MAC address matching either the unit port Unicast MAC address or a Multicast class 1 address (refer to page 907), VLANs matching the unit port VLANs, and MEG level matching the local MEG level. The alarm is cleared when during an interval equal to 3.5 times the AIS transmission period indicated in the last received AIS frame, no AIS frames are received.
- **AIS** (Alarm Indication Signal) for ODU, indicates that the STAT information in the PM byte 3, bits 6 to 8 is "111" for at least 3 consecutive frames. In TX, generates an all "1"s pattern in the entire ODUk signal, excluding the frame alignment overhead (FA OH), OTUk overhead (OTUk OH) and ODUk FTFL.

- **AIS** (Alarm Indication Signal) for OPU client signal (designated as LO in the standard), indicates that a PRBS11 pattern is received causing a failure of the client signal. In TX, generates a PRBS11 pattern.
- **AIS** (Alarm Indication Signal), for OTU serial interfaces, indicates that polynomial number 11 (PN-11) is over all OTU frame bits including FAS and MFAS for at least 3 consecutive 8192 bit-interval. In TX, generates polynomial number 11 (PN-11) over all OTU frame bits including FAS and MFAS continuously.
- **AIS-L / MS-AIS** (Alarm Indication Signal) for SONET/SDH, indicates that bits 6, 7 and 8 of the K2 byte contain the “111” pattern in five consecutive frames. In TX, generates a SONET/SDH signal that contains a valid Section Overhead (SOH) / Regenerator Section Overhead (RSOH) and an all-ones pattern on the SPE.
- **AIS-L** (Alarm Indication Signal - Line) for WIS, indicates that bits 6, 7 and 8 of the K2 byte contain the “111” pattern in five consecutive frames.
- **AIS-P / AU-AIS** (Alarm Indication Signal) for SONET/SDH, indicates that the H1 and H2 bytes contain an all-ones pattern in three consecutive frames or more. In TX, generates an all-ones pattern over H1, H2, H3, and SPE.
- **AIS-P** (Alarm Indication Signal - Path) for WIS, indicates that the H1 and H2 bytes for a STS path contain an all-ones pattern in three consecutive frames or more.
- **AIS-V / TU-AIS** (Alarm Indication Signal) for SONET/SDH, indicates that V1 and V2 bytes for the VT/TU path contain an all-ones pattern in three (SONET) / five (SDH) consecutive superframes. In TX, generates an all-ones pattern for the V1 and V2 bytes of the VT/TU path and payload.
- **BAS Unexp. Period** for Path OAM, indicates that the period field value of the received Basic OAM message is different than the one configured.

- **BDI** (Backward Defect indication) for FlexO, indicates that the BDI bit in the PM overhead field (byte 3, bit 5) of ODUc #1 is “1” for at least 15 consecutive frames. In TX, generates a “1” in the BDI (byte 3, bit 5) of the PM overhead field of the ODUc #1 continuously.
- **BDI** (Backward Defect Indication) for FlexO OTUCn, indicates that the BDI bit in the SM overhead field (byte 3, bit 5) of the OTUC #1 is “1” for at least 15 consecutive frames. In TX, generates “1” for the BDI bit in the SM overhead field (byte 3, bit 5) of the OTUC #1 continuously.
- **BDI** (Backward Defect indication) for ODU, indicates that the BDI bit in the PM overhead field (byte 3, bit 5) is “1” for at least 5 consecutive frames. In TX, generates a “1” in the BDI (byte 3, bit 5) of the PM overhead field continuously.
- **BDI** (Backward Defect Indication) for ODU-TCM, indicates that the BDI bit in the TCM overhead field Byte 3, bit 5 is “1” for at least 5 consecutive frames. In TX, generates a "1" in the BDI bit of the TCM overhead field (byte 3, bit 5) continuously.
- **BDI** (Backward Defect Indication) for OTU, indicates that the BDI bit in the SM overhead field (byte 3, bit 5) is “1” for at least 5 consecutive OTU frames. In TX, generates “1” for the BDI bit in the SM overhead field (byte 3, bit 5) continuously.
- **BIAE** (Backward Incoming Alignment Error) for FlexO OTUCn, indicates that the BEI/BIAE bits in the SM overhead field (byte 3, bits 1 to 4) are “1011” for at least 3 consecutive frames. In TX, generates “1011” for the BEI/BIAE bits in the SM overhead field (byte 3, bits 1 to 4) of OTUC continuously.
- **BIAE** (Backward Incoming Alignment Error) for ODU-TCM, indicates that the BEI/BIAE bits in the TCM overhead field Byte 3, bits 1 to 4 are “1011” for at least 3 consecutive frames. In TX, generates "1011" in the BEI/BIAE bits of the TCM overhead (byte 3, bits 1 to 4) continuously.

- **BIAE** (Backward Incoming Alignment Error) for OTU, indicates that the BEI/BIAE bits in the SM overhead field (byte 3, bits 1 to 4) are “1011” for at least 3 consecutive frames. In TX, generates “1011” for the BEI/BIAE bits in the SM overhead field (byte 3, bits 1 to 4) continuously.
- **BSD** (Backward Signal Degrade) for ODU, indicates that the FTFL byte 128 is “00000010”. In TX, generates a “00000010” pattern in the FTFL Byte 128 continuously.
- **BSF** (Backward Signal Fail) for ODU, indicates that the FTFL byte 128 is “00000001”. In TX, generates a “00000001” pattern in the FTFL Byte 128 continuously.
- **C-DCI** (Client Signal Fail - Defect Clear Indication) for OAM with G.8113.1/Y.1731/MEF mode, generates a CSF frame with CSF type equal to **011**.
- **C-FDI** (Client Signal Fail - Forward Defect Indication) for OAM with G.8113.1/Y.1731/MEF mode, indicates that a CSF frame is received with CSF type equal to **001**. The alarm is cleared when no CSF (C-FDI) frames are received during an interval equal to 3.5 times the CSF transmission period indicated in the last received CSF (C-FDI) frame, or when a CSF frame is received with Client Defect Clear Indication (C-DCI) information (CSF Type 011).
- **C-LOS** (Client Signal Fail - Loss Of Signal) for OAM with G.8113.1/Y.1731/MEF mode, indicates that a CSF frame is received with CSF type equal to **000**. The alarm is cleared when no CSF (C-LOS) frames are received during an interval equal to 3.5 times the CSF transmission period indicated in the last received CSF (C-LOS) frame, or when a CSF frame is received with Client Defect Clear Indication (C-DCI) information (CSF Type 011).

- **C-RDI** (Client Signal Fail - Remote Defect Indication) for OAM with G.8113.1/Y.1731/MEF mode, indicates that a CSF frame is received with CSF type equal to **010**. The alarm is cleared when no CSF (C-RDI) frames are received during an interval equal to 3.5 times the CSF transmission period indicated in the last received CSF (C-RDI) frame, or when a CSF frame is received with Client Defect Clear Indication (C-DCI) information (CSF Type 011).
- **Calendar Mismatch** for FLExE, indicates that received calendar is different of the one transmitted, including unequipped instances.
- **Client Frequency** for EoOTN 1GbE client, indicates that the received client signal rate doesn't meet the standard rate specification of 1250000000 ± 150000 bps (± 120 ppm).
- **Client Frequency** for ODUflex with Pattern client, indicates that the received client signal rate doesn't meet the nominal bit rate configured ± 100 ppm (refer to *Nominal Bit Rate*).
- **CS_LF** (Client Signal Local Fault) for Path OAM, indicates that a Basic OAM message is received with the CS_LF field set.
- **CS_LPI** (Client Signal Low Power Indication) for Path OAM, indicates that a Basic OAM message is received with the CS_LPI field set.
CS_LPI Monitoring check box, when selected (cleared by default), allows monitoring the **CS_LPI** alarms.
- **CS_RF** (Client Signal Remote Fault) for Path OAM, indicates that a Basic OAM message is received with the CS_RF field set.
- **CS Type Mismatch** for Path OAM, indicates a mismatch between the received and the expected CS Type.
- **CSF** (Client Signal Fail) for OPU client signal (designated as LO in the standard), indicates that Bit 1 of the OPUk PSI[2] byte is set to "1" causing a failure of the client signal mapped into the OPUk of the OTN signal. In TX, sets the bit 1 of the OPUk PSI[2] byte to "1".
- **DAPI Mismatch** for Path OAM, indicates a mismatch between the received and the expected DAPI message.

- **Domain Mismatch** for 1588 PTP with G.8275.1 profile, indicates that none of the received Domain values match the configured value (refer to page 222).
- **ERDI-PCD / ERDI-CD** (ERDI - Connectivity Defect) for SONET/SDH, indicates that bits 5, 6, and 7 of the G1 byte contain the “110” pattern in five consecutive frames. In TX, generates a “110” pattern for bits 5, 6, and 7 of the G1 byte.
- **ERDI-PCD** (Enhanced RDI - Path Connectivity Defect) for WIS, indicates that bits 5, 6 and 7 of the G1 byte contain the “110” pattern in five to ten consecutive frames.
- **ERDI-PPD / ERDI-PD** (ERDI - Payload Defect) for SONET/SDH, indicates that bits 5, 6, and 7 of the G1 byte contain the “010” pattern in five consecutive frames. In TX, generates a “010” pattern for bits 5, 6, and 7 of the G1 byte.
- **ERDI-PPD** (Enhanced RDI - Path Payload Defect) for WIS, indicates that bits 5, 6 and 7 of the G1 byte contain the “010” pattern in five to ten consecutive frames.
- **ERDI-PSD / ERDI-SD** (ERDI - Server Defect) for SONET/SDH, indicates that bits 5, 6, and 7 of the G1 byte contain the “101” pattern in five consecutive frames. In TX, generates a “101” pattern for bits 5, 6, and 7 of the G1 byte.
- **ERDI-PSD** (Enhanced RDI - Path Server Defect) for WIS, indicates that bits 5, 6 and 7 of the G1 byte contain the “101” pattern in five to ten consecutive frames.
- **ERDI-VCD** (Enhanced Remote Defect Indication - Connectivity Defect) for SONET/SDH, indicates that bits 5, 6, and 7 of the Z7 (SONET) / K4 (SDH) byte contain the “110” pattern, and bit 8 of the V5 byte contain “1”, in five consecutive VT/LP superframes. In TX, generates a “110” pattern for bits 5, 6, and 7 of the Z7 (SONET) / K4 (SDH) byte, and “1” for bit 8 of the V5 byte.

- **ERDI-VPD / LP-ERDI-PD** (Enhanced Remote Defect Indication - Payload Defect) for SONET/SDH, indicates that bits 5, 6, and 7 of the Z7 (SONET) / K4 (SDH) byte contain the “010” pattern, and bit 8 of the V5 byte contain “0”, in five consecutive VT/LP superframes. In TX, generates a “010” pattern for bits 5, 6, and 7 of the Z7 (SONET) / K4 (SDH) byte, and “0” for bit 8 of the V5 byte.
- **ERDI-VSD / LP-ERDI-SD** (ERDI - Server Defect) for SONET/SDH, indicates that bits 5, 6, and 7 of the Z7 (SONET) / K4 (SDH) byte contain the “101” pattern, and bit 8 of the V5 byte contain “1”, in five consecutive VT/LP superframes. In TX, generates a “101” pattern for bits 5, 6, and 7 of the Z7 (SONET) / K4 (SDH) byte, and “1” for bit 8 of the V5 byte.
- **ESMC Loss** for SyncE, indicates that no ESMC valid information frames were received for more than 5 seconds.
- **Exc. Skew** (Excessive Skew) indicates that the skew exceeds the defined threshold.

Skew Alarm Threshold (bits) for Ethernet test applications, allows setting the threshold value that will be used to declare a skew alarm. Not available at 100G when the RS-FEC check box is selected. **Default** restores the default skew alarm threshold value.

Rate	Range	Default Value
800GE	0 to 10550	4038
400GE 200GE	0 to 10550	4781
100GE	0 to 2047	928
40GE	0 to 4095	1856

- **Exc. Skew** (Excessive Skew) for FlexO, indicates that the skew exceeds the defined threshold.

Skew Alarm Threshold (ns), coupled for all ports in the FlexO group, allows setting the threshold value that will be used to declare a skew alarm: **0** to **1000** ns (**180** ns by default). **Default** restores the default alarm threshold value.

- **Excessive Instance Skew** for FlexO, indicates that the current skew is above the configured **Instance Skew Alarm Threshold**. Available with multiple instances on multiple ports. The Excessive Instance Skew condition corresponds to a Loss of lane alignment defect (LOL) as mentioned in the standard.

Instance Skew Alarm Threshold (ns) for FlexO with multiple instances on multiple ports, allows setting the threshold value that will be used to declare a skew alarm: **50** to **1000** ns (**300** ns by default). **Default** restores the default alarm threshold value.

- **Excessive PHY Skew** for FlexE multiple PHYs, indicates that the skew is above the configured **PHY Skew Alarm Threshold**.

PHY Skew Alarm Threshold (ns), available with multiple PHY, allows setting the threshold value that will be used to declare an excessive PHY skew alarm: **50** ns to **1000** ns, default is **300** ns. The **Default** button restores the default PHY skew alarm threshold value.

- **FDD** (FEC Detected Degrade) for DCO when the **FDD** check box is selected, indicates that the BER is greater to the **FDD** activate threshold. The **FDD** alarm is clear when the BER is below to the deactivate threshold.
- **FEC-LOA** (FEC-Loss Of Alignment) for Ethernet, indicates that the deskew process is not complete meaning that not all lanes are synchronized (Alignment Marker locked) and aligned. Not available with 100GE (1 Lane)/100GE (2 Lanes) interface.

- **FEC-LOAML** (FEC-Loss Of Alignment Marker Lock) for Ethernet, indicates that the location of the alignment marker payload sequence for a given lane on the PMA service interface is not detected. Not available with 100GE (1 Lane)/100GE (2 Lanes) interface.
- **FEC Degraded SER** for Ethernet 50GE with **FEC Degraded SER** enabled, indicates that a FEC degraded SER condition is detected.
- **FEC Exc. Skew** (Excessive Skew) for Ethernet 50GE, indicates that the skew exceeds the defined threshold.

Skew Alarm Threshold (bits) for Ethernet 50GE, allows setting the threshold value that will be used to declare a skew alarm: **0** to **10550** (default is **4781**). **Default** restore the default skew alarm threshold value.

- **FED** (FEC Excessive Degrade) for DCO when the **FED** check box is selected, indicates that the BER is greater to the **FED** activate threshold. The **FED** alarm is clear when the BER is below to the deactivate threshold.
- **FlexE Group Down** for FLExE, indicates that at least one PHY link of the group is down or any of the FlexE group alarm is present.
- **FlexE Group Number Mismatch** for FlexE PHYs/Instances, indicates that the received FlexE group number is different of the one configured. Not applicable when the group number is set to 0.
- **Frame Loss** for Traffic Gen & Mon and eCPRI, indicates that a sequence number is missing in the received frames.
- **Frequency** indicates that the received signal frequency meets the standard specifications (green) or not (red). Not available when using an active copper SFP.

For Ethernet **100/1000M Electrical**, **100M Optical**, **1GE Optical**, **10GE LAN/WAN**, **25GE**, or Fibre Channel **1X/2X/4X/8X/10X/16X/32X/64X** interface/rate, the frequency range is ± 100 ppm. Not supported for 10M electrical.

Alarms/Errors

Alarms

For parallel interfaces (available for each Physical Lane):

Rate	Physical Lane	Frequency
40GE	XLAUI	10.3125 GHz $\pm$ 100 ppm
50GE	50GAUI-1 50GAUI-2	26.5625 GHz $\pm$ 100 ppm
100GE	CAUI-4	25.78125 GHz $\pm$ 100 ppm
	100GAUI-1	53.125 GHz $\pm$ 100 ppm
	100GAUI-2	26.5625 GHz $\pm$ 100 ppm
200GE	200GAUI-4	26.5625 GHz $\pm$ 100 ppm
400GE	400GAUI-4	53.125 GHz $\pm$ 100 ppm
	400GAUI-8	26.5625 GHz $\pm$ 100 ppm
	400GAUI-16	26.5625 GHz $\pm$ 100 ppm
400ZR	400GAUI-8	26.5625 GHz $\pm$ 100 ppm
400ZR+	400GAUI-8	26.5625 GHz $\pm$ 100 ppm
800GE	800GAUI-8	53.125 GHz $\pm$ 50 ppm
100ZR+	100GAUI-2	26.5625 GHz $\pm$ 100 ppm
	CAUI-4	25.78125 GHz $\pm$ 100 ppm
100G FlexO-1-RS	4x28G	27.952 GHz $\pm$ 20 ppm
OTU3	4x10G	10.7546 GHz $\pm$ 20 ppm
OTU3e1	4x10G	11.1427 GHz $\pm$ 20 ppm
OTU3e2	4x10G	11.1458 GHz $\pm$ 20 ppm
OTU4	4x25G	27.952 GHz $\pm$ 20 ppm

For serial interfaces:

Interface	Standard Rate Specification
DS1	1544000 $\pm$ 36.6 ppm
E1	2048000 $\pm$ 54.6 ppm
E3	34368000 $\pm$ 24.6 ppm
DS3	44736000 $\pm$ 24.6 ppm
STS-1e/STM-0e, OC-1/STM-0	51840000 $\pm$ 20 ppm
E4	139264000 $\pm$ 19.6 ppm
STS-3e/STM-1e, OC-3/STM-1	155520000 $\pm$ 20 ppm
OC-12/STM-4	622080000 $\pm$ 20 ppm

Interface	Standard Rate Specification
OC-48/STM-16	2488320000 $\pm$ 20 ppm
OTU1	2666057143 $\pm$ 20 ppm
OC-192/STM-64	9953280000 $\pm$ 20 ppm
OTU2	10709225316 $\pm$ 20 ppm
OTU1e	11049107143 $\pm$ 100 ppm
OTU2e	11095727848 $\pm$ 100 ppm
OTU1f	11270089286 $\pm$ 100 ppm
OTU2f	11317642405 $\pm$ 100 ppm

- **FSD** (Forward Signal Degrade) for ODU, indicates that the FTFL byte 0 is “00000010”. In TX, generates a “00000010” pattern in the FTFL Byte 0 continuously.
- **FSF** (Forward Signal Fail) for ODU, indicates that the FTFL byte 0 is “00000001”. In TX, generates a “00000001” pattern in the FTFL Byte 0 continuously.
- **GFP-DCI** (GFP - Defect Clear Indication) indicates that CMF frame is received with an UPI set to “0000 0011”. In TX, generates a client DCI by setting the UPI field to “0000 0011”.
- **GFP-EXM** (GFP - Extension Header Mismatch) indicates that the EXI received is different from the expected EXI (refer to EXI on page 315) without uncorrectable cHEC, tHEC, eHEC, and no pFCS errors.
- **GFP-FDI** (GFP - Forward Defect Indication), available with GFP-F, indicates that CMF frame is received with an UPI set to “0000 0100”. In TX, generates a client FDI by setting the UPI field to “0000 0100”. Note that the configuration of the CMF pFCS check box (see *GFP-F/GFP-T* on page 315) is temporarily cleared and the UPI value changed when the GFP-FDI alarm is selected. The CMF pFCS check box state and the UPI value returns to their previous state/value when another alarm (other than GFP-FDI or GFP-RDI) is selected.
- **GFP-LFD** (GFP - Loss of Frame Delineation) indicates that the GFP engine is out of synchronization. In TX, generates a sufficient number of cHEC uncorrectable errors to avoid synchronization.

- **GFP-LOCCS** (CSF-Loss of Client Character Synchronization) indicates that CMF frame is received with an UPI set to “0000 0010”. In TX, generates a LOCCS by setting the UPI field to “0000 0010”.
- **GFP-LOCS** (GFP - CSF-Loss of Client Signal) indicates that CMF frame is received while UPI is set to “0000 0001”. In TX, generates a LOCS by setting the UPI field to “0000 0001”.
- **GFP-RDI** (GFP - Reverse Defect Indication), available with GFP-F, indicates that CMF frame is received with an UPI set to “0000 0101”. In TX, generates a client RDI by setting the UPI field to “0000 0101”. Note that the configuration of the CMF pFCS check box (see *GFP-F/GFP-T* on page 315) is temporarily cleared and the UPI value changed when the GFP-RDI alarm is selected. The CMF pFCS check box state and the UPI value returns to their previous state/value when another alarm (other than GFP-FDI or GFP-RDI) is selected.
- **GFP-Reserved CMF** (Client Management Frame) indicates MF alarms other than the ones described above.
Reserved CMF Monitoring check box, when selected, allows monitoring the **GFP-Reserved CMF** alarms.
- **GFP-UPM** (GFP - User Payload Mismatch) indicates that the UPI received is different from the expected Client Data UPI without uncorrectable cHEC, tHEC, eHEC, and no pFCS errors. The *GFP-F/GFP-T* on page 315 displays the expected UPI value based on the test structure. Refer to page 884 for more information on UPI values.
- **GFP-UserDefined CMF** generates a CMF (Client Management Frame) with a user defined UPI.
- **GIDM** (Group ID Mismatch) for FlexO, indicates that received GID of any of the group member PHYs, with good CRC, does not match the expected GID parameter.
- **Group Down** for FlexO, indicates that at least one instance of the group is in LOS, at least one OTUC is in LOFLOM, or any FlexO Group alarm at the exception of Remote PHY Fault.

- **H4-LOM** (H4 - Loss Of Multiframe) for SONET/SDH - VT/TU structured optical frames, indicates that the system loss track of the H4 byte multiframe indicator sequence. In TX, generates a wrong H4 byte multiframe indicator sequence.
- **Hi-BER** (High-Bit Error Ratio) for Ethernet 25/40/50/100GE and EoOTN 100 GbE client, indicates that the bit error ratio is $> 10^{-4}$ on a fixed time period; 2 ms for 25GE, 1250 μ s for 40GE, 1 ms for 50GE, and 500 μ s for 100GE.
- **Hi-BER** (High-Bit Error Ratio) for FlexE PHY with 100GE interface, indicates that the bit error ratio is $> 10^{-4}$ on a fixed time period of 500 μ s.
- **Hi-BER1027B** (High-Bit Error Ratio 1027 Blocks) for OTU3 with 40 GbE client, indicates that the bit error ratio is $> 10^{-4}$ on a fixed 250 μ s time period.
- **Hi-LFER** (High-LDPC Frame Error Ratio) for Ethernet 2.5/5/10GE Electrical, indicates that the bit error ratio is $> 4 \times 10^{-4}$ on a fixed time period; 125 μ s for 10GE, 31 μ s for 5GE, and 60 μ s for 2.5GE.
- **IAE** (Incoming Alignment Error) for FlexO OTUCn, indicates that the STAT bits in the SM overhead field (byte 3, bits 6 to 8) of the OTUC #1 are “010” for at least 15 consecutive frames. In TX, generates “010” for the STAT bits in the SM overhead field (byte 3, bit 6 to 8) of the OTUC #1 continuously.
- **IAE** (Incoming Alignment Error) for ODU-TCM, indicates that the STAT information in the TCM is “010” for at least 3 consecutive frames. In TX, generates “1” in the IAE bit of the TCM overhead (byte 3, bit 6) continuously.
- **IAE** (Incoming Alignment Error) for OTU, indicates that the IAE bit in the SM overhead field (byte 3, bit 6) is “1” for at least 5 consecutive OTU frames. In TX, generates “1” for the IAE bit in the SM overhead field (byte 3, bit 6) continuously.

- **Idle** (DS3 Idle) for DS3, indicates that subframe 3 of the M-frame contains zeros (0) for the three C-bits, ones (1) for X-bits, 1100... repeating sequence with the first two bits following each control bit set to 11 for the information bits.
- **Illegal Client** for FlexE, indicates that FlexE client size on the received calendar is not supported.
- **IIDM** (Instance ID Mismatch) for FlexO, indicates that the received IID, with good CRC, does not match the expected IID parameter.
- **Inconsistent Calendar** for FLExE, indicates inconsistency among the PHY maps, PHY numbers, unequipped instances, or FlexE group numbers received on the different PHYs.
- **Inv. Mapping** (Invalid Mapping) for Ethernet 40/100GE, indicates errors in the mapping attributed to either a mapping value appearing more than once or a non valid mapping value (out of range).
- **L Deg SER Det** (Local Degraded SER Detected) for Ethernet 200/400/800GE with **FEC Degraded SER** enabled, indicates that a local FEC degraded SER condition is detected.
- **L Deg SER Det** (Local Degraded SER Detected) for FlexE PHY with 200GE/400GE when **FEC Degraded SER** is enabled, indicates that a local FEC degraded SER condition is detected.
- **L Deg SER Rcd** (Local Degraded SER Received) for Ethernet 200/400/800GE with **FEC Degraded SER** enabled, indicates that a Local degraded SER signal is detected.
- **L Deg SER Rcd** (Local Degraded SER Received) for FlexE PHY with 200GE/400GE when **FEC Degraded SER** is enabled, indicates that a Local degraded SER signal is detected.
- **LCD-P** (Loss of Code-Group Delineation - Path) for WIS, indicates that the signal synchronization has been lost and the valid code-groups are no longer being delineated from the received payload stream being passed to the PCS.

- **LCK** (Lock) for FlexO, indicates that the STAT information in the PM byte 3, bits 6 to 8 of ODUc #1 is “101” for at least 15 consecutive frames. In TX, generates a repeating “01010101” pattern in the entire ODUc signal, excluding the frame alignment overhead (FA OH) and OTUC overhead (OTUC OH).
- **LCK** (Locked) for OAM with G.8113.1/Y.1731/MEF mode, indicates that a valid LCK frame is received. A valid frame has its destination MAC address matching either the unit port Unicast MAC address or a Multicast class 1 address (refer to page 907), VLANs matching the unit port VLANs, and MEG level matching the local MEG level. The alarm is cleared when during an interval equal to 3.5 times the LCK transmission period indicated in the last received LCK frame, no LCK frames are received.
- **LCK** (Lock) for ODU, indicates that the STAT information in the PM byte 3, bits 6 to 8 is “101” for at least 3 consecutive frames. In TX, generates a repeating “01010101” pattern in the entire ODUc signal, excluding the frame alignment overhead (FA OH) and OTUc overhead (OTUc OH).
- **Link Degrade** for Fibre Channel 64X, indicates that the Link Degrade Signaling is activated meaning that errors are detected in the FEC logic.
- **Link Down** for CPRI, indicates that the start-up sequence is not in F (Operation) or G (Passive) link state.
- **Link Down** for Ethernet, indicates for 10/25/40/50/200/400GE that there is a local or a remote fault condition; for 100/1000 Mbit/s that there is no bits/clock sync (PMA/PMD Link down), including LOS; for 10 Mbit/s that no data or no Normal Link Pulse (NLP) are received.
- **Link Down** for Fibre Channel, indicates that the Fibre Channel connection is down meaning that there is a local or a remote fault condition.
- **Link Down** for FlexE PHY, indicates that there are alarms at the PCS level.
- **Link Down** for OBSAI, indicates that the RX state machine is not FRAME_SYNC.

- **LOA** (Loss Of Alignment) for Ethernet parallel interfaces, indicates that two or more logical lanes have the same logical lane marker value, or one or more logical lane marker recovery processes are in the OOR state, or if the differential delay between two logical lanes exceeds the configured alarm threshold compensable delay.
- **LOA** (Loss Of Alignment) for Ethernet 25GE, indicates that the alignment of the codeword marker is not found.
- **LOA** (Loss Of Alignment) for FlexE PHY with 200GE/400GE, indicates that two or more logical lanes have the same logical lane marker value, or one or more logical lane marker recovery processes are in the OOR state, or if the differential delay between two logical lanes exceeds the configured alarm threshold compensable delay.
- **LOA** (Loss Of Alignment) for FlexO, indicates that two or more logical lanes have the same logical lane marker value, or one or more logical lane marker recovery processes are in the OOR state, or if the differential delay between two logical lanes exceeds the configured alarm threshold compensable delay.
- **LOAML** (Loss of Alignment Marker Lock) for Ethernet, indicates that in lock mode, four consecutive marker values are received that do not match the alignment marker that the lane is currently locked to. The LOAML alarm is cleared when the PCS Lane is declared Lock and two valid alignment markers 16384 blocks (66b) apart are received.
- **LOAML** (Loss of Alignment Marker Lock) for Fibre Channel 64X, indicates that Alignment Marker Lock is false.
- **LOAML** (Loss of Alignment Marker Lock) for FLExo, indicates that in lock mode, five consecutive marker values are received that do not match the alignment marker that the lane is currently locked to. The **LOAML** alarm is cleared when FOIC Lane is declared Lock and two valid alignment markers are received.
- **LOAML1027B** (Loss of Alignment Marker Lock 1027 Blocks) for OTU3 with 40 GbE client, indicates that in lock mode, four consecutive marker values are received that do not match the alignment marker

that the lane is currently locked to. The LOAML alarm is cleared when the PCS Lane is declared Lock and two valid alignment markers 16384 blocks (66b) apart are received.

- **LOBL** (Loss of Block Lock) for Ethernet 40/100GE, indicates that in lock mode, 65 invalid sync fields (00 or 11) within a 1024 sync window are received. A PCS Lane Lock alarm is cleared when receiving 64 consecutive valid 66b sync field (01 or 10) in a row.
- **LOBL** (Loss of Block Lock) for Ethernet 2.5/5/10GE Electrical, indicates a loss of block delineation.
- **LOBL1027B** (Loss of Block Lock 1027 Blocks) for OTU3 with 40 GbE client, indicates that sixteen 1027-bit blocks with invalid 3-bit patterns are received before sixty-four valid blocks.
- **LOC** (Loss Of Clock) indicates that the unit is unable to synchronize with the selected **Clock Mode**. No valid clock is generated/extracted to/from the EXT CLK port.
- **LOC Lane** (Loss Of Clock Lane) for Interface (for each Lane for parallel interfaces), indicates that the unit is unable to lock on the Physical / CAUI / CAUI-4 / XLAUI / 50GAUI-2 / 100GAUI-2 / 200GAUI-4 / 400GAUI-4/8/16 / 800GAUI-8 link interface.
- **Local Degrade** for DCO, indication is present in the STAT OH byte of the ZR/ZR+ frame.
- **Local Fault Det** (Local Fault Detected) for Ethernet, indicates that at least one of the following events is detected: Loss of bit synchronization, Loss of Block synchronization, Link down, or High BER. Available with 10/25/40/50/100/200/400 GE, Ethernet (flex/GFP-F) client, and EoOTN 10/40/100 GbE client. Remote Fault is also available with EoOTN 1GbE client.
- **Local Fault Detected** for Fibre Channel 10X, indicates that at least one of the following events is detected: **LOS**, **Loss of bit synchronization**, **Loss of Block synchronization**, **Link down**, or **High BER** (High BER is true when the bit error ratio $> 10^{-4}$ on a fixed 125 μ s time period).

- **Local Fault Rcd** (Local Fault Received) for Ethernet, indicates that the received data path contains the **Local Fault** signal. Available with Ethernet 10/25/40/50/100/200/400 GE, Ethernet (flex/GFP-F) client, and EoOTN 10/40/100 GbE client. Remote Fault is also available with EoOTN 1GbE client.
- **Local Fault Received** for Fibre Channel 10X, indicates that the received data path contains the Local Fault signal.
- **LOCWS** (Loss of CW Synchronization) for FC 32X/64X, indicates that the codeword_sync is false.
- **LOF** (Loss Of Frame) for CPRI, indicates that the hyperframe alignment cannot be achieved or is lost.
- **LOF** (Loss Of Frame) for E1, indicates that three consecutive incorrect frame alignment signals is received.
- **LOF** (Loss Of Frame) for E2/E3/E4, indicates that four consecutive incorrect frame alignment signals is received.
- **LOF** (Loss Of Frame) for OBSAI, indicates that the RX state machine is in either WAIT_FOR_K28.7_IDLES or SCR_CAP state.
- **LOF** (Loss of Frame) for OTL, indicates that OOF is present for at least 3 ms.
- **LOF** (Loss of Frame) for OTU, indicates that OOF is present for at least 3 ms. In TX, generates error in all FAS bits continuously.
- **LOF** (Loss Of Frame) for WIS, indicates that a Severely Error Framing (SEF) defect on the incoming SONET signal persists for at least 3 milliseconds.
- **LOF-S / RS-LOF** (Loss Of Frame) for SONET/SDH, indicates that an SEF (SONET)/RS-OOF (SDH) defect on the incoming optical signal persists for at least 3 milliseconds. In TX, generates non-valid framing bytes (A1 and A2).

- **LOFLOM** (Loss of Frame Loss Of Multiframe) for mapped ODU client signal (designated as LO in the standard), indicates that OOF is present for at least 3 ms. In TX, generates error continuously in FAS and MFAS of a multiplexed test case.
- **LOFLOM** (Loss of Frame Loss Of Multiframe) for FlexO OTUC Frame, indicates that OOF is present for at least 3 ms. In TX, generates error continuously in FAS and MFAS.
- **LOL** (Loss of Lane Alignment) for OTL, indicates that the multilane alignment process is in the out-of-alignment (OLA) state for 3 ms.
- **LOM** (Loss Of Multiframe) for FlexO, indicates that OOM is present for at least 3 ms.
- **LOM** (Loss Of Multiframe) for OTU, indicates that OOM is present for at least 3 ms. In TX, generates error in MFAS bits continuously.
- **LOMF** (Loss Of MultiFrame) for E1, indicates that two consecutive multiframe alignment signals (bits 1 through 4 of TS16 of frame 0) is received with an error.
- **LOOMFI** (Loss of OPU Multi-Frame Identifier) for OPU, indicates that OOMFI is present for at least 3 ms. Available for OPU4 of a mapped signal.
- **LOOMFI** (Loss of OPU Multi-Frame Identifier) for OPUCn, indicates that OOMFI is present for at least 3 ms.
- **LOP-P / AU-LOP** (Loss Of Pointer) for SONET/SDH, indicates that a valid pointer is not found in N consecutive frames (where $8 \leq N \leq 10$), or that N consecutive NDFs ("1001" pattern) are detected (non-concatenated payloads). In TX, generates a non-valid pointer.
- **LOP-P** (Loss Of Pointer - Path), for WIS with non-concatenated payloads, indicates that a valid pointer is not found in N consecutive frames (where $8 = N = 10$), or N consecutive NDFs ("1001" pattern) are detected.

- **LOP-V / TU-LOP** (Loss Of Pointer) for SONET/SDH, indicates that a valid pointer is not found in N consecutive superframes (where $8 \leq N \leq 10$), or if N consecutive NDFs ("1001" pattern). In TX, generates a non-valid pointer.
- **LOPPS-L** and **LOPPS-R** (Loss Of Pulse Per Second - Local/Remote) indicates that either no pulse is received or no pulse is received within 1 second $\pm 6.6 \mu s$ after the previous pulse. **LOPPS-R** is only monitored once the DTS connection is established. Available in **One-Way Latency** measurement mode for **Dual Test Set** and eCPRI BERT (LOPPS-L).
- **LOR** (Loss Of Recovery) for OTL, indicates that OOR persists at least 3 ms.
- **LOS** (Loss Of Signal) for Interface (for each Optical Lane for parallel interfaces), indicates absence of an input signal or an all-zeros pattern is received. Not supported when **PHY Type** is set to **DAC** or with host/media loopback.

For CPRI Framed L2:

Rates up to 9.8G: Absence of an input signal or at least 16 8B/10B code violations occur in one hyperframe.

Rate 10.1G and 24.3G (RS-FEC disabled): Absence of an input signal or the `hi_ber` variable is set to true.

For rate 24.3G (RS-FEC enabled): Absence of an input signal or the `codeword_sync` variable is set to false.

For Time Error / Wander 1PPS interface: Either no pulse is received or no pulse is received within 1 second ± 100 ms after the previous pulse.

- **LOS** (Loss Of Signal) for DCO, indicates that the optical signal power is below the threshold or an all-zeros pattern is received over a period of time.
- **Loss Announce** for 1588 PTP, indicates that the Slave Clock does not receive Announce messages within their expected arrival time for a duration exceeding the configured **Receipt Timeout** (refer to *Alarm Timeout/Threshold / Alarm Threshold* on page 225).

- **Loss Delay Req** for 1588 PTP GM emulation mode, indicates that Delay_Req are not received for a duration exceeding the defined **Delay Req Receipt Timeout** (refer to *Delay Req Receipt Timeout* on page 230).
- **Loss Continuity** for OAM with **CC Function** enabled, indicates that no CCM frames with same or lower MEG/MD Level were received from the peer MEP within an interval equal to 3.5 times the configured CCM transmission period. The alarm is cleared when at least 3 CCM frames with same or lower MEG/MD Level from the peer MEP are received within an interval equal to 3.5 times the configured CCM transmission period.
- **Loss Continuity** for Path OAM, indicates that no Basic OAM messages are received for at least 3.5 times the configured Basic OAM transmission period.
- **Loss of OH Frame Lock** for FlexE PHYs/Instances, indicates that the received SH control block or the “O” code doesn’t match the expected position for 5 occurrences.
- **Loss of OH MF Lock** for FlexE PHYs/Instances, indicates that the OMF bit changes from 0 to 1 or 1 to 0 in consecutive OH frames with good CRC.
- **Loss of PHY Number Lock** for FlexE PHYs/Instances, indicates that the received PHY number value is different than the locked one for two consecutive OH frames with good CRC. A PHY number lock condition occurs when the same PHY number value is received in two consecutive OH frames with good CRC.
- **Loss Session** for 1588 PTP GM emulation mode (G.8275.2 profile), indicates that the 1588 PTP session is terminated as no message is received after the Lease Duration expiration without the reception of a Cancel message.

- **Loss Sync** for 1588 PTP, indicates that the Slave Clock does not receive packet timing signal messages (Sync, Follow Up, Delay Resp) within their expected arrival time for a duration exceeding the configured **Receipt Timeout** (refer to *Alarm Timeout/Threshold / Alarm Threshold* on page 225).
- **LTC** (Loss of Tandem Connection) for ODU-TCM, indicates that the STAT information in the TCM Byte 3, bits 6, 7, and 8 are “000” for at least 3 consecutive frames. In TX, generates "000" in the STAT field of TCM overhead (byte 3, bits 6 to 8) continuously.
- **MAPM** (MAP Mismatch) for FlexO, indicates that either the received MAP value (with good CRC) does not match the value of the transmitted MAP, any values of the received IID does not have the corresponding bit set in the transmitted MAP, or the received IID values are not unique.
- **Mismerge** for OAM with **CC Function** enabled, indicates that a CCM frame was received from the peer MEP with same MEG/MD Level but with incorrect MEG ID/MAID value or format. The MAID, composed of a Domain ID and a Short MA Name strings, is incorrect if one or both strings are not as expected. The alarm is cleared when no CCM frames with same MEG/MD Level but with incorrect MEG ID/MAID value or format are received within an interval equal to 3.5 times the configured CCM transmission period.
- **MSIM** (Multiplex Structure Identifier Mismatch) for OPU on the high order path of a multiplexed test case, indicates that the RX Payload Structure Identifier (PSI) information do not match the expected HO Multiplex Structure Identifier defined. In TX, corrupts the content of the PSI as follows: For PT20: Bytes 2 and 3 for ODU0 in ODU1, bytes 2 to 5 for ODU1 in ODU2, and bytes 2 to 17 for ODU2 in ODU3. Not applicable for ODU4. For PT21: Bytes 2 to 9 for ODU1 in ODU2, bytes 2 to 33 for ODU2 in ODU3, and bytes 2 to 81 for ODU3 in ODU4. Not applicable for ODU0.

MSIM Monitoring check box when selected (default) monitors the **MSIM** alarm.

- **MSIM** (Multiplex Structure Identifier Mismatch) for OPUCn, indicates that the RX Payload Structure Identifier (PSI) information does not match the expected HO Multiplex Structure Identifier defined. In TX, corrupts the content of the PSI bytes associated to the ODUk.
MSIM Monitoring check box when selected (default) monitors the **MSIM** alarm.
- **No Traffic** for EtherBERT, eCPRI BERT, FC BERT, and OTN BERT with EoOTN client, indicates that no pattern traffic has been received in the last second. Not available when **Disruption Monitoring** is enabled.
- **No Traffic** for FlexE, indicates that no pattern traffic has been received in the last second.
- **OCI** (Open Connection Indication) for ODU, indicates that STAT information in the PM byte 3, bits 6 to 8 is "110" for at least 3 consecutive frames. In TX, generates a repeating "01100110" pattern in the entire ODUk signal, excluding the frame alignment overhead (FA OH) and OTUk overhead (OTUk OH).
- **OOF** (Out-Of-Frame) for DS1/DS3, indicates that four consecutive frame bit errors are detected.
- **OOF** (Out-Of-Frame) for FlexO OTUC Frame, indicates that FAS (bytes 3, 4, and 5) are in error for at least 5 consecutive OTUC frames or MFAS does not match the expected value for at least 5 consecutive OTUC frames. In TX, generates error in all FAS bits for 5 consecutive OTUC frames.
- **OOF** (Out-Of-Frame) for OTL, indicates that any byte of the FAS (bytes 3, 4, and 5) is in error for at least 5 consecutive frames.
- **OOF** (Out-Of-Frame) for OTU, indicates that FAS (bytes 3, 4, and 5) are in error for at least 5 consecutive OTU frames. In TX, generates error in all FAS bits for 5 consecutive OTU frames.
- **OOM** (Out-Of-Multiframe) for FlexO, indicates that MFAS are in error for at least 5 consecutive FlexO frames.

- **OOM** (Out-Of-Multiframe) for OTU, indicates that MFAS are in error for at least 5 consecutive OTU frames. In TX, generates error in multiframe number for 5 consecutive OTU frames.
- **OOMFI** (Out of OPU Multi-Frame Identifier) for OPU4 of a mapped signal, indicates that the OPU Multi-frame Identifier number are in error for at least 5 consecutive OTU frames.
- **OOMFI** (Out of OPU Multi-Frame Identifier) for OPUCn, indicates that OPU Multi-frame Identifier number are in error for at least 5 consecutive OTUC frames.
- **OOR** (Out-Of-Recovery) for OTL, indicates that while in In-recovery (IR) state, in five consecutive 16320 byte periods each of the received logical lane marker (LLM) is different from the accepted LLM value.
- **OOS** (GMP - Out Of Synchronization) for GMP, indicates that the GMP RX cannot synchronize with the GMP TX.
- **Out-of-Seq.** (Out-of-Sequence) for Traffic Gen & Mon and eCPRI, indicates that the received frame sequence number is either smaller than the expected frame sequence number or is a duplicate number.
- **Pattern Loss** for Transport/Ethernet test applications, indicates that more than 20 percent of bit errors are received or the reference sequence can be unambiguously identified as out of phase. However, for OTU4 - **4 Unframed Physical Lanes** and 100GE - **4 Unframed CAUI-4**, bit error rate is greater than 2.5×10^{-3} .
- **Pattern Loss** for Fibre Channel, indicates that bit error is detected on four consecutive words.
- **PDI-P** (Payload Defect Indication) for SONET - VT-structured STS-1 SPE, indicates that there is a LOP-V, AIS-V, DS3 AIS, DS3 LOS, or DS3 OOF defect on any VT or DS3 payload that it embeds into the STS SPE that it is originating; for non-VT-structured STS-1 or STS-Nc SPE, the C2 byte contains the hexadecimal FC code. In TX, for VT-structured STS-1 SPE, generates a VT-structured STS-1 SPE with payload defect; for non-VT-structured STS-1 or STS-Nc SPE, inserts the hexadecimal FC code in the C2 byte.

- **PLM** (Payload Mismatch) for OPU, indicates that the Payload Structure Identifier (PSI) field does not match the expected PT for at least 3 consecutive frames. Available when OPU-PLM check box is selected.
- **PLM** (Payload Mismatch) for OPUCn, indicates that the Payload Structure Identifier (PSI) field does not match the expected PT for at least 3 consecutive frames. Available when the OPU-PLM check box is selected.
- **PLM-P / HP-PLM** (Payload Label Mismatch) for SONET/SDH, indicates that five consecutive frames have mismatched STS/VC signal labels (C2 byte). Only available when PLM-P/UNEQ-P / HP-PLM/HP-UNEQ is enabled (refer to *Labels* on page 333).
- **PLM-P** (Payload Label Mismatch - Path) for WIS, indicates that five consecutive frames have mismatched STS signal labels.
- **PLM-P/UNEQ-P** (Payload Label Mismatch - Path / Unequipped - Path) check box when selected (cleared by default) enables the Signal Label Mismatch for the expected message defined as well as **UNEQ-P** monitoring.
- **PLM-V / LP-PLM** (Payload Label Mismatch) for SONET/SDH, indicates that five consecutive superframes with mismatched VT/LP Signal (bits 5 through 7 of the V5 byte are “000”, “001” or “111”). Only available when the **PLM-V/UNEQ-V / LP-PLM/LP-UNEQ** check box is selected (refer to page *Labels* on page 333).
- **QL Mismatch** for 1588 PTP, indicates that the received QL value does not match the Expected QL. The **QL Mismatch** alarm is only reported when at least one Announce message has already been received (**Last QL Received**) and that the **QL Mismatch Monitoring** check box is selected. Only supported with the 1588 PTP test application.
- **QL Mismatch** for SyncE with the **QL Mismatch Monitoring** check box selected, indicates that received QL does not match the Expected QL value configured.

- **R Deg SER** (Remote Degraded SER) for Ethernet 200/400/800GE with **FEC Degraded SER** enabled, indicates that a remote degraded SER signal is detected.
- **R Deg SER** (Remote Degraded SER) for FlexE PHY with 200GE/400GE when **FEC Degraded SER** is enabled, indicates that a remote degraded SER signal is detected.
- **R-LOF** (Remote - Loss Of Frame) for CPRI, indicates that bit 4 of the Z.130.0 byte is set to 1.
- **R-LOS** (Remote - Loss Of Signal) for CPRI, indicates that bit 3 of the Z.130.0 byte is set to 1.
- **RAI** (Remote Alarm Indication) for CPRI, indicates that bit 1 of the Z.130.0 byte is set to 1.
- **RAI (Yellow)** (Remote Alarm Indication) for DS1 ESF framing, indicates that eight “ones” followed by eight “zeros” pattern is received continuously in the data link (FDL).
- **RAI (Yellow)** (Remote Alarm Indication) for DS1 SF framing, indicates that bit 2 in each timeslot contains “0”.
- **RAI (Yellow)** (Remote Alarm Indication) for E1, indicates that bit 3 in timeslot 0 is set to “1”.
- **RAI** (Remote Alarm Indication) for E2/E3/E4, indicates that bit 11 of a framed E2 is set to “1”.
- **RAI MF** (Remote Alarm Indication Multi-Frame) for E1, indicates that bit 6 of timeslot 16 of frame 0 is set to “1”.
- **RD** for Fibre Channel 64X, is the Remote Degrade bit of the Alignment Marker used to signal the remote link partner that the number of symbol errors detected within a **FEC_Degrade_interval** exceeds the **Degrade_Activate_Threshold**.
- **RDI** (Remote Defect Indicator) for DS3, indicates that both X-bits of the M-Frame are set to “0”.

- **RDI** (Remote Defect Indication) for OAM with **CC Function** enabled, indicates that the RDI flag bit of a valid CCM frames is set to 1. A valid CCM frame has its source MAC address matching the Peer MEP MAC address, the destination MAC address matching either the unit port Unicast MAC address or a Multicast class 1 address (refer to page 907), and VLANs matching the unit port VLANs.
- **RDI** (Remote Defect Indication) for Path OAM, indicates that a Basic OAM message is received with the RDI field set.
- **RDI-L / MS-RDI** (Remote Defect Indication) for SONET/SDH, indicates that bits 6, 7, and 8 of the K2 byte contain the “110” pattern in five consecutive frames. In TX, generates a “110” pattern for the bits 6, 7 and 8 of the K2 byte.
- **RDI-L** (Remote Defect Indication - Line) for WIS, indicates that bits 6, 7, and 8 of the K2 byte contain the “110” pattern in five consecutive frames.
- **RDI-P / HP-RDI** (Remote Defect Indication) for SONET/SDH, indicates that bits 5, 6, and 7 of the G1 byte contain the “100” or “111” pattern in five consecutive frames. In TX, generates a “100” pattern for bits 5, 6 and 7 of the G1 byte.
- **RDI-P** (Remote Defect Indication - Path) for WIS, indicates that bits 5, 6 and 7 of the G1 byte contain the “100” or “111” pattern in ten consecutive frames.
- **RDI-V / LP-RDI** (Remote Defect Indication) for SONET/SDH, indicates that bit 8 of the V5 byte contains “1” in five consecutive VT/TU superframes while bits 6 and 7 of the Z7 (SONET) / K4 (SDH) byte contain the “00” or “11” pattern. In TX, generates “1” for the bit 8 of the V5 byte and a “00” pattern for bits 6 and 7 of the Z7 (SONET) / K4 (SDH) byte.
- **REF-FAULT** for Reference Signal, indicates that an impairment is detected on the reference signal. When an impairment is detected on the reference signal the test automatically stops.

- **Remote Degrade** for DCO, indication is present in the STAT OH byte of the ZR/ZR+ frame. **Remote Fault** for Ethernet, indicates that the received data path contains the **Remote Fault** status. Available with Ethernet 10/25/40/50/100/200/400 GE, Ethernet (flex/GFP-F) client, and EoOTN 1/10/40/100 GbE client.
- **Remote Fault** for Fibre Channel 10X, indicates that a Remote Fault event is detected.
- **Remote Fault** for 800ZR DCO, indication is present in the STAT OH byte of the ZR frame. **Remote PHY Fault** for DCO, indication is present in the STAT OH byte of the ZR/ZR+ frame.
- **Remote PHY Fault** for FlexE PHYs/Instances, indicates that the RPF bit is set in the OH.
- **RFI-V / LP-RFI** (Remote Failure Indication) for SONET/SDH, indicates that bit 4 of the V5 byte contains “1” in five consecutive superframes. In TX, generates “1” for the bit 4 of the V5 byte. Available with VC-11 only. Available with VC-11 only.
- **RP3 Address Mismatch** indicates that the RP3 Target Address does not match the local RP3 Source Address. Available when **Address Mismatch** is enabled (refer to page 323).
- **RPF** (Remote PHY Fault) for FlexO, indicates that the RPF bit is set in the OH.
- **Rx CDC LOL** for DCO, indicates Rx Chromatic Dispersion Compensation.
- **Rx Demod LOL** for DCO, indicates Rx Demodulator Loss Of Lock.
- **Rx Deskew LOL** for DCO, indicates Rx Deskew Loss Of Lock.
- **Rx FIFO** for DCO, indicates Rx First In and First Out error.
- **Rx LOA** for DCO, indicates Rx Loss Of Alignment.
- **Rx LOF** for DCO, indicates Rx Loss Of Frame.
- **Rx LOL** for DCO with CFP2, indicates Rx Loss Of Lock.

- **Rx LOM** for DCO, indicates Rx Loss Of Multi frame.
- **Rx OOA** for DCO, indicates Rx Out Of Alignment.
- **SAPI Mismatch** for Path OAM, indicates a mismatch between the received and the expected SAPI message.
- **SDI** (Service Access Point Defect Indication) for CPRI, indicates that bit 2 of the Z.130.0 byte is set to 1.
- **SEF / RS-OOF** (Severely Errored Framing / Out-Of-Frame) for SONET/SDH, indicates that a minimum of four consecutive errored framing patterns are received. In TX, generates four consecutive errored framing patterns.
- **SEF** (Severely Errored Framing) for WIS, indicates a minimum of four consecutive errored framing patterns.
- **Signal Failure** for Path OAM, indicates that the BIP-8 error rate is above the Signal Failure threshold configured.
- **TC-IAIS-P / HPTC-IAIS** (Incoming Alarm Indication Signal) for SONET/SDH with TCM enabled, indicates that bits 1 through 4 of the N1 byte are set to “1110”.
- **TC-IAIS-V / LPTC-IAIS** (Incoming Alarm Indication Signal) for SONET/SDH with TCM enabled, indicates that bit 4 of the Z6/N2 byte is set to “1”.
- **TC-LTC-P / TC-LTC-V / HPTC-LTC / LPTC-LTC** (Loss of Tandem Connection) for SONET/SDH with TCM enabled, indicates that a wrong FAS multiframe is received/generated.
- **TC-ODI-P / TC-ODI-V / HPTC-ODI / LPTC-ODI** (Outgoing Defect Indication) for SONET/SDH with TCM enabled: For SONET indicates that bit 7 of the N1/Z6 byte frame 74 is set to “1”; for SDH indicates that bit 7 of the N1/N2 byte multiframe 74 is set to “1”.

- **TC-RDI-P / TC-RDI-V / HPTC-RDI / LPTC-RDI** (Remote Defect Indication) for SONET/SDH with TCM enabled: For SOENT indicates that bit 8 of the N1/Z6 byte frame 73 is set to “1”; for SDH indicates that bit 8 of the N1/N2 byte multiframe 73 is set to “1”.
- **TC-TIM-P / TC-TIM-V / HPTC-TIM / LPTC-TIM** (Trace Identifier Mismatch) for SONET/SDH with TCM enabled, indicates that the received message differs from the defined expected message. The TC-TIM is also declared when receiving invalid ASCII characters or when errors are detected with CRC-7.
- **TC-UNEQ-P / HPTC-UNEQ** (Unequipped) for SONET/SDH with TCM enabled, indicates that an all “0”s pattern is received/generated in the higher order path signal label byte (C2), the TCM byte (N1) and the path trace byte (J1), and a valid BIP-8 bytes (B3).
- **TC-UNEQ-V / LPTC-UNEQ** (Unequipped / LPTC - Unequipped) for SONET/SDH with TCM enabled, indicates that an all “0”s pattern is received/generated in the lower order path signal label (bit 5, 6, 7 of byte V5), the TCM byte (Z6/N2) and the path trace byte (J2), and a valid BIP-2 (bits 1, 2 of V5 byte).
- **TIM** (Trace Identification Mismatch) for FlexO, indicates that the received SAPI and/or DAPI do not math the expected SAPI and/or DAPI. This alarm is only available when the **SAPI ODU-TIM** and/or **DAPI ODU-TIM** check boxes are selected from *PT / Global PT* on page 474.
- **TIM** (Trace Identifier Mismatch) for FlexO OTUCn, indicates that the expected SM SAPI and/or SM DAPI do not match the received SM SAPI and/or DAPI for at least 3 consecutive TTI. This alarm is only available when the **SAPI OTU-TIM** and/or **DAPI OTU-TIM** check boxes are selected from page 472.
- **TIM** (Trace Identification Mismatch) for ODU, indicates that the received SAPI and/or DAPI do not math the expected SAPI and/or DAPI. This alarm is only available when the **SAPI ODU-TIM** and/or **DAPI ODU-TIM** check boxes are selected from *PT / Global PT* on page 312.

- **TIM** (Trace Identification Mismatch) for ODU-TCM, indicates that the SAPI and/or DAPI do not math the expected SAPI and/or DAPI. This alarm is only available when the **SAPI TCM-TIM** and/or **DAPI TCM-TIM** check boxes are selected from *PT / Global PT* on page 312.
- **TIM** (Trace Identifier Mismatch) for OTU, indicates that the expected SM SAPI and/or SM DAPI do not match the received SM SAPI and/or DAPI for at least 3 consecutive TTI. This alarm is only available when the **SAPI OTU-TIM** and/or **DAPI OTU-TIM** check boxes are selected.
- **TIM-P / HP-TIM** (Trace Identifier Mismatch) for SONET/SDH, indicates that J1 Trace doesn't match the expected message value. Only available when TIM-P/HP-TIM is enabled (refer to *Traces - SONET/SDH* on page 470).
- **TIM-S / RS-TIM** (Trace Identifier Mismatch) for SONET/SDH, indicates that the received J0 Trace doesn't match the expected message value. Only available when Enable TIM-S/RS-TIM check box is selected (refer to *Traces - SONET/SDH* on page 470).
- **TIM-V / LP-TIM** (Trace Identifier Mismatch) for SONET/SDH: For SONET indicates that the J2 Trace doesn't match the expected message value; for SDH indicates that tone of the sampled LP trace strings match the expected message value. Only available when the **TIM-V/LP-TIM** check box is selected (refer to page *Traces - SONET/SDH* on page 470).
- **TS16 AIS** (TimeSlot 16 Alarm Indication Signal) for E1, indicates that three or less ZEROs are received in each Timeslot 16 of two consecutive multiframes.
- **Tx CMU LOL** for DCO, indicates Tx Clock Monitor Unit Loss Of Lock.
- **Tx Deskew LOL** for DCO, indicates Tx Deskew Loss Of Lock.
- **Tx FIFO** for DCO, indicates Tx First In, First Out error.
- **Tx LOA** for DCO, indicates Tx Loss Of Alignment.
- **Tx LOL** for DCO with CFP2, indicates Tx Loss Of Lock.
- **Tx OOA** for DCO, indicates Tx Out Of Alignment.

- **Tx RefClk LOL** for DCO, indicates Tx Reference Clock Loss Of Lock.
- **UNEQ-P / HP-UNEQ** (Unequipped) for SONET/SDH, indicates that the C2 byte contains “00 H” in five consecutive frames. Only available when PLM-P/UNEQ-P / HP-PLM/HP-UNEQ is enabled (refer to *Labels* on page 333). In TX, generates an all-zeros pattern over POH and SPE.
- **UNEQ-P** (Unequipped - Path) for WIS, indicates that the C2 byte contains “00 H” in five consecutive frames.
- **UNEQ-V / LP-UNEQ** (Unequipped) for SONET/SDH, indicates that bit 5 through 7 of the V5 byte contain “000” for five consecutive superframes. Only available when the **PLM-V/UNEQ-V / LP-PLM/LP-UNEQ** check box is selected (refer to page *Labels* on page 333). In TX, generates samples of unequipped VT/LP signal label (bits 5 through 7 of V5 byte are set to “000”).
- **Unexp MEG/MD Lvl** (Unexpected MEG/MD Level) for OAM with **CC Function** enabled, indicates that a CCM frame was received from the peer MEP with lower MEG/MD Level. The alarm is cleared when no CCM frames with lower MEG/MD Level are received within an interval equal to 3.5 times the configured CCM transmission period.
- **Unexp MEP** (Unexpected MEP) for OAM with **CC Function** enabled, indicates that a CCM frame was received from the peer MEP with same MEG/MD Level, correct MEG ID/MAID, and correct source MAC Address (corresponds to the peer MEP) but with unexpected MEP ID. The alarm is cleared when no CCM frames with same MEG/MD Level, correct MEG ID/MAID, correct source MAC Address (corresponds to the peer MEP) but with an unexpected MEP ID are received within an interval equal to 3.5 times the configured CCM transmission period.

- **Unexp Period** (Unexpected Period) for OAM with **CC Function** enabled, indicates that a CCM frame is received from the peer MEP with same MEG/MD Level, correct MEG ID/MAID, and correct MEP ID but with a period field value different than the one configured. The alarm is cleared when no CCM frames with same MEG/MD Level, correct MEG ID/MAID, and correct MEP ID but with incorrect period field value are received within an interval equal to 3.5 times the configured CCM transmission period.
- **Unusable** for 1588 PTP test application with G.8265.1/G.8275.2 profile, indicates that either the maximum Sync IPDV value or the maximum Delay Req IPDV value in the last second exceeds the configured **IPDV Threshold** (refer to *Alarm Timeout/Threshold / Alarm Threshold* on page 225).
- **Unusable** for Time Error measurement with G.8275.2 profile, indicates that either the maximum Sync IPDV value or the maximum Delay Req IPDV value in the last second exceeds the configured **Unusable** alarm threshold (refer to *Alarm Timeout/Threshold / Alarm Threshold* on page 225).
- **WIS Link Down** for WIS, indicates that at least one of the following errors is present: AIS-P, LOF, PLM-P, SEF, LOP, or AIS-L.

Errors

- **65B Block**, available with 2.5G, 5G, and 10G electrical interfaces, indicates that errored blocks are detected.
- **66B Block** for CPRI, indicates sync header violations or /E character is received. Available with CPRI 10.1G and 24.3G (with RS-FEC).
- **66B Block** for Ethernet 50/200/400/800GE (not available with FlexE BERT), indicates that an invalid 64b/66b block code is received. An invalid 64b/66b block is declared when the synchronization field has a value of 00 or 11.
- **66B Block** for Fibre Channel 32X/64X, indicates the number of frames received with an errored block condition; excluding frames in LOCWS.
- **Alignment** for Ethernet 10/100 Mbit/s interface, indicates that frames without an integral number of octets in length are received.
- **B1** (BIP-8, Bit-Interleave Parity - 8 bits) for SONET/SDH, indicates a Section (SONET) / Regeneration Section (SDH) parity error by performing a routine even-parity check over all frames of the previous STS-n/STM-n signal (located in the first STS-1/STM-1 of an STS-n/STM-n signal).
- **B1** (BIP-8, Bit-Interleave Parity - 8 bits) for WIS, indicates a Section parity error by performing a routine even-parity check over all Section bits of the previous frame of a composite signal (located in the first STS-1 of an STS-n signal).
- **B2** (BIP-8, Bit-Interleave Parity - 8 bits) for SONET/SDH: For SONET indicates a Line parity error by performing an even-parity check over all bits of the LOH and SPE of the previous frame (located in every STS-1 of an STS-n signal). For SDH indicates a Multiplex Section parity error by performing an even-parity check over all bits (except those in the RSOH bytes) of the previous frame of a STM-N signal.

- **B2** (BIP-1536, Bit-Interleave Parity - 1536 bits) for WIS, indicates a Line parity error by performing a routine even-parity check over all Line bits of the LOH and STS-1 frame capacity of the previous frame of a composite signal (located in every STS-1 of an STS-n signal).
- **B3** (BIP-8, Bit-Interleave Parity - 8 bits) for SONET/SDH, indicates a high order path parity error by performing an even-parity check over all bits of the previous SPE (SONET) / VC-N (SDH).
- **B3** (BIP-8, Bit-Interleave Parity - 8 bits) for WIS, indicates a Path parity error by performing a routine even-parity check over all Path bits of the previous SPE excluding the LOH and SOH.
- **BEI** (Backward Error Indication) for FlexO, indicates that there is interleaved block in error detected by the corresponding ODU path monitoring sink using the BIP-8 code.

ODU BEI bits (1234)	BIP violations	ODU BEI bits (1234)	BIP violations
0000	0	0101	5
0001	1	0110	6
0010	2	0111	7
0011	3	1000	8
0100	4	1001 to 1111	0

- **BEI** (Backward Error Indication) for FlexO OTUCn, indicates that SM BEI errors are received from the DUT (value 0 to 8).

OTU BEI bits (1234)	BIP violations	ODUk BEI bits (1234)	BIP violations
0000	0	0101	5
0001	1	0110	6
0010	2	0111	7

Alarms/Errors

Errors

OTU BEI bits (1234)	BIP violations	ODUk BEI bits (1234)	BIP violations
0011	3	1000	8
0100	4	1001 to 1111	0

- **BEI** (Backward Error Indication) for ODU, indicates that there is interleaved block in error detected by the corresponding ODU path monitoring sink using the BIP-8 code.

ODU BEI bits (1234)	BIP violations	ODU BEI bits (1234)	BIP violations
0000	0	0101	5
0001	1	0110	6
0010	2	0111	7
0011	3	1000	8
0100	4	1001 to 1111	0

- **BEI** (Backward Error Indication) for ODU-TCM, indicates that there is interleaved block in error detected by the corresponding ODU tandem connection monitoring sink using the BIP-8 code.

ODU TCM BEI bits (1234)	BIP violations	ODU BEI bits (1234)	BIP violations
0000	0	0101	5
0001	1	0110	6
0010	2	0111	7
0011	3	1000	8
0100	4	1001 to 1111	0

- **BEI** (Backward Error Indication) for OTU, indicates that there is a SM BIP-8 mismatch between the received value and locally computed value (0 to 8).

OTU BEI bits (1234)	BIP violations	ODUk BEI bits (1234)	BIP violations
0000	0	0101	5
0001	1	0110	6
0010	2	0111	7
0011	3	1000	8
0100	4	1001 to 1111	0

- **BIP-2** (Bit-Interleave Parity - 2 bits) for SONET/SDH: For SONET, indicates a parity error by performing a routine even-parity check over all VT1.5 bytes of the previous frame of a composite signal (VT1.5/VT2/VT6); for SDH, indicates a Low Order Path parity error by performing a routine even-parity check over all bytes of the previous VC frame.
- **BIP-8** (Bit Interleave Parity-8) for FlexO, indicates that there is a PM BIP-8 mismatch between the received value and locally computed value (0 to 8).
- **BIP-8** (Bit Interleave Parity-8) for FlexO OTUCn, indicates that there is a SM BIP-8 mismatch between the received value and locally computed value (0 to 8).
- **BIP-8** (Bit Interleave Parity-8) for ODU, indicates that there is a PM BIP-8 mismatch between the received value and locally computed value (0 to 8).
- **BIP-8** (Bit Interleave Parity-8) for ODU-TCM, indicates that there is a TCM BIP-8 mismatch between the received value and locally computed value (0 to 8).

- **BIP-8** (Bit Interleave Parity-8) for OTU, indicates that SM BEI errors are received from the DUT (value 0 to 8).
- **BIP-8** (Bit Interleaved Parity - 8) for Path OAM, indicates a BIP-8 mismatch between the received value and the locally computed value.
- **Bit Error** indicates that there are logic errors in the bit stream (i.e., zeros that should be ones and vice versa). Only the count and rate values are reported for unframed test 40GE/OTU3 and up.
- **Block** for Ethernet 10G LAN/WAN interface, indicates that error block is received in frames.
- **Block** for parallel Ethernet interfaces and 100 GbE over OTU4, indicates that invalid 64b/66b block code are received. An invalid 64b/66b block is declared when the synchronization field has a value of 00 or 11. Injection is not available at 100GE when RS-FEC is enabled.
- **Block** for Fibre Channel 10X/16X, indicates the number of frames received with an errored block condition.
- **BPV** (Bipolar Violation) for Interface DS1/DS3/STS-1e, indicates that pulses of the same consecutive polarity were detected, in violation with the bipolar signal format. Available with DS1, DS3, and STS-1e.
- **Cm-CRC-6** for FlexO GMP, indicates that there is a Cm-CRC-6 mismatch between the received value and the locally computed value. Available with FlexO.
- **Cm-CRC-8** for GMP, indicates that there is a Cm-CRC-8 mismatch between the received value and the locally computed value.
- **CnD-CRC-5** for GMP, indicates that there is a CnD-CRC-5 mismatch between the received value and the locally computed value.
- **CnD-CRC-9** for FlexO GMP, indicates that there is a CnD-CRC-9 mismatch between the received value and the locally computed value. Available with FlexO.
- **Collision** for Ethernet 10/100 Mbit/s electrical interface in **Half Duplex** mode, indicates the number of collisions on the link.

- **CP-Bit** (Control-Bit) for DS3, indicates that the three C-bits reserved to control bit stuffing are different of “111” and “000”.
- **CRC** (Cyclic Redundancy Check) for OBSAI, indicates a message received with an invalid CRC.
- **CRC-4** (Cyclical Redundancy Check) for E1, indicates that one or more bit errors are detected in a block of data through cyclical redundancy check.
- **CRC4** for Path OAM, indicates a message block having invalid CRC4 value.
- **CRC-6** (Cyclical Redundancy Check) for DS1 ESF framing, indicates that one or more bit errors have been detected in a block of data through cyclical redundancy check.
- **CV** (Code Violation) for CPRI (up to 9.8G) /OBSAI, indicates that invalid 10B code word are received.
- **CV** (Code Violation) for E1/E3/E4/STM-0e/STM-1e/STS-3e, indicates that pulses of the same consecutive polarity were detected, in violation with the bipolar signal format.
- **E-Bit** (CRC-4 Error Signal) for DS1 **PCM30 CRC-4** or **PCM31 CRC-4** framing, indicates that bit 1 of sub-multiframe (SMF) II in frame 13 and/or 15 is set to 0 indicating a sub-multiframe error.
- **Exc. Coll.** for Ethernet 10/100 Mbit/s electrical interface in **Half Duplex** mode, indicates the number of frames that were sent 16 times unsuccessfully due to consecutive collisions.
- **EXZ** (Excessive Zeros) for **DS1** with **AMI Line Coding**, indicates that more than 15 consecutive bit periods with no pulses have been received.
- **EXZ** (Excessive Zeros) for **DS1** with **B8ZS Line Coding**, indicates that more than 7 consecutive bit periods with no pulses have been received.

- **EXZ** (Excessive Zeros) for **DS3**, indicates that more than 2 consecutive bit periods with no pulses have been received.
- **F-Bit** (Framing-Bit) for **DS3**, indicates that the frame alignment pattern received is different of “1001”.
- **False Carrier** for Ethernet 100/1000 Mbit/s interface and EoOTN 1GbE client, indicates that data is being received with invalid start of frame.
- **FAS** (Frame Alignment Signal) for CPRI: For rates up to 9.8G, indicates error detected in the start of hyperframe (byte different of **K28.5** while not in LOF). For rate 10.1G, indicates error detected in the sync control word of hyperframe (byte different of **/S/** while not in LOF).
- **FAS** (Frame Alignment Signal) for E1 **PCM30 CRC-4** or **PCM31 CRC-4** framing, indicates that bits 2 to 8 of the frame containing the FAS differ from 0011011.
- **FAS** (Frame Alignment Signal) for E2/E3/E4, indicates that bits 1 to 10 of the first frame differ from 1111010000.
- **FAS** (Frame Alignment Signal) for FlexO OTUC Frame, indicates that the received FAS does not match the expected value.
- **FAS** (Frame Alignment Signal) for OBSAI, indicates error detected in message group terminating character (byte different of K28.5) or master frame terminating character (byte different of K28.7).
- **FAS** (Frame Alignment Signal) for OTL, indicates that FAS bits are in error.
- **FAS** (Frame Alignment Signal) for OTU, indicates that the FAS bits are in error.
- **FAS-S / RS-FAS** (Frame Alignment Signal) for SONET/SDH, indicates that at least one A1 or A2 byte of the FAS word is in error.
- **FCS** (Frame Check Sequence) for Ethernet, indicates that frames with an invalid FCS are received.
- **FCS** (Frame Check Sequence) for Fibre Channel, indicates that frames with an invalid FCS are received/generated.

- **FEBE** (Far-End Block Error) for DS3, indicates that the three FEBE bits reserved for framing or parity error detection contain the “000” pattern.
- **FEC-COR-BITS** (FEC Correctable Bits) for DCO, indicates FEC Bit containing errors that were corrected.
- **FEC-COR-BITS** (FEC Correctable Bits) for Ethernet 100GE (1 Lane), indicates that FEC Bits containing errors were corrected.
- **FEC-COR-CW** (FEC Correctable Codeword) for CPRI, indicates that FEC Codeword containing errors were corrected.
- **FEC-COR-CW** (FEC Correctable Codeword) for Ethernet, indicates that FEC Codeword containing errors were corrected.
- **FEC-COR-CW** (FEC Correctable Codeword) for Ethernet 200/400/800GE with RS-FEC enabled, indicates that FEC correctable codeword error is detected on the Ethernet signal. The **FEC-COR-CW** does not raise an error, only the count and rate values are reported.
- **FEC-COR-CW** (FEC Correctable Codeword) for FlexE PHY with 200GE/400GE, indicates that FEC correctable codeword error is detected on the Ethernet signal. The **FEC-COR-CW** does not raise an error, only the count and rate values are reported. Available when RS-FEC is enabled.
- **FEC-COR-CW** (FEC Correctable Codeword) for FlexO, indicates FEC Codeword containing errors that were corrected.
- **FEC-CORR-BIT** (FEC Correctable Bit) for OTN, indicates FEC Bit containing errors that were corrected.
- **FEC-CORR-BIT** (FEC - Correctable - Bit) for OTU, indicates that statistics on bits (BIT) are corrected by the FEC. In TX, generates 1 symbol (byte) containing 1 bit in error.
- **FEC-CORR-CW** for Fibre Channel 32X/64X, indicates FEC codeword containing errors that were corrected; excluding frames in LOCWS.
- **FEC-CORR-CW** (FEC Correctable Codeword) for OTN, indicates FEC Codeword containing errors that were corrected.

- **FEC-CORR-CW** (FEC - Correctable - Codeword) for OTU, indicates that statistics on codewords (CW) are corrected by the FEC. In TX, generates 8 symbols (bytes) containing 8 bits in error each, in each codeword.
- **FEC-CORR-SYM** (FEC Correctable Symbol) for OTN, indicates FEC Symbol containing errors that were corrected.
- **FEC-CORR-SYM** (FEC - Correctable - Symbol) for OTU, indicates that statistics on symbols (SYMB) are corrected by the FEC. In TX, generates 1 symbol (byte) containing 8 bits in error.
- **FEC Inv. Marker** (FEC Invalid Marker) for Ethernet 50GE, indicates that there are errors in the 66-bit block alignment marker.
- **FEC-STRESS** (Forward Error Correction - Stress) for OTU, generates correctable errors composed of a random number of symbol errors (less or equal to 8) containing a random number of bits distributed all over the OTU frame.
- **FEC-SYMB** (FEC Symbol) for Ethernet 25GE, indicates that FEC symbol errors are corrected and counted once for each 10-bit symbol.
- **FEC-SYMB** (FEC Symbol) for Ethernet 100GE (4 Lanes), indicates that FEC symbol errors are corrected and counted once for each 10-bit symbol.
- **FEC-UNCOR-CW** (FEC Uncorrectable Codeword) for CPRI, indicates that FEC Codeword containing errors were not corrected.
- **FEC-UNCOR-CW** (FEC Uncorrectable Codeword) for Ethernet, indicates that FEC Codeword containing errors and were not corrected.
- **FEC-UNCOR-CW** (FEC Uncorrectable Codeword) for Ethernet 200/400/800GE with RS-FEC enabled, indicates that FEC uncorrectable codeword error is detected on the Ethernet signal.
- **FEC-UNCOR-CW** (FEC Uncorrectable Codeword) for FlexE PHY with 200GE/400GE, indicates that FEC uncorrectable codeword error is detected on the Ethernet signal. Available when RS-FEC is enabled.

- **FEC-UNCOR-CW** (FEC Uncorrectable Codeword) for FlexO, indicates FEC Codeword containing errors that were not corrected.
- **FEC-UNCOR-CW** for Fibre Channel 32X/64X, indicates FEC codeword containing error that were not corrected; excluding frames in LOCWS.
- **FEC-UNCORR-CW** (FEC Uncorrectable Codeword) for OTN, indicates FEC Codeword containing errors that were not corrected.
- **FEC-UNCORR-CW** (FEC - Uncorrectable - Codeword) for OTU, indicates statistics on the detected codewords (CW) having uncorrectable errors. In TX, generates 16 symbol (bytes) containing 8 bits in error each, in each codeword.
- **FEC-UNCOR-FR** (FEC Uncorrectable Frames) for DCO, indicates that FEC uncorrectable frame error is detected on the signal.
- **FEC-UNCOR-FR** (FEC Uncorrectable Frames) for DCO (Ethernet), indicates that FEC uncorrectable frame error is detected on the Ethernet client signal.
- **Framing Bit** for DS1, indicates that an incorrect value appeared in a bit position reserved for framing.
- **GFP-10B_ER** (GFP - 10B_Error), available with GFP-T, indicates that a 10B_ERR code has been detected in the payload of the superblock. In TX, generates a 10B_ERR code over the payload of the superblock as defined in ITU G.7041.
- **GFP-cHEC-CORR** (GFP - core Header Error Check - Correctable) indicates that only one bit error has been detected on Core header (PLI and cHEC). In TX, generates a “Walking 1” pattern to hit all applicable bits covered by the cHEC and PLI.
- **GFP-cHEC-UNCORR** (GFP - core Header Error Check - Uncorrectable) indicates that two or more bit errors have been detected on Core header (cHEC and PLI). In TX, generates a “Walking 11” pattern to hit all consecutive 2 bits applicable to the bits covered by the cHEC and PLI.

- **GFP-eHEC-CORR** (GFP - extension Header Error Check - Correctable), available with GFP-F when EXI is set to **Linear**, indicates that only one bit error has been detected in the Extension header (eHEC, CID and Spare). In TX (requires client data frame generation), generates a “Walking 1” pattern to hit all applicable bits covered by the eHEC, CID and Spare.
- **GFP-eHEC-UNCORR** (GFP - extension Header Error Check - Uncorrectable), available with GFP-F when EXI is set to **Linear**, indicates that two or more bit errors have been detected in the Extension header (eHEC, CID and Spare). In TX (requires client data frame generation), generates a “Walking 11” pattern to hit all consecutive 2 bits applicable to the bits covered by the eHEC, CID and Spare.
- **GFP-pFCS** (GFP - payload Frame Check Sequence) indicates that at least one bit error has been detected in the payload. In TX (requires client data frame generation), generates a “Walking 1” pattern to hit all 32 bits of the pFCS only. Only available with **Ethernet (flex/GFP-F)** client when the **CDF pFCS** check box is selected (refer to *GFP-F/GFP-T* on page 315).
- **GFP-SB-CORR** (GFP - Superblock Correctable), available with GFP-T, indicates that bit error has been detected in the CRC-16 word of the superblock. A received SB Correctable (Pre) error counts as one error while SB Correctable (Post) counts as two errors. In TX:
 - GFP-SB-CORR (Pre)** generates a “Walking 1” pattern to include a single bit error in the CRC-16 word of the superblock.
 - GFP-SB-CORR (Post)** generates in the payload of the superblock, a “Walking 1” pattern to include two separate errors in one superblock separated by 43 bits.

- **GFP-SB-UNCORR** (GFP - Superblock Uncorrectable), available with GFP-T, indicates that two or more bit errors have been detected in the CRC-16 word of the superblock. Note that if two errors are spaced by exactly 43 bits, they will not be reported as uncorrectable. In TX, generates a “Walking 11” pattern to include two consecutive errors in the CRC-16 word of the superblock.
- **GFP-tHEC-CORR** (GFP - type Header Error Check - Correctable) indicates that only one bit error has been detected in the Type header (tHEC, PTI, PFI, EXI, and UPI). In TX (requires client data frame generation), generates a “Walking 1” pattern to hit all applicable bits covered by the tHEC, PTI, PFI, EXI, and UPI.
- **GFP-tHEC-UNCORR** (GFP - type Header Error Check - Uncorrectable) indicates that two or more bit errors have been detected in the Type header (tHEC, PTI, PFI, EXI, and UPI). In TX (requires client data frame generation), generates a “Walking 11” pattern to hit all consecutive 2 bits applicable to the bits covered by the tHEC, PTI, PFI, EXI and UPI.
- **Idle** for Ethernet 100/1000 Mbit/s interface and EoOTN 1GbE client, indicates that an error is detected between the end of a frame and the beginning of the next frame.
- **Inv-CW-Marker** (Invalid Codeword Marker) for Ethernet 25GE, indicates that the received Codeword marker is invalid.
- **Inv. Flag** (Invalid Flag) for OTU3 with 40 GbE client, indicates that a 1027-bit block with invalid 3-bit pattern is received.
- **Inv. Marker** (Invalid Marker) for parallel Ethernet interfaces, indicates that there are errors in the 66-bit block alignment marker. Injection is not available when RS-FEC is enabled.
- **Inv. Marker** (Invalid Marker) for Fibre Channel 64X, indicates that the received alignment marker does not match the expected value.
- **Inv. Marker** (Invalid Marker) for FlexO, indicates that there are errors in the 66-bit block alignment marker.

- **Inv. Marker** (Invalid Marker) for OTL, indicates that errors are detected in the 66-bit block alignment marker.
- **IP Chksum** (IP Checksum) indicates that received IP datagrams have invalid IP header checksum. Only available for IPv4.
- **Jabber** for Ethernet, indicates that frames larger than 1518 bytes with an invalid FCS are received (add 4 bytes for each VLAN layer enabled); 1534 bytes for EoE (add 4 bytes for each VLAN layer enabled in the encapsulated Ethernet payload and 4 bytes for EoE VLAN when enabled); 1536 bytes for PBB-TE (add 4 bytes for each VLAN layer enabled in the encapsulated Ethernet payload and 4 bytes for B-VLAN when enabled).
- **K30.7** for CPRI (up to 9.8G)/OBSAI Framed L2, indicates that code word with Error_Propagation /V ordered_set are received.
- **Late Coll.** for Ethernet 10/100 Mbit/s electrical interface in **Half Duplex** mode, indicates the number of collisions that have occurred after a 64 bytes transmission.
- **MFAS** (Multiframe Alignment Signal) for FlexO, indicates that the received OH MFAS does not match the expected MFAS value.
- **MFAS** (Multiframe Alignment Signal) for FlexO OTUC Frame, indicates that the received MFAS does not match the expected value.
- **MFAS** (Multiframe Alignment Signal) for OTU, indicates that the MFAS bits are in error.
- **Mismatch '0'** indicates that there is a bit error on a binary '0' (for example ones that should be zeros) found in the test pattern only. Available with EtherBERT and OTN BERT with EoOTN client; not available with 100GE - **4 Unframed CAUI-4** and OTU4 - **4 Unframed Physical Lanes** on 88200NGE.

- **Mismatch '1'** indicates that there is a bit error on a binary '1' (for example zeros that should be ones) found in the test pattern only. Available with EtherBERT and OTN BERT with EoOTN client; not available with 100GE - **4 Unframed CAUI-4** and OTU4 - **4 Unframed Physical Lanes** on 88200NGE.
- **MSEQV** (Marker Sequence Violation) for OTU3 with 40 GbE client, indicates that unexpected marker sequence is detected.
- **OH CRC** for FlexE PHYs/Instances, indicates an invalid CRC in the OH received.
- **OH CRC** for FlexO, indicates an invalid CRC in the OH received.
- **OMFI** (OPU Multi-Frame Identifier) for OPU4 of a mapped signal, indicates that an invalid OMFI word sequence is detected.
- **OMFI** (OPU Multi-Frame Identifier) for OPUCn, indicates that an invalid OMFI word sequence is detected.
- **OTN BIP-8** for Ethernet 40GE over OTU3, indicates for each lane that at the OTN egress, the calculated 8-bit error contains at least one bit set to "1".
- **Oversize** for Ethernet, indicates frames larger than: 1518 bytes with a valid FCS (add 4 bytes for each VLAN layer enabled); 1534 bytes for EoE (add 4 bytes for each VLAN layer enabled in the encapsulated Ethernet payload and 4 bytes for EoE VLAN when enabled); 1536 bytes for PBB-TE (add 4 bytes for each VLAN layer enabled in the encapsulated Ethernet payload and 4 bytes for B-VLAN when enabled). Available when the **Oversize Monitoring** check box is selected.

Oversize Monitoring check box when selected (cleared by default) allows monitoring the **Oversize** frame errors.
- **Oversize** for Fibre Channel, indicates the number of received FL-2 frames larger than 2148 bytes with a valid FCS.

- **P-Bit** (Parity-Bit) for DS3, indicates that the P-Bits does not match the parity of all the information bits following the first X-Bit of the previous DS3 frame.
- **Pattern Error**, available with **Seed A** or **Seed B** pattern, indicates a block mismatch.
- **PCS BIP-8** for Ethernet, indicates that there are PCS lane bit-interleave parity errors. A routine even-parity check is performed over all bits of a PCS lane, from and including the previous alignment marker, but not including the current alignment marker.
- **PCS BIP-8 Mask** for Ethernet 40GE over OTU3, indicates that at the OTN ingress, the calculated 8-bit error mask contains at least one bit set to “1”.
- **POSV** (POS Violation) for OTU3 with 40 GbE client, indicates that two or more POS (Position Field) have the same POS values or they are not in ascending order.
- **Pre-FEC-Bit** for Ethernet 200/400/800GE with **RS-FEC (RX Only)** enabled, indicates the number of bits corrected by the FEC. Receiving uncorrectable codeword may affect the Pre-FEC-Bit error rate.
- **Pre-FEC-Bit** for Ethernet 50GE, indicates the number of bits corrected by the FEC. Receiving uncorrectable codeword may affect the Pre-FEC-Bit error rate.
- **Pre-FEC-SYMB** (Pre-FEC Symbol) for CPRI, indicates that FEC symbol errors are corrected and counted once for each 10-bit symbol.
- **Pre-FEC-SYMB** (Pre-FEC Symbol) for Ethernet, indicates that FEC symbol errors are corrected and counted once for each 10-bit symbol.
- **Pre-FEC-SYMB** for Ethernet 200/400/800GE with **RS-FEC (RX Only)** enabled, indicates that FEC symbol errors are detected. The **Pre-FEC-SYMB** does not raise an error, only the count and rate values are reported. Receiving uncorrectable codeword may affect the Pre-FEC-SYMB error rate.

- **Pre-FEC-SYMB** (Pre-FEC Symbol) for Fibre Channel 32X/64X, indicates that FEC symbol errors are corrected and counted once for each 10-bit symbol; excluding frames in LOCWS.
- **Pre-FEC-SYMB** (Pre-FEC Symbol) for FlexO, indicates FEC symbol errors are corrected and counted once for each 10-bit symbol.
- **REI** (Remote Error Indication) for Path OAM, indicates that REI are received from path peer.
- **REI-L / MS-REI** (Remote Error Indicator) for SONET/SDH, indicates that the M0, M1, or the combination of both M0 and M1 bytes indicate that one or more BIP violations have been detected. Refer to **M0 or M1/Z2 (SONET) on page 731** for more information. For OC-192, also refer to *REI-L Computation Method* on page 430.
- **REI-L** (Remote Error Indicator - Line) for WIS, indicates that bits 5 through 8 of the M0 byte contain one pattern from the following binary range: "0001" through "1000" (1 to 8) (located in the first STS-1 of an STS-n signal).
- **REI-P** (Remote Error Indicator - Path) for WIS, indicates that bits 1 through 4 of the G1 byte contain one pattern from the following binary range: "0001" through "1000" (1 to 8) (located in every STS-1 of an STS-n signal).
- **REI-P / HP-REI** (Remote Error Indicator) for SONET/SDH, indicates that bits 1 through 4 of the G1 byte contain one pattern from the following binary range: "0001" through "1000" (1 to 8) (located in every STS-1/STM-1 of an STS-n/STM-n signal).
- **REI-V / LP-REI** (Remote Error Indicator) for SONET/SDH, is declared when bit 3 of the V5 byte is set to "1".
- **Runt** for Ethernet, indicates frames smaller than 64 bytes with an invalid FCS; 80 bytes for EoE; 82 bytes for PBB-TE.
- **SEQV** (Sequence Violation) for OTU3 with 40 GbE client, indicates that unexpected sequence is detected.

Alarms/Errors

Errors

- **Symbol** for Ethernet 100/1000 Mbit/s interface and EoOTN 1GbE client, indicates that an invalid code-group is detected in the code.
- **Symbol** for Fibre Channel 1X/2X/4X/8X, indicates that invalid code-group is detected in the code.
- **Sync Header** for CPRI 10.1G and 24.3G (RS-FEC disabled), indicates sync header violations.
- **TC-IEC-P / HPTC-IEC** (Incoming Error Count) for SONET/SDH with TCM enabled, indicates the number of B3 parity violations detected at the TC Source for STS-1 SPE/VC-3 and above (bits 1 to 4 of the N1 byte).

Number of BIP-8 violations	Bit				Number of BIP-8 violations	Bit			
	1	2	3	4		1	2	3	4
0	0	0	0	0	8	1	0	0	0
1	0	0	0	1	0	1	0	0	1
2	0	0	1	0	0	1	0	1	0
3	0	0	1	1	0	1	0	1	1
4	0	1	0	0	0	1	1	0	0
5	0	1	0	1	0	1	1	0	1
6	0	1	1	0	0 (IAIS)	1	1	1	0
7	0	1	1	1	0	1	1	1	1

- **TC-OEI-P / TC-OEI-V / HPTC-OEI / LPTC-OEI** (Outgoing Error Indication) for SONET/SDH with TCM enabled, indicates errored blocks of the outgoing VTn/VC-n (bit 6 of the N1 or Z6/N2 byte). In TX, bit 6 of the N1 or Z6/N2 byte is set to 1.
- **TC-REI-P / TC-REI-V / HPTC-REI / LPTC-REI** (Remote Error Indication) for SONET/SDH with TCM enabled, indicates errored blocks caused within the Tandem Connection (bit 5 of the N1 or Z6/N2 byte). In TX, bit 5 of N1 or Z6/N2 byte is set to 1.

- **TC-VIOL-P / HPTC-VIOL** (Violations) for SONET/SDH with TCM enabled, indicates the number of B3 parity violation within the tandem connection for STS-1 SPE/VC-3 and above.
- **TC-VIOL-V / LPTC-VIOL** (Violations) for SONET/SDH with TCM enabled, indicates the number of violation within the tandem connection for VT6 SPE/VC-2 and below.
- **TCP Chksum** (TCP Checksum) indicates that received TCP segments have invalid TCP checksum.
- **UDP Chksum** (UDP Checksum) indicates that received UDP segments have invalid UDP checksum.
- **Undersize** for Ethernet, indicates frames smaller than 64 bytes with a valid FCS; 80 bytes for EoE; 82 bytes for PBB-TE.
- **Undersize** for Fibre Channel, indicates FL-2 frames smaller than 36 bytes with a valid FCS.

D Pop-Up

Add Channel (Multi-Channel OTN)

- **Channel ID** is the channel ID to be added. Subsequent channel ID are selected then assigned, skipping channel ID already assigned, when adding more than one channel at once.
- **ODU Type** is the ODU mapping type: **ODU0**, **ODU1**, **ODU2**, or **ODU3**. It is possible to have different ODU types when the OTN-MIX-MAPPING software option is enabled; otherwise all channels must have the same ODU type.
- **Quantity** is the number of channel to be added.

Bulk Read

Bulk Read button reads and displays the data based on the specified MDIO range (MDIO/I2C Start Address to MDIO/I2C End Address).

Save to CSV button allows saving the read MDIO/I2C's addresses and data to a CSV file.

Note: *The bulk read size is limited to 1024 addresses.*

Bulk Write

Bulk Write allows configuring and writing MDIO/I2C data values for up to 20 addresses.

- **Page Select**, available for I2C, allows selecting the I2C address page: **0x00** (default) to **0xFF**.
- **Address** and **Data** allows defining up to 20 MDIO/I2C addresses and their data values: 0x0000 (default) to 0xFFFF for MDIO and 0x00 (default) to 0xFF for I2C.

- **Bulk Write** button writes the MDIO/I2C data values for each MDIO/I2C address defined.
- **Default** button resets the MDIO/I2C page select, addresses, and data values to their default values.

Config TCM

Config TCM allows enabling each TCM level (1 to 6) individually. All ODUx of a mapped signal are also available. All TCM check boxes are cleared by default (disabled). Refer to *Traces - OTN* on page 467 for more information. Not available with Multi-Channel OTN.

Configure Per Frame Size

Config. per Frame Size is available when the **Copy From Throughput** check box is cleared and allows setting the **Max. Rate** for each frame size. For **Dual Test Set** the **Max. Rate** is configurable for both local (**L**) and remote (**R**) directions. For **Dual Port** topology, **Max. Rate** is configurable for both port directions.

All Frames check box when selected (cleared by default) allows entering the maximum rate that will be applied to all frame sizes.

Copy Service

- **Copy Service** allow selecting the services number from which the configuration will be copied from.
- **To the following Services** allows selecting all services that will inherit the configuration from the selected service. An orange background represents a selected service. A service that is already enabled cannot be selected for copy.
- **Copy** allows confirming the service configuration copy for all selected services.

Copy Stream

Select the stream number the configuration will be copied from.

From **To the following Streams**, select all streams that will inherit the configuration from the selected stream. An orange background represents a selected stream. A stream that is already enabled (Enable TX) cannot be selected for copy.

Tap **Copy** to confirm the stream configuration for all selected streams.

DS1 Loopback

The Loopback feature generates a code that is interpreted by the DUT. The DUT interprets the command and implements the loopback.

- **Loop Code** allows selecting the type of loopback that will be used to overwrite the traffic that will be generated. Choices are listed in the following table in addition with 10 predefined Loop Codes (see **Modify Loop Codes** on page 987).

Loopback Type	Command	
	Loop-Up	Loop-Down
CSU (10000/100)	10000 (default)	100
NIU FAC1 (1100/1110)	1100	1110
NIU FAC2 (11000/11100)	11000	11100
NIU FAC3 (100000/100)	100000	100

- **Loop-Up** injects the selected loop up code. The loop code will be generated continuously for a maximum of 10 seconds or until the loopback is confirmed. After 10 seconds, if the loopback has failed, a Loop-Down command is sent. A pop-up window appears indicating the loop code injection progress and result. The text box next to the **Loop-Up** button indicates the selected loop up code.

- **Loop-Down** injects the selected loop down code. The loop code will be generated continuously for a maximum of 10 seconds or until the loopback is confirmed. After 10 seconds, if the loopback has failed, a Loop-Down command is sent. A pop-up window appears indicating the loop code injection progress and result. The text box next to the **Loop-Down** button indicates the selected loop down code.
- **Modify Loop Codes** allows the configuration of 10 DS1 loop code pairs. Configure each loop code **Name**, **Loop-Up** and **Loop-Down** values. The name field allows up to 16 characters. **Loop-Up** and **Loop-Down** range is from 3 to 16 bits (**000** to **1111111111111111**). The default DS1 loop codes correspond to the DS1 In-Band loop codes (Loop-Up=**10000**, and Loop-Down=**100**).

EMIX

- **Quantity** allows selecting 2 to 8 frame size values.
- **EMIX Frame Sizes** allows setting the EMIX frame sizes: 48¹ to 16000².

The following table lists each component, when supported by the test application, that may affect the minimum frame size value.

Component	Description
VLAN	4 bytes per VLAN
MPLS	4 bytes per label (up to two labels)
EoE Header	16 bytes
EoE VLAN	4 bytes
PBB-TE Header	18 bytes
B-VLAN	4 bytes
LLC and SNAP Headers	8 bytes
UDP	8 bytes
TCP	20 bytes
Ethernet Header	14 bytes
IPv4	20 bytes
IPv6	40 bytes
Latency	8 bytes
Using DTS	4 bytes

- **Restore Default** button reverts the quantity and EMIX frame sizes to their default values.

1. The minimum value is adjusted according to the frame structure and components selected as shown in the following table. The minimum of 48 bytes is only available for rates up to 10GE, for higher rates the minimum frame size is 64 bytes. For EtherSAM the minimum frame size is 64 bytes.

2. The maximum frame size is limited to 10000 for 10/100/1000Mbps electrical interface.

Export Capture

Export, available when the test application is stopped, allows exporting the data captured into a .pcap file format and viewing the file using Wireshark.

- **Save In** allows selecting the folder to save the capture file (by default: Users\<User>\Documents\<product>\CaptureData).
- **View File After Generation** check box when selected (cleared by default) allows displaying the report once it is generated using the Wireshark application.
- **Generate & Save** allows generating and saving the capture data. The name of the captured file is automatically selected and contains the date and time of the capture. Capture file bigger than 100Mbytes will be split into multiple files. Tapping on the **Cancel** button stops the capture generation. The captured data already processed will be saved.

Note: *The export process may take several minutes.*

Once generated, the capture file will be automatically opened in Wireshark when the **View File After Generation** check box is selected. The capture file report may also be manually opened within Wireshark typically using Windows Explorer.

FEC Degraded SER Thresholds

The alarm is raised when the number of symbol errors is higher than the **Activate Threshold (Symbols)** defined. The alarm is cleared when the number of symbol errors is lower than the **Deactivate Threshold (Symbols)** defined.

- **Interval (CW)** defines the number of codewords (interval) used by the FEC decoder to count the number of symbol errors detected.
- **Activate Threshold (Symbols)** defines the number of detected symbols required to declare the **Local Degraded SER Detected** alarm.
- **Deactivate Threshold (Symbols)** defines the number of detected symbols required to clear the **Local Degraded SER Detected** alarm.

Filter Configuration

- “(“ and “)”“, the open and close parenthesis controls the precedence of operands when more than two operands are used. Only one level of parenthesis is supported. When no parenthesis are used, a logical AND has precedence over a logical OR.
- **Not** check box when selected, adds the logical negation (not equal) operator for the operand filter defined at its right.
- **Filter** specifies the filter to be used (**None** by default).

Category	Filter
Ethernet	MAC Destination Address, MAC Source Address, EtherType ^a , C-VLAN ID, S-VLAN ID, E-VLAN ID, C-VLAN Priority, S-VLAN Priority, E-VLAN Priority, Frame Format
IPv4	IPv4 Destination Address, IPv4 Source Address, IPv4 TOS, IPv4 Precedence, IPv4 Protocol, IPv4 DiffServ
IPv6	IPv6 Destination Address, IPv6 Source Address, IPv6 Flow Label, IPv6 Next Header ^b , IPv6 Traffic Class, IPv6 Precedence, IPv6 DiffServ
Higher Layer	TCP Destination Port ^c , TCP Source Port ^c , UDP Destination Port, UDP Source Port
MPLS ^d	MPLS Label 1, MPLS Label 2, MPLS COS 1, MPLS COS 2

- a. Applies only to the last EtherType occurrence when VLAN is used.
- b. Applies only to the last next header occurrence when extension headers are used.
- c. Available with 10M to 10G interface rates only.
- d. Available when the corresponding software option is enabled.

- **Value** is the value associated to the selected filter.

Pop-Up

Filter Configuration

- **Mask** allows masking the defined filter value. A bit mask of 1 indicates that the corresponding bit in the value is compared for the match. A bit mask of 0 indicates that the corresponding bit in the value is ignored.

For binary values, enter the mask value in binary format.

For decimal and MAC address values, enter the mask value in hexadecimal format.

For IP address field, enter the mask in decimal format.

- **Oper.** specifies the logical operator (AND or OR) used between two operands.

FlexE Calendar

- **Client ID** allows selecting the client identification to be displayed.
- **Size (Gbit/s)** indicates the size of the client.

Client Assignment Status

- **Table**

ID indicates the client identification number.

Size (Gbit/s) indicates the size of the client.

Status indicates the client assignment status: **Assigned** or *n/total* (*n* is the number of assigned block over the *total* for this client).
- **Edit ID** edits of the client identification number (**1** to **65534**).
- **Add Client** adds a new client by selecting its **Client ID**, **Size (Gbit/s)**, and the **Quantity** of clients.

Unit	Interface	Size (Gbit/s)	Quantity
88260	100G	5, 10, 25, 40, 50, 100, 150, 200	Up to 8 clients
	50G	5, 10, 25, 40, 50, 100	Up to 16 clients
88460	400G	5, 10, 25, 40, 50, 100, 150, 200, 250, 300, 350, 400	Up to 40 clients
	200G	5, 10, 25, 40, 50, 100, 150, 200	
	100G	5, 10, 25, 40, 50, 100, 150, 200, 250, 300, 350, 400	

- **Delete Client** removes the selected client from the FlexE group.
- **Delete All** removes all clients from the FlexE group.

Assign / Unassign / Mode

Assign, based on the selected **Mode** and **Calendar Granularity**, assigns slot(s) to client(s). Depending on the **Calendar Granularity**, the assignation is either done slot by slot for 5G or per group of 5 slots for 25G (Slots 0 to 4, 5 to 9, etc.).

- **Unassign**, based on the selected **Mode** and **Calendar Granularity**, unassigns slot(s) from client(s).
- **Mode**
 - **Slot** applies to either a single slot or a group of 5 slots depending on the **Calendar Granularity** selected.
 - **Client** applies to all slots for a specific client. After selecting a first slot of a client having more than one slot, subsequent tributary slots are automatically assigned/unassigned.
 - **All Clients** applies to all slots of a client and then all clients in order. After selecting the first slot for a client having more than one slot, subsequent slots are automatically assigned/unassigned.

To assign or unassign slots:

- 1.** Select a client from the **Client Assignment Status** table.
- 2.** Select **Assign** or **Unassign**.
- 3.** From the PHYn (Port n) slot matrix on the right, select the slot(s); slots are assigned/unassigned according to the selected **Mode**.

PHY *n* / Instance *n* (Port *n*)

A PHY/Instance (Port) grid is presented for each enabled port displaying and allowing edition (see **Assign / Unassign / Mode** above) of the client assignation per slot of 5 Gbit/s or per group of 5 slots depending on the selected calendar granularity. Assigned clients are identified by their client ID number. Unassigned clients are identified by the U letter.

Grandmaster Information / Boundary Clock Information

Note: Only available when GM/BC Information is available.

The decoded clock information are displayed as follows:

For G.8265.1 only:

- **Identity** reports the 8-byte identification code of the GM Clock.

For G.8275.1 only:

- **Log Message Interval (Announce)** reports the mean time interval between successive Announce messages.
- **Log Message Interval (Sync)** reports the mean time interval between successive Sync messages.

For G.8275.1 and G.8275.2:

- **Port Identity** reports the identity type of the PTP port.
- **GM Identity** reports the clock identity of the GM Clock.
- **Priority 1** reports the priority 1 attribute of the GM Clock.
- **Priority 2** reports the priority 2 attribute of the GM Clock.
- **UTC Offset** reports the current difference between the TAI and UTC timescale values collected from the Announce message.
- **Steps Removed** reports the number of communication paths crossed between the local clock and the GM Clock.

Pop-Up

Grandmaster Information / Boundary Clock Information

For G.8265.1, G.8275.1 and G.8275.2:

- **Clock Class** reports the description and code of the GM Clock Class.

Code	Description
0-5, 8-12, 15-51, 53-57, 59-67, 123-132, 171-186, 188-192, 194-215, 233-247, 249-254	Reserved
6	Sync to primary reference
7, 14	Holdover
13	Sync to application-specific reference
52, 58, 187, 193	Degraded
68 to 79, 81-109 (odd values), 11-122, 133-170, 216-232	Alternate PTP profiles
80-110 (even values) ^a	Quality Level (QL-xxx ^a)
248	Default
255	Slave only

a. Refer to QL table on page 227 for the list of Quality Level values that will be used as the description.

- **Clock Mode** reports the description of the GM Clock Mode: **Two-step** or **One-step**.
- **Clock Accuracy** reports the accuracy of the clock.
- **Time Source** reports the source of time used by the GM Clock.

IPv6 Address Configuration

IP

- **Link-Local IPv6 Address** (LLA) is used for local communication between on-link neighbors and for Neighbor Discovery process.
 - **Mode**

Stateless Auto (default) allows automatic generation of the IPv6 address based on the MAC address.

Static allows entering the IP Address.
 - **Address**, available with **Static** mode, allows selecting the Link-Local IPv6 Address. The accepted range is from **FE80:0000:0000:0000:0000:0000:0000** to **FE80:0000:0000:0000:FFFF:FFFF:FFFF:FFFF**. The default address is **FE80::[Interface ID]**, where **[Interface ID]** is generated from the source MAC address. When the **Address** field is selected for editing using virtual keyboard, the **Previous IPs** button appears allowing the selection of a previously configured IP address.
- **Global IPv6 Address** (GUA) is used to communicate with on-link neighbors and for global communication with hosts outside the subnet.
 - **Mode**

None disables the **Global IPv6 Address** and **Default Gateway**.

Stateless Auto (default) allows automatic generation of the IPv6 address based on the Link-Local address interface ID and the prefix obtained from the router advertisements. If no Interface ID has been obtained for the **Link-Local IPv6 Address**, the global address will not be generated.

Static allows entering the IP address.

- **Address**, available with **Static** mode, allows selecting the **Global IPv6 Address**. The accepted range is from **0000:0000:0000:0000::[Interface ID]** to **FFFF:FFFF:FFFF:FFFF::[Interface ID]**. The default address is **2001:0000:0000:0000::[Interface ID]**, where **[Interface ID]** is generated from the source MAC address. When the **Address** field is selected for editing using virtual keyboard, the **Previous IPs** button appears allowing the selection of a previously configured IP address.

- **Interface ID Coupled**, available when the **Source Global IPv6 Address** mode is **Static**, allows coupling the interface ID of the Global address to the Link-Local source address.

Enabled (default): Only the 64 bit (MSB) prefix ID in the IPv6 address is configurable, and the 64 bit (LSB) Interface ID is not configurable (read-only).

Disabled: The 64 bit (MSB) Prefix ID and 64 bit (LSB) Interface ID in the IPv6 address are configurable.

- **Prefix Mask**, available with **Static** mode, allows specifying a prefix that defines the subnet. The accepted range is **0000:0000:0000:0000:0000:0000:0000:0000** to **FFFF:FFFF:FFFF:FFFF:0000:0000:0000:0000**.

For example:

Global IPv6 Address: 2001:0DB8:0001:0002:02AA:00FF:FE11:1111

Prefix Mask: FFFF:FFFF:FFFF:0000:0000:0000:0000:0000

Corresponding Prefix: 2001:0DB8:0001.

- **Default Gateway** allows the configuration of the default gateway address to forward packets outside the subnet.
- **Mode**
 - Automatic** (default) allows automatic selection of the default gateway.
 - Static** allows entering the default gateway IP address.
- **Address**, available with **Static** mode, allows entering the IP address of the Default Gateway. The accepted range is from **0000:0000:0000:0000:0000:0000:0000:0000** to **FE80:0000:0000:0000:FFFF:FFFF:FFFF:FFFF**. The default address is **FE80:0000:0000:0000:0000:0000:0000:0000**.

L2CP

For predefined L2CP frames, only the **Name** and **Destination MAC Address** (frames having more than one allowed MAC Addresses) are configurable; the other parameters are fixed along with their L2CP type. For user defined frames, the following parameters are configurable at the exception of **Type** and **Subtype**:

- **Name:** Up to 20 characters are allowed. Default names are the type of the L2CP frame for predefined frames and **User 1/2/3/4 (01-80-C2)** and **User 5/6/7/8 (01-00-0C)** for user defined frames.
- **Type:** Indicates the type of the L2CP frame for predefined frames and **User (01-80-C2)** or **User (01-00-0C)** for user defined frames.
- **Frame Format:** **Ethernet II** (default), **LLC**, or **SNAP**.
- **Frame Size:** **64** bytes (default) to **1518** bytes. The frame size excludes the VLAN encapsulation.
- **Destination MAC Address:** For predefined L2CP frames allows selecting the **Destination MAC Address** for frames having more than one allowed MAC Addresses. For user defined allows selecting the **Destination MAC Address** from **01-80-C2-00-00-00** (default) to **01-80-C2-FF-FF-FF** for **User (01-80-C2)** and from **01-00-0C-00-00-00** (default) to **01-00-0C-FF-FF-FF** for **User (01-00-0C)**.
- **LLC** (available with LLC and SNAP frame formats)
 - **SSAP:** **0x00** to **0xFF** (**0x42** by default) for LLC frame format; fixed to **0xAA** for SNAP frame format.
 - **DSAP:** **0x00** to **0xFF** (**0x42** by default) for LLC frame format; fixed to **0xAA** for SNAP frame format.
 - **Control:** **0x00** to **0xFF** (**0x03** by default) for LLC frame format; fixed to **0x03** for SNAP frame format.

Note: *For LLC frame format, the following concatenated values of DSAP/SSAP/Control are not valid since they are reserved for SNAP frame format: 0xAAAA03 or 0xABAB03.*

- **OUI** (available with SNAP frame format): **0x000000** (default) to **0xFFFFFFFF**.
- **EtherType** (available with SNAP and Ethernet II frame formats): **0x0000** to **0xFFFF** for SNAP and **0x0600** to **0xFFFF** (excluding 0x8100, 0x88A8, 0x9100, 0x9200, 0x9300, 0x8847, and 0x8848) for Ethernet II. Default is **0x0600**.
- **Subtype**, only available for some predefined L2CP frames, indicates the subtype for the frame.
- **Custom Bytes** (16 bytes) **0x00000000000000000000000000000000** (default) to **0xFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF**. Only available for user defined L2CP frames.

Laser ON/OFF

Laser ON/OFF button, available with parallel interfaces, is used to activate the laser control per optical lane or for all lanes. Select the **Laser** check box to enable/disable the laser for each lane individually or select the **All Lanes** check box to enable/disable all optical lanes at once. Not available with 50GE.

Link Degrade Signaling Thresholds

The alarm is raised when the number of symbol errors is higher than the **Activate Threshold (Symbols)** defined. The alarm is cleared when the number of symbol errors is lower than the **Deactivate Threshold (Symbols)** defined.

- **Interval (CW)** defines the number of codewords (interval) used by the FEC decoder to count the number of symbol errors detected.
- **Activate Threshold (Symbols)** defines the number of detected symbols required to declare the **Local Degraded SER Detected** alarm.
- **Deactivate Threshold (Symbols)** defines the number of detected symbols required to clear the **Local Degraded SER Detected** alarm.

LLDP Neighbor

The LLDP (Link Layer Discovery Protocol) Neighbor allows listening and decoding LLDP packet content. Not available with multiple link interface and host/media loopback. Not supported on 88200NGE.

- **Listening MAC Address** allows selecting the MAC address used to listen for LLDP packets: **01:80:C2:00:00:0E** (default), **01:80:C2:00:00:03**, or **01:80:C2:00:00:00**.
- **TTL Expired**, when displayed, indicates that the LLDP TTL has expired.

The following information is displayed when an LLDP packet was received and not yet expired:

- **Chassis ID** including its subtype
- **Port ID** including its subtype
- **Port Description**
- **System Name**
- **System Description**
- **Management Address** (IPv4 or IPv6)
- **Port VLAN ID**

Manual Skew (PCS/Logical Lane)

- **All Lanes**, when selected, applies the change(s) to all PCS/Logical Lane at once.
- **Skew Inc/Dec Size (bits)** allows setting the increment/decrement value that will be used when changing the TX Skew (bits) values using the “+” and “-” buttons. Range is from **0** to **10550** for 200/400G, **0** to **10480** (in steps of 80) for 800G, **0** to **2047** for 100G/OTU4 and **0** to **4095** for 40G/OTU3/OTU3e1/OTU3e2.
- **PCS/Logical Lane** indicates the PCS/Logical Lane numbers and **All** which represents the value for all PCS/Logical Lane when the **All Lanes** check box is selected.
- **Skew (bits)** allows setting the skew value for each lane. Enter directly the skew value in the field or use the “+” and “-” buttons to respectively increment or decrement the skew value using the defined **Skew Inc/Dec Size** value. Tapping and holding the “+” or “-” button allows reaching the desired value faster using the defined **Skew Inc/Dec Size** value. Range is from **0** to **10550** for 200/400, **0** to **10480** (in steps of 80) for 800G, **0** to **2047** for 100G/OTU4 and **0** to **4095** for 40G/OTU3/OTU3e1/OTU3e2.

Manual Skew (PHY)

➤ PHY TX Skew

PHY/Port indicates the PHY/Port numbers and **All** which represents the value for all PHY/Port when the **All PHY** check box is selected.

Skew (ns) allows setting the skew value for each PHY. Enter directly the skew value in the field or use the “+” and “-” buttons to respectively increment or decrement the skew value using the defined **Skew Inc/Dec Size** value. Tapping and holding the “+” or “-” button allows reaching the desired value faster using the defined **Skew Inc/Dec Size** value. Range is from **0** to **10000** ns.

- **All PHY**, when selected, applies the change(s) to all PHYs at once.
- **Skew Inc/Dec Size (ns)** allows setting the increment/decrement value that will be used when changing the Skew (ns) values using the “+” and “-” buttons. Range is from **0** to **10000** ns.

Default/Random/Manual Mapping

Allows changing the lane mapping that will be used for the test. Not available with: 100 GbE client in OTU4; 800GE interface.

- **Default Mapping** sets the TX mapping to the default numerical order value which corresponds to the ascending lane order.
- **Random Mapping** sets the TX mapping in a random order. Each time the button is tapped, random alignment markers are assigned to each lane.
- **Manual Mapping** allows setting the TX mapping manually.

- **Lane Marker and Assigned Status:**

The **Lane Marker** buttons allow assigning the corresponding lane marker to the selected PCS/Logical or xGAUI-y/CAUI/XLAUI/Physical Lane mapping (the one pointed by the arrow). Lane marker buttons are numbered from **0** to **15** for 400G, **0** to **7** for 200G, **0** to **19** for OTU4/100G, and **0** to **3** for OTU3/OTU3e1/OTU3e2/40G.

The **Assigned Status** column displays a check mark when the lane marker is assigned.

- **PCS/Logical Lane** and xGAUI-y/CAUI/XLAUI/Physical Lane columns indicate the target PCS/Logical to xGAUI-y/CAUI/XLAUI/Physical mapping.
- **Clear All** clears the lane assignments.
- **OK** accepts the new lane mapping. The **OK** button is only available when all target PCS/Logical Lane fields are assigned including duplicates.

Note: *A lane marker can be assigned more than once. If this is the case, a red background is used to highlight all occurrences of this lane marker.*

Modify DS0/E0


Note: For DS0, the framing structure has 24 timeslots. For E0, the framing structures PCM-30 and PCM30 CRC-4 have 30 channel timeslots (1 to 15 and 17 to 31) while PCM-31 and PCM-31 CRC-4 have 31 channel timeslots (1 to 31).

- **DS0/E0 Size** sets the channel timeslot data rate for the pattern payload content to either **56K** or **64K** (default); forced to respectively **56K** for DS0 and **64K** for E0 when **TX Signaling** is enabled. A timeslot data rate of 56 Kbit/s uses 7 bits while 64 Kbit/s uses 8 bits to carry the payload information.
- **Zero Code Suppression** allows the selection of the Zero Code Suppression (ZCS) method used to replace the all-zero bytes of the Idle and Tone payload contents. The ZCS mechanism is a global parameter meaning that all channel timeslots configured with Tone/Idle data, use the same ZCS method. Choices are:

ZCS	Description	Availability
None ^a	No Zero Code Suppression	DS0 and E0
Jammed Bit 8	Every 8th (LSB) bit is forced to 1.	DS0 and E0
GTE	Bit 8 of an all zero channel byte is replaced by 1, except in signaling frames where bit 7 is forced to 1.	DS0
Bell	Bit 7 of an all zero channel byte is replaced by 1.	DS0

a. Default value.

 Note: Bit 8 is the Least-Significant Bit (LSB) and bit 1 is the Most-Significant Bit (MSB).



- **Payload Content** allows the selection of the payload content that will be applied to all TX timeslots when tapping the **Set All** button: **Pattern**, **Idle**, or **Tone**.

Set All applies the selected payload content to all TX timeslots.

- **TX**

- **Pattern/Idle/Tone** button: Tap once or several times on each timeslot until the desired payload content appears: **Pattern** (default), **Idle**, or **Tone**. For E0, timeslots 0 and 16 (PCM30 and PCM30 CRC4) are not configurable; timeslot 0 generates the FAS/NFAS framing; timeslot 16 generates a static MFAS frame when TX Signaling is disabled and generates a frame with Signaling capability when TX Signaling is enabled.

Pattern: The pattern used is the one selected from *Pattern* on page 234.

- **Tone (Hz)** allows the selection of a tone for digital milliwatt testing. The signal output power, when converted to analog, is 0 dBm. Choices are **1000 Hz** and **1004 Hz** (default). The selected tone applies to all timeslots set to **Tone**.
- **Idle** uses the Idle code byte from the Idle field: **00** to **FF** (default is **7F**). The selected Idle code applies to all timeslots set to Idle.

Binary check box allows either displaying the **Idle** code value in binary (when selected) or in hexadecimal (default).

Note: *The timeslots set to **Idle** or **Tone** can be changed from **Idle** to **Tone** and vice versa even when the test is running; their values can also be changed.*

➤ **RX**

- **Apply Channel TX to RX**, available for decoupled test, allows applying the RX payload content based on the TX settings. **None** will be used when TX is set to either **Idle** or **Tone**. For E0 the timeslots 0 and 16 (PCM30 and PCM30 CRC4) are not configurable. Timeslot 0 processes the FAS/NFAS while timeslot 16 processes the Signaling frame.

Note: *The RX timeslot selection is only configurable in a **Decoupled** topology when the **Apply Channel TX to RX** check box is cleared. A warning is displayed when the number of Pattern timeslot does not match between TX and RX. This is to ensure pattern continuity between the TX and RX interface in a MUX/DEMUX test even if used through a cross-connect device.*

- **Pattern/None** button: Select the payload content by tapping once or several times on each timeslot until the desired content appears: **Pattern** or **None**.

Pattern (default) uses the pattern from the received signal.

None does not use the pattern.

Modify Frame Structure

Allows modifying the structure of the frame.

Global Options

- **S-OAM** check box when selected enables EtherSAM over service OAM at Layer 2 on all services. Available with EtherSAM for rates up to 10G WAN; also available at 40GE and 100GE on 88260. The EtherSAM uses LBM and LBR messages of the S-OAM protocol to perform the test. A device having the capability to loopback LBM messages (via LBR) is required at the remote. Not available in Dual Test Set and Dual Port topology.
- **Layer Mode** sets the frame layer mode for all services (available with EtherSAM when the **S-OAM** check box is cleared):

Mixed (default) allows configuring the frame layer per service: L2, L3, or L4.

L2 Only configures all services to Layer 2 only (no IP, no MPLS).

- **Provider Encapsulation** is available and configurable with single port **Traffic Gen & Mon** (not supported on FTBx-88460) and available but fixed to **None** for **EtherBERT** Framed Layer 2. Available for rates 10GE, 40GE, and 100GE.

None: No encapsulation.

EoE: Ethernet over Ethernet encapsulation.

Destination EoE MAC Address	Source EoE MAC Address	EoE VLAN 0xA100 (4 bytes)	EoE TPID (EtherType) 0xE0E0 (2 bytes)	TTL (1 byte)	ETag (1 byte)	Customer Frame starting with Destination Address without FCS	FCS (4 bytes)

PBB-TE: Provider Backbone Bridges with Traffic Engineering encapsulation.

Backbone Destination MAC Address (6 bytes)	Backbone Source MAC Address (6 bytes)	B-VLAN 0x88A8 (4 bytes)	EtherType 0x88E7 (2 bytes)	I-TAG (4 bytes)	Customer Frame starting with Destination Address without FCS	FCS (4 bytes)

- **IP Version** allows selecting **IPv4** (default) or **IPv6**¹. For EtherSAM and Traffic Gen & Mon, the IP version applies to both the interface and all streams/services.

Framing

Note: *The framing for EtherSAM in a NAT environment is limited to Ethernet II, IPv4, and UDP.*

- **Frame Format** (layer 2) allows selecting **Ethernet II** (default) or **802.3 SNAP** as the frame format. Only **Ethernet II** is available with 25G/50G/200G/400G, multiple link interface, and eCPRI.
- **Network Layer** (layer 3) sets the network traffic type: **IPv4/IPv6** (default), or **None**. Not available with EtherSAM when the **S-OAM** check box selected or when the **Layer Mode** is set to **L2 Only**. Not available when using **Provider Encapsulation**. Not configurable and set to **None** for: 40GE/100GE dual port topology; 8 x 50GE / 8 x 100GE / 2 x 400GE multiple link interface.
- **Transport Layer** allows the selection of the transport layer; disabled when the **Network Layer** is set to **None**. Not available with EtherSAM when the **S-OAM** check box selected or when the **Layer Mode** is set to

1. Not supported with: 25G, 50G.

Pop-Up

Modify Frame Structure

L2 Only. Not available when using **Provider Encapsulation**. Not configurable and set to **None** for: 40GE/100GE dual port topology; 8 x 50GE / 8 x 100GE / 2 x 400GE multiple link interface.

Test Application	Transport Layer
EtherSAM	None, UDP (default), TCP ^a
RFC 2544 eCPRI BERT DCO BERT	UDP
EtherBERT	UDP (default), TCP ^b
Traffic Gen & Mon	None, UDP (default), TCP ^a

- a. Only available for 10M to 10G.
- b. Only available for 10M to 10G and 400G.

VLAN

VLAN Tag check box when selected (cleared by default) enables up to 3 stacked VLAN; up to 2 staked VLAN when using **Provider Encapsulation**. See *VLAN* on page 349 for additional VLAN settings.

MPLS

MPLS Label check box when selected (cleared by default) enables 1 or 2 MPLS labels allowing management and test frames to be transmitted and received. Only available with EtherSAM and Traffic Gen & Mon test applications for rates up to 10GE and 100GE. Not available when using **Provider Encapsulation**. Not available with EtherSAM when the **S-OAM** check box is selected or when **Layer Mode** is set to **L2 Only**.

EoE

EoE VLAN check box when selected (cleared by default) enables the EoE VLAN tag. Available when **EoE** is selected as **Provider Encapsulation**.

PBB-TE

B-VLAN check box when selected (cleared by default) enables the B-VLAN tag. Available when **PBB-TE** is selected as **Provider Encapsulation**.

Modify Tributary Slots/Port

Note: Tributary slots must be selected starting with the higher layer down to the lower and all required tributary slots must be selected to access the next level. **Clear All**, **Select All**, and **Default** buttons may be used to facilitate the selection.

- **Payload Type** indicates the payload type 20 or 21 for each mapped OPU level. Not available with Multi-Channel OTN.

For...	Mapped into...	Tributary slot selection
ODU3	OPU4	31
ODU2e ODU1e	OPU4	8
ODU2	OPU4 OPU3	8 4 (PT20), 8 (PT21)
ODU1	OPU4 OPU3 OPU2	2 1 (PT20), 2 (PT21) 1 (PT20), 2 (PT21)
ODU0	OPU4 OPU3 OPU2 OPU1	1 1 1 1
ODUflex	OPU4 OPU3 OPU2	up to 80 up to 32 up to 8
ODUflex/GFP-F	OPU4 OPU3 OPU2	up to 8 up to 8 up to 8

- **Fixed Structure** check box when selected (default) for OPU3, the selection of a tributary slot will automatically select four tributary slots from the same column, which constitute the foreground traffic. When the **Fixed Structure** check box is cleared, select the four tributary slots individually.

- **Tributary Port**, configurable when the **Fixed Structure** check box is cleared, allows selecting the **Tributary Port** number that will be associated to the selected tributary slots. When the **Fixed Structure** check box is selected, the **Tributary Port** is automatically assigned to either the selected slot number or for OPU3 to the first slot number in the column.
- **Nominal Bit Rate (Gbit/s)** available with ODUflex and ODUflex/GFP-F indicates the TX frequency based on the number of tributary slots selected. Note that for ODUflex with pattern Client, the **Nominal Bit Rate** may be affected by the **TX Rate** when not set to 100 % (see **TX Rate** on page 234).
- **Number of Trib Slots** indicates the number of tributary slots selected.

Modify Trib Slots/Channels (Multi-Channel OTN)

- **Channel ID** selects a channel number highlighting the tributary slots composing this channel. Alternatively, selecting a channel from the table on the right (**TX**, **RX**, or **TX = RX** tab) also selects a channel number.
- **Tributary Port** indicates the tributary port number associated to the channel number.
- **Payload Type** indicates the payload type for the mapped OPU.
- **RX**, **TX**, or **TX = RX** tab (table on the right) displays the tributary slot assignments per channel for either RX, TX, or both RX and TX (TX=RX) and allows selecting tributary slots to be assigned/unassigned; see **Assign/Unassign/Mode** for more information.

Each tributary slot displays its number (left top corner) and channel number (middle); the channel number is replaced by **B** or **U** indicating respectively if the tributary slot carries background traffic or is configured as Unallocated.

- The following table indicates the number of tributary slots per channel:

For...	Mapped into...	Tributary slot per channel
ODU3	OPU4	31
ODU2	OPU4	8
ODU1	OPU4	2
ODU0	OPU4	1

The table provides a status for each channel using visual indication as follows:

Background Color	Description
White	Tributary slot using background traffic (B) or Unallocated (U).
Orange	Tributary slot(s) assigned for the selected channel.
Gray	Tributary slot(s) assigned.

- **TX = RX** check box, when selected, allows using the same tributary slot configuration for both TX and RX.
- **RX Structure Match** is a live status indicating if the tributary slot/channel configuration is matching the received signal. Only configured channels are considered during the validation. **RX Structure Match** is displayed using different background colors as follows:

Background Color	Description
Green	Configured structure is matching the received signal.
Red	Configured structure is not matching the MSI received signal or could contain an unsupported mapping (for example Unallocated).
Gray	Impaired signal is preventing RX structure decoding (for example when a LOS alarm is detected).

Pop-Up

Modify Trib Slots/Channels (Multi-Channel OTN)

➤ **Channel Assignment Status**

The table provides a list of each channel ID, its ODU type, and the TX/RX assignment status. TX/RX indicates either **Assigned** when all tributary slot are selected for this channel or the number of assigned tributary slot over the total number of tributary slots for this channel. TX/RX status must be **Assigned** for all channels in order to complete the tributary slots/channels configuration. Channel are sorted by their ascending ID by default, it is possible to sort ascending/descending and by **Type**, **RX**, or **TX** column by clicking in the desired column title.

Note: *ODU0 type mapping is selected by default for all channels when the test is created. To change the ODU type mapping, use the **Del Ch** or **Delete All** button then use the **Add Ch** button to select an other ODU type.*

- **Edit Ch ID** button selects a new channel ID from available list.
- **Add Ch** button allows adding new channels. See *Add Channel (Multi-Channel OTN)* on page 983.
- **Del Ch** button removes the selected channel.
- **Delete All** button removes all channels.

➤ **Assign / Unassign / Mode**

To assign or unassign tributary slots:

1. From the **Channel Assignment Status** table, select a channel.
2. Select either **Assign** or **Unassign**.
3. From the tributary slot matrix on the right, select a tributary slot; tributary slots are assigned/unassigned as follows according to the selected **Mode**:

Mode	Description
Tributary Slot	Assigns/unassigns a single tributary slot.
Channel	Assigns/unassigns all tributary slots for a specific channel. After selecting a first tributary slot, subsequent tributary slots are automatically assigned/unassigned if the channel contains more than one tributary slot.
All Channels	Assigns/unassigns all tributary slots to/from a channel and this is repeated for all channels. After selecting the first tributary slot, subsequent tributary slots are automatically assigned/unassigned if the channel contains more than one tributary slot. This is repeated for all channels in order.

- **Copy RX MSI** allows automatic configuration of the Channel to Trib Slot that matches the system under test configuration. A warning message is displayed when the RX test structure is either:

Unsupported: An unsupported ODU channel is received (for example Unallocated). The unsupported ODU channels are configured as background traffic.

Invalid: Impaired signal is preventing RX structure decoding (for example when a LOS alarm is detected). The RX MSI structure cannot be copied.

Modify TX Power - DCO BERT

Configuration

- **Use Advertised Capabilities** check box when selected (default) limits the **User Config** choices to the transceiver's advertised capabilities, otherwise all choices are available.

Configuration mismatch with capabilities is displayed when the **Use Advertised Capabilities** check box is cleared and the **User Config - Target TX Power** value is outside the advertised supported range. In this case the  icon appears in front of the **Target TX Power** field.

Transceiver Initializing... is displayed when the transceiver is initializing.

Programmable TX Power not supported is displayed when the transceiver does not support programmable TX power.

- **Target TX Power - User Config** allows configuring the transmit output power when supported by the DCO transceiver: **-40 to 0** (default) when the **Use Advertised Capabilities** check box is cleared; within the transceiver's advertised minimum and maximum (default) values when the **Use Advertised Capabilities** check box is selected.
- **Target TX Power - Transceiver Config** indicates the transmit output power when supported by the DCO transceiver.
- **Apply** allows applying the configured values to the transceiver.
- **Copy** retrieves the transceiver's target TX power value to use as the **Target TX Power** configuration.

Current TX Power

Current TX Power (dBm) indicates the live transceiver's TX power.

Tuning Status (Laser/TX Power)

Tuning Status (Laser/TX Power) indicates the transceiver tuning progress status: -- (pending), **In Progress**, **Completed**.

Advertised Capabilities

Programmable TX Power indicates if the transceiver is supporting the TX power programming capability: **Yes** or **No**. When supported, the transceiver's **Minimum TX Power (dBm)** and **Maximum TX Power (dBm)** values are reported.

Modify Wavelength (SFP)

Modify Wavelength, available with tunable transceivers, is used to configure the transceiver wavelength.

- **Wavelength** (nm) indicates the actual wavelength value selected. Use the scroll box and/or the -/+ buttons to select the wavelength. The minimum and maximum wavelength values are displayed.
- **Channel Number** indicates the actual ITU channel number based on ITU Grid.
- **Frequency** (THz) indicates the actual Frequency based on ITU Grid
- **Channel Spacing** (GHz) indicates the difference in frequency between two adjacent channel detected from the transceiver device.
- **Restore Previous** restores the current value present in the transceiver device.

Modify Wavelength - DCO BERT

Note: *Not available with unamplified interface.*

Config Tab

- **Configuration:** The **User Config** column allows configuring the transceiver parameters while the **Transceiver Config** columns displays the actual transceiver configuration parameters.
- **Use Advertised Capabilities** check box when selected (default) limits the **User Config** choices to the transceiver's advertised capabilities, otherwise all choices are available.

Configuration mismatch with capabilities is displayed when the **Use Advertised Capabilities** check box is cleared and any **User Config** values is outside the advertised supported range. In this case the  icon appears in front of the field value that is out of range.

Transceiver Initializing... is displayed when the transceiver is initializing.

Wavelength Tuning not supported is displayed when the transceiver does not support wavelength tuning.

- **Grid** allows selecting the grid for configuration: **100 GHz**, **75 GHz**¹, **50 GHz**, **33 GHz**, **25 GHz**, **12.5 GHz**, **6.25 GHz**, and **3.125 GHz**¹.

1. Not available with any CFP.

Pop-Up

Modify Wavelength - DCO BERT

- **Channel Number (CFP MSA) / Channel Offset Number (CMIS)** allows selecting the channel number depending on selected **Grid** and inserted transceiver. The range is limited to the minimum and maximum values shown in the following table even if the transceiver's advertised capabilities exceed the range.

Channel Number (CFP MSA)	Grid in GHz					
	100	50	33	25	12.5	6.25
Minimum	1	1	1	1	1	1
Maximum	49	97	145	193	385	769

Channel Offset Number (CMIS)	Grid in GHz							
	100	75	50	33	25	12.5	6.25	3.125
Minimum	-18	-72	-36	-54	-72	-144	-288	-576
Maximum	30	120	60	90	120	240	480	960

- **Channel Frequency (THz)** allows selecting the channel frequency: **191.3 to 196.1 THz**.
- **Fine Tuning** check box when selected, cleared by default, enables the capability to fine tune the transceiver by setting the offset. Only available when fine tuning is supported by the transceiver.

- **Offset (GHz)**, available when the **Fine Tuning** check box is selected, allows setting the laser frequency offset. The range is limited to the minimum and maximum values shown in the following table even if the transceiver's advertised capabilities exceed the range.

Offset (GHz)	Grid (GHz)							
	100	75	50	33	25	12.5	6.25	3.125
Minimum	-32.768	-32.768	-32.768	-32.768	-24.999	-12.499	-6.249	-3.124
Maximum	32.768	32.768	32.768	32.768	24.999	12.499	6.249	3.124

- **Laser Frequency (THz)** displays the laser frequency based on the configured **Laser Frequency** and **Fine Tuning - Offset**.
- **Laser Wavelength (nm)** displays the laser wavelength based on the **Laser Frequency**.
- **Apply**, applies the **User Config** settings into the transceiver (**Transceiver Config**).
- **Copy** allows copying the **Transceiver Config** settings to the **User Config**.
- **Current Laser Frequency (THz)** indicates the current laser frequency reported by the DCO transceiver.
- **Current Laser Wavelength (nm)** indicates the current laser wavelength.
- **Tuning Status (Laser/TX Power)** indicates the transceiver tuning progress status: -- (pending), **In Progress**, **Completed**.

Info Tab

Advertised Capabilities reports the following capabilities advertised by the transceiver:

- **Laser Tuning Supported** indicates if the laser tuning is supported.

➤ **Grid Capabilities**

- **Grid** displays the list of grid: **100 GHz, 75 GHz, 50 GHz, 33 GHz, 25 GHz, 12.5 GHz, 6.25 GHz, and 3.125 GHz.**

The following parameters are reported for each grid:

- **Supported** indicates if the grid is supported.
 - **Lowest Channel Number** indicates the lowest channel supported.
 - **Highest Channel Number** indicates the highest channel supported.
 - **Lowest Frequency** (THz) indicates the lowest frequency supported.
 - **Highest Frequency** (THz) indicates the highest frequency supported.
- ### ➤ **Fine Tuning Capabilities**
- **Supported** indicates if the fine tuning is supported.
 - **Lowest Offset** (GHz) indicates the fine tuning lowest offset.
 - **Highest Offset** (GHz) indicates the fine tuning highest offset.
 - **Resolution** (GHz) indicates the fine tuning resolution.

Profile (Stream)

Allows the selection and configuration of either **Voice**, **Video**, or **Data** (default) emulation profile. Only **Data** is available when using **Provider Encapsulation**.

Voice

- **Voice Codec** allows the selection of the codec used by the voice profile: **VoIP G.711** (default), **VoIP G.723.1**, or **VoIP G.729**.
- **Number of Calls** allows the selection of the number of calls that will be generated for the selected stream. The minimum (default value) is **1** for 10M to 1G, **5** for 10G /25G, and **10** for 40G/50G/100G/200G/400G.
- **Rate** indicates the rate corresponding to the selected codec and the number of calls.

Video

- **Video Codec** allows the selection of the codec used by the video profile: **SDTV (MPEG-2)** - (default), **HDTV (MPEG-2)**, or **HDTV (MPEG-4)**.
- **Number of Channels** allows the selection of the number of channels (**1** by default) that will be generated for the selected stream.
- **Rate** indicates the rate corresponding to the selected coded and the number of channels.

Profile (Services)

Allows the selection and configuration of either **Voice**, **Video**, or **Data** (default) emulation profile.

Voice

- **Voice Codec** choices are **VoIP G.711** (default), **VoIP G.723.1**, and **VoIP G.729**.
- **Number of Calls** allows the selection of the equivalent number of calls that will be generated for the selected stream (default is **1**).
- **CIR** indicates the committed information rate in Mbps based on the number of calls selected.

Video

- **Video Codec** choices are **SDTV (MPEG-2)** - (default), **HDTV (MPEG-2)**, and **HDTV (MPEG-4)**. Only **SDTV (MPEG-2)** is available with the 10 Mbps interface.
- **Number of Channels** is the equivalent number of channels that will be generated for the selected service (default is **1**).
- **CIR** indicates the committed information rate in Mbps based on the number of channels selected.

Note: *The **CIR** value will be calculated on the basis of the selected service profile and the value entered in the **Number of Calls** or **Number of Channels** field.*

QoS Metrics (eCPRI BERT)

- Port direction buttons are available for dual port topology in **One-Way P<m> ↔ P<n>** measurement mode.
- Local/Remote direction buttons are available for single/dual port topology in **One-Way** measurement mode.

Note: *Throughput (including RX Frame Count, TX Rate, and TX Frame Count), Jitter, Latency, and Frame Loos/Out-of-Sequence are available when enabled (see QoS Thresholds) but their availability depend on the selected measurement mode, measurement role, and direction.*

- **Throughput, Jitter, and Latency** meters display respectively the measured Throughput, Jitter, and Latency.

Note: *The green region defined by the configured threshold corresponds to a **PASS** verdict while the red regions corresponds to a **FAIL** verdict. The Pass/Fail verdict is only displayed when enabled (see QoS Thresholds on page 271).*

- **Jitter** is the delay variation measured¹ on all valid frames² received. **Current, Average, Minimum, Maximum, and Estimate** delay values are reported in μs per direction when applicable.
- **Latency** is measured¹ on all valid frames² received. **Current, Average, Minimum, and Maximum** latency (delay) are reported.

For **One-Way** and **One-Way P<m> ↔ P<n>** measurement modes, indicates the measured one-way latency (delay) in μs per direction when applicable (available on the sender side).

For Round-Trip measurement mode, indicates the measured round-trip latency (delay) in μs (available on the sender side).

1. For the **Current** value, **Not measurable** is displayed when no delay has been measured in the last second.

2. Frames with One-Way Delay (OWD) messages and no FCS and UDP Checksum errors.

Pop-Up

QoS Metrics (eCPRI BERT)

- **Throughput** is the RX rate value measured on all valid frames (no FCS and UDP Checksum errors). **Current, Average, Minimum,** and **Maximum** throughput results are reported. A **Current** value of **0** indicates that no throughput has been measured in the last second.
- **RX Frame Count** indicates the number of frame received matching the stream.
- **TX Rate** indicates the transmitted throughput rate.
- **TX Frame Count** indicates the number of transmitted frames matching the stream.
- **Thresholds** allows configuring the QoS thresholds:
 - **Latency** check box when selected (default) enables the latency pass/fail verdict and allows setting the maximum threshold delay per direction when applicable.
 - **Jitter** check box when selected (default) enables the jitter pass/fail verdict and allows setting the maximum threshold value per direction when applicable.
 - **Frame Loss Rate** check box when selected (default) enables the Frame Loss pass/fail verdict and allows setting the frame loss rate for the port: 0.0E-00 to 5.0E-02 (default is 1.0E-07). However entering a value of 0.0E-00 or below 1.0E-14 is treated as a pass/fail verdict based on loss count instead of rate.
 - **Throughput** check box when selected (default) enables the throughput pass/fail verdict and allows setting the minimum and maximum threshold values for the port.
- **Frame Loss:** See *QoS Metrics* on page 926. When testing with protection switching, it is recommended to use **Generic Data Transfer** as the **Message Type** (refer to *eCPRI* on page 354).
- **Out-of-Sequence:** See *QoS Metrics* on page 926.

Remote Interface Discovery

Note: *Available with Traffic Gen & Mon for rates up to 25GE and for 100GE (not supported at 100GE on 88200NGE).*

Discover

The **Discover** button activates, disabled by default, the interface discovery process. The discovery process automatically stops when the test is started or when the maximum of 16 signatures is reached.

Remote Interfaces

Lists every unique signature having good FCS and valid IP checksum. Any difference in either MAC source address, VLAN parameters, or IP source address is considered as a unique signature. Up to 16 signatures can be discovered.

➤ Signature

Number indicates the identification number given to the discovered signature.

The check box of a signature, when selected, indicates the signature's parameters that will be use for the current stream when clicking on the **Apply To Stream** button. Only one signature can be selected. Signatures having a different IP version than the test configuration will not be available for selection.

- **Layer 2** indicates the Layer 2 parameters if applicable: **MAC Address**, **E-VLAN**, **S-VLAN**, **C-VLAN**.
- **Layer 3** indicates the Layer 3 parameter if applicable: **IP Address**.
- **Signature Advanced Details** (... button) opens a pop-up displaying the details of the current signature: **Number**, **Source MAC Address**, **Source IP Address**, **E-VLAN ID**, **S-VLAN ID**, **C-VLAN ID**, **Priority**, **Type**.

Apply To Stream

Applies the selected signature parameters to the current stream and updates the stream configuration accordingly.

Shaping

For Burst and n-Burst TX modes.

- **Burst Duty Cycle (%)** represents the burst duration within the burst period: **1** to **100** percent (default is **50** percent).
- **Period** represents the burst pattern duration: **1** to **8000** milliseconds (default is **1000** ms).
Unit choices are **ms** (default) and **s**.
- **Burst Count**, available with n-Burst TX Mode, represents the number of times the burst will be repeated: **1** (default) to **255**.

For Ramp and n-Ramp TX modes.

- **Ramp Nb. of Steps** represents the number of steps within the ramp: **2** to **100** (default is **10**).
- **Step Time** represents the duration of each step: **100** to **8000** milliseconds (default is **1000** ms).
Unit choices are **ms** (default) and **s**.
- **Ramp Cycle Count**, available with n-Ramp TX mode only, represents the number of times the ramp will be repeated: **1** (default) to **255**.

Thresholds (eCPRI QoS)

- **Latency** check box when selected (default) enables the latency pass/fail verdict and allows setting the maximum threshold delay per direction when applicable.
- **Jitter** check box when selected (default) enables the jitter pass/fail verdict and allows setting the maximum threshold value per direction when applicable.
- **Frame Loss Rate** check box when selected (default) enables the Frame Loss pass/fail verdict and allows setting the frame loss rate for the port: 0.0E-00 to 5.0E-02 (default is 1.0E-07). However entering a value of 0.0E-00 or below 1.0E-14 is treated as a pass/fail verdict based on loss count instead of rate.
- **Throughput** check box when selected (default) enables the throughput pass/fail verdict and allows setting the minimum and maximum threshold values for the port.

Thresholds - FED/FDD

Note: *Available with DCO BERT when either the **FED** or **FDD** check box is selected from the interface block - **DCO** tab.*

Allows setting the threshold activate/deactivate values used to respectively declare or clear the **FED** or **FDD** alarm.

FED Activate Threshold (BER) sets the threshold activate value used to declare the **FED** alarm: **1.00E-15** to **1.00E0** bit error rate (default is **1.22E-2** for 400ZR and **2.00E-2** for others).

FED Deactivate Threshold (BER) sets the threshold deactivate value used to clear the **FED** alarm: **1.00E-15** to **1.00E0** bit error rate (default is **1.21E-2** for 400ZR and **1.99E-2** for others).

FDD Activate Threshold (BER) sets the threshold activate value used to declare the **FED** alarm: **1.00E-15** to **1.00E0** bit error rate (default is **6.10E-3** for 400ZR and **1.00E-2** for others).

FDD Deactivate Threshold (BER) sets the threshold deactivate value used to clear the **FED** alarm: **1.00E-15** to **1.00E0** bit error rate (default is **6.00E-3** for 400ZR and **9.90E-3** for others).

Note: *The activate value must be greater or equal to the deactivate value.*

Note: *When both the **FED** and **FDD** check boxes are selected, the **FED** threshold values must be greater or equal to the **FDD** threshold values.*

Thresholds - RFC 2544

Note: For *Dual Test Set*, thresholds are configurable for **Local to Remote** and **Remote to Local** directions at the exception of **Round-Trip Latency Threshold** for which the value is unique. For **Dual Port** topology, thresholds are configurable for both port directions.

- **Throughput Threshold** sets the threshold value used to declare a pass/fail verdict for all frame sizes when applicable. The verdict is PASS when the received/measured value is greater or equal to the threshold value. The range is as follows:

Interface Speed	Threshold ^a		
	%	Mbit/s	Gbit/s
10 Mbit/s	0.0 to 100.0 ^b	0.0 - 10.0 ^b	Not Applicable
100 Mbit/s	0.0 to 100.0 ^b	0.0 - 100.0 ^b	Not Applicable
1000 Mbit/s	0.0 to 100.0 ^b	0.0 - 1000.0 ^b	0.0 - 1.0 ^b
10G LAN	0.0 to 100.0 ^b	0.0 - 10000.0 ^b	0.0 - 10.0 ^b
10G WAN ^c	0.0 to 92.857 ^b	0.0 - 9285.7 ^b	0.0 - 9.2857 ^b
25G	0.0 to 100 ^b	0.0 - 25000 ^b	0.0 - 25 ^b
40G	0.0 to 100.0 ^b	0.0 - 40000.0 ^b	0.0 - 40.0 ^b
100G	0.0 to 100.0 ^b	0.0 - 100000.0 ^b	0.0 - 100.0 ^b
200G	0.0 to 100.0 ^b	0.0 - 200000.0 ^b	0.0 - 200.0 ^b
400G	0.0 to 100.0 ^b	0.0 - 400000.0 ^b	0.0 - 400.0 ^b

- a. The maximum threshold value is adjusted with the Throughput **Max. Rate** selected.
- b. Defalut value.
- c. The maximum value for 10G WAN may be lower depending on the frame size. The maximum value will be adjusted for each frame size.

- **Back-to-Back Threshold** sets the threshold value in percentage of frames per burst to declare a pass/fail verdict for all frames sizes when applicable. The verdict is PASS when the received/measured value is greater or equal to the threshold value.

Pop-Up

Thresholds (S-OAM)

- **Frame Loss Threshold (%)** sets the threshold value of frame loss for all frame sizes when applicable. The verdict is PASS when the received/measured value is lower or equal to the threshold value.
- **Latency Threshold**, available when **Dual Test Set** is not enabled, sets the threshold value as the maximum delay for all frame sizes when applicable.
- **Round-Trip Latency Threshold**, available with **Dual Test Set** in **Round-Trip** measurement mode (see *Latency* on page 389), sets the threshold value as the maximum delay for all frame sizes when applicable.
- **One-Way Latency Threshold**, available with **Dual Test Set** in **One-Way** measurement mode (see *Latency* on page 389), sets the maximum one-way latency value allowed for all frame sizes.
- **Latency Unit** allows selecting either **ms** (default) or **μs** as the reference unit for **Latency**.

Thresholds (S-OAM)

Available with G.8113.1, Y.1731 and MEF OAM Modes when Pass/Fail verdict is enabled. The verdict is PASS when the measured value is lower or equal to the threshold value.

- **Frame Delay Threshold (ms)** allows setting the threshold value of frame delay: **0.001** to **8000** ms (default is **50** ms).
- **Frame Loss Threshold (%)** allows setting the threshold value of frame loss: **0.001** to **100** % (default is **10** %).
- **Synthetic Loss Threshold (%)**, available with Ethernet OAM (Y.1731 and MEF), allows setting the threshold value of Synthetic Loss: **0.001** to **100** % (default is **10** %).

TOS/DS Config

TOS/DS

- **TOS/DS** allows selecting either Type Of Service (TOS) or Differentiated Services (DS).
- **Binary/Hex** allows displaying, once this pop-up is closed, the IP TOS/DOS value either in binary or hexadecimal.

Type Of Service (TOS)

- **Precedence:**
 - 000 (Routine)** (Default)
 - 001 (Priority)**
 - 010 (Immediate)**
 - 011 (Flash)**
 - 100 (Flash Override)**
 - 101 (CRITIC/ECP)**
 - 110 (Internet Control)**
 - 111 (Network Control)**
- **Delay** allows the selection of the delay level: **Normal** (default) or **Low**.
- **Throughput** allows the selection of the throughput level: **Normal** (default) or **High**.
- **Reliability** allows the selection of the reliability level: **Normal** (default) or **High**.
- **Monetary Cost** allows the selection of the monetary cost level: **Normal** (default) or **Low**.
- **Reserved Bit** allows the selection of the reserved bit value: **0** (default) or **1**.

Differentiated Services (DS)

➤ DSCP Codepoints:

000000 (CS0) (default), **001000 (CS1)**, **010000 (CS2)**, **011000 (CS3)**, **100000 (CS4)**, **101000 (CS5)**, **110000 (CS6)**, **111000 (CS7)**, **001010 (AF11)**, **001100 (AF12)**, **001110 (AF13)**, **010010 (AF21)**, **010100 (AF22)**, **010110 (AF23)**, **011010 (AF31)**, **011100 (AF32)**, **011110 (AF33)**, **100010 (AF41)**, **100100 (AF42)**, **100110 (AF43)**, **101100 (VOICE-ADMIT)**, **101110 (EF)**, **110011 (51)**, **110110 (54)**, or **User Defined**.

User Defined Codes, available when **User Defined** is selected from the **DSCP Codepoints**, allows entering a user defined code from hexadecimal **00** (default) to **3F** once the **TOS/DS Config** pop-up is closed.

➤ ECN allows the selection of the Explicit Congestion Notification code: **00 (Not-ECT)** (default), **01 (ECT-1)**, **10 (ECT 0)**, or **11 (CE)**.

Triggered Frame Details

The triggered frame corresponds to the first received frame that matches the filter and the trigger settings.

- **Frame Number** indicates the triggered frame position in the buffer.
- The table displays the framing MAC/IP/UDP/TCP source and destination addresses.

Truncation Calculator

Truncation Calculator allows determining easily at what byte to truncate the frame captured by selecting the desired frame header components.

- **Header Layer** specifies the header layer level: **Layer 2 (Ethernet)**, **Layer 3 (IP)**, or **Layer 4 (TCP/UDP)**.
- **IP Version** specifies the IP version: **IPv4** or **IPv6**.
- **Encapsulation** parameters are optional and not selected by default.

VLAN check box when selected enables VLAN and allows selecting the number of VLANs: 1, 2, or 3.

MPLS check box when selected enables MPLS and allows selecting the number of labels: 1 or 2.

EoE check box, when selected, enables EoE.


PBB-TE check box, when selected, enables PBB-TE.

- **Additional Payload (bytes)** allows selecting optionally the number of additional payload bytes (1 to 1400 bytes).
- **Total Number of Bytes** indicates the number of bytes for the selected frame parameters. This value will be used as the truncated frame length (**Truncated** field).

E Remote ToolBox

Overview

The **Remote ToolBox** application allows remotely controlling a module installed on a platform using a remote PC. Remote users are connected to the platform using an Ethernet connection.

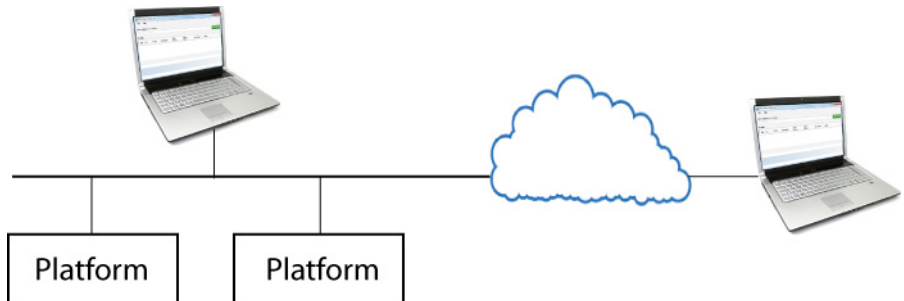

Note: *The remote control feature has to be enabled for the module on its specific slot on the platform. Refer to the Controlling Modules Remotely section from the platform user guide for more information.*

The **Remote ToolBox** allows starting one or several module application(s). Once a module application is started, the application is independent and does not require the **Remote ToolBox** anymore. Thus, the **Remote ToolBox** application can be closed or can be disconnected from the platform using the **Disconnect** button without affecting the running remote module applications.

A remote module application offers the same level of control as if the module is locally controlled with the following behaviors.

➤ Multi-user behaviors:

Up to five connections including the local and/or remote sessions are allowed per module. Beyond five connections, the performance to service the connections may decrease.

Each user is able to individually navigate through the module application without affecting the other users. However, any changes to the operation of the test (**Start**, **Stop**, **Reset**, etc.) or to any test parameter will be applied to all users.

➤ File location behaviors:

The save, load, report, and data capture functions are associated with the location of the session initiated; for Remote ToolBox it will be on the local PC. The files are not duplicated on the platform platform.

➤ The **Save/Load** configurations are saved in the following folder:
Document\<product>\Configuration

➤ The **Reports** are saved in the following folder:
Document\<product>\Reports

If a report is being generated, no user will be able to start the test case until the report generation is completed.

➤ The **Data Capture** files are saved in the following folder:
Document\<product>\CaptureData

If a capture file is being generated, all users will be able to stop the capture but only the user that initiates the capture will be able to see the captured data file after generation.

Remote ToolBox Installation

Requirements

The following system requirements must be met before installing the **Remote ToolBox** software.

- 10 or 10/100 Mbit/s network interface card.
- Windows XP/Vista/7/8/10 operating system.

Note: *Some Windows applications such as PDF reader, Excel, etc. may be required to open the generated reports.*

Installation

Download the **Remote ToolBox** application from **EXFO STORE** at www.exfo.com. Run the **Setup.exe** application and follow the on-screen instructions to complete the installation.

A shortcut of the **EXFO Remote ToolBox** will be created on the PC desktop.

Starting and Using the Remote ToolBox Application

Start the **Remote ToolBox** application, either by using the desktop **EXFO Remote ToolBox** shortcut, or by clicking on the **EXFO Remote ToolBox** application from **All Programs - EXFO**.

File Menu

The **File-Exit** menu allows quitting the **Remote ToolBox** application.

Help Menu

The **Help** menu displays the help information about the **Remote ToolBox** application.

Server Address or Host Name

Allows entering the platform IP address or the Host Name. The IP address format is IPv4 (xxx.xxx.xxx.xxx) where xxx are values from 0 to 255. For example: 192.168.1.1.

To find the IP address of the platform, refer to the platform user guide.

Connect/Disconnect Button

- **Connect** establishes the connection with the platform specified by the selected IP address or the Host Name.
- **Disconnect**, closes the connection with the selected platform allowing to establish a connection with another platform.

Modules

Once connected to the platform, lists the modules installed on the platform regardless of the remote control feature being enabled or not. The following information is displayed for each module.

- **Type** displays the module's icon.
- **Slot** indicates the platform slot number where the module is inserted.
- **Module** indicates the name of the module.
- **Description** displays the description given to the module. Refer to the platform user guide for more information.
- **Serial Number** indicates the serial number of the module.
- **Remote Control** indicates if the remote control feature is enabled for this module. Refer to the *Controlling Modules Remotely* section from the platform user guide for more information.
- **Standalone** indicates if the standalone feature is possible for this module. Refer to the *Controlling Modules Remotely* section from platform platform user guide for more information.
- **Version** indicates the software version of the module application.

Applications for...

Note: *The application icon is only available if the selected module has its **Remote Control** enabled and is only displayed if the module is supported by the **Remote ToolBox** application.*

Click on the icon to start the application.

The application is automatically started when the same version of the application is installed on the local PC.

The application is downloaded from the platform and installed on the local PC when either the application is not installed or the versions are different. Once installed, the application is automatically started. While downloading the application, the **Cancel** button allows cancelling the download and the installation process.

Note: *Multiple versions of a module application may be installed on the same PC. Use the Windows - Control Panel - Add/Remove tool to remove non-required versions from the PC.*

10B_ERR	973
1588 PTP	104, 221, 229
1588 PTP (Cient)	221
16 Unframed 400GAUI-16	169
16 Unframed 400GAUI-8	168
20 Unframed PCS	166
200GAUI-4 Lane	676
2DM Function	371
4 Unframed 200GAUI-4	166
4 Unframed Physical Lanes	183
4 Unframed XLAUI	165
400GAUI-16 Lane	676
400GAUI-4 Lane	676
400GAUI-8 Lane	676
65B Block	964
66B Block	572, 964, 975
8 Unframed 200GAUI-4	167
8 Unframed 400GAUI-8	167, 168
802.1aq	396

A1	728
A2	728
Abort Frame	658
About button	52
Absolute	510
Accept Connection from IP	457
Acceptable Errors	386, 387
Accuracy	386
Accuracy (Frames)	387

Index

Antenna Coordinates 449
Application buttons 52
Applications for... 1046
Apply 1025
Apply Channel TX to RX 1009
Apply To Stream 1032
APS 661, 684
APS RX Count 749
APS TX Count 749
APS/PCC 725
Architecture 686
ARM 466
Armed 744
Arrow buttons 57
Arrows 142
Assign 1019
Assign to Capture 703
Assigned Capacity 303
Attempts 751
AU Path (C2) 333, 505
AU Path (J1) 470, 650
AU Path (N1) 471, 651
AU-AIS 932
AU-LOP 949
Auto 320, 321
Automatic 319, 999
Automatic IP (DHCP) 341, 351, 356
Auto-Negotiation 318, 339, 793
Auto-Response Loopback Status 613
Available 407
Available BB_Credit 300
Average 487
Average RTT 621
Average RX Rate 543
Average TX Rate 547
Avg RX Rate 587
Avg. Round Trip Time 754

B

B1 728, 964
B2 730, 964, 965

B3 734, 965
Background 422, 431
Background Traffic 428
Backplane 256, 261, 262
Backplane Clock 261
Back-to-Back 387, 615
Back-to-Back button 504
Band 448
Bandwidth Usage 501
BAS Unexp. Period 932
Base Station 152
Basic OAM 371, 596
Batch button 406, 436
Battery 456
battery
 safety 812
Battery/AC Icons 48
BBE 523, 526
BBER 524, 527
BDI 933
BEI 965, 966, 967
Bell 1007
BER Threshold .. 236, 241, 245, 248, 250, 275,
 297, 368, 575, 582, 589, 595
BERT 234, 240, 244, 247, 249, 374
BERT Duration 459
BERT Edge Testing 460
BERT Threshold 460
BFD 687
BIAE 933, 934
Bidirectional 267, 381
Bidirectional Delay Measurement 371
Binary 1008
Binary/Hex 1037
BIP-2 967
BIP-8 967, 968
Bit Error .. 241, 245, 248, 250, 275, 297, 589,
 968
Bit Error Count .. 555, 570, 575, 577, 582, 593,
 595, 601
Bit Error Rate .. 555, 570, 575, 577, 582, 593,
 595, 601

Calendar Granularity	303
Calendar Mismatch	303, 935
Calibrating	602
Calibration Failed	766
Cancelled	766
Capture button	745
Capture Source	741
Capture Status	744
Capturing... ..	744
Carrier Ethernet OAM	101
Category	492
CAUI-4 Lane	676
caution	
of personal hazard	4
of product hazard	4
CBS	286, 414
CBS Test Time	282
CC Function	371, 399
CC Status	596
C-CDI	934
CCM	625, 663
CD	332, 513
CDF pFCS	315
C-FDI	934
Cfg. Status	743
CFO	332, 513
CFP	253
CFP4	21
CFP4 Control	673
CFP4 Power Class	673
CFP4 Reference Clock	673
CFP4 TX Status	675
CFP8	27, 28
CFP8 Reference Clock	673
CFP8 TX Status	675
Channel	680, 685, 700, 1019, 1024
Channel Assignment Status	1018
Channel Frequency	1024
Channel ID	983, 1016
channel identifier	886
Channel Number	1022
Channel Spacing	1022

C/R	694
C&M	321, 572
C&M Channel	321
c1	517
C2	333, 505, 735
cable	858
Cable Delay	450, 769
Cable Delay Compensation (ns)	463
Cable Mode	319, 793
Cable Test	103, 251
Calendar	303

Index

Channel Summary	370	CnD CRC-5	968
Channels Monitored	541	Code	312, 474, 500, 654
Chassis ID	1003	Code Word	572
cHEC	719	Codeword	498, 692, 699, 700
cHEC-CORR	973	Collision	968
cHEC-UNCORR	973	Command/Response	695
CID	315, 502, 718, 720	Committed	407
CIR	361, 393, 394, 413, 1028	Committed - Burst Test	543
CIR or CIR+EIR Frames	281	Committed Steps	546
CIR+EIR	361, 413	Complete	742
Circuit	696, 697	Completed	744
Classification	358, 362	Config TCM	428, 984
cleaning		Config/Save	796
front panel	811	Configuration	1023
Cleaning Optical Connectors	812	Configuration mismatch capabilities	1020, 1023
Client 154, 155, 178, 179, 186, 191, 205, 208, 247, 266, 307, 342, 374, 488, 513, 574, 655, 994		Configuration/Performance Results	605, 607
Client Assignment Status	993	Connect	223, 379, 784
Client Data	501	Connect button	1044
Client Frequency	935	Connected	381, 618
Client ID	303, 305, 306, 342, 376, 488, 492, 593, 594, 600, 652, 655, 993	Connectivity Verification	372, 599
Client Info	561	Connector 147, 148, 149, 151, 153, 155, 157, 163, 173, 175, 177, 179, 180, 182, 188, 196, 198, 201, 204, 207, 210, 211, 215, 219, 257, 296, 338, 792	
Client Management	501	Constellation	448
Client Offset	689	Continuity Check	399
Client RX Frequency	514	Continuity Check (Peer MEP)	624
Clients - Path OAM	371, 747	Continuous	401, 440, 765
Clients - Profile	376	Control	700
Clock	255, 295	Control Pins	673
Clock Accuracy	996	conventions, safety	4
Clock block	143	Coordinates	449, 454
Clock Class	996	Copy	407, 985, 1025
Clock Identity	561	Copy From Throughput	389
Clock Mode	255, 262, 792, 996	Copy RX	500, 649, 653, 654
Clock Out	261	Copy Service	407, 985
Clock Synchronization	255	Copy Services button	407
Clock Type	230	Copy Stream button	436
C-LOS	934	Core Header	716
Cm CRC-8	968	core header	883
CMF	942	Count	486, 767
CMF pFCS	315		

Couple with Interface	343
Coupled .. 156, 178, 179, 186, 192, 205, 208, 382	
Coupled RX to TX ... 234, 240, 244, 247, 249, 273, 297	
CP-Bit	969
CPRI	241, 275, 572, 573, 853
CPRI/OBSAI BERT	108
CRC	969
CRC-4	969
CRC-6	969
C-RDI	935
Critical Event	609
CS Type	373, 597
CS Type Mismatch	935
CS_LF	935
CS_LPI	935
CS_RF	935
CSF	663, 935
cTE (ns)	642, 643
cTE Averaging Period (s)	462
CTLE	681
Cumulative Offset	764
Current	487, 568
Current CWND	620
Current Laser Frequency	1025
Current Laser Wavelength	1025
Current RTT	620
Current Throughput	637
Current TX Power	1020
Current UTC Offset Valid	233
Cursor	495
Custom Bytes	289, 1001
Customer Frame TX Rate	441
customer service	820
Cut Through	616
CV	570, 969
CV Function	372

D

D1	729
D2	729
D3	729
D4 through D12	730
DAPI	468, 473, 599, 648, 653
DAPI Mismatch	935
DAPI ODU-TIM	469, 474, 649, 653
DAPI OTU-TIM	469, 474, 649, 653
DAPI TCM-TIM	469, 649
Data	1027
Data Size	751
Data Transfer	618
Date and Time	48
Date Stamp	508
DCI	941
DCO (Interface)	329
Deactivate Threshold (Symbols) 990, 1002	
Debounce Time	245, 276, 298
Decoupled	156, 205, 208
Default	984
Default all OH	718, 740
Default FlexE OH	711
Default Gateway	341, 351, 356, 999
Default Mapping	678, 1006
Default OTN OH	721
Defaults	294
Defect	237, 369, 491, 519, 556
Del Ch	1018
Delay	528, 751, 767, 1037
Delay (ms)	538
Delay 1,2	770
Delay Measurement	559, 598
Delay Mode	223, 230
Delay Req	561
Delay Req IPDV	559
Delay Skew	564
Delay Skew Threshold	252
Delay T14	769
Delay-Request	225
Delete All	993, 1018

Index

Delete Client 993
Delete Step 294
Delta 315
Denied Session Count 561
Desired Accuracy 450
Dest. MAC 544
Destination 300
Destination B-MAC Address 345
Destination EoE MAC Address 344
Destination Flooding 348
Destination IP Address 351, 750, 785
Destination MAC Address 280, 288, 347, 659,
785, 1000
Destination MAC address 408
Destination Node ID 685
Destination Port 353, 785
Details 511
Detection/Classification 567
Device Address 674
Device Under Test block 137
DGD 332, 513
Differentiated Services 1038
Direction 282, 392, 405, 543, 544, 546, 586,
607, 615, 619
Disabled 321, 767
Discarded 502
Disconnect 379, 784
Disconnect button 1044
Disconnected 283, 381, 391
Discover 1031
Discover Remote 283, 381, 392
Discovered Topology 301
Discovery 343
Displayed Results 504, 615
Disruption Count 556, 571, 578, 583, 590
Disruption Monitoring ... 238, 242, 246, 276,
298, 369
Disruption Time 519, 556, 571, 578, 583, 590
Distance To Fault 566
DM 524
DMM 663, 664, 791
DMR 662, 664, 791

Domain 222, 229, 561
Domain ID 398
Domain Mismatch 936
Drift Stability 451
Drop Eligible ... 345, 346, 349, 357, 400, 402,
493, 771
DS0 check box 423
DS0/E0 Size 1007
DS1 613
DSCP 363
DSCP Codepoints 1038
DSn/PDH BERT 81
DSn/PDH Multiplexing 155
DSP Mode 681
DSX-MON 257
dTEH Observation Period (s) 462
dTEH pk-pk (ns) 641
Dual RX 156
Dual Test Set 283, 381
DUPLEX 41
Duplex 318
Duration 394, 462, 465, 511
Dying Gasp 610
Dynamic Ramp 294

E

E0 check box 423
E1 728
E2 733
EB 522, 525
E-Bit 969
EBS 286, 414
EBS Test Time 282
EC 522, 525
eCPRI BERT 110
Edit Ch ID 1018
Edit ID 305, 993
Efficiency 632
EFS 525
eHEC 720
eHEC-CORR 974

Embedded DSn	208	EtherBERT	93, 272
Embedded PDH	208	Ethernet	321, 433, 790
Embedded SONET/SDH	190	Ethernet (All Unicast)	433, 790
EMIX	279, 361, 374, 411, 439	Ethernet BW	518, 655, 704, 790
EMIX Frame Sizes	988	Ethernet Frame	279, 374, 376
Emulation Mode	146, 152	Ethernet OAM	149
Enable	239, 409, 437, 703	Ethernet Traffic	633
Latency	277	EtherSAM	87
Enable TX	277, 375, 376	EtherType	289, 347, 1001
Enabled Time	703	0x88A8	345
Encapsulation	742, 1039	0x88E7	346
End Time	511	Event	511, 535
EoE	343, 742, 1013, 1039	Event Count	630, 696
EoE VLAN	344	Event Counts	697
equipment returns	820	Event Running Total	509
ERDI-CD	936	Exc. Coll.	969
ERDI-PCD	936	Exc. Skew	937, 938
ERDI-PD	936	Excess - Burst Test	543
ERDI-PPD	936	Excess Steps	546
ERDI-PSD	936	Excessive Instance Skew	938
ERDI-SD	936	Excessive PHY Skew	938
ERDI-VCD	936	Excessive Skew Test	604
ERDI-VPD	937	EXI	315, 502, 717, 719
ERDI-VSD	937	Exit button	52
Error Count	508, 704	EXM	941
Error Running Total	509	EXP	724
Error-free Codeword	498	Expected Frequency	691
Errors	677	Expected L2CP Handling	408, 544
Errors background color	486, 612	Expected Message	472
ES	522, 525	Expected QL	227, 444, 531, 534
ESD	9	Export	745, 989
ESF	522	EXT CLK	21, 22, 27, 29, 41
ESMC	444, 629	Ext Clock In	256
ESMC Generation	324, 445	Extension Header	718
ESMC Loss	937	extension header identifier	884
ESMC Monitoring	324	extension HEC	886
ESMC Rate Threshold	444	External	255, 262
ESMC RX Rate	629	External 1PPS	255
ESR	524, 527	External Reference	295
Estimated BB_Credit	591	External Reference block	143
Estimated Time	382	EXZ	969, 970
ETag	345		

F

F1	729	FEC-UNCORR-CW	973
F2	736	FED	329, 939
F3	737	FED Activate Threshold (BER)	1034
Fabric	301	FED Deactivate Threshold (BER)	1034
Fabric Status	302	Fibre Channel	300
Factory Default	347, 355, 446	Field Match	743
FAIL	50, 487	File	1044
False Carrier	970	File Name	497
Far-End	525	Filter	741, 991
FAS	970	Mask	992
FAS-S	970	Value	991
Fault Indication	499	Filter Configuration	704, 991
F-Bit	970	Filter Statistics	704
FC BERT	107, 297	Filters	703, 705
FC Frame	299	Fine Tuning	1024
FCS	354, 970	Fixed	308, 331, 361
FD	364, 606	Fixed Structure	1014
FDD	329, 938	FlexE	492
FDD Activate Threshold (BER)	1034	FlexE Clients	593
FDD Deactivate Threshold (BER)	1034	FlexE Group	303, 592
FDI	941	FlexE Group Down	939
FEAC	699	FlexE Group Number	303
FEBE	971	FlexE Group Number Mismatch	939
FEC	316, 426, 871	FlexE OH Frame Summary	711
FEC (RX Only)	317	FlexE PHY Number .. 253, 307, 316, 488, 673,	711
FEC Degraded SER	939	FlexE Status	303
FEC Exc. Skew	939	FlexO BERT	69
FEC Inv. Marker	972	FlexO Group ID	305, 306
FEC Statistics	498	FlexO Instance ID 253, 306, 307, 316, 488	
FEC-COR-BITS	971	FlexO Status	305, 306
FEC-COR-CW	971	FlexO/OUTCn	306
FEC-CORR-BIT	971	FlexO-OUTCn	305
FEC-CORR-BITS	971	Flood Range	348
FEC-CORR-CW	971, 972	Flow Control	319, 793
FEC-CORR-SYM	972	Traffic	658
FEC-LOA	938	Flow Direction	381
FEC-LOAML	939	Flow Label	222, 352
FEC-STRESS	972	FLR	364, 606
FEC-UNCOR-CW	972, 973	Force Release	424
FEC-UNCOR-FR	973	Force TX Idle	322
		Foreground Signal Label	726

Frequency/Offset	630
front panel, cleaning	811
FSD	941
FSF	941
FTFL	311, 499, 723
FTFL/PT	499
Function	401
Functions	51

G.709 OTN	860
G.742 Bit 12	776
G.751 Bit 12	775, 776
G.751 Bit 14, 15, 16	775, 776
G.8113.1	396
G1	736
GAL	400
GCC BERT	708
GCC0	722
GCC1	725
GCC2	725
Generate & Save	746, 989
Generated Messages	692, 696, 699
Generated QL	324, 445, 533
Generic Framing Procedure	877
GFP	877
GFP frame structure	881
GFP mapping	879
GFP-10B_ERR	973
GFP-CHEC-CORR	973
GFP-CHEC-UNCORR	973
GFP-DCI	941
GFP-eHEC-CORR	974
GFP-eHEC-UNCORR	974
GFP-EXM	941
GFP-F	315, 501
GFP-F/GFP-T	716
GFP-FDI	941
GFP-LFD	941
GFP-LOCCS	942
GFP-LOCS	942

Index

GFP-pFCS	974
GFP-RDI	942
GFP-Reserved CMF	942
GFP-SB-CORR	974
GFP-SB-CORR (Post)	974
GFP-SB-CORR (Pre)	974
GFP-SB-UNCORR	975
GFP-T	315
GFP-tHEC-CORR	975
GFP-tHEC-UNCORR	975
GFP-UPM	942
GFP-UserDefined CMF	942
GIDM	942
Global	
EtherSAM	283
RFC 2544	381
Services	405
Streams	435
Global alarm	50
Global Copy RX	500, 649, 653
Global indicator	49
Global IPv6 Address	997
Global Options	287, 381, 436
Global Pass/Fail Verdict	271, 442
Global PM TTI Traces	652
Global Test Duration Estimation	286
Global Thresholds Type	442
Global Verdict	50
GM Identity	995
GM Info	224, 558
GM IP Address	222, 223, 230
GMP	707
GNSS	452
Granted Power Class	567
Granularity	388
Graph	
RFC 2544	504
Traffic	660
Gray Encoding	682
Grid	1023, 1026
Group Down	942

Group Size	177
GTE	1007

H

H1	729
H2	729
H3	729
H4	736
H4-LOM	943
HDLC	321
Header Layer	742, 1039
Help	1044
Help button	52
Hi-BER	943
Hi-BER1027B	943
Highest Channel Number	1026
Highest Frequency	1026
Highest Offset	1026
HOP Limit TTL	352
Host Name	1044
Host/Media Loopback	163, 267
HP-PLM	955
HP-RDI	957
HP-REI	979
HPTC-IAIS	959
HPTC-IEC	980
HPTC-LTC	959
HPTC-ODI	959
HPTC-OEI	980
HPTC-RDI	960
HPTC-REI	980
HPTC-TIM	471, 651, 960
HPTC-UNEQ	430, 960
HPTC-VIOL	981
HP-TIM	471, 650, 961
HP-UNEQ	962
Hyperframe	572

I	
I/O Interface Quick Check	603
I2C - Bulk Read	674
I2C - Bulk Write	675
I2C - Read/Write	675
I2C Access Interface	674
I2C Address	675
I2C Data	675
I2C End Address	675
I2C Start Address	675
IAE	943
ID	455, 511
Ideal L4	608, 619, 621
identification label	816
Identity	995
Idle	501, 694, 975, 1008
Idle/Grp (K_MG)	324
IFDV	364, 606
IIDM	944
Illegal Client	944
Import/Export tab	804
Inconsistent Calendar	944
Increment/Decrement Size	689
Individual Pattern Duration	239
Information	535
Information Count	630
Information Rate	413
Informational	543, 547
Initial Window Size	458
Inject	490, 589, 659, 692, 700, 756
Inject button	490
Injection	696
Injects	692
Inserting and Removing Transceiver System 13	
FTBx-88260	13
FTBx-88460	16
Instance Skew Alarm Threshold	938
Interface . 150, 153, 157, 159, 170, 212, 263, 316, 337, 459, 613, 741	
Interface block	143
Interface ID Coupled	998
Interface Type	256, 258
Interface/Rate . 146, 148, 149, 155, 174, 176, 178, 179, 180, 181, 188, 193, 197, 199, 203, 206, 210, 211, 214, 216, 337, 792	
Internal	255, 262, 792
Internal 1/160	259
Internal 1/40	259
Internal 1/8	259
Internal GNSS	255, 295
Interrupt	561
Interval (CW)	990, 1002
Inv. Flag	975
Inv. Mapping	944
Inv. Marker	975, 976
Invalid	502, 503
Invalid DMR	538
Invalid LBR	536
Invalid LMR	539
Invalid LTR	772
Invalid Payload	537
Invalid SLR	540
Invalid TST	537
Inv-CW-Marker	975
Invert 236, 240, 244, 248, 249, 274, 297, 368	
Invert PRBS15 Pattern	708
iOptics	65
IP	351, 380, 433, 790
IP Address	341, 356, 398
IP Checksum	976
IP TOS/DS . 223, 230, 351, 352, 457, 687, 751	
IP Version	341, 356, 742, 1011, 1039
IPDV	529
IPDV Threshold	226
IPv4	351, 356
IPv6	352, 356
IPv6 Destination Address	352
iSAM	67
I-TAG	346
ITU G.8275.1	221, 229
ITU G.8275.2	221, 229

Index

J

J0	728
J0 Trace	324, 666
J1	734
J1 Trace	324, 666
J2	739
Jabber	976
jammed bit 8	1007
Jamming	454
JC	722, 724, 725
JC1	722
JC2	724
JC3	725
JC4	722
JC5	723
JC6	725
Jitter	443, 548, 550, 579, 606, 637, 1029
Streams	550
Job Information	796

K

K1	684, 730
K2	685, 730
K3	737
K30.7	976
K4	740
Keyboard usage	58

L

L Deg SER Det	944
L Deg SER Rcd	944
L1 Reset	572
L2	358
L2 Only	1010
L2CP	544, 586
EtherSAM	288
Services	408
L2CP Handling Test	284, 408
L3/L4	358
Label	400, 666
Label 1	400, 518
Label 2	400, 518
label, identification	816
Labels	333, 505, 513
Lane	492
Lanes Mapping & Skew	676
Lanes with Disruption	520, 541
LASER	41
Laser	325, 329, 415
Laser Frequency	1025
Laser OFF at Start-Up	267, 326, 330, 340, 416
Laser On	815
Laser ON/OFF	326, 416, 679, 1001
Laser Tuning Support	1025
Laser Tuning Test	459, 603
Laser Wavelength	1025
Last	487
Last Change	533, 630
Last cTE (ns)	642
Last Disruption	541
Last Link Trace Status	771
Last QL Message	630
Last QL Received	530, 533, 559
Late Coll.	976
Latency ...	443, 548, 551, 579, 584, 606, 615, 637, 1029
Streams	551
Latency button	504
Latency Configuration	389
Latency Measurement Mode	287
Latency Tag	299
Latency Tags Insertion	299
Layer	358, 490, 616
Layer 2	1031
Layer 3	1031
Layer Mode	1010
LBL Tx FIFO	961
LBL Tx LOA	961
LBL Tx OOA	961
LBL Tx RefClk LOL	962
LBM	663, 664, 791
LBO	259, 417

LBR	662, 664, 791	LOBL1027B	947
LBR Timeout	536	LOC	261, 947
LCD-P	944	LOC Lane	947
LCK	663, 945	Local	446
Lease Duration	225, 561	Local block	138
LED	41	Local Clock	319, 793
Blue	41	Local Fault Det	947
Legend TX/RX	726	Local Fault Detected	947
Length	564, 566	Local Fault Rcd	948
Length Threshold	252	Local Fault Received	948
Length Unit	251	Local Module Identification	786
LFD	941	Local Parameters	398
Line Coding	257, 259, 417	Local to Remote	381
Line Utilization	518, 591, 655, 704, 790	LOCCS	942
LINK	247, 272, 317, 337	LOCS	942
Link	303	LOCWS	948
Link Activity	694, 697, 701	LOF	948
Link Alarm	593	LOFLOM	949
Link Capacity	436	LOF-S	948
Link Degrade	945	Log Message Interval (Announce)	995
Link Degrade Signaling	319	Log Message Interval (Sync)	995
Link Down	945	Logger	510
Link Events	507	Logger Full 553, 557, 560, 569, 574, 576, 581, 588, 592, 600, 609, 611, 614, 618, 622, 623, 628, 631, 634, 636, 640	
Link Fault	610	Logical Lane	676, 677, 705
Link OAM	335, 609	Login	301
Link Trace	771	Logo	798
Link TX/RX Scrolling	726	LOL	949
LINK/RX	41	LOM	949
Link-Local IPv6 Address	997	LOMF	949
Listening	618	Longest Disruption	520, 541
Listening MAC Address	1003	LOOMFI	949
LLC	289, 1000	Loop Down	784, 786
LLC Control	289, 1000	Loop Layer	785
LLC DSAP	289, 1000	Loop UP	784, 786
LLC SSAP	289, 1000	Loop UP/Down	786
LLDP Neighbor	319, 1003	Loopback	401, 423, 433, 536, 701, 791
LMM	663, 664, 791	Loopback Commands	700, 702
LMR	662, 664, 791	Loopback Mode	790
LOA	946	Loop-Down	379, 425, 987
Loaded Voltage	568	Loop-Up	379, 425, 986
LOAML	946		
LOAML1027B	947		

Index

LOP-P 949
LOPPS-L 257, 287, 950
LOPPS-R 287, 950
LOP-V 950
LOR 950
LOS 257, 570, 950
Loss Announce 950, 951
Loss Continuity 951
Loss of OH Frame Lock 951
Loss of OH MF Lock 951
Loss of PHY Number Lock 951
Loss Sync 952
Lower Eye 680
Lowest Channel Number 1026
Lowest Frequency 1026
Lowest Offset 1026
LP-ERDI-CD 936
LP-ERDI-PD 937
LP-ERDI-SD 937
LP-PLM 334, 505, 955
LP-RDI 957
LP-REI 979
LP-RFI 958
LPTC- 980
LPTC-IAIS 959
LPTC-LTC 959
LPTC-ODI 959
LPTC-OEI 980
LPTC-RDI 960
LPTC-TIM 471, 651, 960
LPTC-UNEQ 430, 960
LPTC-VIOL 981
LP-TIM 471, 650, 961
LP-UNEQ 334, 505, 962
LSP 400
LTC 952
LTM 663, 664, 791
LtoR 393
LTR 662, 664, 791
LTR Timeout 772

M

M0 731, 733
M1 731, 733
MA Name 398
MAC 380
MAC Address 355, 398, 399, 561
MAC/IP/UDP 342
MAID 398
Main Cursor 680
maintenance
 front panel 811
 general information 811
Management Address 1003
Manual 319, 491, 589, 743
Manual Loopback Status 613
Manual Mapping 678, 1006
Manual Skew 706
MAPM 952
Mapping Efficiency 501
Margin 389
Mask 461, 494
 Filter 992
Matching & Swapping 434
Max Abs pkt sel TE 464
Max Abs pkt sel TE (ns) 643
Max Absolute TE 464
Max Absolute TE (ns) 641
Max cTE (ns) 642
Max CWND 621
Max dTEH pk-pk (ns) 641
Max Hop Count 752
Max Jitter 414
Max Latency 414, 587
Max Nb of Connection Allowed 392
Max pkt sel TE (ns) 642
Max Rate 491, 589
Max Round Trip Time 754
Max Round-Trip Latency 414
Max RTT 621
Max RX Power 326, 416
Max RX Rate 587

Max TE (ns)	641	Minimum	487
Max TIE (ns)	644	Minimum RTT	607, 619
Max TIE pk-pk (ns)	644	Minimum Window Size	458
Max TX Rate	440	Mismatch	315
Max. (-/+) Offset	630	Mismatch '0'	976
Max. Jitter	587	Mismatch '1'	977
Max. Negative Offset 309, 328, 420, 515, 690		Mismerge	952
Max. Positive Offset . 309, 328, 420, 515, 691		Mixed	1010
Max. Rate	385, 388	Mode 277, 295, 433, 491, 699, 765, 1019	
Maximum	487	Modify	304, 340
Maximum OAMPDU Size	506	Modify DS0	423
Maximum test duration	461	Modify E0	423
Maximum Window Size	458	Modify Frame Structure	1010
MD Level	399, 493	Modify Loop Codes	425, 987
MDIO - Bulk Read	674	Modify Structure	141
MDIO - Bulk Write	675	1588 PTP	146
MDIO - Read/Write	675	Cable Test	148
MDIO Access Interface	674	Carrier Ethernet OAM	149
MDIO Address	675	CPRI/OBSAI BERT	150
MDIO Data	675	DCO BERT	153
MDIO End Address	675	DSn/PDH BERT	155
MDIO Start Address	675	eCPRI BERT	157
Measure Delay button	766	EtherBERT	159
Mechanism	223, 230, 561	EtherSAM (Y.1564)	170
MEF	396	FC BERT	174
MEG ID	398	FlexE BERT	176
MEG Level	399, 493	FlexO BERT	178
MEP ID	399	Multi-Channel OTN	179
Message Group	573	NI/CSU Emulation	180
Message Impairment	561	OTN BERT	181
Message Rate	224, 561	OTN-SONET/SDH BERT	188
Message Type	354, 516, 517	RFC 2544	193
Messages	516	RFC 6349	197
Metrics	548	Smart Loopback	199
MFAS	721, 976	SONET/SDH BERT	203
Mid-Trigger	744	SONET/SDH-DSn/PDH BERT	206
Min pkt sel TE (ns)	642	SyncE	210
Min Round Trip Time	754	TCP Throughput	211
Min RTT	621	Through Mode	212
Min RX Power	326, 416	Time Error / Wander	214
Min TE (ns)	641	Traffic Gen & Mon	216
Min TIE (ns)	644		

Index

Modify Structure button 144, 148, 149, 153,
155, 159, 170, 174, 176, 178, 179,
180, 181, 188, 193, 197, 199, 203,
206, 212, 216
Modify Trib Slots/Channels 370, 1016
Modify Trib Slots/Port 428, 1014
Modify Wavelength 266, 267, 1022
Modules 1045
MON 257
Monetary Cost 1037
More 267
MPLS 350, 518, 742, 1039
MPLS Label 1012
MPLS-TP Label Stack 400
MPLS-TP Mode 400
MPLS-TP OAM 149, 396, 506, 536
 Traffic 663
MPLS-TP OAM Responder 397
MS-AIS 932
MSEQ Violation 977
Msg Grp/Frame (N_MG) 323
Msg/Grp (M_MG) 324
MSIM 952, 953
MSIM Monitoring 952, 953
MS-RDI 957
MS-REI 979
MS-REI Computation Method 430
MTIE 495
MTIE/TDEV 494
MTU 607, 619
Multicast 222, 230, 656
Multicast MAC 222, 230
Multi-Channel OTN 68
Multi-Pattern Configuration 239
Multiple Connections 393
Multiplexer Action 506

N

N1 737
N2 739
Name 288, 408, 544, 1000

NAT LAN/WAN 283, 358
Nb of Connections 621
n-Burst 440
NDF 764
Near-End 522
Negotiation Status 223, 558
Network 355, 358
Network block 138
Network Details 358, 377
Network Layer 1011
New Data Flag 756
New Pointer 756
Next HOP Router 398
n-Frame 440
NI/CSU Emulation 86
NJ0 726
No Defect Time 238, 242, 369
No NDF 764
No Pattern Analysis (Live) 234, 240, 244, 247,
249, 273, 368
No Traffic 953
No Traffic Time 245, 276, 298
Nominal Bit Rate 1015
None 1007, 1009
None (All 1's) 701
Non-Unicast 656
Not 991
n-Ramp 440
Number 430
Number of Burst Sequence 282
Number of Calls 1027, 1028
Number of Channels 1027, 1028
Number of Connections 393
Number of samples 645
Number of Symbols 498
Number of Trib Slots 1015

O

OA1 721
OA2 721
OAM Mode 335, 396, 506

OAM Quick Ping	347, 399	OPU Tributary Slots	427
OAM Responder	371	OPU-PLM	314, 476, 500, 654
OAM Version	506	OSFP	253
Obs. Interval	495	OSNR	332, 514
OBSAI	890	OTL	866
OCI	953	OTL4.4 Physical Lane	676
ODU	868	OTL-SDT	519
ODU Channels	368	OTN	721
ODU Multiplexing	873	OTN BERT	70
ODU Type	983	OTN BIP-8	977
ODUflex	875	OTN Multiplexing	178, 185, 189
ODUx TCM TTI Traces	467	OTN Traces/PT	472
Offset 258, 308, 309, 310, 327, 331, 418, 514, 635, 689, 690, 1025		OTN-SONET/SDH BERT	73
OH BERT	708	OTU	867
OH CRC	977	OTU frame structure	865
OH Details	720	OTU overhead	865
OH TX/RX (FlexE)	711	OUI	289, 348, 506, 1001
OMFI	726, 977	Out-of-Seq.	954
On Error	743	Out-of-Sequence	442, 443, 549, 550, 637
One-step	996	Override	154
One-Way	584	Override	977
One-Way Latency Threshold	1036	Oversize Monitoring	977
One-Way P P	278	Overtake	379
One-Way P -> P Threshold	278, 584	Overwrite	311, 312, 467
OOF	953	Overwrite Fixed Stuff	430
OOM	953, 954		
OOMFI	954		
OOR	954		
OOS	954		
Oper.	992		
Operation	568		
Operation Mode	391, 686		
Operator Identifier	312, 499		
Operator Specific 312, 469, 473, 499, 649, 653			
Optical Lane	325, 415		
Optical Metrics	332, 513		
Optical Module Insertion Counter	456		
Optical RX Power Test	603		
Optical TX Power Test	603		
OPU	869		
OPU Tributary Port	427		

P

Packet Capture	741
Packet Pause Time	659
Packets Received	688, 754
Packets Transmitted	688, 754
Page Select	674, 983
Pair	564
PAM-4 Histogram	683
PAM-4 Lane	683
Parameters	267, 282
Parser Action	506
PASS	50, 487

Index

- Pass/Fail Verdict 228, 236, 239, 241, 243, 245, 246, 248, 250, 252, 275, 276, 278, 287, 297, 299, 368, 369, 382, 394, 397, 444
 - FAIL 487
 - PASS 487
- Path OAM 371, 596, 747
 - Traffic 661, 747
- Path OAM APS 747
- Path OAM Client 594
- Path OAM on Client ID 371, 747
- Path Signal Label (C2) 325, 666
- Path/Mapping
 - DSn/PDH BERT 82
 - OTN BERT 68, 70
 - OTN-SONET/SDH BERT 74
 - SONET/SDH - DSn/PDH BERT 84
 - SONET/SDH BERT 77
- Pattern .. 234, 239, 240, 244, 249, 368, 1009
- Pattern Error ... 275, 555, 570, 575, 577, 582, 595, 601, 978
- Pattern Error Count 555, 570, 575, 577, 582, 595, 601
- Pattern Error Rate ... 555, 570, 575, 577, 582, 595, 601
- Pattern Loss 954
- Pattern on Client ID 249
- Pattern Sync 236, 274, 297
- Pause Frames 658
- Payload 354, 404
- Payload Content 1008
- payload FCS 887
- payload FCS indicator 884
- payload header 883
- payload information field 887
- Payload Type .. 305, 312, 370, 474, 500, 654, 1016
- payload type identifier 883
- PBB-TE 345, 742, 1013, 1039
- P-Bit 978
- PCS BIP-8 978
- PCS BIP-8 Mask 978
- PCS Lane 676, 677, 705
- PDI-P 954
- PDL 332, 514
- PDV 226
- Peer MEP Parameters 399
- Peer Target RP3 Address 323
- Per Direction Configuration 287
- Percentage Lost 754
- Performance Criteria 364, 414
- Performance Information 698
- Performance Monitoring 521
- Performance Report Message 696
- Performance Test 359
- Period 371, 372, 400, 402, 491, 493, 1032
- pFCS 974
- PFI 502, 716, 719
- PHY 492, 705
- PHY n / Instance n (Port n) 994
- PHY Skew Alarm Threshold 706
- PHY TX Skew 1005
- PHY Type 147, 157, 162, 172, 176, 195, 198, 201, 213, 215, 218, 338
- PHY/Port 1005
- Physical clock port 143
- Physical Connection 142
- Physical Interface 325, 329, 415
- Physical interface port 142
- Ping & Trace Route 750
- Ping button 751
- Pins 564
- Pk-pk pkt sel TE (ns) 643
- Pkt Mode 229
- Pkt sel cTE Averaging Period (s) 463
- Pkt sel TE (ns) 642
- PLI 719
- PLM 955
- PLM-P 955
- PLM-P/UNEQ-P 955
- PLM-V 334, 505, 955
- PM 724
- PM & TCM 723
- PM TTI Traces 467, 472, 652

PoE	251, 567	Pre-Trigger	744
PoE Loaded Voltage Thresholds	252	Primary Port / Secondary Port	213
Point To Point	301	Priority	399, 402, 493, 692, 694, 771
Pointer Adjustment	755	Priority 1	995
Pointer Value	755, 764	Priority 2	995
Port	253, 307, 316, 488, 492, 673, 705	PRM	694, 698
Port #1 to Port #2	381	PRM Bit Events	696, 697
Port #2 to Port #1	381	product	
Port A	23	identification label	816
Port A1	23	specifications	3, 823
Port A2	23, 24, 33, 34	Profile	221, 229, 360, 376, 410, 1027
Port B	23	eCPRI	268
Port B1	23	Services	409
Port B2	23	Streams	437
Port Description	1003	Programmable TX Power not supported	1020,
Port ID	1003	1023	
Port Identity	995	Programmable TX Power Supported	1021
Port Number	561	Prop. Delay	563, 566
Port Status	302	Prop. Delay Threshold	252
Port VLAN ID	1003	Propagation Delay	770
Port1 - QSFP28	177, 178	Protected Channel	685
Port2 - QSFP28	177, 178	Protection Type	748
Port3 - QSFP28	177, 178	Protocol	320, 572
Port4 - QSFP28	177, 178	Protocol block	143
POS Violation	978	PSE Type	567
Position Mode	449	PSI	726
Post Cursor	680	PSP (Link Protocol)	320
Post-Trigger	744	PTI	716, 719
Power	568	PTP	221, 229
Power Class	252	PTP Message	528, 562
Power Consumption	459, 604	PTP Session	561
Power Presence	567	PTP Stats	528
Power Range	326, 330, 416, 513, 792	PTP Timescale	233
Power Threshold	459	Ptr. Decr.	764
Pre Cursor	680	Ptr. Incr.	764
Preamble/SFD	343	PW	400
Precedence	1037		
Precoding	318		
Pre-Emphasis/RX EQ	680		
Pre-FEC-Bit	978		
Pre-FEC-SYMB	972, 978, 979		
Prefix Mask	998		

Q

QL Message	630
QL Mismatch	955
QL Mismatch Frame Count	534, 630

Index

QL Mismatch Monitoring 226, 444, 530, 533
QL Rate 445
QoS Metrics 442
QoS Metrics Tags Insertion 436
QSFP 21, 22, 27, 253
QSFP Control 673
QSFP Power Class 673
QSFP28 29
QSFP56-DD 28
Qty of Clients 303, 305
Quality Level 226, 530, 533, 559
Quantity 382, 983
Quantity of Channels 370
Quick Ping 222, 352, 457, 782, 785
QZSS 448

R

R Deg SER 956
RAI 956
RAI MF 956
Ramp 440
 EtherSAM 294
 Service Configuration 546
Ramp Cycle Count 1032
Ramp Duration 294
Ramp Nb. of Steps 1032
Ramp Test 285
Random Mapping 678, 1006
Range 308, 331
Rate 265, 321, 486, 491, 589, 1027
Rate Unit 382, 393, 395, 407, 436, 458
rates 876, 895
RD 956
RDI 942, 956, 957
RDI-L 957
RDI-P 957
RDI-V 957
Read 675
Ready 766
Receipt Timeout 225
Receive Messages 694, 701
Received QL 324, 444
Receiving Live Traffic 554, 570, 575, 577, 582,
 595, 601
Recovered 255, 262
REF OUT 21, 22, 27, 29, 34, 39, 259
REF-FAULT 957
Refill 281
Refill Delay 281
Refill Delay Ratio 282
Refresh 497
regulatory information xiii, xv
REI-L 979
REI-L Computation Method 430
REI-P 979
REI-V 979
Relative 510
Release 424
Reliability 1037
Re-Login 301
Remote block 138
Remote Control 446
Remote Discovery ID 341
Remote Fault 958
Remote Fault Emulation 318
Remote Interface Discovery 1031
Remote IP Address 457
Remote Loopback 507
Remote Module ID 785
Remote Module Type 782
Remote Modules Discovery 782, 785
Remote PHY Fault 947, 958
Remote Radio Head 152
Remote Status 270, 785
Remote to Local 381
Remote ToolBox 1041
 Installation 1043
 Starting and using 1044
Remote unit in DTS Mode 585, 614, 618
Remote unit in use and locked for DTS ... 586,
 614, 618
Remove Offset 496
Renewal Interval 225

Replied Details	754	Round Trip Time	768
Report Content	697	Round-Trip	584
Request	684	Round-Trip Latency	277, 591
Request/State	747	Round-Trip Latency Threshold	299, 591
Request/State Interpretation	747	RP3 Address	323
Requested Signal	748	RP3 Peer Target Address	573
Requesting MEP ID TLV	402	RPF	958
RES	722, 723, 725	RS (J0)	470, 650
Reserved	748	RS-FAS	970
Reserved Bit	1037	RS-FEC	317, 322, 339
Reserved CMF	942	RS-FEC (RX Only)	317
Reserved PLI	502	RS-LOF	948
Reserved PTI	502	RS-OOF	959
Reset	767	RS-TIM	471, 650, 961
Reset button	800	RTD	765, 768
Reset Skew	679, 706	RtoL	393
Resolution	1026	RTT	606, 768, 770
Resolve MAC	398	Running	766
Resolve MAC Address	347, 353, 380	Runt	979
Responder	664	RX	1016
Restore Carrier Ethernet OAM Defaults ...	404	RX 2DMR	598
Restore Default	446, 988	RX button	727
Restore Default at Start-Up	446	RX CCM	624
Restore OTN BERT Defaults	272	Rx CDC LOL	958
Restore Previous	1022	RX Cm	707
Restore RFC 6349 Defaults	395	RX CnD	707
Restore RX Defaults	682	Rx Demod LOL	958
Restore TCP Throughput Defaults	458	Rx Deskew LOL	958
Restore TX Defaults	680, 681	RX DMR	538
Results	51, 752	Rx FIFO	958
Re-transmitted Frames	632	RX Frame Clock Burst Details	517
return merchandise authorization (RMA) ..	820	RX Frame Count	549, 593
Revision	506	RX Frames	544, 615
RFC 2544	89	RX Frequency .. 309, 310, 327, 420, 514, 635,	690
Global	381	RX LBR	536
RFC 6349	91, 391	RX Line Utilization	627
RFC 6349 Results	605, 607	RX LMR	539
RFC 6349 Test on Service 1	359	Rx LOA	958
RFI-V	958	Rx LOF	958
R-LOF	956	Rx LOL	958
Round Trip Delay	768, 769, 770	Rx LOM	959
Round Trip Latency	633		

Index

RX LTR 772
RX Mismatch 502
RX OH Byte Details 726
Rx OOA 959
RX Pattern 234, 240, 244, 247, 249, 273, 297
RX Pointer Adjustment 764
RX Power 326, 330, 415, 513, 792
RX Power Range 459
RX Rate 548, 552, 580, 593, 606, 1030
RX Seed 323
RX Signaling 774
RX SLR 540
RX Structure Match 1017
RX Termination 418
RX TST 537

S

S. & F. 616
S1 429, 730
Sa4 775, 776
Sa5 775, 776
Sa6 775, 776
Sa7 775, 776
Sa8 775, 776
safety
 battery 812
 caution 4
 conventions 4
 warning 4
Sampling Rate 461, 645
SAPI 468, 472, 599, 648, 652
SAPI Mismatch 959
SAPI ODU-TIM 469, 474, 649, 653
SAPI OTU-TIM 469, 474, 649, 653
SAPI TCM-TIM 469, 649
Save In 745, 989
Save to CSV 983
Save/Load button 801
Save/Load tab 802
SB-CORR 974
SB-CORR (Post) 974

SB-CORR (Pre) 974
SB-UNCORR 975
Scale 683
Scrambler 426
Scrambling 320, 323
SDI 959
SDT Threshold 239, 243, 246, 276, 299, 370,
 541, 556, 571, 578, 583, 590
Secondary Port 213
Seconds 486
Section 400
Section (J0) 470, 650
SEF 959
Send diagnostics 52
SEP 525
SEPI 525
SEQ Violation 979
Sequence 320, 572
Serial Number 455
Server Address 1044
Service 409, 586, 606, 607
service and repairs 820
service centers 821
Service Configuration
 Ramp 546
Service Configuration Test 284, 359, 586
Service Configuration Test button 586
Service Configuration Test Status 585, 605
Service Disruption ... 237, 242, 369, 519, 541,
 555, 571, 578, 583, 590
Service Duration 225
Service Name 282, 405, 408
Service Name and Selection 543, 544, 546,
 548
Service No 282
Service Performance 548
Service Performance Test 286, 586
Service Performance Test button 586
Service Performance Test Status 585, 605
Services 360
SES 522, 525
SESR 524, 527

-
- Set All 1008
 - Setup 51
 - SFN 517
 - SFP 253
 - SFP+ 21
 - Shaping 277, 375, 376, 440, 441
 - shipping to EXFO 820
 - Si0 775, 776
 - Si1 775, 776
 - SID 346
 - Signal 296, 415
 - Signal Auto-Detect 220
 - Signal Configuration 421
 - DSn/PDH 422
 - OTN 426
 - SONET/SDH 429
 - Signal Failure 959
 - signal rates 876, 895
 - Signaling Bits 773
 - Signaling Mode 773
 - Signature 1031
 - Signature Advanced Details 1031
 - Single 765
 - Size 305, 306
 - Size (Gbit/s) 303, 342, 376, 488, 593, 655, 993
 - Skew 676, 677, 705, 1005
 - Skew Alarm Threshold 679, 937, 938, 939
 - Skew Inc/Dec Size 1005
 - Skew Threshold 460
 - SLA button 406
 - SLA Parameters 413, 548
 - SLA Verified 543, 546
 - SLM 663, 664, 791
 - Slot 994
 - SLR 662, 664, 791
 - SM 721
 - SM TTI Traces 467, 472, 652
 - Smart Loopback 97, 433
 - SMB 41
 - S-OAM 350, 396, 506, 536, 1010
 - Traffic 663
 - S-OAM Link Trace 771
 - S-OAM Responder 396, 434, 791
 - Software options 53
 - SONET/SDH 727
 - SONET/SDH - DSn/PDH BERT 83
 - SONET/SDH BERT 76
 - SONET/SDH Multiplexing 191, 204, 207
 - SOPCR 332, 514
 - SOPMD 332, 514
 - Sort By 510
 - Source 259, 300
 - Source B-MAC Address 345
 - Source EoE MAC Address 344
 - Source Flooding 348
 - Source IP Address 351, 750
 - Source IP Multiplier 353
 - Source MAC Address 280, 346
 - Source Node ID 685
 - Source Port 353
 - Source RP3 Address 323
 - Spare 718, 720, 886
 - Spare Bits 775
 - Special VID values ... 280, 340, 344, 345, 349, 357, 362
 - Specific IP 782
 - specifications, product 3, 823
 - Speed 318, 339, 793
 - SRBD 157, 162, 172, 176, 195, 198, 201, 213, 218, 339
 - Start button 805
 - Start Time 465, 553, 557, 560, 563, 569, 574, 576, 581, 585, 588, 592, 600, 602, 605, 609, 611, 613, 614, 618, 622, 623, 628, 631, 634, 636, 640, 789
 - Stateless Auto 997
 - Static 997, 999
 - Status 553, 557, 560, 563, 569, 574, 576, 581, 588, 609, 613, 622, 623, 624, 626, 628, 634, 636, 640, 753, 766, 789, 993
 - Status Bar 44
 - Alarm/Error Injection 48
 - Clock synchronization 47

Index

Connected 47
Disconnected 47
ESMC 44, 45
Interface/Signal 44
Laser 46
LINK 45
Loopback 47
Loopback mode 48
OH 47
P1, P2 44
P1, P2, P3, P4 44
Pattern 47
Power level 46
Remote PC connection 47
Test icon 44
TX/RX, TX, RX 44
Status Pins 674
Step 504, 615, 616, 755
Step Size 308, 327, 331, 419
Step Time 294, 1032
Steps Removed 233, 995
STM-1 Channel 727
Stop button 805
Stop Time 466
storage requirements 811
Stream 437, 550, 551, 552, 578, 637, 750
Stream Name 435
Stream Selection and Activation 437
STS Path (C2) 333, 505
STS Path (J1) 470, 650
STS Path (N1) 471, 651
STS-1 Timeslot 727
Subchannel 321
Subnet 782
Subnet Mask 341, 351, 356
Subtest Duration 284, 286
Sub-Test Sequence 602
Subtests 284, 382
 RFC 2544 384
Subtests EtherSAM
 Service Configuration Test 359
Subtype 289, 1001

Summary 557, 560, 569, 574, 576, 588, 592,
 600, 611, 628, 631, 640
 Cable Test 563
 EtherBERT 581
 EtherSAM 585
 iSAM 602, 605
 MPLS-TP OAM 609, 623
 NI/CSU Emulation 613
 OTN/SONET/SDH/DSn/PDH 553
 RFC 2544 614
 RFC 6349 617
 Smart Loopback 622
 S-OAM 609, 623
 Through Mode 634
 Traffic Gen & Mon 636
Superblock 503
Supported 1026
Survey-In 449
Sweep 308, 331, 439
Swing 681
Switching Mode 684
Symbol 980
symbols, safety 4
Sync 224, 322, 561, 573
Sync Header 980
Sync IPDV 559
SyncE 105, 444
Synchronization Status Message (S1) 429
Synthetic Loss 401, 540
Synthetic Loss Ratio 627
Synthetic Loss Threshold 1036
System 127
System - General 446
System Description 1003
System Name 1003

T

T0 698
T0-1 698
T0-2 698
T0-3 698

TA4-CFP2	27	TC-TIM-P	471, 651, 960
TA4-CFP8	28	TC-TIM-V	471, 651, 960
TA4-OSFP	28	TC-UNEQ-P	430, 960
TA4-QSFP-DD	28	TC-UNEQ-V	430, 960
Target	782	TC-VIOL-P	981
Target RP3 Address	323	TC-VIOL-V	981
Target TX Power	1020	TDEV	495
TC	400	TE (ns)	641
TC-IAIS-P	959	TE Scale	645
TC-IAIS-V	959	technical specifications	3, 823
TC-IEC-P	980	technical support	816
TC-LTC-P	959	Temp. Threshold	459
TC-LTC-V	959	Temperature	604
TCM	427, 430, 870, 984	temperature for storage	811
TCM Access Point Identifier	471	TERM	257
TCM ACT	723	Termination	257
TCM TTI Traces	472	Test	401, 537
TCM1	724	Test Applications	63
TCM2	724	Test Block	143
TCM3	724	Test Configurator	127
TCM4	723	Ethernet Test Applications	139
TCM5	723	Fibre Channel Test Application	140
TCM6	723	Intelligent Apps	137
TC-ODI-P	959	Overview	137
TC-ODI-V	959	Packet Sync Test Applications	140
TC-OEI-P	980	Transport Test Applications	139
TC-OEI-V	980	Wireless Test Applications	140
TCP	353, 434	Test Control	51
TCP Checksum	981	Test Equipment	446
TCP Connection Configuration	457	Test Function	401
TCP Connection Status	632	Test ID	404
TCP Efficiency	608, 620, 621	Test Menu	51
TCP Mode	457	Test Parameters	412
TCP Port	392, 457	Test Pattern	404
TCP Throughput	100, 457, 619, 633, 646	Test Recovery .. 553, 557, 560, 569, 574, 576,	
TCP Throughput Configuration	458	581, 588, 592, 600, 609, 611, 614,	
TCP Throughput Threshold (% of ideal) .. 620,		618, 622, 623, 628, 631, 634, 636,	
621		640	
TC-RDI-P	960	Test Sequence block	137
TC-RDI-V	960	Test Setup	63
TC-REI-P	980	Test Status	592, 600, 607, 611, 617, 631
TC-REI-V	980	Test Timer	51

Index

- tHEC 719
- tHEC-CORR 975
- tHEC-UNCORR 975
- Threshold 458, 508
- Threshold (% of ideal) 359, 394
- Thresholds 317, 320, 550, 551, 552, 990, 1002, 1036
- Through 156, 187, 192, 205, 209
- Through Intrusive 187, 192
- Through Mode 99
- Throughput .. 271, 384, 442, 580, 615, 1030, 1033, 1037
 - Streams 552
- Throughput button 504
- Throughput meter 632
- Throughput Pass/Fail Verdict 458
- Throughput Threshold 632
- TIE (ns) 644
- TIE Scale 645
- TIM 960, 961
- Time 511, 698
- Time Error 214, 496
- Time Error / Wander 461
- Time Interval Error 496
- Time Lock 453
- Time Mode 510, 542
- Time Source 449, 996
- Time Stamp 508, 542
- Time Traceable 233
- Time Zone 446
- Timeout 751, 752
- Timer 51, 127, 465
- Timeslot 430
- TIM-P 471, 650, 961
- TIM-S 471, 650, 961
- TIM-V 471, 650, 961
- Title Bar 48
- TLV Type 404
- To the following Services 407, 985
- Toffset 769
- Tone 1008
- Topology 141, 150, 152, 156, 157, 158, 169, 173, 178, 179, 186, 192, 196, 205, 208, 219
- TOS/DS 392, 1037
- TOS/DS Config 223, 230
- Total 502, 503
- Total Burst Test Time 282
- Total Frame 658
- Total Number of Bytes 742, 1039
- Total PTP Messages 559
- Total TX Rate 407, 436, 441
- Total TX/RX MPLS 518
- Trace Route 752
- Traces 666
 - OTN 467, 541, 647, 652
 - SONET/SDH 470, 650
- Traffic 591, 655
- Traffic Class (TOS/DS) 351, 352, 392
- Traffic Ethernet 622, 634
- Traffic Gen & Mon 95
- Traffic Monitoring 663
- Traffic Policing 412
- Traffic Scan 777
- Transaction Fault 447
- Transceiver App Code 154
- Transceiver Config 1023
- Transceiver Initializing... 1020, 1023
- Transceiver System Insertion Counter 455
- Transceiver System Parameters 455
- Transmitted Frames 632
- Transparent 202, 789
- Transparent (Pseudo-Physical) 202, 789
- transparent-mapped GFP 879
- Transport Layer 501, 1011
- transportation requirements 811, 816
- Trial 615
- Trial Duration 385, 388, 389
- Trials 385, 387, 388, 389
- Tributary Port 1015, 1016
- Tributary Slot 1019
- Tributary Synchronization 262
- Trigger Position 744

Trigger Type	743	TX LMM	539
Triggered Error	744	Tx LOL	961
Triggered Frame - Details	744	TX LTM	771
Triggered Frame Details	1038	TX MCLK	259
Truncated	742	TX Mode	440
Truncation Calculator	742, 1039	TX Pattern 234, 240, 244, 247, 249, 273, 297, 368	
TS16 AIS	961	TX Poniter Adjustment	755
TS16 Frame 0 Bit 5, 7, 8	775, 776	TX Power	325, 329, 415, 420
TST	663	TX Power Range	459
TST RX Rate	627	TX Rate ... 234, 268, 277, 299, 375, 376, 402, 435, 440, 546, 552, 580, 593, 1030	
TTI Traces		TX Seed	323
PM	472	TX Signaling	423, 773
SM	472	TX SLM	540
TCM	472	TX to RX	381
TTL	345, 350, 351, 352, 400, 751, 771	TX TST	537
TTL Expired	1003	Type 280, 288, 305, 306, 323, 344, 349, 357, 423, 490, 600, 1000	
TU Path	432	Type Header	716
TU Path (J2)	470, 650	type HEC field	886
TU Path (V5)	334, 505	Type Of Service	1037
TU-3 Path (J1)	470, 650		
TU-AIS	932		
TU-LOP	950		
Tuning Status	1021, 1025		
TU-Path (N1)	471, 651		
TU-Path (N2)	471, 651		
Two-step	996		
TX	1016		
TX = RX	1016		
TX 2DMM	598		
TX BAS	596		
TX button	727, 805		
TX CCM	624		
TX CIR	606		
TX Cm	707		
Tx CMU LOL	961		
TX CnD	707		
Tx Deskew LOL	961		
TX DMM	538		
TX Enable	371, 401		
TX Frames	544, 615		
TX Frequency ... 307, 310, 327, 331, 418, 689			
TX LBM	536		

U

UAS	524, 527
UDP	353, 434
UDP Checksum	981
UDP/TCP	790
Unassign	1019
Unassigned	694, 701
Uncorrectable Codeword	498
Undersize	981
UNEQ-P	962
UNEQ-V	334, 505, 962
Unexp MEP	962
Unexp Period	963
Unexp. MD Lvl	962
Unexp. MEG Lvl	962
Unframed	151, 158, 164
Unframed (Interop)	164
Unframed BERT 234, 240, 244, 247, 272, 374	

Index

Unframed with Sync 165
Unicast 222, 229, 656
Unidirectional 507
Unit 616
Unloaded Voltage 568
Unusable 226, 963
Unused Capacity 304, 370
UPI 502, 717
UPM 942
Upper Eye 680
Usage 305
Use Advertised Capabilities 1020, 1023
Use Stream 751
Use with QSFP28 to SFP28 Adapter 264
User Config 1023
User Defined Codes 1038
User Defined UPI 492
User Information 446
user payload identifier 884
User Performance 364
User Stream Destination from Test Application
785
UserDefined CMF 942
UTC Offset 995
UTC Variant 453

V

V5 738
Val. 615
Valid 503
Valid Event Count 697
Validations 386
Value 755
 Filter 991
Variable Retrieval 507
Variant 449
Vendor 151
Vendor Specific Information 507

Verdict 50
 -- 50
 FAIL 50
 PASS 50
Version 1 320
Version 2 320
VGA Tracking 682
VID 280, 340, 344, 345, 349, 357, 362
Video 1027
Video Codec 1027, 1028
View File After Generation 745, 989
VLAN 349, 435, 742, 1039
VLAN (ID/Priority) 406
VLAN ID ... 280, 340, 344, 345, 349, 357, 362
VLAN ID/Priority 340
VLAN Priority .. 280, 341, 344, 346, 349, 357,
363
VLAN Tag 343, 357, 1012
Voice 1027
Voice Codec 1027, 1028
VT Path 432
VT Path (J2) 470, 650
VT Path (V5) 334, 505
VT Path (Z6) 471, 651

W

WAN IP 283
Wander 106, 214
warranty
 certification 819
 exclusions 819
 general 817
 liability 819
 null and void 817
Wavelength ... 325, 329, 340, 415, 792, 1022
Window 508, 619
Window (KiB) 608
Window Boost Factor 393
Window Size 633
Window Size Target per Connection 393
Window Sweep 619, 665

Windows Size Unit	632
Wire Map	563
Wire Map Test Result	565
Wiring Standard	251
WIS	666
WIS button	324
WIS Link Down	963
World Wide Name	300
Write	675

Y

Y.1731	396

Z

Z0	728
Z1	730
Z2	733
Z3	737
Z4	737
Z5	737
Z6	739
Z7	740
Zero Code Suppression	1007
Zoom	497

中国关于危害物质限制的规定

包含在本 EXFO 产品中的有毒有害物质或元素的名称及含量

Part Name 部件名称	Lead 铅 (Pb)	Mercury 汞 (Hg)	Cadmium 镉 (Cd)	Hexavalent Chromium 六价铬 (Cr(VI))	Polybrominated biphenyls 多溴联苯 (PBB)	Polybrominated diphenyl ethers 多溴二苯醚 (PBDE)
Enclosure 外壳	O	O	O	O	O	O
Electronic and electrical sub-assembly 电子和电气组件	X	O	X	O	X	X
Optical sub-assembly ^a 光学组件 ^a	X	O	O	O	O	O
Mechanical sub-assembly ^a 机械组件 ^a	O	O	O	O	O	O

注:

This table is prepared in accordance with the provisions of SJ/T 11364.

本表依据 SJ/T 11364 的规定编制。

O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

0: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 标准规定的限量要求以下。

X: indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572. Due to the limitations in current technologies, parts with the “X” mark cannot eliminate hazardous substances.

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 标准规定的限量要求。

标记“X”的部件，皆因全球技术发展水平限制而无法实现有害物质的替代。

a. If applicable.

如果适用。

MARKING REQUIREMENTS
标注要求

Product 产品	Environmental protection use period (years) 环境保护使用期限 （年）	Logo 标志
This EXFO product 本 EXFO 产品	10	
Battery ^a 电池	5	

a. If applicable.
如果适用。

P/N: 32.0.0.1

www.EXFO.com · info@EXFO.com

CORPORATE HEADQUARTERS	400 Godin Avenue	Quebec (Quebec) G1M 2K2 CANADA Tel.: 1 418 683-0211 · Fax: 1 418 683-2170

TOLL-FREE	(USA and Canada)	1 800 663-3936

© 2024 EXFO Inc. All rights reserved.
Printed in Canada (2024-04)

