

Keysight M1970 Series Harmonic Mixer

This manual provides documentation for use with:
X-Series Signal Analyzers (Option EXM)



Notices

Copyright Notice

© Keysight Technologies 2011 - 2018

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

Manual Part Number

M1970-90001

Edition

Edition 4, April 26, 2018

Printed in:

Printed in Malaysia

Published by:

Keysight Technologies
Bayan Lepas Free Industrial Zone,
11900 Penang, Malaysia

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Declaration of Conformity

Declarations of Conformity for this product and for other Keysight products may be downloaded from the Web. Go to <http://www.keysight.com/go/conformity>. You can then search by product number to find the latest Declaration of Conformity.

U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

Safety Information

CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Warranty

This Keysight Technologies instrument product is warranted against defects in material and workmanship for a period of one year from the date of shipment. During the warranty period, Keysight Technologies will, at its option, either repair or replace products that prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by Keysight Technologies. Buyer shall prepay shipping charges to Keysight Technologies, and Keysight Technologies shall pay shipping charges to return the product to Buyer. For products returned to Keysight Technologies from another country, Buyer shall pay all shipping charges, duties, and taxes.

Where to Find the Latest Information

Documentation is updated periodically. For the latest information about these products, including instrument software upgrades, application information, and product information, browse to one of the following URLs, according to the name of your product:

- <http://www.keysight.com/find/smartmixers>
- <http://www.keysight.com/find/pxa>

Information on preventing analyzer damage can be found at:

- <http://www.keysight.com/find/tips>

Environmental Conditions

The M1970 Series is designed for indoor use and in an area with low condensation. The table below shows the general environmental requirements for this instrument.

Environmental condition	Requirement
Temperature	Operating condition
	– 0 °C to 55 °C
	Storage condition
	– -40 °C to 70 °C
Humidity	Operating condition
	– Up to 95% RH at 40 °C (non-condensing)
Altitude	Operating condition
	– <4572 meters (15000 feet)

Regulatory Information

The M1970 Series complies with the following Electromagnetic Compatibility (EMC) compliances:

EMC compliance

This product conforms with the protection requirements of EMC Directive 2014/30/EU for Electromagnetic Compatibility.


The product complies to the EMC Directive by assessment according to the IEC/EN61326-1 EMC standard.

In order to preserve the EMC performance of the product, any cable which becomes worn or damaged must be replaced with the same type and specifications.

- IEC/EN 61326-1
- CISPR Pub 11 Group 1, Class A
- AS/NZS CISPR 11
- ICES/NMB-001

This ISM device complies with Canadian ICES-001. Cet appareil ISM est conforme à la norme NMB-001 du Canada.

Regulatory Markings

 The CE mark is a registered trademark of the European Community. This CE mark shows that the product complies with all the relevant European Legal Directives.	 ICES/NMB-001 indicates that this ISM device complies with the Canadian ICES-001. Cet appareil ISM est conforme à la norme NMB-001 du Canada. ISM GRP.1 Class A indicates that this is an Industrial Scientific and Medical Group 1 Class A product.
 This symbol indicates the time period during which no hazardous or toxic substance elements are expected to leak or deteriorate during normal use. Forty years is the expected useful life of the product.	 The RCM mark is a registered trademark of the Australian Communications and Media Authority.
 This instrument complies with the WEEE Directive (2002/96/EC) marking requirement. This affixed product label indicates that you must not discard this electrical or electronic product in domestic household waste.	 This instrument is Class A suitable for professional use and is for use in electromagnetic environments outside of the home. 이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC

This instrument complies with the WEEE Directive (2002/96/EC) marking requirement. This affixed product label indicates that you must not discard this electrical or electronic product in domestic household waste.

Product category

With reference to the equipment types in the WEEE directive Annex 1, this instrument is classified as a “Monitoring and Control Instrument” product.

The affixed product label is as shown below.



Do not dispose in domestic household waste.

To return this unwanted instrument, contact your nearest Keysight Service Center, or visit <http://about.keysight.com/en/companyinfo/environment/takeback.shtml> for more information.

Sales and Technical Support

To contact Keysight for sales and technical support, refer to the support links on the following Keysight websites:

- www.keysight.com/find/smartmixers
(product-specific information and support, software and documentation updates)
- www.keysight.com/find/assist
(worldwide contact information for repair and service)

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

Table of Contents

Warranty	3
Where to Find the Latest Information	3
Environmental Conditions	4
Regulatory Information	5
EMC compliance	5
Regulatory Markings	6
Waste Electrical and Electronic Equipment (WEEE) Directive	
2002/96/EC	7
Product category	7
Sales and Technical Support	7
1 Overview	
Description	16
Initial Inspection	17
Shipping problems	17
Mixers Covered by This Guide	18
Serial numbers	18
Instrument Options	19
Spectrum Analyzer Retrofit Requirements	20
N9030A signal analyzer (requires Option EXM)	20
N9020A signal analyzer (requires Option EXM)	20
N9010A signal analyzer (requires Option EXM)	21
N9040B signal analyzer (Option EXM standard)	21
2 Operation	
Operating Precautions	24
RF input power	24
LO input power	24
Electrostatic discharge	24
Connect only one mixer at a time	24

Waveguide protection foam	25
Provide mechanical support for the mixer	25
Avoiding waveguide flange damage	25
Mixer waveguide connections	25
Using the M1970 Series Mixers with the N9030A, N9020A, and N9010A Signal Analyzers (Option EXM)	26
Equipment setup	26
Operation	27
Amplitude calibration	30
LO adjustment	30
Viewing the external mixer setup screen	30
Signal ID	32
Using the M1970 Series Mixers with the N9040B Signal Analyzer (Option EXM)	33
Equipment setup	33
Operation	35
Amplitude calibration	37
LO adjustment	37
Viewing the external mixer setup screen	37
Signal ID	39
3 Troubleshooting and Maintenance	
Troubleshooting	42
Error Messages	43
Maintenance	44
Replaceable parts	44
Returning an M1970 Series Mixer for Service	45
Contacting Keysight	45
Shipping your product to Keysight for service or repair	45
4 M1970 Series Specifications	
General Specifications	48
Physical Characteristics	50
Environmental Specifications	51

List of Figures

Figure 1-1	Mixer overview	18
Figure 2-1	External mixer setup screen	31
Figure 2-2	External mixer setup screen	38
Figure 4-1	M1970 Series dimensions	50

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

List of Tables

Table 1-1	Standard shipped items	17
Table 1-2	Instrument options	19
Table 1-3	Option EXM retrofit for N9030A	20
Table 1-4	Option EXM retrofit for N9020A	20
Table 1-5	Option EXM retrofit for N9010A	21
Table 2-1	Equipment setup for M1970 Series mixers and N9030A, N9020A, and N9010A signal analyzers (Option EXM)	26
Table 2-2	Operation of M1970 Series mixers and N9030A, N9020A, and N9010A signal analyzers (Option EXM)	27
Table 2-3	Equipment setup for M1970 Series mixers and the N9040B signal analyzer (Option EXM)	33
Table 2-4	Operation of M1970 Series mixers and the N9040B signal analyzer (Option EXM)	35
Table 3-1	Troubleshooting procedure	42
Table 3-2	Error messages	43
Table 3-3	Replaceable parts	44
Table 4-1	General specifications	48
Table 4-2	Physical characteristics	50
Table 4-3	Environmental specifications	51

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

1 Overview

Description	16
Initial Inspection	17
Mixers Covered by This Guide	18
Instrument Options	19
Spectrum Analyzer Retrofit Requirements	20

This chapter provides an overview of the Keysight M1970 Series harmonic mixer.

Description

The Keysight M1970V/E/W waveguide harmonic mixer is an un-preselected mixer that is used to extend the frequency range of the Keysight X-Series signal analyzer for high-frequency wireless and millimeter wave applications.

With emphasis on ease-of-use, the embedded features of the mixer will automatically transfer the conversion loss data from the mixer memory to the signal analyzer through the USB plug-and-play feature. It will also auto detect the mixer model and serial number to set the default frequency range.

Once the mixer is connected to the signal analyzer via both the SMA cable connection and the USB connection, the signal analyzer and mixer can perform an LO power adjustment that will compensate for SMA cable loss (cable length <3 meters) and optimize the LO power present at the mixer.

Initial Inspection

Inspect the shipping container and the cushioning material for signs of stress. Retain the shipping materials for future use, as you may wish to ship the instrument to another location or to Keysight Technologies for service.

Table 1-1 Standard shipped items

Item	Description
User's Guide	Provides instructions on usage, retrofit requirements, troubleshooting, specifications, and general information.
SMA cable	1 meter cable required to connect the mixer to the signal analyzer EXT MIXER connector.
USB cable	1.8 meter USB cable required to connect the mixer to the signal analyzer.
Certificate of calibration	Provides information regarding the instrument calibration.
Waveguide screws	Screws required for connection to the waveguide (5 ea).
Ball driver	3/32 inch hex driver for installation of the waveguide screws.
Wrench	5/16 inch for SMA cable installation.

Shipping problems

If the shipping materials are damaged or the contents of the container are incomplete:

- Contact the nearest Keysight Technologies office.
- Keep the shipping materials for the carrier's inspection.
- If you must return the instrument to Keysight Technologies, use the original (or comparable) shipping materials. See [“Returning an M1970 Series Mixer for Service”](#) on page 45.

Mixers Covered by This Guide

- M1970V Option 001: 50 to 75 GHz waveguide harmonic mixer
- M1970V Option 002: 50 to 80 GHz waveguide harmonic mixer
- M1970E: 60 to 90 GHz waveguide harmonic mixer
- M1970W: 75 to 110 GHz waveguide harmonic mixer

Serial numbers

A serial number label is attached to your mixer that shows the serial number and country of manufacture.



Figure 1-1 Mixer overview

Instrument Options

The following options are available:

Table 1-2 Instrument options

Option number	Description
M1970V/E/W-101	Cable, SMA, 1 meter, for LO/IF connection
M1970V/E/W-102	Cable, SMA, 3 meter, for LO/IF connection
M1970V/E/W-201	Cable, USB, 1.8 meter
M1970V/E/W-202	Cable, USB, 3 meter
M1970V/E/W-301	Jackstand

Spectrum Analyzer Retrofit Requirements

N9030A signal analyzer (requires Option EXM)

Instruments without Option EXM currently installed can be retrofitted to add the hardware and licensing.

To retrofit Option EXM:

Table 1-3 Option EXM retrofit for N9030A

N9030A frequency option	Serial number prefix	
	<MY/US/SG5138	≥MY/US/SG5138
550, 544, or 543	N9030AK-EXM	N9030AK-EXM
503, 508, 513, or 526	N9030AK-HL6	

NOTE

- The N9030A software revision must be A.08.52 or later for use with V or W band mixers.
- The N9030A software revision must be A.11.00 or later for use with E band mixers.

N9020A signal analyzer (requires Option EXM)

Instruments without Option EXM currently installed can be retrofitted to add the hardware and licensing.

To retrofit Option EXM:

Table 1-4 Option EXM retrofit for N9020A

N9020A frequency option	Serial number prefix		
	<MY/SG/US5233	MY/SG/US5233 to 5327	≥MY/SG/US5328
	No upgrade available	N9020AK-EXM	N9020AK-HL6

NOTE

The N9020A software revision must be A.14.03 or later.

N9010A signal analyzer (requires Option EXM)

Instruments without Option EXM currently installed can be retrofitted to add the hardware and licensing.

To retrofit Option EXM:

Table 1-5 Option EXM retrofit for N9010A

N9010A frequency option	Upgrade kit
532 or 544	N9010AK-EXM
503, 507, 513, or 526	N/A

NOTE

- The N9010A software revision must be A.10.52 or later for use with V or W band mixers.
- The N9010A software revision must be A.11.00 or later for use with E band mixers.

N9040B signal analyzer (Option EXM standard)

The N9040B is fully hardware-compliant since option EXM is standard on all instruments.

NOTE

The N9040B software revision must be A.15.05 or later.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

2 Operation

Operating Precautions	24
Using the M1970 Series Mixers with the N9030A, N9020A, and N9010A Signal Analyzers (Option EXM)	26
Using the M1970 Series Mixers with the N9040B Signal Analyzer (Option EXM)	33

This chapter provides the operating information for the M1970 Series harmonic mixer.

Operating Precautions

WARNING

Do not exceed the maximum ratings listed below or permanent damage to the mixer will result.

RF input power

Use the following parameters:

- CW: No greater than 20 dBm
- Peak pulse: No greater than 24 dBm at $<1\ \mu\text{s}$

See the gain compression values for each model mixer. Use an appropriate waveguide attenuator if the output power of the unit under test exceeds the gain compression value.

LO input power

LO input power is set by the internal signal analyzer LO alignment. However, the LO input must not exceed 20 dBm.

Always use a high quality low loss SMA cable since this will allow the longest cable length, and prevent damage to the mixer SMA female connector.

Electrostatic discharge

When installing the mixer, always connect the LO/IF SMA cable to the signal analyzer BEFORE connecting to the mixer. This will minimize the danger of an electrostatic discharge damaging the mixer diodes.

Connect only one mixer at a time

The automatic LO adjustment and mixer ID process assumes only one mixer is connected to the analyzer's USB and SMA EXT MIXER connections.

Waveguide protection foam

Do not remove, displace, or damage the non-conductive foam installed in the open end of the waveguide. This foam keeps small objects from entering the waveguide.

Provide mechanical support for the mixer

Assure the mixer body is properly supported so it does not present any stress on the waveguide connection. Instrument Option 301 provides a jackstand that allows a stable support and height adjustment.

Avoiding waveguide flange damage

Install the waveguide flange cap whenever the mixer is not connected to a device under test. This will protect the waveguide flange mating surface.

Mixer waveguide connections

Assure the shoulder of the mixer waveguide flange is properly aligned with the flange of the device under test. To ensure proper mating, it is important to tighten all screws equally. To do this, tighten opposed screws in pairs by a small amount until all are snug. Final torque must not exceed 7 in pounds.

Using the M1970 Series Mixers with the N9030A, N9020A, and N9010A Signal Analyzers (Option EXM)

Refer to “[Spectrum Analyzer Retrofit Requirements](#)” on page 20 for the configuration requirements.

The following examples explain how to connect the external mixers to the signal analyzer and how to use the signal-identification functions.


For additional information regarding use with a particular X-Series analyzer, refer to that analyzer's *User's Guide* and *Programmer's Reference Guide*.

Equipment setup

Table 2-1 Equipment setup for M1970 Series mixers and N9030A, N9020A, and N9010A signal analyzers (Option EXM)

Step	Action	Notes
SMA connection	a Connect an SMA cable from the mixer to the spectrum analyzer EXT MIXER front panel SMA.	The torque for the SMA cables and adapters should not exceed 8 in-lbs. The LO/IF connection between the mixer and the signal analyzer must be in place before the USB cable from the mixer is connected. Connecting the USB cable automatically triggers the LO adjustment, and if the LO/IF cable is not connected the adjustment will not complete and an error will occur.
USB connection	a Connect a USB cable from the mixer to the spectrum analyzer.	When a connection is made, the green LED on the mixer lights up indicating that the mixer has power and the processor inside the mixer is running. The spectrum analyzer is automatically switched to external mixing mode, and the mixer model number and mixer option are used to set the start and stop frequencies for the mixing band.

Table 2-1 Equipment setup (continued)for M1970 Series mixers and N9030A, N9020A, and N9010A signal analyzers (Option EXM) (continued)

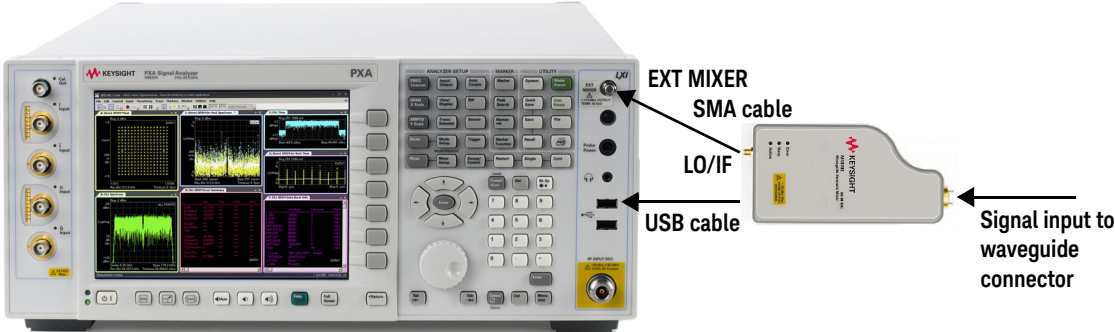Step	Action	Notes
		

The spectrum analyzer performs an LO alignment using a detector in the mixer to set the LO Power. During the alignment the yellow Busy LED turns on. Once the alignment completes, the mixer is ready to make calibrated measurements since the conversion loss values stored in the mixer are automatically loaded to the signal analyzer.

Operation

Table 2-2 Operation of M1970 Series mixers and N9030A, N9020A, and N9010A signal analyzers (Option EXM)

Step	Action	Notes
Tune the analyzer	a Apply a signal to the mixer input.	—
	b Press FREQ Channel and enter a center frequency or a start and stop frequency.	Multiple responses may appear on screen. Most of these responses are images or multiples of the mixing process and not true signals.

Table 2-2 Operation of M1970 Series mixers and N9030A, N9020A, and N9010A signal analyzers (Option EXM) (continued)

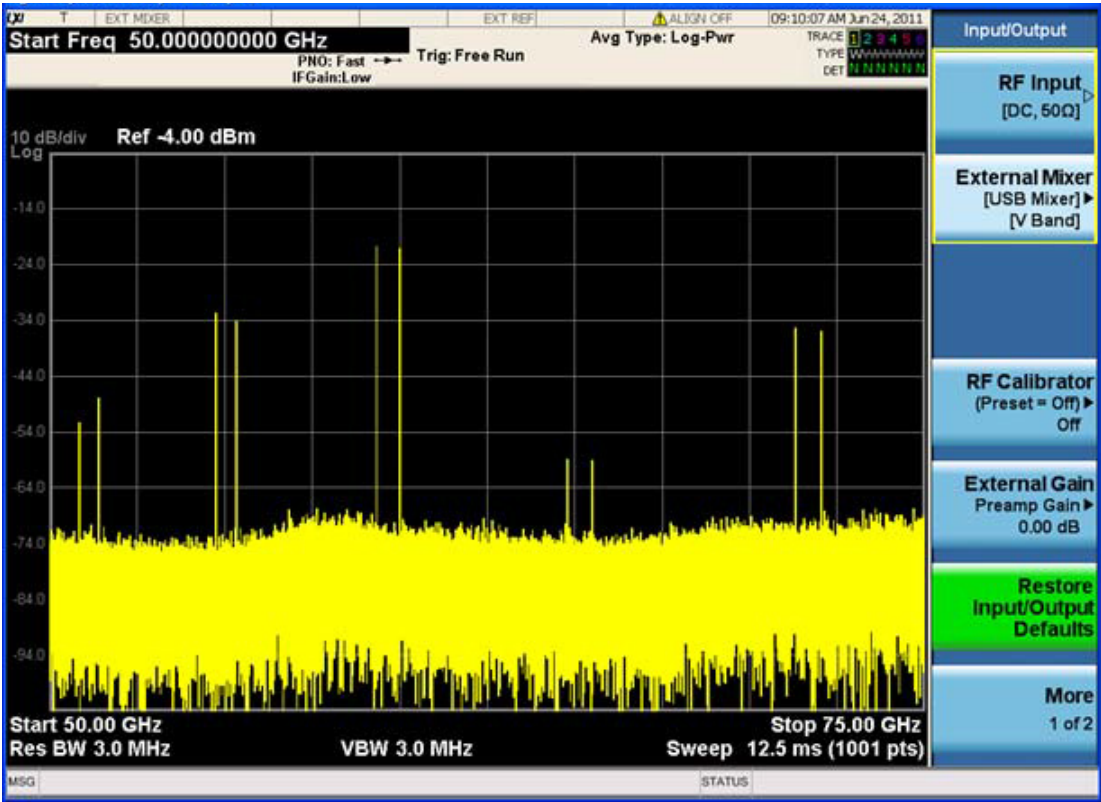
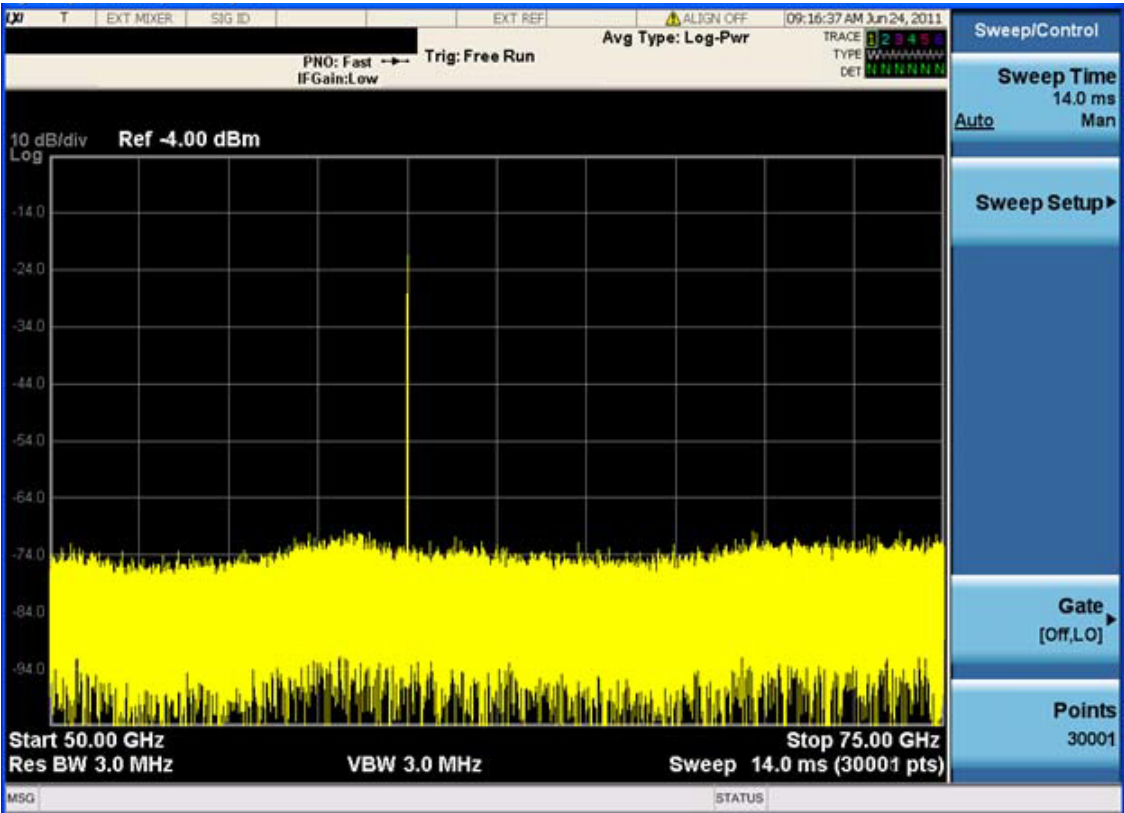
Step	Action	Notes
		
	Turn on the signal identification function.	
a	Press Input/Output , External Mixer , Signal ID to On , Signal ID Mode , Image Suppress .	This enables you to identify true signals from images and harmonics. Refer to the following graphic.

Table 2-2 Operation of M1970 Series mixers and N9030A, N9020A, and N9010A signal analyzers (Option EXM) (continued)

Step	Action	Notes
		

With wide spans, increasing the number of sweep points may improve the effectiveness of image suppressing.

a Press **Sweep/Control**, **Points**, enter the number, and press **Enter**.

Amplitude calibration

The M1970 Series mixers automatically download a conversion loss file to the signal analyzer, and this conversion loss table is used to correct the measured amplitude. It is not possible to view or edit the conversion loss file. The Certificate of Calibration that is provided with each mixer lists the conversion loss measured at the factory.

LO adjustment

The LO adjustment will run each time the USB connection is made, and if the signal analyzer Alignments are set to Normal, the LO adjustment will be performed based on time and temperature rules similar to the other signal analyzer alignments. Both the mixer and the spectrum analyzer temperature sensors are monitored by the alignment algorithm. If the Alignment is set to OFF, the LO Alignment will not be performed based on time and temperature, and it will be necessary for the user to determine when to perform alignments.

To manually trigger an LO alignment from the front panel, press **System, Alignments, Align Now, External Mixer**.

Viewing the external mixer setup screen

The mixer setup screen contains information such as the mixer serial and model numbers, harmonic mixing used, and status of the mixer connection. When the USB mixer is connected, the Mixer Preset, Mixer Bias, and Edit Harmonic Table keys are grayed out since these keys do not apply. However, if you unplug the USB cable, the Mixer Presets key will become functional and the connection status will show USB Mixer not connected.

To view the setup screen, press **Input/Output, External Mixer, Ext Mix Setup**.

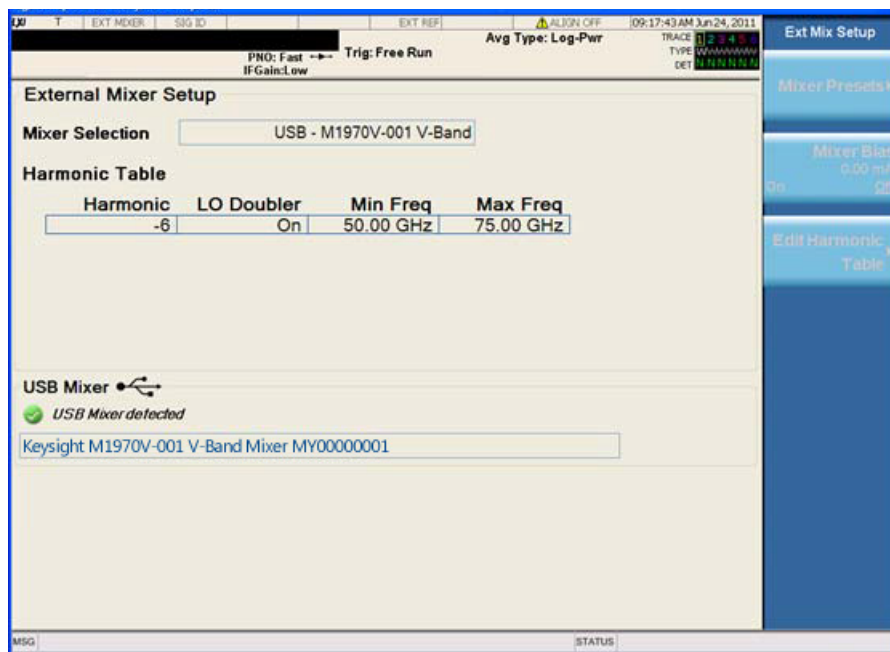


Figure 2-1 External mixer setup screen

Signal ID

Image Suppress

The Image Suppress mode of Signal ID mathematically removes all image and multiple responses of signals present at the mixer input. Two hidden sweeps are taken in succession. The second sweep is offset in LO frequency by $2*IF/N$. For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in Trace 1. Responses of each trace that lie on top of one another will remain and are valid signals, others are images and are suppressed.

NOTE

This function takes control of and uses Trace 1. Any data in this trace prior to activating Image Suppress will be lost.

In the Image Suppress mode, synchronization is ensured by first turning off Signal ID, initiating a single sweep, then turning on Signal ID followed by two single sweeps.

Image Shift

Like the Image Suppress mode, Image Shift is a two sweep sequence. The data from the first sweep is placed in Trace 1 and the data from the second (LO frequency shifted by $2*IF/N$) sweep is placed in Trace 2. Signal responses of Trace 1 and Trace 2 that have the same horizontal position are considered to be in the current band and therefore can be analyzed with the amplitude and frequency measurement systems of the SA. All other responses are invalid and should be ignored.

NOTE

This function takes control of and uses Trace 1 and Trace 2. Any data in these traces prior to activating Image Shift will be lost.

To synchronize in the Image Shift mode, turn off Signal ID and then initiate a single sweep. Then turn on Signal ID and initiate two single sweeps. The results of the first sweep after Signal ID is turned on are available in Trace 1. The next sweep is shifted and the data from that sweep is available in Trace 2. The unshifted and shifted data can then be compared.

Using the M1970 Series Mixers with the N9040B Signal Analyzer (Option EXM)

Refer to “[Spectrum Analyzer Retrofit Requirements](#)” on page 20 for the configuration requirements.

The following examples explain how to connect the external mixers to the signal analyzer, and how to use the signal-identification functions.

For additional information regarding use with a particular X-Series analyzer, refer to that analyzer's User's and Programmer's Reference Guide.


Equipment setup

Table 2-3 Equipment setup for M1970 Series mixers and the N9040B signal analyzer (Option EXM)

Step	Action	Notes
SMA connection	a Connect an SMA cable from the mixer to the spectrum analyzer EXT MIXER front panel SMA.	The torque for the SMA cables and adapters should not exceed 8 in.-lbs. The LO/IF connection between the mixer and the signal analyzer must be in place before the USB cable from the mixer is connected. Connecting the USB cable automatically triggers the LO adjustment, and if the LO/IF cable is not connected the adjustment will not complete and an error will occur.
USB connection	a Connect a USB cable from the mixer to the spectrum analyzer.	When a connection is made, the green LED on the mixer lights up indicating that the mixer has power and the processor inside the mixer is running. The spectrum analyzer is automatically switched to external mixing mode, and the mixer model number and mixer option are used to set the start and stop frequencies for the mixing band.

Table 2-3 Equipment setup for M1970 Series mixers and the N9040B signal analyzer (Option EXM) (continued)

Step	Action	Notes
------	--------	-------

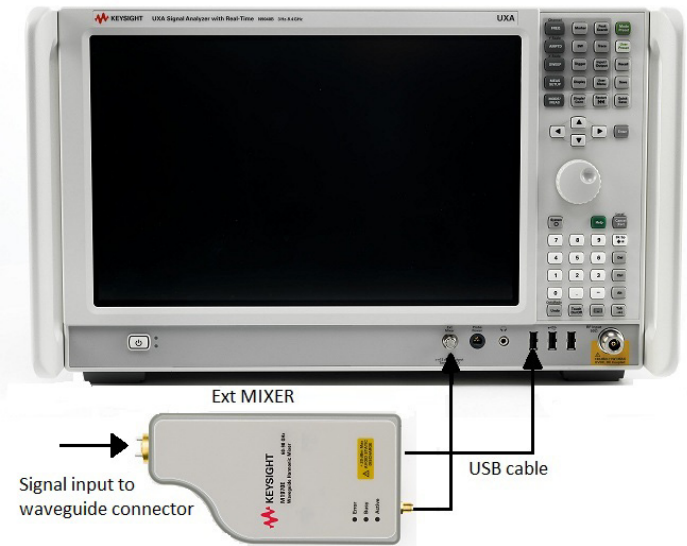


The spectrum analyzer performs an LO alignment using a detector in the mixer to set the LO Power. During the alignment the yellow Busy LED turns on. Once the alignment completes, the mixer is ready to make calibrated measurements since the conversion loss values stored in the mixer are automatically loaded to the signal analyzer.

Operation


Table 2-4 Operation of M1970 Series mixers and the N9040B signal analyzer (Option EXM)

Step	Action	Notes
	a Apply a signal to the mixer input .	—
Tune the analyzer	b Press the FREQ hardkey and on the screen tap Center Frequency or a Start and Stop frequency and enter a value.	Multiple responses may appear on screen. Most of these responses are images or multiples of the mixing process and not true signals.

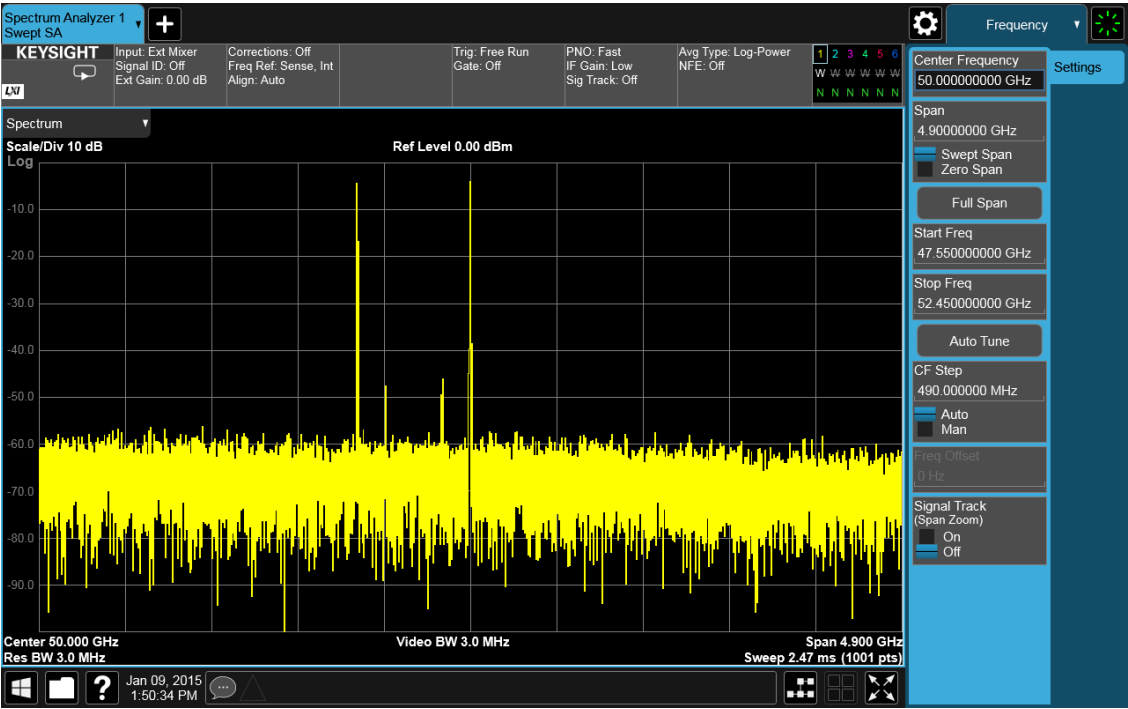

Turn on the signal identification function.	a Press the Input/Output hardkey. Tap Signal ID to toggle Signal ID on.	This enables you to identify true signals from images and multiples. Refer to the following graphic. See “Signal ID” on page 39 for more information.
---	--	---

Table 2-4 Operation of M1970 Series mixers and the N9040B signal analyzer
(Option EXM) (continued)

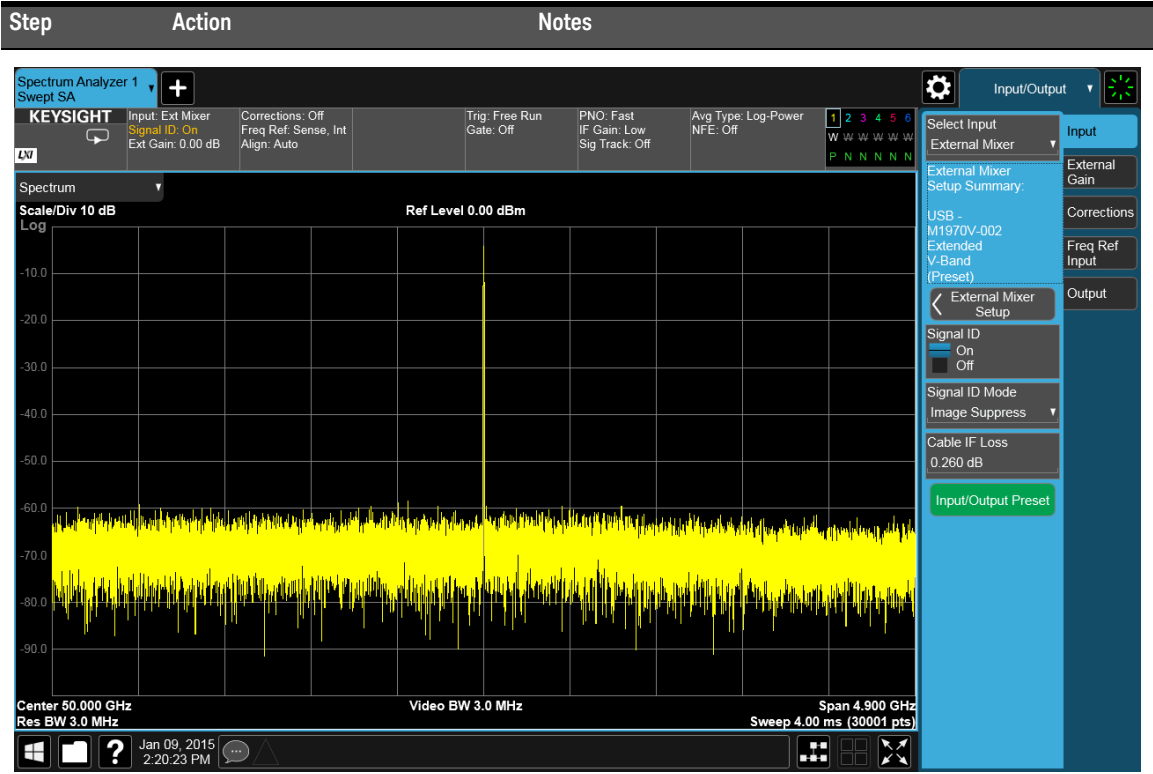

With wide spans, increasing the number of sweep points may improve the effectiveness of image suppressing.

- a Press the **Sweep** hardkey and tap **Sweep Config**. Tap **Points** twice and enter **30001**.

Amplitude calibration

The M1970 Series mixers automatically download a conversion loss file to the signal analyzer, and this conversion loss table is used to correct the measured amplitude. It is not possible to view or edit the conversion loss file. The Certificate of Calibration that is provided with each mixer lists the conversion loss measured at the factory.

LO adjustment

The LO adjustment will run each time the USB connection is made, and if the signal analyzer Alignments are set to Normal, the LO adjustment will be performed based on time and temperature rules similar to the other signal analyzer alignments. Both the mixer and the spectrum analyzer temperature sensors are monitored by the alignment algorithm. If the Alignment is set to OFF, the LO Alignment will not be performed based on time and temperature, and it will be necessary for the user to determine when to perform alignments.

To manually trigger an LO alignment from the front panel, press the **System** hardkey and then tap **Alignments, Align Now, External Mixer**.

Viewing the external mixer setup screen

The mixer setup screen contains information such as the model number, harmonic mixing used, and status of the mixer USB connection. When the mixer is connected, the Mixer Presets, mixer bias, and Table Type selections are grayed out since these selections do not apply. However, if you unplug the USB cable, the Mixer Presets selections become functional and the connection status will show the USB Mixer not detected.

To view the setup screen, press the **Input/Output** hardkey and tap **External Mixer Setup**. Tap **Close** to exit this screen.

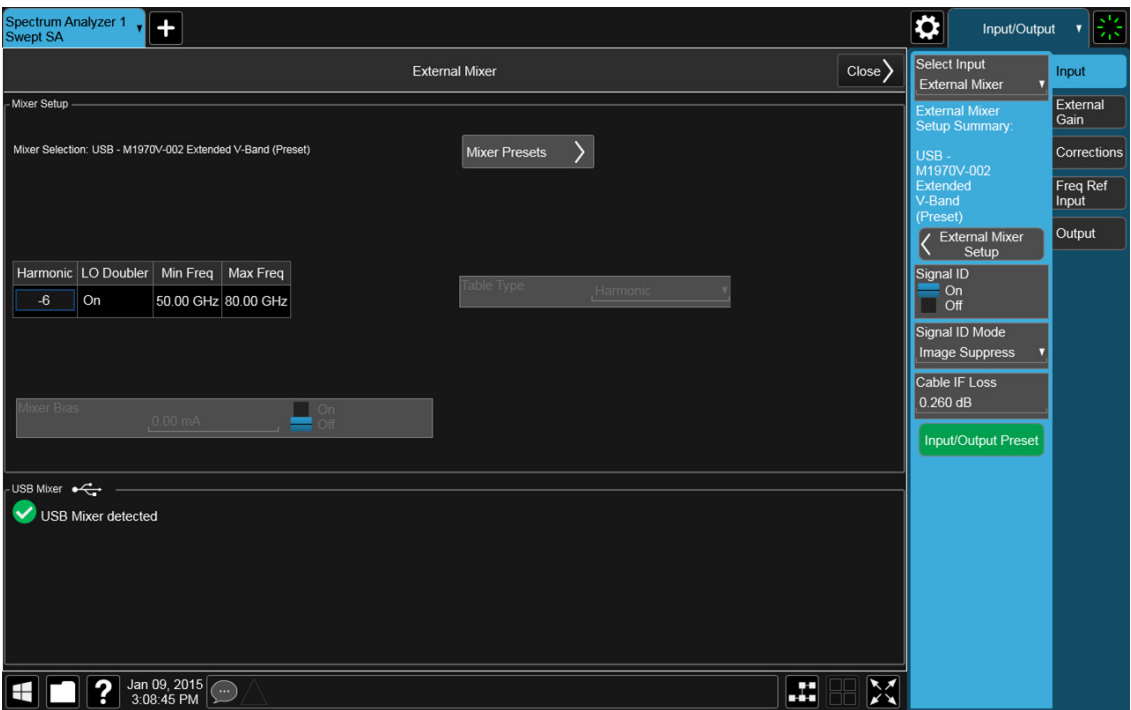


Figure 2-2 External mixer setup screen

Signal ID

Image Suppress

The Image Suppress mode of Signal ID mathematically removes all image and multiple responses of signals present at the mixer input. Two hidden sweeps are taken in succession. The second sweep is offset in LO frequency by $2*IF/N$. For each point in each trace, the smaller amplitude from the two traces is taken and placed in that point in Trace 1. Responses of each trace that lie on top of one another will remain and are valid signals, others are images and are suppressed.

NOTE

This function takes control of and uses Trace 1. Any data in this trace prior to activating Image Suppress will be lost.

In the Image Suppress mode, synchronization is ensured by first turning off Signal ID, initiating a single sweep, then turning on Signal ID followed by two single sweeps.

Image Shift

Like the Image Suppress mode, Image Shift is a two sweep sequence. The data from the first sweep is placed in Trace 1 and the data from the second (LO frequency shifted by $2*IF/N$) sweep is placed in Trace 2. Signal responses of Trace 1 and Trace 2 that have the same horizontal position are considered to be in the current band and therefore can be analyzed with the amplitude and frequency measurement systems of the SA. All other responses are invalid and should be ignored.

NOTE

This function takes control of and uses Trace 1 and Trace 2. Any data in these traces prior to activating Image Shift will be lost.

To synchronize in the Image Shift mode, turn off Signal ID and then initiate a single sweep. Then turn on Signal ID and initiate two single sweeps. The results of the first sweep after Signal ID is turned on are available in Trace 1. The next sweep is shifted and the data from that sweep is available in Trace 2. The unshifted and shifted data can then be compared.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

3 Troubleshooting and Maintenance

Troubleshooting	42
Error Messages	43
Maintenance	44
Returning an M1970 Series Mixer for Service	45

This chapter guides you on how to troubleshoot and maintain the M1970 Series harmonic mixer.

CAUTION

The M1970 Series mixers are not field-repairable, and require return to Keysight for both repair and calibration. Do not attempt to open the mixer enclosure.

Troubleshooting

Table 3-1 Troubleshooting procedure

Problem	Possible cause/troubleshooting process
Green Active LED does not turn on when mixer is connected to spectrum analyzer through USB cable.	– Spectrum analyzer not providing power. – Faulty or loose USB cable. – Faulty mixer. Troubleshooting: Connect another USB device to the signal analyzer.
Red Error LED on mixer lights up (mixer fails the LO alignment routine).	– The SMA cable must be attached before the USB cable is plugged in. If the SMA cable was not plugged in first, assure that the SMA cable is connected properly, then disconnect and reconnect the USB cable. – The SMA cable is damaged or has too much loss (cable length is too long). Replace the SMA cable with one that is <3 meters. – Faulty mixer. – The signal analyzer LO output is faulty: To test the LO output, remove the SMA cable from the Ext Mixer connector, and unplug the USB cable. 1 Press Input/Output, External Mixer, Ext Mix Setup, Mixer Presets. 2 Select Single Harmonic w/doubler, select V-Band. 3 Press the Freq key, Center Frequency, 60 GHz. Then press Span, Zero Span. 4 Connect a spectrum analyzer capable of measuring a 13 GHz signal to the Ext Mixer connector. 5 Tune the measuring spectrum analyzer to 10.0537 GHz center frequency, and the LO signal level at the Ext Mixer connector should be $+15 \text{ dBm} \pm 2 \text{ dB}$.
Yellow Busy LED does not come on when USB cable is attached and LO Align does not start.	Assure that only one mixer is connected. Unplug any other mixer USB connection, then on the desired mixer, remove the USB cable and re-insert the USB cable to initiate the LO adjustment.

Error Messages

The following is a list of error messages that may appear on the signal analyzer screen.

Table 3-2 Error messages

Error message	Possible cause/troubleshooting process
LO Alignment Failure	– The LO power is too low to complete the LO adjustment. – LO/IF cable not connected at time of LO adjustment routine.

Maintenance

Preventive maintenance includes covering the waveguide with the waveguide cap when the mixer is not in use, and avoiding rough handling that could damage the SMA and USB connectors.

Do not remove the foam installed in the open end of the waveguide. The foam prevents small objects from entering the waveguide.

Replaceable parts

Table 3-3 Replaceable parts

Part number	Description
1390-0671	Socket head cap screw, captive, 4-40 thread, 0.29 inches long (waveguide flange connecting screw for V and W band)
1401-0227	Waveguide cap for V, E, and W band

Returning an M1970 Series Mixer for Service

Contacting Keysight

Assistance with test and measurement needs and information or finding a local Keysight office are available on the Web at:

<http://www.keysight.com/find/assist>

If you do not have access to the Internet, contact your field engineer.

NOTE

In any correspondence or telephone conversation, refer to the Keysight product by its model number and full serial number. With this information, the Keysight representative can determine the warranty status of your unit.

Shipping your product to Keysight for service or repair

If you wish to send your product to Keysight for service or repair:

- Include a complete description of the service requested or of the failure and a description of any failed test and any error message.
- Remove and retain the front handles and all rack mount hardware. The product should be sent to Keysight in the same configuration as it was originally shipped.
- Ship the product using the original or comparable antistatic packaging materials.
- Contact Keysight for instructions on where to ship your product.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

4 M1970 Series Specifications

General Specifications	48
Physical Characteristics	50
Environmental Specifications	51

This chapter provides the specifications of the M1970 Series Harmonic Mixer.

NOTE

Specifications describe warranted performance over the temperature range of 0 to +55 °C after one hour of continuous operation unless otherwise noted.

Nominal values indicate expected performance, or describe product performance that is useful in the application of the product, but is not covered by the product warranty.

General Specifications

Table 4-1 General specifications

Description	Specification	Supplemental information
Calibration cycle	1 year	
LO amplitude		LO requirements provided by compatible signal analyzers. Maximum cable loss 10 dB nominal.
USB requirements		5 V nominal, 500 mA maximum
Maximum CW RF input level	20 dBm (100 mW)	
Maximum RF peak pulse power	24 dBm with <1 ms pulse (avg power: 20 dBm)	
Maximum LO power	20 dBm	
IF bandwidth ^[a]		200 MHz to 500 MHz
IF/LO connector ^[b]		SMA female

[a] The M1970 Series mixers are designed to work with the X-Series signal analyzer's IF frequencies. With Option CR3, other IF frequencies can be supported for special applications.

[b] Cable loss at 322.5 MHz (typical):
 - M1970E/V/W-101, 1 meter: 0.21 dB
 - M1970E/V/W-102, 3 meters: 0.64 dB

Description	M1970V	M1970V Opt 002	M1970E	M1970W
RF frequency range	50 to 75 GHz	50 to 80 GHz	60 to 90 GHz	75 to 110 GHz
LO harmonic number ^[a]	–6	–6	–6 and –8 ^[b]	–8
LO frequency range (GHz) ^[c]	8.39 to 12.56	8.39 to 13.39	9.42 to 12.56	9.42 to 13.80
Maximum conversion loss ^[d]	23 dB	23 dB	27 dB	25 dB
Calibration accuracy (nominal) ^[e]	±2.2 dB	±2.2 dB	±2.2 dB	±2.2 dB
Gain compression level (nominal) (<1 dB)	0 dBm	0 dBm	0 dBm	0 dBm
Input SWR (nominal)	<2.6:1	<2.6:1	<2.6:1	<2.6:1
Noise figure (nominal) ^[f]	30 dB	30 dB	31 dB	32 dB
System Displayed Average Noise Level (DANL) at 1 Hz resolution bandwidth (nominal) ^[g]	–143 dBm	–143 dBm	–136 dBm	–138 dBm

[a] "-" signifies that the LO frequency times the LO harmonic number is higher than the RF input frequency. $LO \times N = RF + IF$.

[b] Harmonic number is dependent on the start and stop frequencies. Harmonic –6 is used from 60 GHz to 78 GHz and harmonic –8 is used above 77.5 GHz.

[c] Exact LO frequency is dependent on the IF path setting of the signal analyzer.

[d] Conversion loss values shown include the effect of an internal IF amplifier.

[e] Calibration accuracy is the difference between the conversion loss factors measured and programmed into the M1970 at the factory and the actual conversion loss of the mixer experienced when used with an X-Series signal analyzer with option EXM. The values shown include test system uncertainty, interpolation error, and the effects of the difference between the X-Series environment and the factory calibration environment. The system amplitude accuracy is worse than this M1970-only calibration accuracy due to SWR effects between the M1970 and the X-Series IF input, and due to Gain Accuracy at the IF Input in Option EXM of the X-Series analyzer used.

[f] The values shown are the noise figures of the M1970 alone. They include effects of the internal IF amplifier. The system noise figure when connected to an X-Series signal analyzer will be higher, by nominally 0.8 dB.

[g] System DANL includes the effect of an X-Series analyzer and cable as well as the M1970. DANL is defined with log-scale averaging according to industry conventions. The noise density is about 2.25 dB higher than DANL.

Physical Characteristics

Does not include SMA connector.

Table 4-2 Physical characteristics

Model	Flange	Weight	Height	Width	Length
M1970V (001)	UG-385/U WR-15	0.70 kg (1.54 lbs)	45.0 mm (1.7 in)	81.3 mm (3.2 in)	161.5 mm (6.4 in)
M1970V (002)	UG-385/U WR-15	0.70 kg (1.54 lbs)	45.0 mm (1.7 in)	81.3 mm (3.2 in)	161.5 mm (6.4 in)
M1970E	WR-12	0.70 kg (1.54 lbs)	45.0 mm (1.7 in)	81.3 mm (3.2 in)	161.5 mm (6.4 in)
M1970W	UG-387/UM WR-10	0.70 kg (1.54 lbs)	45.0 mm (1.7 in)	81.3 mm (3.2 in)	161.5 mm (6.4 in)

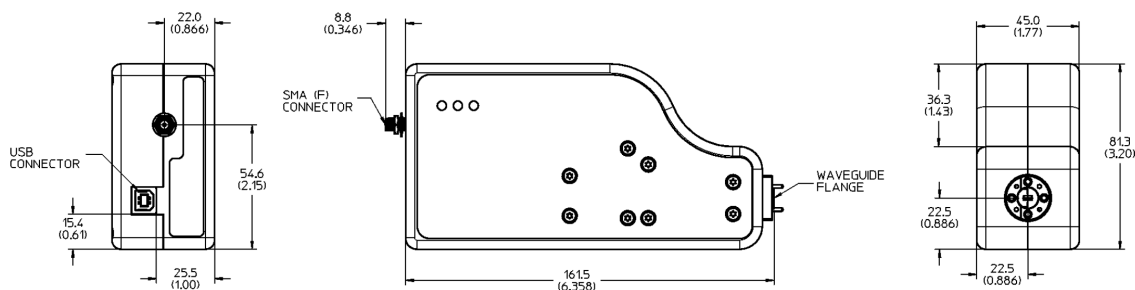


Figure 4-1 M1970 Series dimensions

Environmental Specifications

Keysight M1970V/E/W Series harmonic mixers are designed to fully comply with Keysight Technologies' product operating environment specifications. The following are the summarized environmental specifications for these products. See “**Environmental Conditions**” on page 4 for more details on the temperature, humidity, and altitude conditions.

Table 4-3 Environmental specifications

Description	Specification
Shock:	
– End use handling shock	Half sine wave form
– Transportation shock	30 g
Vibration:	
– Operating	0.21 g rms
– Survival	2.09 g rms
ESD immunity:	
– Direct discharge	6.0 kV per IEC 61000-4-2
– Air discharge	15 kV per IEC 61000-4-2

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.



This information is subject to change without notice. Always refer to the Keysight website for the latest revision.

© Keysight Technologies 2011 – 2018
Edition 4, April 26, 2018

Printed in Malaysia



M1970-90001

www.keysight.com